

LCD CONSOLE



USER MANUAL

CL5200

FCC Information

This is an FCC Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RoHS

This product is RoHS compliant.



User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed 'as is'. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. **PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.**

A typical LCD (Liquid Crystal Display) monitor has millions of pixels. A dead pixel refers to a pixel with a defect in its ability to display the correct color output. It most often looks like a tiny black or white spot on your screen, although it can be any other color. Since even a tiny dust particle on one of the pixels during the manufacturing process or a slight bump during shipping can create a dead pixel, the ISO 13406-2 norm defines 4 classes of acceptable screens with dead pixels--Class 1 is the best; Class 4 is the worst. Almost all manufacturers use Class 2 to establish their warranties, which allows a certain amount of dead pixels to exist before they will replace the screen. Since the manufacturers consider these screens to be acceptable under ISO specifications, we cannot be responsible for replacement or warranty of the TFT LCD panel.

Safety Instructions

General

- ♦ Read all of these instructions. Save them for future reference.
- ♦ Follow all warnings and instructions marked on the device.
- ♦ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ♦ Do not use the device near water.
- ♦ Do not place the device near, or over, radiators or heat registers.
- ♦ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ♦ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ♦ Never spill liquid of any kind on the device.
- ♦ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ♦ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ♦ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- ♦ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- ♦ If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- ♦ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or un-interruptible power supply (UPS).

- ♦ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ♦ When connecting or disconnecting power to hot-pluggable power supplies, observe the following guidelines:
 - ♦ Install the power supply before connecting the power cable to the power supply.
 - ♦ Unplug the power cable before removing the power supply.
 - ♦ If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- ♦ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ♦ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ♦ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
 - ♦ The power cord or plug has become damaged or frayed.
 - ♦ Liquid has been spilled into the device.
 - ♦ The device has been exposed to rain or water.
 - ♦ The device has been dropped, or the cabinet has been damaged.
 - ♦ The device exhibits a distinct change in performance, indicating a need for service.
 - ♦ The device does not operate normally when the operating instructions are followed.
- ♦ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.

Rack Mounting

- ♦ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ♦ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ♦ Make sure that the rack is level and stable before extending a device from the rack.
- ♦ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ♦ After a device is inserted into the rack, carefully extend the rail into a locking position, and then slide the device into the rack.
- ♦ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ♦ Ensure that proper airflow is provided to devices in the rack.
- ♦ Do not step on or stand on any device when servicing other devices in a rack.

Package Contents

Basic Package

The basic CL5200 package consists of:

- ♦ 1 CL5200 with Standard Rack Mount Kit
- ♦ 1 Custom KVM Cable Set
- ♦ 1 Power Cord (CL5200L / CL5200M)
- ♦ 1 User Manual*
- ♦ 1 Quick Start Guide

Optional Equipment

Depending on any optional equipment that you may have purchased, one of the following may be included in your package:

- ♦ Standard Rack Mount Kit - Long
- ♦ Easy-Installation Rack Mount Kit - Short
- ♦ Easy-Installation Rack Mount Kit - Long

Check to make sure that all the components are present and that nothing got damaged in shipping. If you encounter a problem, contact your dealer.

Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit, and/or any of the devices connected to it.

* Features may have been added to the CL5200 since this manual was printed. Please visit our website to download the most up to date version of the manual.

© Copyright 2006
Manual Part No. PAPE-0270-100G
Printing Date:01/2007

All brand names and trademarks are the registered property of their respective owners.

Contents

| | |
|-------------------------------|-----|
| FCC Information | ii |
| User Notice | iii |
| Safety Instructions | iv |
| General | iv |
| Rack Mounting | vi |
| Package Contents | vii |
| Basic Package | vii |
| Optional Equipment | vii |
| About this Manual | x |
| Conventions | xi |
| ATEN Information | xi |
| Online Registration | xi |
| Online Support | xi |

1. Introduction

| | |
|---------------------------------------|---|
| Overview | 1 |
| Features | 2 |
| Requirements | 3 |
| Switches and Computers | 3 |
| Cables | 3 |
| OS Support | 3 |
| Components | 4 |
| Front View | 4 |
| CL5200C / CL5200D Rear View | 5 |
| CL5200L / CL5200M Rear View | 6 |

2. Hardware Setup

| | |
|--|----|
| Before you Begin | 7 |
| Standard Rack Mounting | 7 |
| Installation | 9 |
| CL5200C / CL5200D Installation | 9 |
| CL5200L / CL5200M | 10 |

3. Operation

| | |
|--|----|
| Opening the Console | 11 |
| Closing the Console | 12 |
| Operating Precautions | 13 |
| LCD OSD Configuration | 14 |
| The LCD Buttons | 14 |
| The Adjustment Settings | 15 |
| Console Selection | 16 |
| Port ID Numbering & Port Selection | 16 |

Appendix

| | |
|------------------------------|----|
| Optional Rack Mounting | 17 |
| Specifications | 21 |
| CL5200C / CL5200D | 21 |
| CL5200L / CL5200M | 22 |
| Troubleshooting | 23 |
| Limited Warranty | 24 |

About this Manual

This User Manual is provided to help you get the most from your c/c system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

Chapter 1, Introduction, introduces you to the CL5200 system. Its purpose, features and benefits are presented, and its front and back panel components are described.


Chapter 2, Hardware Setup, describes how to set up your installation. The necessary step – from a basic single stage hookup to a complete 32 switch daisy chained operation are provided.

Chapter 3, Operation, explains the fundamental concepts involved in operating the CL5200.

An Appendix, provides specifications and other technical information regarding the CL5200.

Conventions

This manual uses the following conventions:

- | | |
|---|--|
| Monospaced | Indicates text that you should key in. |
| [] | Indicates keys you should press. For example, [Enter] means to press the Enter key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt]. |
| 1. | Numbered lists represent procedures with sequential steps. |
| ◆ | Bullet lists provide information, but do not involve sequential steps. |
| → | Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start → Run means to open the <i>Start</i> menu, and then select <i>Run</i> . |
|  | Indicates critical information. |

ATEN Information

Online Registration

You can register your ATEN product at our online e-Support Center:
<http://support.aten.com>.

Online Support

- ◆ Online technical support is available to ATEN customers through our e-Support center: **<http://support.aten.com>**.
- ◆ Troubleshooting, Documentation (including online manuals), and Software Updates (firmware and drivers) are available at the ATEN website: **<http://www.aten.com>**.

This Page Intentionally Left Blank

Chapter 1

Introduction

Overview

The CL5200 series consists of KVM console modules that feature an integrated LCD panel, full keyboard, and touchpad in a 1U rack-mountable sliding housing. They were developed in response to the enormous popularity of the sliding console found on the CL5208 and CL5216 KVM switches. Those switches are made up of two major modules: the front-end sliding KVM Console module, and the back-end KVM Switch module.

The CL5200 is similar to the front-end Console module found on the CL5208 and CL5216. Its purpose is to serve as the front end sliding console for compatible KVM switches*. By only having to purchase the CL5200, users who already have a compatible KVM switch can take advantage of the space saving and efficiency benefits of the sliding console module without the unnecessary expense of having to purchase a model that includes a KVM Switch module.

The similarities and differences among the models in the CL5200 series are shown in the following table:

| Model | LCD Panel | Power |
|---------|-----------|-------|
| CL5200C | 15" | DC |
| CL5200D | 17" | DC |
| CL5200L | 15" | AC |
| CL5200M | 17" | AC |

Setup is fast and easy. Simply use the KVM cable set supplied with this package to link the CL5200's KVM port to the console port of your KVM switch and you are ready to go.

For convenience, ports to link an external keyboard, video, mouse console are also provided.

* The CL5200 supports most KVM switches that have PS/2 console port connectors. If you are unsure if your switch is supported, check with your dealer.

Features

- ♦ Integrated KVM console with 15" or 17" LCD monitor - in a sliding housing with top and bottom clearance for smooth operation in a 1U high system rack
- ♦ Standard rack mount kit included – optional *Easy Rack Mounting* (single person installation) rack mount kit available (requires separate purchase)
- ♦ Supports an external console
- ♦ Compatible with most PS/2 KVM switches
- ♦ Internal power supply
- ♦ No software required - convenient computer selection via *Hotkeys*
- ♦ High video resolution:
 - ♦ Up to 1024 x 768 @75Hz (15" LCD)
 - ♦ Up to 1280 x 1024 @75Hz (17" LCD)
 - ♦ Supports DDC, DDC2, DDC2B
 - ♦ DDC emulation of the LCD monitor
 - ♦ Video settings of attached computers are automatically adjusted for optimal output to the LCD monitor
- ♦ Language support: American English; UK English; German; French; Spanish; Traditional Chinese; Japanese; Korean

Requirements

Switches and Computers

- ♦ The CL5200 supports most KVM switches that have PS/2 console port connectors. If you are unsure whether your switch is supported or not, check with your dealer.
- ♦ The integrated LCD monitor's maximum resolution is 1024 x 768 @75Hz (15"), or 1280 x 1024 @75Hz (17"). Make sure that none of the resolution settings of the connected computers exceed the LCD monitor's maximum resolution.

Cables

For optimum signal integrity and to simplify the layout, we strongly recommend that you use the high quality Custom Cable set provided with this package. Different length cable sets, described in the table below, can be purchased from your dealer.

| Length (m) | Part Number |
|------------|-------------|
| 1.2 | 2L-5201P |
| 1.8 | 2L-5202P |
| 3.0 | 2L-5203P |
| 6.0 | 2L-5206P |

 
OS Support

| OS | Version | |
|-----------|--------------------------|------------------------------------|
| Microsoft | Windows: 2000 and higher | |
| Linux | RedHat | 7.1–7.3, 8.0, 9.0, Fedora Core 2–4 |
| | SuSE | 8.2, 9.3, 10 |
| | Mandriva (Mandrake) | 9, 2005 Limited Edition, 2006 |
| UNIX | IBM | AIX: 4.3, 5L |
| | FreeBSD | 4.2, 4.5 |
| Novell | Netware: 5.0*, 6.0 | |

* This operating system does not support USB.


Components

Front View

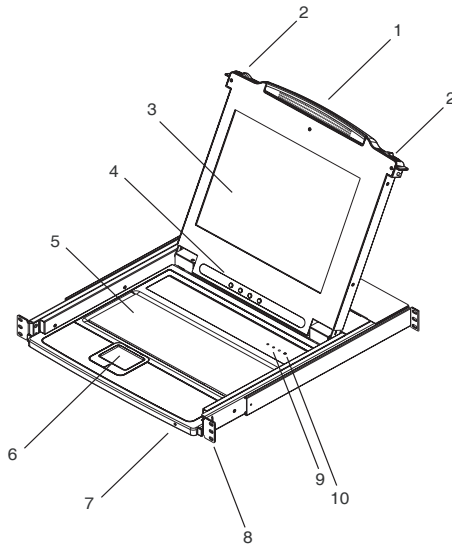


| No. | Component | Description |
|-----|--------------------|--|
| 1 | Handle | Pull to slide the KVM module out; push to slide the module in. |
| 2 | Slide Release | In order to slide the console out, you must first release it by moving this tab sideways. See p. 11 for details on sliding the console in and out. |
| 3 | LCD Display | After sliding the KVM module out, flip up the cover to access the LCD monitor. |
| 4 | LCD Controls | The LCD On/Off switch is located here, as well as buttons to control the position and picture settings of the LCD display. See p. 14, for details. |
| 5 | Keyboard | |
| 6 | Touchpad | |
| 7 | Power LED | Lights BLUE to indicate that the unit is receiving power. |
| 8 | Rack Mounting Tabs | The rack mounting tabs located at each corner of the unit secure the chassis to a system rack. |
| 9 | Lock LEDs | The Num Lock, Caps Lock, Scroll Lock LEDs are located here. |
| 10 | Reset Switch | Located to the right of the Lock LEDs. Press this recessed switch in with a thin object to perform a system reset. |

 CL5200C / CL5200D Rear View (DC Power)

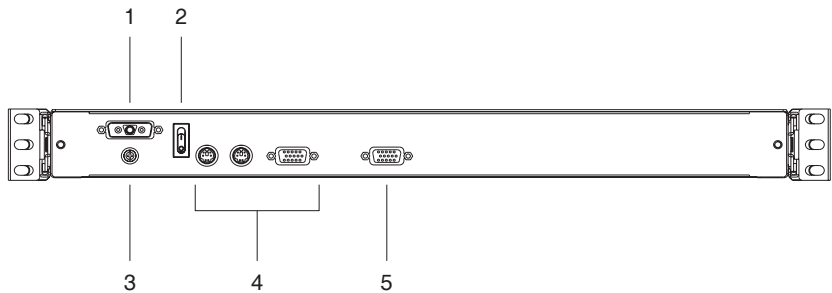

| No. | Component | Description |
|-----|--------------------------|--|
| 1 | Power Socket | The DC power cord plugs in here. |
| 2 | Power Switch | |
| 3 | Ground | |
| 4 | External Console Section | For flexibility and convenience, the CL5200 supports an independent, external, KVM console. The external console's keyboard, monitor, and mouse plug in here. Choice of which console the video displays on is made with hotkey combinations (see <i>Console Selection</i> , page 16 for details). |
| 5 | KVM Port | The cable that links the CL5200 to the KVM switch plugs in here Note: The shape of this 15-pin connector has been specifically modified so that only KVM cables designed to work with this switch can plug in (see <i>Cables</i> , page 3, for details). |

 CL5200L / CL5200M Rear View (AC Power)

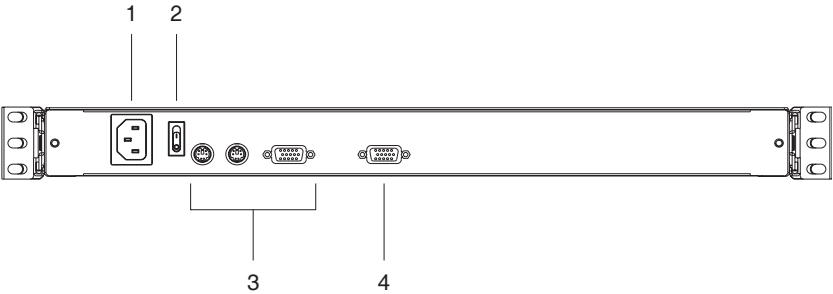

| No. | Component | Description |
|-----|--------------------------|--|
| 1 | Power Socket | This is a standard 3 prong AC power socket. The power cord from your AC source plugs in here. |
| 2 | Power Switch | This is a standard rocker switch that powers the unit On and Off. |
| 3 | External Console Section | For flexibility and convenience, the CL5200 supports an independent, external, KVM console. The external console's keyboard, monitor, and mouse plug in here. Choice of which console the video displays on is made with hotkey combinations (see <i>Console Selection</i> , page 16 for details). |
| 4 | KVM Port | The cable that links the CL5200 to the KVM switch plugs in here Note: The shape of this 15-pin connector has been specifically modified so that only KVM cables designed to work with this switch can plug in (see <i>Cables</i> , page 3, for details). |

Chapter 2

Hardware Setup

 
Before you Begin



1. Important safety information regarding the placement of this device is provided on page iv. Please review it before proceeding.
2. Make sure that power to all the devices you will be connecting up have been turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.

Standard Rack Mounting

A standard rack mount kit is provided with your CL5200. The kit enables the switch to be mounted in rack with a depth of 42 - 72 cm.

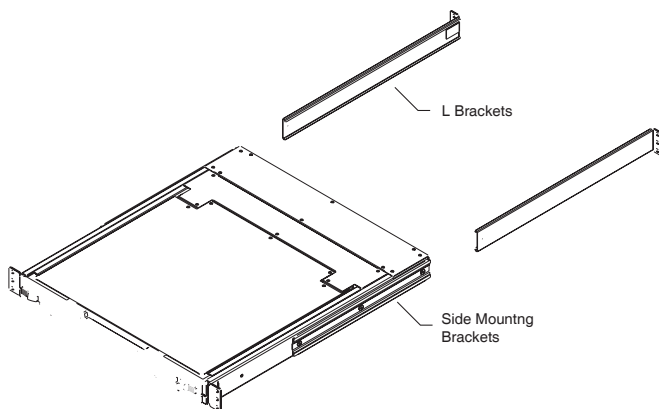


Note: It takes two people to mount the switch: one to hold it in place; the other to screw it in.


Optional mounting kits - including single person *Easy Installation* kits - are available with a separate purchase. See page 17 in the *Appendix* for optional rack mounting details.

To rack mount the switch, do the following:

 1. While one person positions the switch in the rack and holds it in place, the second person - using the screws provided with the rack mount kit - loosely screws the front brackets to the rack.

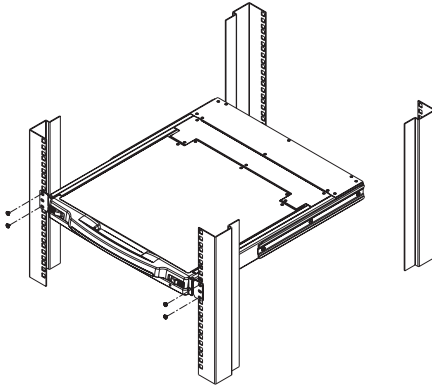

 2. While the first person still holds the switch in place, the second person slides the L brackets into the switch's side mounting brackets, from the rear until the bracket flanges contact the rack, then - using the screws provided with the rack mount kit - screws the L brackets to the rack.

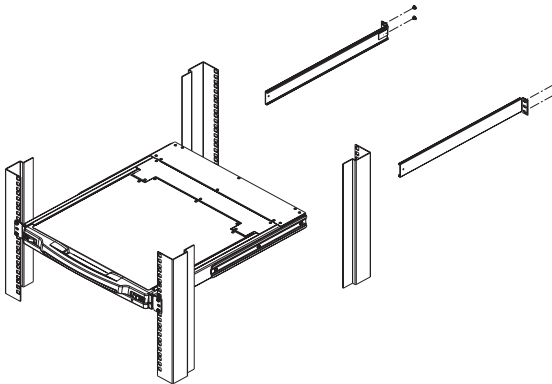

3. After the L brackets have been secured, tighten the front bracket screws

Note: 1. Cage nuts are provided for racks that are not prethreaded.

2. Allow at least 5.1 cm on each side for proper ventilation, and at least 12.7 cm at the back for the power cord and cable clearance.
-

 
Installation

Refer to the installation diagrams as you perform the installation steps. The numbers in the diagrams correspond to the numbers of the steps.

Note: The diagrams are for example purposes. Depending on the KVM switch you are connecting, its rear panel layout may be somewhat different from the one shown in the diagrams.


CL5200C / CL5200D Installation

1. Ground the unit.
2. Plug the 15 pin connector end of the KVM cable provided with this unit into the CL5200's KVM port.
3. Plug the keyboard, monitor, and mouse connectors of the KVM cable into their respective ports on the Console Section of the KVM switch.
4. If you are installing an external console, plug your keyboard, monitor, and mouse into their respective ports on the Console Section of the CL5200. The ports are color coded and marked with an icon for easy identification.
5. Plug the power cord into the CL5200's power socket and into a DC power source.
6. Power up your KVM installation.
7. Turn on the power to CL5200.

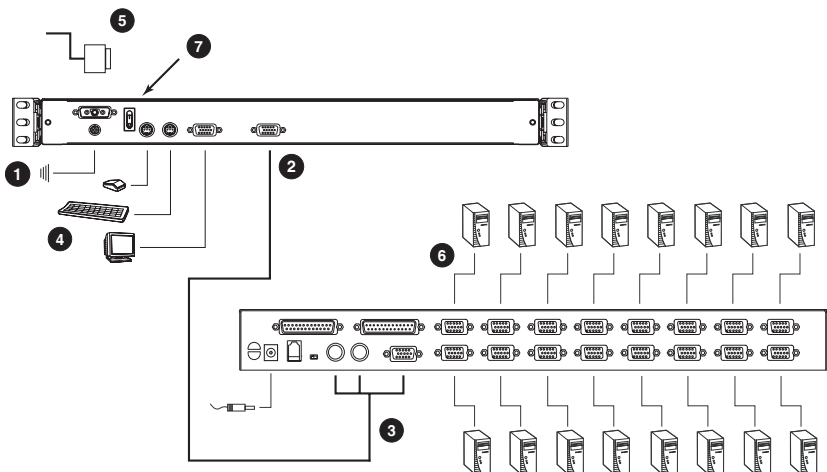

CL5200L / CL5200M

 1. Plug the 15 pin connector end of the KVM cable provided with this unit into the CL5200's KVM port.
2. Plug the keyboard, monitor, and mouse connectors of the KVM cable into their respective ports on the Console Section of the KVM switch.
3. If you are installing an external console, plug your keyboard, monitor, and mouse into their respective ports on the Console Section of the CL5200. The ports are color coded and marked with an icon for easy identification.
4. Plug the power cord into the CL5200's power socket and into an AC power source.
5. Power up your KVM installation.
6. Turn on the power to CL5200.

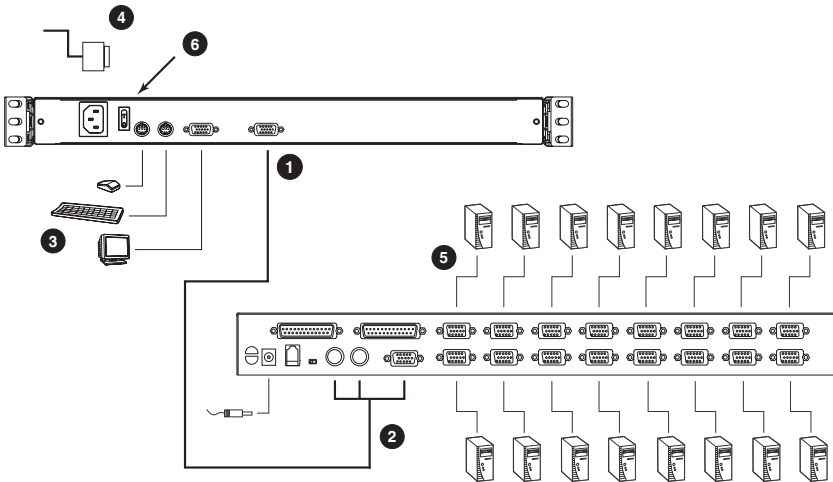


Chapter 3

Operation

Opening the Console

The CL5200's console is located under the top cover. To access the console, slide the console module out and raise the cover.

 
Note: As a safety precaution, to keep the console from accidentally sliding out, the console is locked into the *In* position. Before you can pull the console module out, you must release it by pushing the catches on the unit's front panel toward the center of the switch.

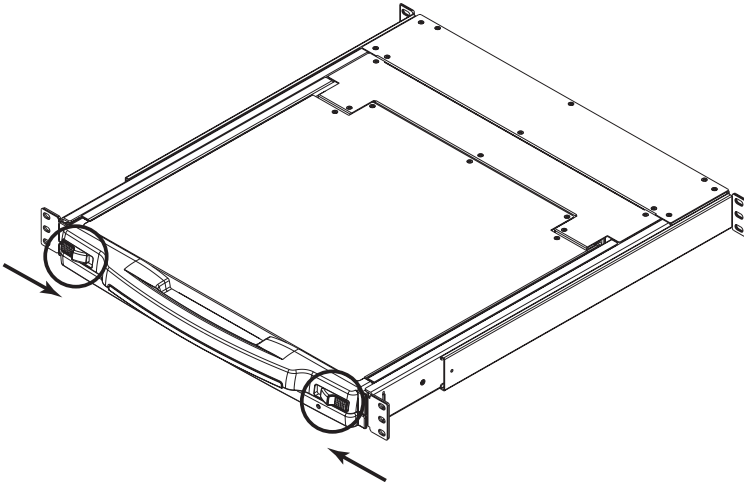

Closing the Console

To slide the console module back in, close the cover and do the following:

 1. Pull the safety catches on the unit's side rails toward you and push the module in until it stops.
2. Release the catches; pull the module slightly toward you; then push it all the way in.


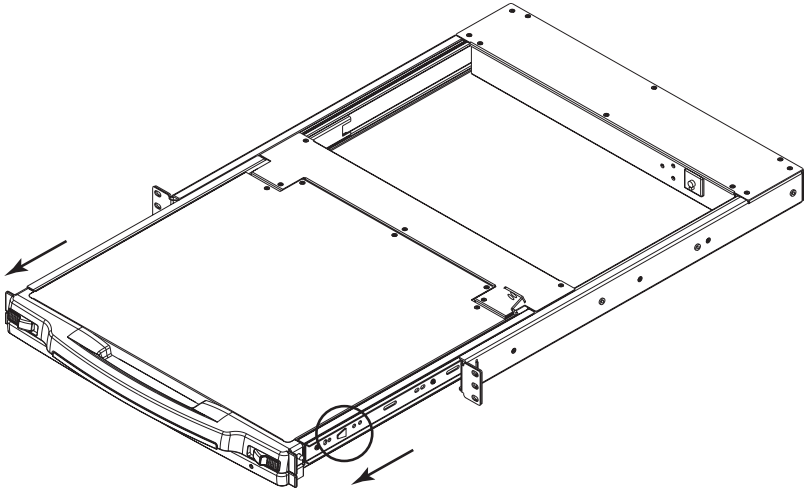


Note: The reason for the two step procedure is to minimize the chances of you pinching your fingers when sliding the module in.

Operating Precautions



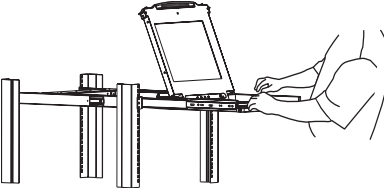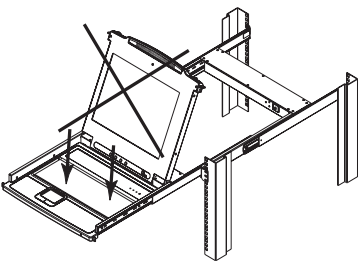

The maximum load bearing capacity of the keyboard module is 30kg. Failure to heed the information below can result in damage to the keyboard module.

| | |
|--|--|
|  | <p>Right!</p> <p>Rest your hands and arms lightly on the keyboard module as you work.</p> |
|  | <p>Wrong!</p> <ul style="list-style-type: none">◆ DO NOT lean your body weight on the keyboard module.◆ DO NOT place heavy objects on the keyboard module. |

LCD OSD Configuration

The LCD Buttons

The LCD OSD allows you to set up and configure the LCD display. Four buttons are used to perform the configuration, as described in the table, below:

| Button | Function |
|---|---|
| MENU | <ul style="list-style-type: none">◆ When you have not entered the LCD OSD Menu function, pressing this button invokes the Menu function, and brings up the Main Menu.◆ When you have entered the LCD OSD Menu function, and have reached a setting choice with the navigation buttons, pressing this button brings up its adjustment screen. |
|  | When navigating through the menus, this button moves you Right or Up. When making an adjustment, it increases the value. |
|  | When navigating through the menus, this button moves you Left or Down. When making an adjustment, it decreases the value. |
| EXIT | <ul style="list-style-type: none">◆ When you have not entered the LCD OSD Menu function, pressing this button performs an auto adjustment. An auto adjustment automatically configures all the settings for the LCD panel to what the OSD considers their optimum values to be.◆ When you have entered the LCD OSD Menu function, pressing this button exits the current menu and returns you to the previous menu. Use it to leave an adjustment menu when you are satisfied with the adjustment you made.◆ When you are at the Main Menu, pressing this button exits the LCD OSD. |

The Adjustment Settings

An explanation of the LCD OSD adjustment settings is given in the table below:

| Setting | Explanation |
|-------------------|---|
| Brightness | Adjusts the background black level of the screen image. |
| Contrast | Adjusts the foreground white level of the screen image. |
| Phase | Adjusts the vertical size of the screen image. |
| Clock | Adjusts the horizontal size of the screen image. |
| H-Position | Positions the display area on the LCD panel horizontally (moves the display area left or right). |
| V-Position | Positions the display area on the LCD panel vertically (moves the display area up or down). |
| Color Temperature | Adjusts the color quality of the display. You can adjust the warmth value, color balance, etc. The <i>Adjust Color</i> selection has a further submenu that lets you fine tune the RGB values. |
| Language | Selects the language that the OSD displays its menus in. |
| OSD Duration | Lets you set the amount of time the OSD displays on the screen. If there is no input for the amount of time you choose, the OSD display turns off. |
| Reset | Resets the adjustments on all menus and submenus to their factory default settings. Note: The <i>Language</i> setting does not return to the factory default, but remains at the one that you have set it to. |

Console Selection

Console selection on the CL5200 is accomplished with hotkey combinations, as described in the following table:

| Combination | Action |
|--------------------------------------|---|
| [Ctrl] [Alt] [Shift] [L] [Enter] | Enable Local (LCD) console; Disable Remote (external) console. |
| [Ctrl] [Alt] [Shift] [R] [Enter] | Enable Remote (external) console' Disable Local (LCD) console. |
| [Ctrl] [Alt] [Shift] [L] [R] [Enter] | Enable both consoles (default). |

-
- Note:**
1. Press the keys in sequence - one key at a time. First [Ctrl], then [Alt], then [Shift], etc.
 2. Console selections are not saved. If the switch is powered off, it reverts to the default setting of both consoles enabled when it is powered on again.
 3. If the KVM switch connected to the CL5200 uses the [Ctrl] [Alt] [Shift] combination to invoke its hotkey mode, you won't be able to access any of its hotkey operations because the CL5200 will capture the combination for console selection first.
-

Port ID Numbering & Port Selection

Port ID numbering and Port Selection follow the method used by the KVM switch connected to the. Consult your KVM switch's User Manual for details.

Optional Rack Mounting

 
For convenience and flexibility, three optional rack mount kits are available:

- ♦ A long bracket standard rack mount kit for 68.0 - 100.0 cm racks;
- ♦ A short bracket *Easy-Installation* rack mount kit for 42.0 - 70.0 cm racks;
- ♦ A long bracket *Easy-Installation* rack mount kit for 68.0 - 105.0 cm racks.


To install the long bracket standard rack mount kit, simply replace the short L brackets on the standard rack mount kit with the long ones, and mount the switch according to the instructions given on p. 7.

With an *Easy-Installation*, kit, one person can mount the switch. To install the *Easy-Installation* kit, do the following:


1. Remove the standard L brackets, and the side mounting brackets from both sides of the switch.

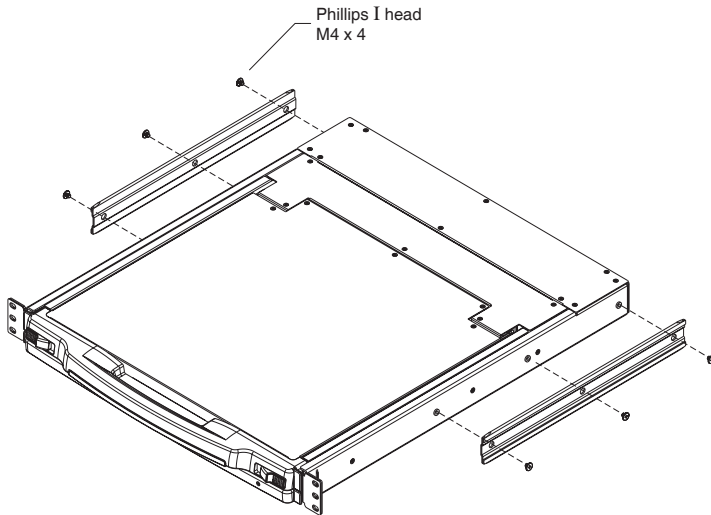


2. Attach the left and right *easy-installation* mounting rails to the inside of the rack. The flange that supports the switch will be to the inside.

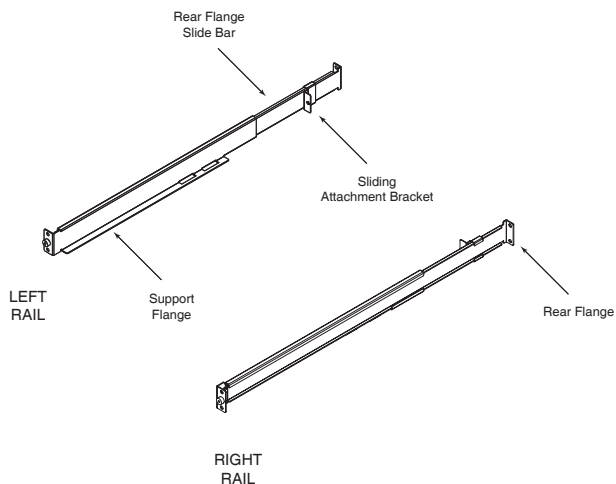 

 
- a) Screw the front flanges to the rack first.
- b) Slide the bars with the rear flanges toward the rack until the flanges make contact with the rack, then screw the rear flanges to the rack.

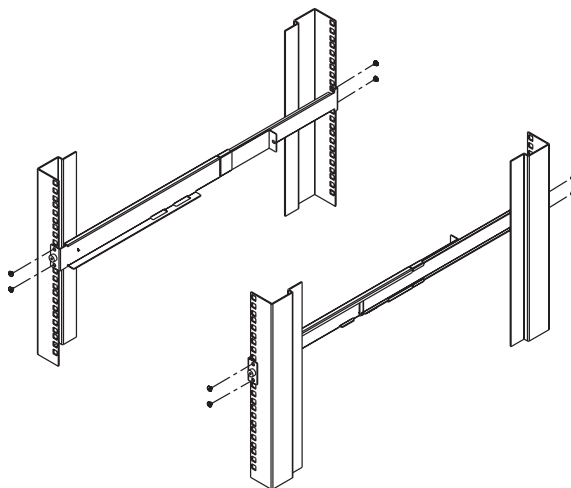

 -
3. Slide the switch onto the support flanges. Use the screws supplied with this package to loosely attach the front of the switch to the front of the rack (only tighten the screws part way).

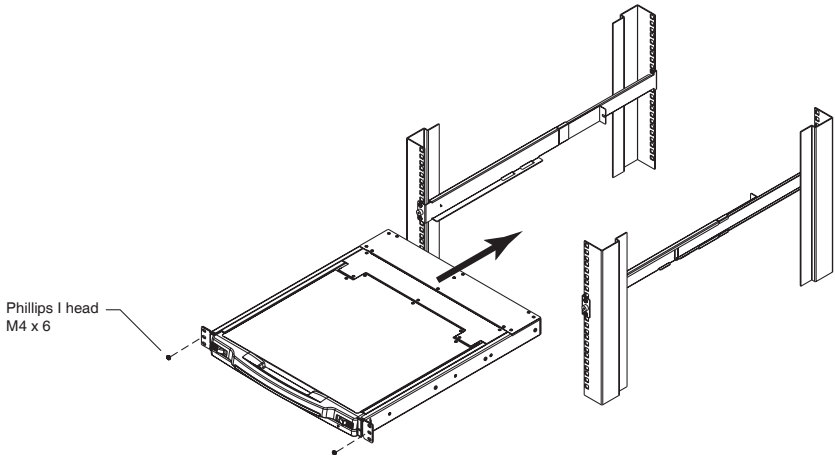

 4. Slide the sliding attachment brackets along the slide bars until they contact the rear of the switch, then use the screws supplied with this package to attach the bars to the rear of the switch (tighten the screws all the way).

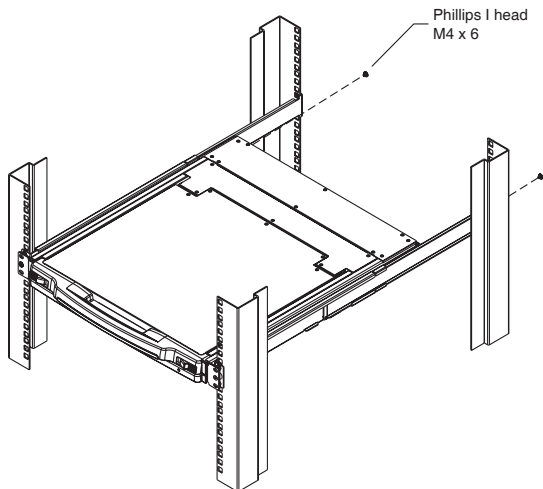

5. Slide the switch open and closed a couple of times to be sure that it is properly aligned and operating smoothly. (See p. 11 for opening and closing procedures.)
6. After determining that the switch is properly lined up and operating correctly, finish up by fully tightening down the partially tightened front attachment screws inserted in step 3.

Specifications

CL5200C / CL5200D

| Function | | | CL5200C | CL5200D |
|---------------------|------------------------|----------|-------------------------------|-------------------------------|
| Connectors | KVM Ports | | 1 x SP HD-15 F | |
| | External Console Ports | Keyboard | 1 x 6 pin mini-DIN F (Purple) | |
| | | Video | 1 x HDB-15 F | |
| | | Mouse | 1 x 6 pin mini-DIN F (Green) | |
| Switches | Power | | 1 x Rocker | |
| | LCD Adjust | | 4 x Pushbutton | |
| | Reset | | 1 x Recessed | |
| LEDs | Power | | 1 (Blue) | |
| | Lock | Num | 1 x Green | |
| | | Caps | 1 x Green | |
| | | Scroll | 1 x Green | |
| Emulation | Keyboard / Mouse | | PS/2 | |
| Video | | | 1024 x 768 @ 75 Hz; DDC2B | 1280 x 1024 @ 75 Hz; DDC2B |
| IP Rating | | | -36V–75V | |
| Power Consumption | | | DC48V; 16.3W | DC48V; 18.2W |
| Environment | Operating Temp. | | 0–40° C | |
| | Storage Temp. | | -20–60° C | |
| | Humidity | | 0–90% RH | |
| Physical Properties | Housing | | Metal | |
| | Weight | | 11.8 kg | 12.3 kg |
| | Dimensions (L x W x H) | | 53.4 x 48 x 4.4 cm (19" - 1U) | |

CL5200L / CL5200M

| Function | | | CL5200L | CL5200M |
|---------------------|------------------------|----------|-------------------------------|-------------------------------|
| Connectors | KVM Ports | | 1 x SP HD-15 F | |
| | External Console Ports | Keyboard | 1 x 6 pin mini-DIN F (Purple) | |
| | | Video | 1 x HDB-15 F | |
| | | Mouse | 1 x 6 pin mini-DIN F (Green) | |
| Switches | Power | | 1 x Rocker | |
| | LCD Adjust | | 4 x Pushbutton | |
| | Reset | | 1 x Recessed | |
| LEDs | Power | | 1 (Blue) | |
| | Lock | Num | 1 x Green | |
| | | Caps | 1 x Green | |
| | | Scroll | 1 x Green | |
| Emulation | Keyboard / Mouse | | PS/2 | |
| Video | | | 1024 x 768 @ 75 Hz; DDC2B | 1280 x 1024 @ 75 Hz; DDC2B |
| IP Rating | | | 100–240 V AC; 50/60 Hz; 1A | |
| Power Consumption | | | 120V, 16W; 230V, 19W | 120V, 27W; 230V, 35W |
| Environment | Operating Temp. | | 0–40° C | |
| | Storage Temp. | | -20–60° C | |
| | Humidity | | 0–90% RH | |
| Physical Properties | Housing | | Metal | |
| | Weight | | 11.8 kg | 12.3 kg |
| | Dimensions (L x W x H) | | 53.4 x 48 x 4.4 cm (19" - 1U) | |

Troubleshooting

| Problem | Solution |
|--|--|
| There are ghost images on the external monitor. | The distance between the external console and the CL5200 is too great. The maximum cable distance should not exceed 20m and, in some cases, may need to be shorter. Replace the VGA cable with one of an appropriately short length. |
| When I try to perform hotkey operations on my KVM switch, nothing happens. | If the KVM switch connected to the CL5200 uses the [Ctrl] [Alt] [Shift] combination to invoke its hotkey mode, you won't be able to access any of its hotkey operations. The reason is that the CL5200 captures the combination for console selection first (see page 16). You must use a KVM switch that uses a different hotkey invocation method. |

Limited Warranty

IN NO EVENT SHALL THE DIRECT VENDOR'S LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM THE DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, DISK OR ITS DOCUMENTATION.

The direct vendor makes no warranty or representation, expressed, implied, or statutory with respect to the contents or use of this documentation, and specially disclaims its quality, performance, merchantability, or fitness for any particular purpose.

The direct vendor also reserves the right to revise or update the device or documentation without obligation to notify any individual or entity of such revisions, or update. For further inquiries please contact your direct vendor.

Index

C

- Cables, 3
- Components
 - CL-5200C/CL-5200D Rear View, 5
 - CL-5200L/CL-5200M Rear View, 6
 - Front View, 4
- Console Selection, 16

F

- Features, 2
- Front View, 4

I

- Installation
 - CL-5200C / CL-5200D, 9
 - CL-5200L / CL-5200M, 10

L

- LCD
 - OSD configuration, 14

O

- Optional rack mounting, 17

P

- Port ID

- Numbering, 16

R

- Rack Mounting
 - Optional, 17
 - Safety information, vi
 - Standard, 7
- Rear View
 - CL-5200C/CL-5200D, 5
 - CL-5200L/CL-5200M, 6
- Requirements
 - Cables, 3
 - OS Support, 3
 - Switches and Computers, 3

S

- Safety Instructions
 - General, iv
 - Rack Mounting, vi
- Specifications
 - CL-5200C / CL-5200D, 21
 - CL-5200L/ CL-5200M, 22
- Standard rack mounting, 7

T

- Troubleshooting, 23