

## SN0108A/SN0108AD/SN0116A/SN0116AD/SN0132/SN013D/SN0148/SN0148D/SN9108/SN9116 Serial Console Server Quick Start Guide


© Copyright 2018 ATEN® International Co., Ltd.  
ATEN and the ATEN logo are trademarks of ATEN International Co., Ltd. All rights reserved. All other trademarks are the property of their respective owners.

This product is RoHS compliant.

Part No. PAPE-1223-D92G Printing Date: 04/2018



### A Hardware Review

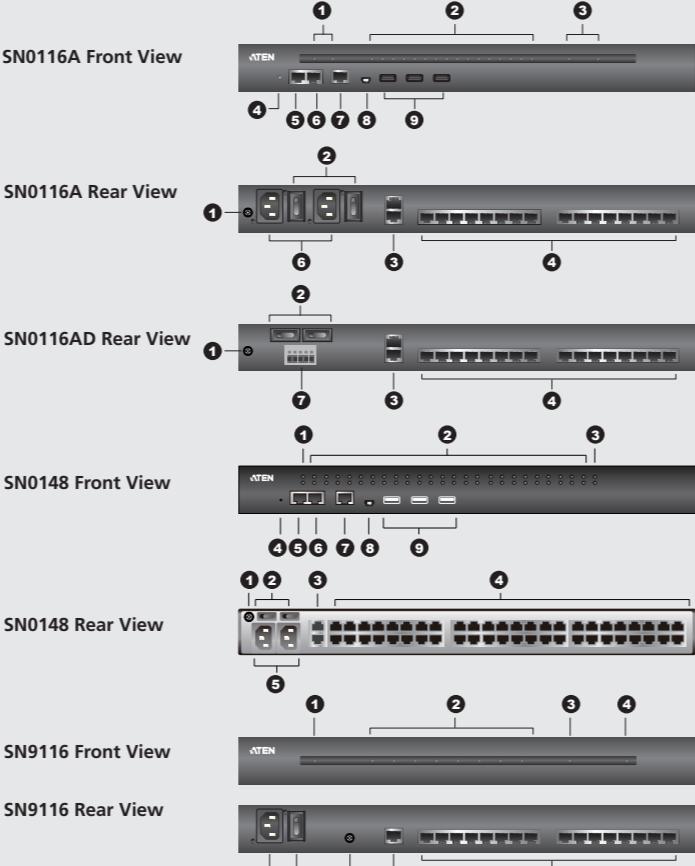

**Package Contents**

- 1 SN0132 / SN0132D / SN0148 / SN0148D Serial Console Server
- 2 Serial Adapters (1 x SA0141; 1 x SA0142)
- 1 Laptop USB Console Cable
- 2 Power Cords (Only for SN0108A / SN0116A)
- 1 Mounting Kit
- 2 Lok-U-Plugs (Only for SN0108A / SN0116A)
- 1 Mounting Kit
- 1 Foot Pad Set (4 pcs.)
- 1 Software CD
- 1 User Instructions

- 1 SN0108A / SN0108AD / SN0116A / SN0116AD Serial Console Server
- 2 Serial Adapters (1 x SA0141; 1 x SA0142)
- 1 Laptop USB Console Cable
- 2 Power Cords (Only for SN0108A / SN0116A)
- 1 Mounting Kit
- 2 Lok-U-Plugs (Only for SN0108A / SN0116A)
- 1 Foot Pad Set (4 pcs.)
- 1 Software CD
- 1 User Instructions

**Support and Documentation Notice**  
All information, documentation, firmware, software utilities, and specifications contained in this package are subject to change without prior notification by the manufacturer.  
To reduce the environmental impact of our products, ATEN documentation and software can be found online at <http://www.aten.com/download/>

#### Technical Support

[www.aten.com/support](http://www.aten.com/support)

Scan for more information



#### EMC Information

FEDERAL COMMUNICATIONS COMMISSION  
INTERFERENCE STATEMENT:  
This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference to radio communications in which case the user will be required to correct the interference at their own expense.


**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Warning:** Operation of this equipment in a residential environment could cause radio interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

0) 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

### B Hardware Installation

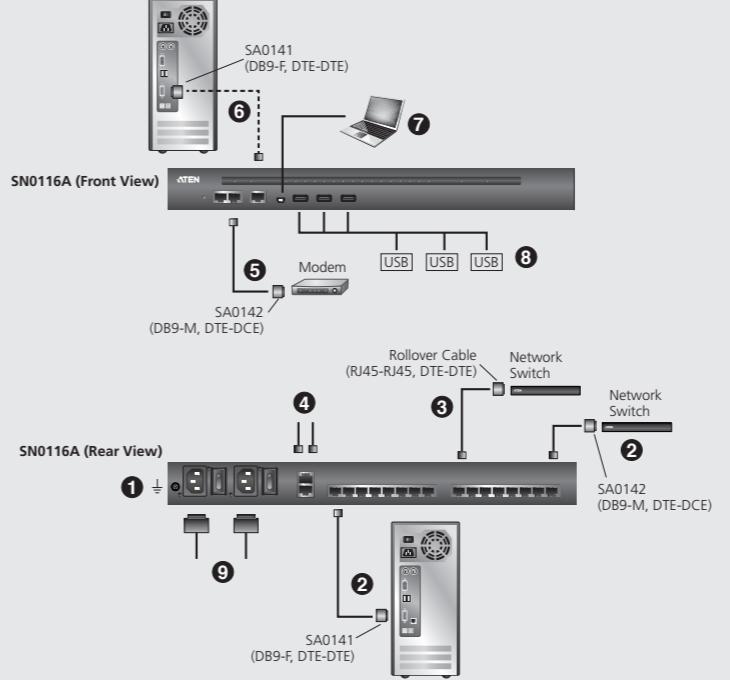

#### Hardware Review

##### Front View

1. Power LEDs
2. Port LEDs
3. LAN LEDs
4. Reset Switch
5. PON Port
6. Modem Port
7. Local Console Port
8. Laptop USB Console Port
9. USB Ports

##### Rear View

1. Grounding Terminal
2. Power Switches
3. LAN Ports
4. Serial Ports
5. Power Sockets
6. Power Sockets (With holes for Lok-U-Plug cable holders)
7. DC Terminal Block

#### Hardware Installation

##### Rack Mounting - Front

To mount the unit at the front of the rack, do the following:

1. Remove the screws at the front of the unit.

Serveur pour consoles série SN0108A/SN0108AD/SN0116A/SN0116AD/SN0132/SN013D/SN0148/SN0148D/SN9108/SN9116 - Guide de démarrage rapide

#### Description de l'appareil

##### Vue avant

1. Voyants d'alimentation (Power)
2. Voyants des ports
3. Voyants LAN
4. Bouton de réinitialisation
5. Port PON
6. Port modem
7. Port de console locale
8. Port de console USB pour ordinateur portable
9. Ports USB

##### Vue arrière

1. Prise de terre
2. Interrupteurs d'alimentation
3. Ports LAN
4. Ports série
5. Prises d'alimentation
6. Prises d'alimentation (avec orifices pour supports de câble Lok-U-Plug)
7. Bornier CC

#### Installation du matériel

##### Montage sur bâti - Fixation avant

Pour monter l'appareil à l'avant du bâti, procédez comme suit :

1. Retirez les vis situées à l'avant de l'appareil.

SN0108A/SN0108AD/SN0116A/SN0116AD/SN0132/SN013D/SN0148/SN0148D/SN9108/SN9116 16 Serieller Konsolserver Kurzanleitung

#### Hardwareübersicht

##### Vorderseite Ansicht

1. LED-Betriebsanzeigen
2. Port-LED-Anzeigen
3. LAN-LED-Anzeigen
4. Schalter zum Zurücksetzen
5. PON-Anschluss
6. Modemport
7. Lokaler Konsolport
8. Laptop-USB-Konsolport
9. USB-Ports

##### Rückseitige Ansicht

1. Erdungsanschluss
2. Netzschalter
3. LAN-Ports
4. Serielle Ports
5. Netzeingangsbuchsen
6. Netzeingangsbuchsen (mit Löchern für die Lok-U-Plug-Kabelhalter)
7. Gleichspannungsanschlussblock

#### Hardware installieren

##### Rack-Montage - Vorderseite

Um das Gerät vorne im Rack einzubauen, gehen Sie folgendermaßen vor:

1. Lösen und entfernen Sie die Schrauben von der Vorderseite.

SN0108A/SN0108AD/SN0116A/SN0116AD/SN0132/SN013D/SN0148/SN0148D/SN9108/SN9116 Servidor para consolas serie Guía rápida

#### Presentación del hardware

##### Vista frontal

1. Indicadores de alimentación
2. Indicadores LED de los puertos
3. Indicadores LAN
4. Interruptor de redeteo
5. Puerto PON
6. Puerto para módem
7. Puerto de consola local
8. Puerto USB de consola de computadora portátil
9. Puertos USB

##### Vista posterior

1. Toma de tierra
2. Interruptores de alimentación
3. Puerto LAN
4. Puerto serie
5. Entradas de alimentación
6. Entradas de alimentación (con agujeros para sujetadores de cables Lok-U-Plug)
7. Bloque de terminales de CC

#### Instalar el hardware

##### Montaje en rack - Fijación frontal

Para montar la parte frontal del rack, haga lo siguiente:

1. Retire los tornillos de la parte frontal de la unidad.

SN0108A/SN0108AD/SN0116A/SN0116AD/SN0132/SN013D/SN0148/SN0148D/SN9108/SN9116 Server para consolas serie Guía rápida

#### Hardware

##### Vista anterior

1. LED d'alimentazione
2. LED delle porte
3. LED LAN
4. Interruttore di ripristino
5. Porta PON
6. Porta del modem
7. Porta console locale
8. Porta USB di collegamento alla console laptop
9. Porte USB

##### Vista posteriore

1. Terminale di messa a terra
2. Interruttori di alimentazione
3. Porte LAN
4. Porte seriali
5. Prese d'alimentazione
6. Prese d'alimentazione (con fori per i fermacavi Lok-U-Plug)
7. Blocco terminali CC

#### Installazione dell'hardware

##### Montaggio in rack - Lato anteriore

Per montare il dispositivo nel lato anteriore del rack, procedere come segue:

1. Rimuovere le due viti poste sul davanti dell'unità.

2. Use the M3 x 8 Phillips head hex screws supplied with the rack mount kit to screw the rack mounting brackets into the front of the unit.
3. Position the device in the front of the rack and align the holes in the mounting brackets with the holes in the rack.
4. Screw the mounting brackets to the rack.

#### Installation

1. Use a grounding wire to ground the unit by connecting one end of the wire to the Serial Console Server's grounding terminal (located on the back panel), and the other end of the wire to a suitable grounded object.

**Note:** Do not omit this step. Proper grounding helps to prevent damage to the unit from surges or static electricity.

2. For each server or serial device with a DB9 connector, plug an RJ-45-to-Serial adapter into its serial port. Use standard straight-through Ethernet cable to connect any available port on the Serial Console Server's rear panel to the RJ-45-to-Serial adapter.

**Note:** Two RJ-45-to-Serial adapters (1 x SA0142; 1 x SA0141) are included in the SN0108A/SN0116A/SN0132/SN0148 package. Additional adapters require a separate purchase. Please contact your dealer.

3. For serial devices with RJ-45 connectors, use Ethernet crossover cable or a special pinout cable to connect any available port on the Serial Console Server's rear panel to the serial RJ-45 port.

4. Plug the cables that connect the Serial Console Server to the network into the primary and backup LAN ports, located on the unit's rear panel.

5. (Optional) If you choose to install a serial modem for OOB operation, use standard Cat 5e cable to connect any available port on the SN0108A/SN0116A/SN0132/SN0148's front panel to a DTE-to-DCF serial adapter, then plug the adapter into the modem's serial port.

(Optional) 2) If you choose to install a serial modem for OOB operation, use standard Ethernet cable to connect any available port on the SN0108A/SN0116A/SN0132/SN0148's rear panel to a DTE to DCF serial adapter, then plug the adapter into the modem's serial port.

6. (Optional) If you wish to use a console terminal connection, use Cat 5e cable to connect the SN0108A/SN0116A/SN0132/SN0148 Console port to the DTE-to-DTE serial adapter SA0141 or SA0143. Connect the adapter's serial connector to the console terminal or the COM port of the computer you will use for the console terminal.


(Optional) If you are using a laptop USB console to control the SN0108A/SN0116A/SN0132/SN0148 locally, use the laptop USB cable included in the package to connect the laptop to the SN0108A/SN0116A/SN0132/SN0148's LUK port, located on the unit's front panel.

8. (Optional) If you are using USB devices (such as USB storage devices, USB hubs, USB LAN cards) with your SN0108A/SN0116A/SN0132/SN0148, connect them to these three Type A female USB ports.

9. For AC models: Use the AC power cord provided with this package to connect the SN0108A/SN0116A/SN0132/SN0148's Power Socket to an AC power source. For DC models: Connect the DC power source to the SN0108AD/SN0116AD/SN0132D/SN0148D's DC terminal block.

#### Securing the Cables


For added safety, use ATEN Lok-U-Plug cable holders to secure the power cables in place on the unit. Secure the cable holders using the specially designed holes around the individual power sockets. (See the SN0108A/SN0116A/SN0132/SN0148 user manual for more details.)

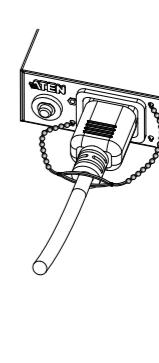

Branchez la source électrique CC au bornier CC du SN0108AD/SN0116AD/SN0132/SN0148.

#### Fixation des câbles

Pour augmenter la sécurité, utilisez les supports de câble Lok-U-Plug ATEN pour fixer les câbles provenant de vos appareils sur l'unité. Fixez les supports de câble en utilisant les orifices prévus à cet effet autour des différentes prises d'alimentation. (Plus de détails, consultez le manuel d'utilisation des unités SN0108A/SN0116A/SN0132/SN0148.)

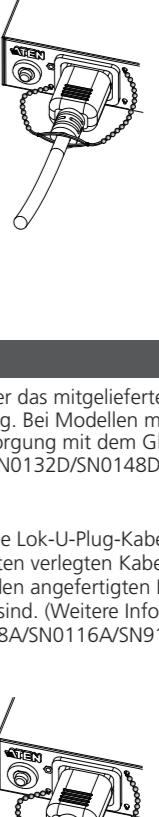


#### SN148/SN9108/SN9116

über das mitgelieferte Netzkabel mit einer Wechselspannungsversorgung. Bei Modellen mit Gleichspannung: Verbinden Sie die Gleichspannungsversorgung mit dem Gleichspannungsanschlussblock des SN0108AD/SN0116AD/SN0132D/SN0148D.

#### Kabel sicher verlegen

Verwenden Sie zur Sicherheit die Lok-U-Plug-Kabelhalter von ATEN, um die von den angeschlossenen Geräten verlegten Kabel an der Einheit zu sichern. Fixieren Sie die Kabelhalter an den angefertigten Löchern, die um die einzelnen Steckdosen herum angebracht sind. (Weitere Informationen entnehmen Sie dem Benutzerhandbuch zum SN0108A/SN0116A/SN0132/SN0148.)

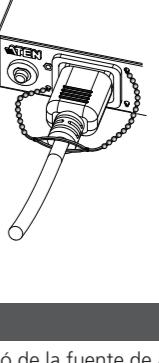

#### Para modelos

