





## Package Contents

- 1 VE-150L  
(Local Unit)
- 1 VE-150R  
(Remote Unit)
- 1 VGA Cable  
(Part No.: LIN5-15X1-X2BG)
- 2 Power Adapters  
(DC 5.3V; 2.4A)
- 1 User Guide

## A Hardware Review

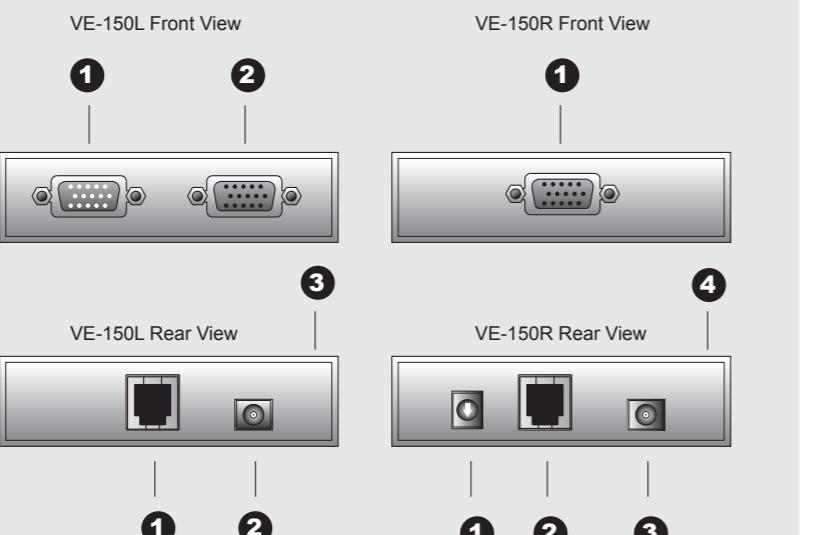

## B Hardware Installation

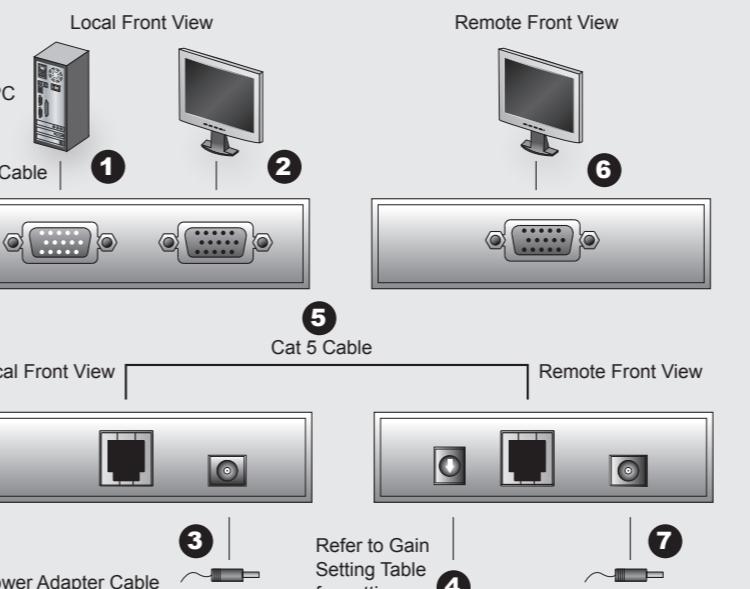

## FCC Information

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected;
- Consult the dealer or an experienced radio/television technician for help.

## Online Registration

International:  
<http://support.aten.com>  
North America:  
[http://www.aten-usa.com/product\\_registration](http://www.aten-usa.com/product_registration)

## Technical Phone Support

International:  
886-2-86926959  
North America:  
1-888-999-ATEN Ext: 4988  
United Kingdom:  
44-8-4481-5893

The following contains information that relates to China:

|       |    |    |       |     |       |
|-------|----|----|-------|-----|-------|
| 部件名称  | 机架 | 壳体 | 机架内机架 | 多孔板 | 多层二层板 |
| 重量(件) | ●  | ○  | ○     | ○   | ○     |

● 表示该部件含有或可能含有在该部件中有害物质材料中的含量均在SJ/T 11363-2006的限量要求以下。  
● 表示该部件含有或可能含有在该部件中有害物质材料中的含量均在SJ/T 11363-2006的限量要求以上，但未超过该部件的某一类材料中的含量要求。如果有害物质不在该部件的某一类材料中的含量超出 SJ/T 11363-2006的限量要求。  
× 表示该部件含有或可能含有在该部件的某一类材料中的含量超出 SJ/T 11363-2006的限量要求。

All information, documentation, and specifications contained in this media are subject to change without prior notice by the manufacturer. Please visit our website to find the most up to date version.



www.aten.com

VE-150 Video Extender Guida dell'utente

## Requisiti di sistema

### Console

- Un PC con una porta d'uscita VGA
- Due monitor VGA, SVGA, XGA, SXGA o Multisync

### Panoramica hardware e funzionamento

#### Vista frontale VE-150L

| # | Descrizione       | Funzione   |
|---|-------------------|--|
| 1 | Porta PC          | Inserire qui il cavo VGA che si collega alla porta VGA audio del computer. |
| 2 | Porta del monitor | Inserire qui la spina del cavo VGA del monitor locale.                     |

#### Vista posteriore VE-150L

| # | Descrizione                             | Funzione  |
|---|---|---|
| 1 | I/O remoto                              | Inserire qui il cavo UTP di Categoria 5 che collega quest'unità all'unità remota. |
| 2 | Presa d'alimentazione                   | Inserire qui il cavo dell'alimentatore.   |
| 3 | LED di accensione (coperchio superiore) | Si illumina ad indicare che il dispositivo è alimentato.                          |

#### Vista frontale VE-150R

| # | Descrizione       | Funzione   |
|---|-------------------|--|
| 1 | Porta del monitor | Inserire qui la spina del cavo VGA del monitor remoto. |

VE-150 ビデオエクステンダーアーカイブ

## 必要ハードウェア環境

### コンソール

- VGA出力ポートを持つPC互換機
- ローカル/リモートにおいてVGA, SVGA, XG, SXGA マルチシンクモニタ

### 製品各部説明および操作

#### VE-150L ローカルユニット フロントパネル

|   |                 |   |
|---|-----------------|---|
| 1 | コンピュータ側 VGAポート  | 同様のVGAケーブルを使用し、ローカル接続するコンピュータのVGAポートをこちらに接続します。 |
| 2 | ローカルモニタ側 VGAポート | ローカル接続するモニタのVGAケーブルをこちらに接続します。                  |

#### VE-150L ローカルユニット リアパネル

|   |                        |   |
|---|------------------------|---|
| 1 | RJ-45 Ethernet ケーブルポート | カテゴリ5 UTP Ethernetケーブルを使用してローカル/リモートユニットを接続します。 |
| 2 | 電源ジャック                 | DC5.3V電源アダプタのケーブルを接続します。                        |
| 3 | 電源LED (製品上部カバー)        | ユニットが電源供給を受けているとき点灯します。                         |

#### VE-150L ローカルユニット フロントパネル

|   |        |                            |
|---|--------|----------------------------|
| 1 | モニタポート | リモートモニタのVGAケーブルをこちらに接続します。 |
|---|--------|----------------------------|

VE-150 ビデオ延長器 使用者ガイド

## システム 要求

### コンソール

- VGA 出力ポートがある PC
- 2 台の VGA, SVGA, XGA, SXGA 或 Multisync モニタ

### ハードウェア構成と使用方法

#### VE-150L 構成

| # | 説明       | 機能                                |
|---|----------|-----------------------------------|
| 1 | リモート I/O | Cat 5 UTP ケーブルを使用してリモートセットと接続します。 |
| 2 | 電源端子     | リモートモニタの電源ケーブルを接続します。             |

#### VE-150R 構成

| # | 説明     | 機能                     |
|---|--------|------------------------|
| 1 | モニタポート | リモートモニタのVGAケーブルを接続します。 |

## VE-150 視訊訊號延長器 使用者手冊

## 系統需求

### 控制端

- 1台具備VGA輸出端口的PC兼容計算機
- 2台 VGA, SVGA, XGA, SXGA 或 Multisync 屏幕

### 硬體導覽及操作

#### VE-150L 前視圖

| # | 説明     | 功能                          |
|---|--------|-----------------------------|
| 1 | 計算機端端口 | 將VGA線的一端連接至此，另一端接到計算機的VGA端口 |
| 2 | 屏幕端口   | 將本地端屏幕的VGA線接到此一接頭           |

#### VE-150L 背視圖

| # | 説明     | 功能                                   |
|---|--------|--------------------------------------|
| 1 | 遠端 I/O | 將連接遠端設備的Cat 5無遮蔽雙絞線(Cat 5 UTP)接到此一接頭 |
| 2 | 電源插座   | 電源適配器連接到此一接頭                         |

#### VE-150L 背視圖

| # | 説明     | 功能                                   |
|---|--------|--------------------------------------|
| 1 | 遠端 I/O | 將連接遠端設備的Cat 5無遮蔽雙絞線(Cat 5 UTP)接到此一接頭 |

#### VE-150R 前視圖

| # | 説明   | 功能               |
|---|------|------------------|
| 1 | 螢幕端埠 | 將遠端螢幕的VGA線接到此一接頭 |


#### VE-150R 背視圖

| # | 説明     | 功能         |
|---|--------|------------|
| 1 | 遠端 I/O | 將變壓器接到此一接頭 |


#### VE-150 前視圖

| # | 説明   | 功能               |
|---|------|------------------|
| 1 | 螢幕端埠 | 將遠端螢幕的VGA線接到此一接頭 |

## A Hardware Review

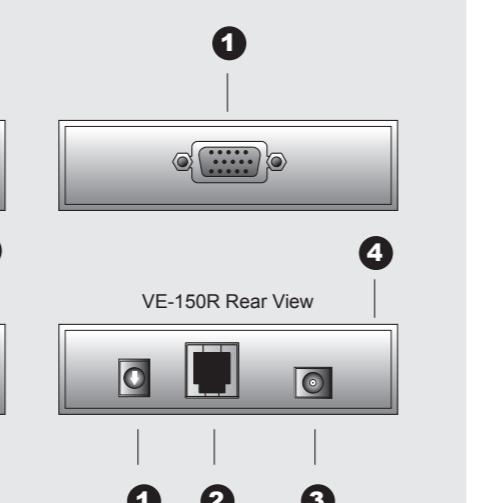

## B Hardware Installation

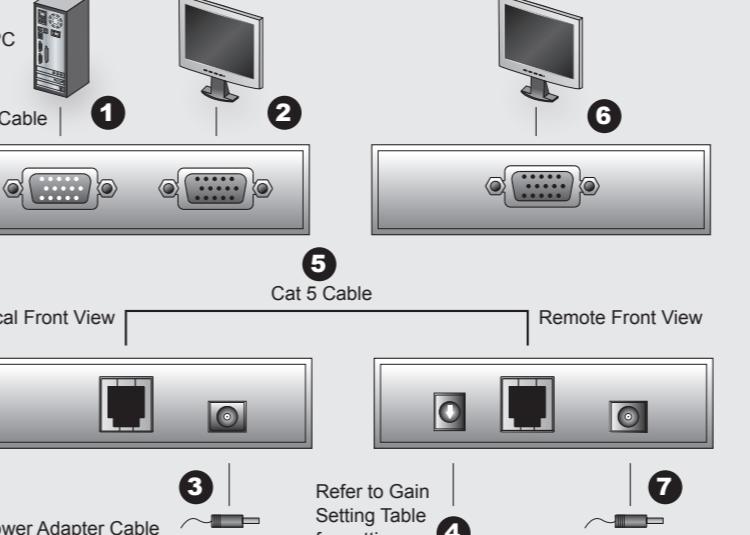

## FCC Information

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected;
- Consult the dealer or an experienced radio/television technician for help.

## Online Registration

International:  
<http://support.aten.com>  
North America:  
[http://www.aten-usa.com/product\\_registration](http://www.aten-usa.com/product_registration)

## Technical Phone Support