



# VK Series & Configurator

ATEN Control System  
User Manual

## Compliance Statements

---

### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### Warning

Operation of this equipment in a residential environment could cause radio interference.

### Achtung

Der Gebrauch dieses Geräts in Wohnumgebung kann Funkstörungen verursachen.



### KCC Statement

유선 제품용 / A 급 기기 (업무용 방송 통신 기기)  
이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이  
점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로  
합니다.

### **Industry Canada Statement**

This Class A digital apparatus complies with Canadian ICES-003.

**CAN ICES-003 (A) / NMB-003 (A)**

### **RoHS**

This product is RoHS compliant.

## **User Information**

---

### **Online Registration**

Be sure to register your product at our online support center:

International	<a href="http://eservice.aten.com">http://eservice.aten.com</a>
---------------	---

---

### **Telephone Support**

For telephone support, call this number:

International	886-2-8692-6959
China	86-400-810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988 1-949-428-1111

---

### **User Notice**

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.



## Product Information

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	<a href="http://www.aten.com">http://www.aten.com</a>
North America	<a href="http://www.aten-usa.com">http://www.aten-usa.com</a>

## Package Contents

Check to make sure that all the components are in working order. If you encounter any problem, please contact your dealer.

### **VK0100**

- ◆ 1 VK0100 8-Button Control Pad
- ◆ 1 button pack
- ◆ 4 2-pin terminal blocks
- ◆ 2 3-pin terminal blocks
- ◆ 1 faceplate
- ◆ 1 user instructions

### **VK0200**

- ◆ 1 VK0200 12-Button Control Pad
- ◆ 1 button pack
- ◆ 4 2-pin terminal blocks
- ◆ 2 3-pin terminal blocks
- ◆ 1 faceplate
- ◆ 1 user instructions

## **VK1100A**

- ♦ 1 VK1100A Control Box Gen. 2
- ♦ 7 2-pin terminal blocks
- ♦ 2 3-pin terminal blocks
- ♦ 1 5-pin terminal block
- ♦ 1 power cord
- ♦ 1 foot pad set (4 pcs)
- ♦ 1 user instructions

## **VK1200**

- ♦ 1 VK1200 Compact Control Box Gen. 2 with Dual LAN
- ♦ 7 2-pin terminal blocks
- ♦ 2 3-pin terminal blocks
- ♦ 1 5-pin terminal block
- ♦ 1 power cord
- ♦ 1 foot pad set (4 pcs)
- ♦ 1 user instructions

## **VK2100A**

- ♦ 1 VK2100A Control Box Gen. 2
- ♦ 1 rack mount kit
- ♦ 12 2-pin terminal blocks
- ♦ 4 3-pin terminal blocks
- ♦ 3 5-pin terminal block
- ♦ 1 power cord
- ♦ 1 foot pad set (4 pcs)
- ♦ 1 user instructions

## **VK2150**

- ♦ 1 VK2150 Control Box Gen. 2
- ♦ 1 rack mount kit
- ♦ 20 2-pin terminal blocks
- ♦ 6 3-pin terminal blocks
- ♦ 4 5-pin terminal block
- ♦ 1 power cord
- ♦ 1 foot pad set (4 pcs)
- ♦ 1 user instructions

## **VK2200**

- ♦ 1 VK2200 Control Box Gen. 2 with Dual LAN
- ♦ 1 rack mount kit
- ♦ 20 2-pin terminal blocks
- ♦ 6 3-pin terminal blocks
- ♦ 4 5-pin terminal block
- ♦ 1 power cord
- ♦ 1 foot pad set (4 pcs)
- ♦ 1 user instructions

## **VK112EU**

- ♦ 1 VK112EU 12-Button Keypad
- ♦ 1 button pack
- ♦ 1 2-pin terminal block
- ♦ 1 faceplate
- ♦ 1 user instructions

## **VK108US**

- ♦ 1 VK108US 8-Button Keypad
- ♦ 1 button pack
- ♦ 1 2-pin terminal block
- ♦ 1 faceplate
- ♦ 1 user instructions

## **VK224**

- ♦ 1 VK224 4-Port Serial Expansion Box
- ♦ 1 power adapter
- ♦ 1 mounting kit
- ♦ 1 user instructions

## **VK236**

- ♦ 1 VK236 6-Port IR / Serial Expansion Box
- ♦ 1 mounting kit
- ♦ 6 3-pin terminal blocks
- ♦ 1 user instructions

## **VK248**

- ♦ 1 VK248 8-Channel Relay Expansion Box
- ♦ 1 mounting kit
- ♦ 9 2-pin terminal blocks
- ♦ 1 user instructions

## **VK258**

- ♦ 1 VK258 8-Channel Digital I/O Expansion Box
- ♦ 1 mounting kit
- ♦ 9 2-pin terminal blocks
- ♦ 1 user instructions

## **VK320**

- ♦ 1 VK320 8" Touch Panel
- ♦ 1 86-type junction box with screws
- ♦ 1 90° RJ-45 cable adapter
- ♦ 1 user instructions

## **VK330**

Due to a package contents change, you may receive one of the following package editions:

### **Latest Package Edition**

- ♦ 1 VK330 10.1" Touch Panel
- ♦ 1 90° RJ-45 cable adapter
- ♦ 1 user instructions

### **Previous Package Edition**

- ♦ 1 VK330 10.1" Touch Panel
- ♦ 1 user instructions

# Contents

---

Compliance Statements . . . . .	ii
User Information . . . . .	iv
Online Registration . . . . .	iv
Telephone Support . . . . .	iv
User Notice . . . . .	iv
Product Information . . . . .	v
Package Contents . . . . .	v
VK0100 . . . . .	v
VK0200 . . . . .	v
VK1100A . . . . .	vi
VK1200 . . . . .	vi
VK2100A . . . . .	vi
VK2150 . . . . .	vii
VK2200 . . . . .	vii
VK112EU . . . . .	vii
VK108US . . . . .	viii
VK224 . . . . .	viii
VK236 . . . . .	viii
VK248 . . . . .	viii
VK258 . . . . .	viii
VK320 . . . . .	ix
VK330 . . . . .	ix
Contents . . . . .	x
About this Manual . . . . .	xviii
Conventions . . . . .	xx
Terminology . . . . .	xxi
What's New in Version 3.8 . . . . .	xxii

## 1. Introduction

Overview . . . . .	1
Benefits . . . . .	2
Intelligent Control . . . . .	2
Optimized Performance . . . . .	2
Simplified Setup . . . . .	2
Effortless Expandability . . . . .	2
User-Oriented Convenience . . . . .	2
On-the-Go Control . . . . .	3
Features . . . . .	4
Controllers . . . . .	4
ATEN Control Box Gen. 2 . . . . .	4
ATEN Control Pad . . . . .	5
ATEN Configurator . . . . .	6

Control Interfaces .....	6
ATEN Keypads .....	6
ATEN Touch Panel .....	6
ATEN Control System App .....	7
Accessories .....	8
Access Inspector (VK401) .....	8
Accessories .....	9

## 2. Hardware Setup and Panel Operation

ATEN Control Box .....	11
Front Panel Overview .....	11
VK1100A Front View .....	11
VK1200 Front View .....	12
VK2100A Front View .....	12
VK2150 Front View .....	12
VK2200 Front View .....	12
VK1100A Rear View .....	14
VK1200 Rear View .....	14
VK2100A Rear View .....	15
VK2150 Rear View .....	15
VK2200 Rear View .....	15
Placement .....	17
Desktop .....	17
Rack Mount .....	17
Control Box Connections .....	21
VK1100A Installation Diagram .....	23
VK1200 Installation Diagram .....	24
VK2100A Installation Diagram .....	25
VK2150 Installation Diagram .....	26
VK2200 Installation Diagram .....	27
12 V DC Power Output .....	28
Relay .....	31
Using Self-supplied Power .....	31
Application: Control Using External Relays .....	33
Unidirectional IR / Serial .....	34
One IR Transmitter .....	35
Two IR Transmitters .....	35
Digital I/O .....	36
Bidirectional Serial .....	38
RS-232 (3-Pin) .....	38
RS-232 / 422 / 485 (5-Pin) .....	39
Ethernet / Control LAN .....	40
ATEN Control Pad .....	41
Panel Components .....	41
VK0100 .....	41

VK0200 .....	41
LED Indications .....	43
Installing the Control Pads .....	44
Wiring Information .....	49
RS-232 Serial Connection .....	49
Relay Connections .....	50
Digital Input Device .....	51
Ethernet .....	52
ATEN Expansion Box .....	53
Control Interface Devices .....	54
ATEN Keypad .....	54
Hardware Overview .....	55
LED Indications .....	57
Layout Examples .....	58
Installing ATEN Keypad .....	59
ATEN 8" Touch Panel (VK320) .....	63
Hardware Overview .....	63
Mounting the VK320 Touch Panel .....	64
Configuring Network Settings .....	65
Changing the Interface Language .....	65
Updating Control System App .....	65
Upgrading Firmware for ATEN Touch Panel .....	66
Other Configurations & Actions .....	66
ATEN 10" Touch Panel (VK330) .....	67
Hardware Overview .....	67
Mounting the Touch Panel .....	68
Installing the Touch Panel .....	70
Operating the Touch Panel .....	70
Changing the Interface Language .....	71
Configuring the Network Settings .....	71
Updating Control System App .....	71
Upgrading Firmware for ATEN Touch Panel .....	71
Accessories .....	73
VK401 Access Inspector .....	73
Components .....	73
Installing an Access Inspector to a VK330 Touch Panel .....	74

### 3. Web-based Configuration and Control

Overview .....	75
Determining the IP Address of the Controller .....	75
LCD Panel .....	76
IP Installer .....	76
Login .....	77
Dashboard .....	78
Overview .....	78



System Settings	80
General	81
Licenses for Mobile Control	83
Storage	84
Access Viewers in Web URL for Remote Control	84
Access	86
SNMP	88
Monitor	88
Network	89
Working as a DHCP Server	89
Connections	90
Schedule	90
Security	91

## 4. ATEN Configurator (VK6000)

Overview	93
Installing ATEN Configurator	93
Getting Started Tasks	96
Main Screen	98
Overview	98
Menu Bar	99
Creating Projects	105
Configuring Controller-Managed Devices	108
The Device Tab	108
Left Sidebar	109
Device List	110
Adding Devices to the Device List	111
Adding Non-KNX-Compliant Devices to ATEN Configurator	111
Adding KNX Devices	113
Device Properties	114
Controller Properties	114
Expansion Box (Expander)	115
Serial Device Properties	116
I/O Device Properties	117
IR/Relay Device Properties	118
Ethernet Device Properties	119
Replacing a Controller	122
Moving a Controller-managed Device to another Controller	124
Moving a Controller-managed Device to Another Room	125
Library	126
Device Library	127
Configuring the Control Interface (Viewer)	128
Getting Started with Configuring Viewers	128
The Design Tab	129
Viewer List	130

Monitor / Control List .....	132
Configuration Panel .....	133
Library .....	133
Simulator .....	133
Adding Viewers .....	134
Deciding How Many & What Viewer to Create .....	134
Configuring a Viewer .....	135
Adding / Removing a Page .....	138
Configuring a Subpage .....	139
Duplicating a Viewer .....	142
Viewer Control Objects .....	142
Understanding Control Objects .....	142
Configuring Control Objects .....	143
Control Object Properties .....	147
Buttons .....	147
Groups .....	151
Labels .....	152
Slider Bars .....	153
PowerPoint Control and Media Control Templates .....	155
Images .....	156
Layering Images .....	157
Videos .....	158
Dial Kit .....	162
QR Code .....	164
Webview .....	165
Frame & Line .....	167
Object Properties for ATEN Keypad / Control Pad .....	168
Button / Slider Bar / Dial Kit Actions .....	171
Understanding Button/Slider Bar/Dial Kit Actions .....	171
Configuring Button/Slider Bar Actions .....	173
Functions .....	174
Device Functions .....	176
Applications of Device Functions .....	178
Example: Configuring actions of dial keys. ....	178
Advanced Functions .....	179
Applications of Advanced Functions .....	184
Set Flag .....	184
Condition .....	185
Change Button State .....	190
Change Label .....	192
Change Group Button State .....	193
Change Slider Bar Level .....	194
Change Button Name .....	195
Library .....	197
Graphic Library .....	198
Button .....	198

Background .....	199
Image (Device Icon) .....	199
Device Interface .....	200
Flag .....	201
Monitor .....	203
Understanding Monitor .....	203
Monitor Page Options .....	203
Condition Types .....	205
Functions .....	208
Creating an If Monitor .....	209
Creating a Switch Monitor .....	212
Creating a Bypass Monitor .....	216
Creating a While Loop Monitor .....	218
Creating a Professional Monitor .....	219
Duplicating a Created Monitor .....	223
Macro .....	224
Scheduled Events .....	226
Creating a Scheduled Event .....	226
Duplicating a Scheduled Event .....	227
Variables .....	228
Understanding Variables .....	228
Creating a Variable for Devices that Return Feedback Messages . .	229
Creating a Variable for Devices that Do Not Return Feedback Mes-	
sages .....	231
Creating a Button for Bypassing Feedback to a Variable .....	235
Timers .....	237
Configuring a Timer Event .....	238
Duplicating a Created Timer .....	241
Centralized Monitoring and Control via Unizon™ .....	242
Overview .....	242
Unizon™ .....	242
Monitor ATEN-controller-managed Devices via Unizon™ .....	242
Control ATEN-controller-managed Devices via Unizon™ .....	242
Enabling Monitoring and Control via Unizon™ .....	243
Creating a Monitor Item .....	244
Creating a Control Item .....	247
Removing a Monitor / Control Item .....	249
The Upload Tab .....	250
Viewing Controller Information .....	252

## 5. ATEN Database Generator

Overview .....	253
Accessing the Database Generator .....	253
My Library 255	

Function Tabs .....	256
Controls on the My Library Window .....	258
Editing / Adding a New Device .....	260
Serial Device .....	261
Text Command Tools .....	264
IR Device .....	266
Digital Output Device .....	268
Relay Device .....	269
Ethernet Device .....	270
Testing Commands .....	276
Configuring Queries .....	278
ATEN Library .....	280

## 6. Remote PC Control

Overview .....	281
Specifications .....	281
Setting Up Remote PC Control .....	283
Installing ControlAssist on Target Computers .....	283
Adding Target Computers to the Control System .....	286
Configuring a Control Interface .....	288
Supported PC Control Actions .....	292

## 7. ATEN Control System App

Overview .....	295
Requirements .....	295
Installing the App .....	295
Demo/Start Screen .....	296
WinViewer1 / iPad / Android1 .....	298
Demo .....	300
Control Pages .....	300
Overview .....	301
Welcome (List of Viewers) Page .....	301
Manage Viewer .....	302
Manage LAN Device .....	303
Controller .....	304
Simulating Viewer Controls with Demo Mode .....	306
Log Report .....	308
Preferences .....	309
General .....	309
Receiving Room Usage Notifications from ATEN Room Booking System .....	311
Remote RBS Control .....	311
AppSwitcher .....	312

Report History .....	315
Information .....	316
Download Viewer .....	317
Downloading Viewers .....	318

## Appendix

Safety Instructions .....	319
General .....	319
Rack Mount .....	321
Technical Support .....	322
International .....	322
North America .....	322
Specifications .....	323
Control System Project Specifications .....	324
Control Box Gen. 2 .....	325
VK1100A .....	325
VK1200 .....	327
VK2100A .....	331
VK2150 .....	334
VK2200 .....	337
Control Pad .....	340
VK0100 .....	340
VK0200 .....	340
Keypad .....	342
VK108US .....	342
VK112EU .....	342
Expansion Box .....	344
VK224 .....	344
VK236 .....	346
VK248 .....	347
VK258 .....	348
Touch Panel and Accessory .....	350
VK320 .....	350
VK330 .....	351
VK401 .....	352
CAD and Panel Cutout Diagrams .....	354
VK0100 .....	354
VK0200 .....	358
VK108US .....	362
VK112EU .....	366
Datapoint Types .....	370
ATEN Control Box Reset Button .....	373
Windows OS Button Limitation .....	374
ATEN Standard Warranty Policy .....	375

## About this Manual

This user manual is provided to help you get the most from your ATEN Control System. It covers all aspects of installation, configuration, and operation of the ATEN controllers, configuration software, and their accessories, including:

Product Category		Model Number	Description
Controllers	Control Box	VK1100A	ATEN Compact Control Box Gen. 2
		VK2100A	ATEN Control Box Gen. 2
		VK2150	ATEN Control Box Gen. 2
		VK1200	ATEN Compact Control Box Gen. 2 with Dual LAN
		VK2200	ATEN Control Box Gen. 2 with Dual LAN
	Control Pad	VK0100	8-Button Control Pad (US, 1 Gang)
		VK0200	12-Button Control Pad (EU, 2 Gang)
Control Interfaces	Keypad	VK108US	8-Button Keypad (US, 1 Gang)
		VK112EU	12-Button Keypad (EU, 2 Gang)
	Touch Panel	VK320	8" Touch Panel
		VK330	10.1" Touch Panel
ATEN Expansion Box		VK224	4-Port Serial Expansion
		VK236	6-Port IR/Serial Expansion Box
		VK248	8-Channel Relay Expansion Box
		VK258	8-Channel Digital I/O Expansion Box

Product Category		Model Number	Description
Software	ATEN Configurator	VK6000	An application used for creating and configuring control system projects, control functions, and visual design of control interfaces (Viewers).
	Database Generator	-	A repository used for creating and storing drivers and operation commands of controlled devices for reuse when configuring Viewers using ATEN Configurator.
	ControlAssist	-	An application installed at a PC for it to be remotely control by ATEN Control System.
	Control System App	-	An application used on mobile devices for centralized control of multiple rooms.

## Chapter 1, Introduction

Introduces you to the ATEN Control System, its purpose, features, and benefits, and the panel components of the Control Box and Control Pad.

## Chapter 2, Hardware Setup and Panel Operation

Provides the necessary steps to set up the ATEN Control System, including the detailed wiring of the different types of hardware interface connections.

## Chapter 3, Web-based Configuration and Control

Provides information about the Control Box's and Control Pad's web interface and its functions for remotely configuring specific parts of the ATEN Control System.

## Chapter 4, ATEN Configurator (VK6000)

Provides a complete description of the ATEN Configurator (VK6000) software and its configuration / operation features for managing the ATEN Control System.

## Chapter 5, ATEN Database Generator

Provides a complete description of the Database Generator software and its functions for adding new devices to the VK6000 device library.

## **Chapter 6, Remote PC Control**

Explains how to set up your computer as a licensed device for remote control and the control actions supported.

## **Chapter 7, ATEN Control System App**

Provides a complete description of the ATEN mobile app, the license required, and its functions and features for remotely operating devices connected to the ATEN Control System.

## **Appendix**

Provides specifications and other technical information regarding the ATEN Control System.

---

### **Note:**

- ♦ Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit and/or connected devices.
  - ♦ The product may be updated, with features and functions added, improved, or removed since the release of this manual. For an up-to-date user manual, visit <http://www.aten.com/global/en/>
- 

## **Conventions**

This manual uses the following conventions:

**Monospaced** Indicates text that you should key in.

- [ ] Indicates keys you should press. For example, [Enter] means to press the **Enter** key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
- 1. Numbered lists represent procedures with sequential steps.
- ♦ Bullet lists provide information, but do not involve sequential steps.



- > Indicates consecutive selecting options (such as on a menu or dialog box). For example, Start > Run means to open the *Start* menu, and then select *Run*.



Indicates critical information.

## **Terminology**

<b>Terminology</b>	<b>Description</b>
ATEN Controller, controller	ATEN Controller or controller refers to all models of ATEN Control Box and ATEN Control Pad.
ATEN Control Box, Control Box	ATEN Control Box or Control Box refers to all models of ATEN Control Box and Compact Control Box (Gen. 1 & 2).
Viewer	A Viewer is a software control interface users customize to control and operate devices in their control system. A Viewer is configurable using ATEN Configurator and applied to a supported control device, such as a mobile device, ATEN Keypad, or ATEN Control Pad, for it to function.
Project	A project is a configuration file, generated using ATEN Configurator to specify settings of an ATEN Control System, including one or multiple controllers, managed devices, and control interfaces.

## What's New in Version 3.8

The firmware version 3.8 supports the following new and improved functions:

New & Improved Feature	For More Information
<b>ATEN Controllers</b>	
Supports IEEE 802.1x authentication.	See <i>Security</i> , page 91.
Supports SNMP protocol to allow remote monitoring and control of ATEN controllers.	See <i>SNMP</i> , page 88.
Supports replacement of controllers.	See <i>Replacing a Controller</i> , page 122.
Supports the <i>Save Variable</i> function which allows changes of variable values to be saved immediately, as opposed to the default setup – saving new changes 30 minutes later.	See <i>Save Variable</i> in <i>Advanced Functions</i> , page 179.
Supports the kill commands function, which removes received but not-yet-executed commands.	See <i>Kill Cmd</i> in <i>Advanced Functions</i> , page 179.
Supports special characters for login access key.	-
<b>Viewer Design and Operation</b>	
Supports drag-and-drop actions of the Normal type buttons.	See <i>Drag-and-drop</i> in <i>Buttons</i> , page 147.
Supports two new control objects: <ul style="list-style-type: none"> <li>◆ QR code object to provide quick access to user-defined web resources.</li> <li>◆ Webview object to embed web pages, e.g. ATEN Video Wall web console, for easy embedding of a device web console.</li> </ul>	See: <ul style="list-style-type: none"> <li>◆ <i>QR Code</i>, page 164</li> <li>◆ <i>Webview</i>, page 165</li> </ul>
Supports new conditions— <i>Multi-Variable If</i> , <i>Multi-Variable Else If</i> , and <i>Multi-Variable Else</i> on a button/scroll bar, to create multiple conditions.	See <i>Condition</i> in <i>Advanced Functions</i> , page 179.
Fully customizable slider bars.	See the <b>Style</b> settings, <i>Slider Bars</i> , page 153.

New & Improved Feature	For More Information
Locks user-selected control objects on Viewer pages to prevent accidental fiddling during configuration.	See <i>Configuring Control Objects</i> , page 143.
<b>Database Generator</b>	
Supports JSON format for HTTP/HTTPS commands.	See <i>Ethernet Device</i> , page 270.
Allows reserved characters to be part of serial and Ethernet device commands by adding a forward slash “\” to the commands.	See: <ul style="list-style-type: none"> <li>◆ <i>Serial Device</i>, page 261</li> <li>◆ <i>Ethernet Device</i>, page 270</li> </ul>

This Page Intentionally Left Blank

# Chapter 1

## Introduction

### Overview

---

The ATEN Control System is an Ethernet-based management system that incorporates ATEN controllers (ATEN Control Box and/or ATEN Control Pad) and control interfaces (ATEN Keypads and ATEN Touch Panel) for connection, configuration, and operation of all hardware devices in a room or large facility to provide convenient control effortlessly via a mobile device or an ATEN Touch Panel. The ATEN controller works as the main controller that provides connectivity to hardware devices commonly seen in settings such as meeting rooms, conferences, boardrooms, and classrooms.

After connecting the hardware, the ATEN Configurator (VK6000) provides simple setup of the devices with easy step-by-step configuration. The ATEN Touch Panel and ATEN Control System app, for iOS, Android or Windows mobile devices, then empowers you with the mobility to control all hardware devices remotely, whenever and however you like.

ATEN Control Box/Control Pad can be easily deployed into an existing installation and integrate seamlessly with ATEN VanCryst pro-AV products and nearly any other hardware devices found in a room, including AV equipment, lighting, conference systems, air conditioning, motion sensors, power switches and many more. The controller serves as the central platform where hardware devices are connected — to be monitored, managed, and controlled directly via a tailor-made GUI — a Viewer — from any iOS, Android, or Windows mobile device or an ATEN Touch Panel.

The control system project and its control interface is configured using an intuitive program — the ATEN Configurator (VK6000). The ATEN Configurator walks you through configuring the hardware, designing the control interface (Viewer), and uploading this configuration to the controller. Through an Ethernet connection, the ATEN Control System app enables you to edit and download Viewers from the controller via a point-n-tap user interface. The use of each Viewer is protected with password authentication to ensure secure access.

The ATEN Control System is the perfect solution for any meeting rooms, conferences, boardrooms, classrooms, and any other room setting that requires a centralized, mobile control of a variety of hardware devices through streamlined Ethernet-based management system with optimum efficiency and performance.

## **Benefits**

---

### **Intelligent Control**

The ATEN Control System makes the interactions between your hardware devices smarter. Programmable actions and triggers provide a fully automated series of advanced operations that allow your devices to respond to each other intelligently, making your meeting solution run smarter and smoother.

### **Optimized Performance**

The ATEN Control System offers communication protocol optimization that not only maintains a near-zero response time but also features data encryption for ensured protection.

### **Simplified Setup**

No matter how large the room or how complicated the hardware, the ATEN Control System can be deployed in 3 easy steps: connecting the hardware, configuring the system, and uploading Viewers for remote control access. Through an intuitive GUI, the process for setting up the controls for every room is simple and customizable, which is fulfilled via straightforward, predefined commands and macros that do not require programming skills.

### **Effortless Expandability**

With a range of expansion boxes available, the ATEN Control System installation can be expanded to accommodate additional hardware devices with various interfaces, such as serial, relay, and IR. In addition, the ATEN Library is preloaded with 10,000+ device drivers, and can also be expanded freely by adding new device drivers through the Database Generator for convenient management, however the size or scope of the installation may be.

### **User-Oriented Convenience**

With its advanced, single-software design, the ATEN Control System offers a comprehensive library of actions and design elements for creating intuitive control panel interfaces for convenient, customizable remote access and control by any mobile device. Various support services also provided with the solution include driver downloads, database generation, upgrade tools, etc. — to help

system integrators build easy-to-control applications in a wide range of scenarios effortlessly.

### **On-the-Go Control**

Intuitive system control can start from one room and scale up to multiple rooms, both within the same area and even across regions. Different rooms can be effectively controlled by switching between Viewers, with simple point-n-tap operations, on an iOS, Android and/or Windows mobile. For optimal flexibility, multiple mobile devices can be authorized to control the same room or multiple rooms, providing enhanced mobility.

# Features

## Controllers

### ATEN Control Box Gen. 2

- ♦ High performance quad-core CPU processor for designing and controlling complex projects
- ♦ Dual LAN design to support secure communication requirements (applicable to VK1200 / VK2200 only)
- ♦ Equipped with various connection interfaces for hardware-software integration and mobility of control:

Interface		VK1100A	VK1200	VK2100A	VK2150	VK2200
Bidirectional Serial	3-Pin RS-232	1		4	6	6
	5-Pin RS-232/422/485	1		2	2	2
Unidirectional IR/Serial Port		2		4	8	8
Relay		4		4	8	8
Digital I/O		2		4	8	8
12V DC Output		1		4	4	4
Ethernet Port		1	1 LAN 1 Control LAN	1	1	1 LAN 1 Control LAN

- ♦ USB port for easy Viewer upload
- ♦ LCD display shows the option for configuration and information display (only applicable to VK1200 / VK2200)
- ♦ IR Learning for adding IR device drivers
- ♦ Support for native KNX IP for building management systems
- ♦ TCP, UDP, Telnet, HTTP, HTTPS, WebSocket, ONVIF and PJLink compliant
- ♦ Open API for effortless integration with 3rd party systems or software
- ♦ Centralized control and management of devices with ATEN Unizon™
- ♦ Project file backup
- ♦ Web GUI for easy system configuration
- ♦ Support for SSH communication for data monitoring
- ♦ LED indication of connection and hardware status
- ♦ 2 free licenses for mobile control



---

**Note:** If you need more than two licenses for mobile control, contact your local sales representative for more information.

---

## **ATEN Control Pad**

- ♦ Equipped with various connection interfaces for hardware-software integration and mobility of control:
  - ♦ 2 RS-232 serial ports
  - ♦ 2 relay channels
  - ♦ 1 digital input port
  - ♦ 1 Ethernet port
- ♦ Designed to mount in 1-gang US type junction boxes (for VK0100); 2-gang EU type and MK type junction boxes (for VK0200)
- ♦ Fully customizable layout
  - ♦ VK0100: 14 layout variations using 4 to 8 buttons
  - ♦ VK0200: 125 layout variations using 6 to 12 buttons
- ♦ Customizable button text engraving service
- ♦ Available in black or white color
- ♦ Supports native KNX IP for building management systems
- ♦ TCP, UDP, Telnet, HTTP, HTTPS, WebSocket, ONVIF and PJLink compliant
- ♦ Enables centralized control and management of devices with ATEN Unizon™
- ♦ Supports project file backup
- ♦ Web GUI for easy system configuration
- ♦ Supports SSH communication for data monitoring
- ♦ LED indication of connection and hardware status
- ♦ Dual-color LEDs for clear indication in dark environments
- ♦ Power over Ethernet (PoE) or DC power

## **ATEN Configurator**

- ◆ Simple Viewer setup with easy configuration steps via intuitive GUI
- ◆ Customizable GUI to be used on mobile devices and PC
- ◆ Supports ControlAssist that allows PC control (PC shutdown, media files, PowerPoint files)

---

**Note:** For details on the supported PC control actions, see *Supported PC Control Actions*, page 292.

---

- ◆ Built-in Database Generator for device driver setup and overall device management.
- ◆ Built-in ATEN Library comprising 10,000+ device drivers and complete ATEN product drivers
- ◆ Event scheduling
- ◆ Two-way communication enables user-defined event monitoring to automatically trigger the next actions
- ◆ Test tool to verify commands in action before uploading the Viewer to the ATEN controller
- ◆ Simulator to simulate and review the customized GUI before uploading

## **Control Interfaces**

### **ATEN Keypads**

- ◆ Fully customizable layout
  - ◆ VK108US: 14 layout variations using 4 to 8 buttons
  - ◆ VK112EU: 125 layout variations using 6 to 12 buttons
- ◆ Designed to mount in 1-gang US type junction boxes (for VK108US); 2-gang EU type and MK type junction boxes (for VK112EU)
- ◆ Available in black or white color
- ◆ System LED indicators for quick connection status check
- ◆ Dual-color LEDs for clear indication in dark environments
- ◆ Easy ID pairing with ATEN controller for Ethernet communication
- ◆ Scalability – an ATEN controller can connect up to 8 Keypads
- ◆ Versatile modes support flexible behavior settings for each button
- ◆ Intuitive Web GUI for easy configuration
- ◆ Redundant power supplies (DC power and PoE)
- ◆ Button engraving service

### **ATEN Touch Panel**

- ◆ 8" touch panel (VK320) / 10.1 touch panel (VK330)

- ♦ Natively installed with ATEN Control System app and designed for the integrated use with ATEN Control System
- ♦ Supports AppSwitcher to allow multiple apps to be switched and operated
- ♦ Integrated with ATEN Unizon and ATEN Room Booking System to display room usage and operating status
- ♦ Allows administrators to centrally control multiple rooms via Viewers
- ♦ Restricts user access to Viewers with password authentication
- ♦ Synchronization of Viewers used among multiple ATEN Touch Panels, mobile devices and tablet computers
- ♦ Supports demo mode to allow demonstration of the solution's most important functions without the need to connect the touch panel to a controller
- ♦ Screen Saver helps save energy and prolongs the lifetime of the touch screen
- ♦ Supports Display Real-time Streaming Protocol (RTSP), ONVIF, and ATEN VE89 series video preview

---

**Note:** The function is only applicable to VK1200 / VK2200.

---

- ♦ PoE+ (IEEE 802.3at) compliant
- ♦ VK320 supports in-wall design (perfectly fits in building decoration) and desktop mount using VK102
- ♦ Side power LED – features the indicator in the dark place (only applicable to VK302)
- ♦ VK330 supports mounting on wall (using VK302 Wall Mount Kit), tabletop (using VK304 Tabletop Kit), and any standard VESA 75 x 75 mm mounts

## **ATEN Control System App**

- ♦ Allows administrators central control of multiple rooms via Viewers on a mobile device or tablet computer
- ♦ Restrict user access to Viewers via password authentication
- ♦ Synchronization of system controls amongst multiple mobile devices and tablet computers
- ♦ Any iOS, Android, or Windows mobile device can be used to control the system – no need to purchase costly exclusive user panels
- ♦ Supports demo mode to allow demonstration of the solution's most important functions without the need to connect the touch panel to a controller
- ♦ Screen Saver helps save energy and prolongs the lifetime of the touch screen

- ◆ Supports Display Real-time Streaming Protocol (RTSP), ONVIF, and ATEN VE89 series video preview

---

**Note:** The function is only applicable to VK1200 / VK2200.

---

## **Accessories**

### **Access Inspector (VK401)**

- ◆ An add-on compact accessory that works with ATEN VK430 10.1" RBS Panel and VK330 10.1" Touch Panel
- ◆ Operates at 13.56 MHz
- ◆ Supports multiple standards — ISO 14443A/B and ISO 15693
- ◆ Reads smart cards — Mifare and Felica
- ◆ Contactless access control with high levels of security and hygiene
  - ◆ Only authorized users can scan cards to book, check in, lock, or unlock meeting rooms and facilitate conference room automation
  - ◆ Helps collect valuable data, including meeting attendance list and meeting duration
  - ◆ Keeps track of meeting records for centralized management
- ◆ Reports can be sent to designated users regularly on a daily, weekly, monthly, or quarterly basis

## Accessories

---

Maximize the efficiency and functionality of your Control System with a wide range of products and accessories, such as ATEN Unizon for centralized management, professional audio products for audio processing. For more information, visit the product page of your specific controller model or contact your local ATEN dealer

This Page Intentionally Left Blank

## Chapter 2

# Hardware Setup and Panel Operation




1. Important safety information regarding the placement of this device is provided on *Safety Instructions*, page 319. Please review it before proceeding.
2. Make sure that the power to all devices connected to the installation are turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.

## ATEN Control Box


---

### Front Panel Overview


#### VK1100A Front View

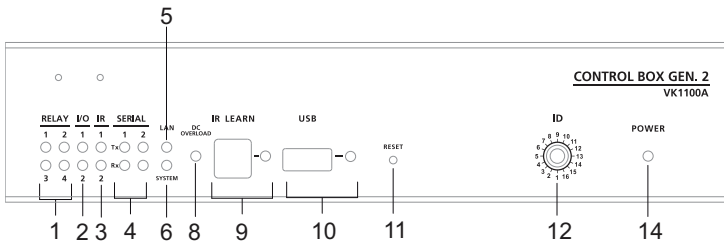


VK1200 Front View

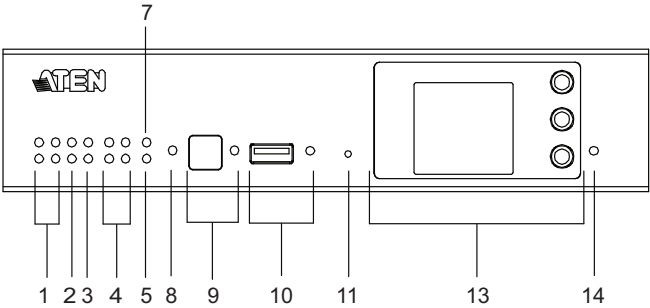


VK2100A Front View

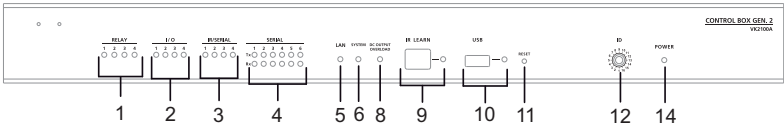

VK2150 Front View

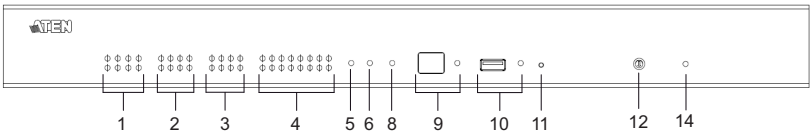

VK2200 Front View

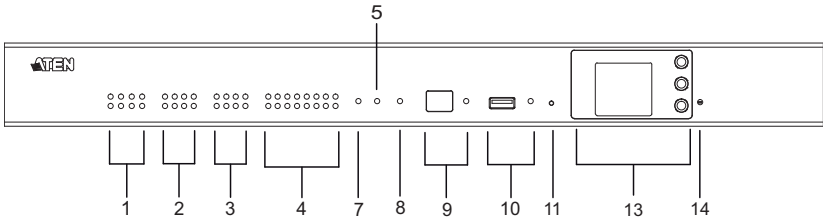




No.	Component	Description
1	relay LEDs	<ul style="list-style-type: none"> <li>♦ <b>Lights green</b> to indicate an active device connection or signals being transmitted.</li> <li>♦ <b>Blinks green once</b> to indicate system startup, with the buzzer beeping once</li> </ul>
2	I/O LEDs	
3	IR / serial LEDs	
4	serial LEDs	
5	LAN LED	<b>Lights green</b> to indicate successful connection to the network.
6	System LED	Blinks green to indicate that the system is running without issues.
7	Control LAN LED	<b>Lights green</b> to indicate successful connection to the network.
8	DC output overload LED	<p><b>Lights orange</b> to indicate DC output exceeding the maximum output threshold, with the buzzer beeping for 3 seconds.</p> <p><b>Note:</b> Please unplug any of the connected devices to keep its total output under 12 V DC, 1 A / 2A and restart the unit.</p>
9	IR receiver / LED	<p>Passes the functions of a remote control to the Control Box learning mode. The distance between the IR remote and the receiver window should be kept under 10 cm with a direct line of sight.</p> <ul style="list-style-type: none"> <li>♦ The LED blinks green to indicate the unit is receiving signals from an IR remote control</li> <li>♦ The LED lights green to indicate entering learning mode, or IR learning success with the buzzer beeping once.</li> </ul>
10	USB port / LED	<p>Plugs in a USB device to upload Viewers (configured by the VK6000) to the Control Box.</p> <ul style="list-style-type: none"> <li>♦ The LED blinks green to indicate that Viewers are being uploaded, and lights green to indicate a successful upload, with the buzzer beeping once upon USB plug-in and once upon upload success.</li> <li>♦ The LED lights orange to indicate upload failure, with the buzzer beeping 3 times for no available file found or upload failure.</li> </ul> <p><b>Note:</b> Control Box Gen. 2 is compatible with USB drivers in NTFS and FAT32 format.</p>


No.	Component	Description
11	reset button	<ul style="list-style-type: none"><li>◆ <b>Clear all settings but network, license, and firmware:</b> Press and hold until the front panel LEDs blink once, with the buzzer beeping once (about 8 seconds). The LEDs and buzzer will trigger once more when the reset is complete.</li><li>◆ <b>Reset network settings:</b> Short press once.</li></ul> <b>Note:</b> For more reset button functions, see page 372.
12	Control Box ID Switch	Use the switch to set an ID for the Control Box.
13	LCD panel and buttons	Use the <i>Up</i> , <i>Down</i> , and <i>Enter</i> buttons to display the unit's system information, and set its ID.
14	power LED	Lights green when the unit is turned on.

Rear Panel Overview


VK1100A Rear View

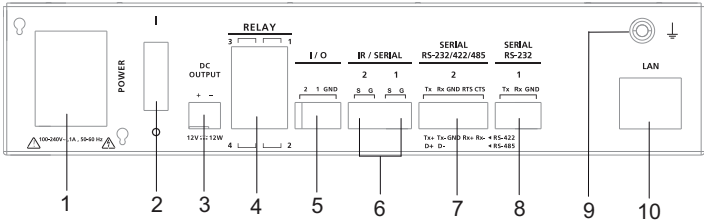


VK1200 Rear View

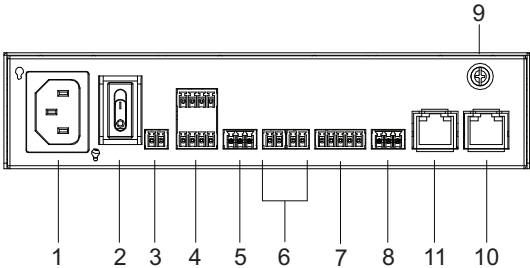


VK2100A Rear View

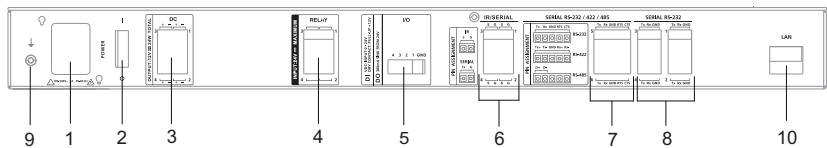

VK2150 Rear View

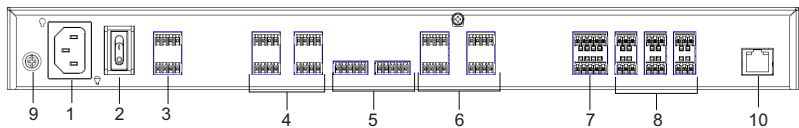

VK2200 Rear View

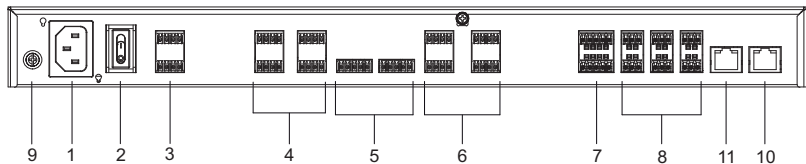

No.	Component	Description
1	power socket	Plugs in the power cord from an AC power source.
2	power switch	Powers the unit on or off.
3	12 V DC output ports	1 / 4 DC output port(s) providing a total output of 12 V DC, 1 / 2 A from the Control Box.
4	relay channels	4 / 8 channels; normally open, isolated relays with a contact rating of 24 V DC, 2 A max.

No.	Component	Description
5	I/O channels	<p>2 / 4 / 8 channels that can be configured as digital inputs or outputs, with the first pin being ground and the rest being number pins.</p> <p>♦ <b>Digital Input:</b></p> <ul style="list-style-type: none"> <li>♦ VDC Mode: 0 - 24 V DC; programmable range of 1 - 24 V DC</li> <li>♦ Dry Contact Mode: Pull-up 2k <math>\Omega</math> to +12 V DC</li> </ul> <p>♦ <b>Digital Output:</b> 300 mA sink from 24 V DC</p>
6	IR / serial ports	2 / 4 / 8 IR ports that can also be configured as RS-232 TX ports. pin 1: Signal / pin 2: Ground.
7	RS-232/422/485 serial ports	1 / 2 5-pin RS-232/422/485 serial ports by pin assignment.
8	RS-232 serial ports	1 / 4 / 6 3-pin RS-232 serial ports with Tx, Rx and GND.
9	grounding terminal	Connects to the grounding wire.
10	LAN	<ul style="list-style-type: none"> <li>♦ Connects the unit to the corporate LAN for remote access and centralized management by ATEN Unizon.</li> <li>♦ Default network settings when no dynamic IP address is assigned by a DHCP server, after 30 seconds: <b>VK2200 / VK1200</b> <ul style="list-style-type: none"> <li>♦ IP: 192.168.1.60</li> <li>♦ mask: 255.255.255.0</li> </ul> </li> <li>♦ <b>VK2100A / VK1100A</b> <ul style="list-style-type: none"> <li>♦ IP: 192.168.0.60</li> <li>♦ mask: 255.255.255.0</li> </ul> </li> </ul>
11	Control LAN	<ul style="list-style-type: none"> <li>♦ Connects the unit to a secure subnetwork, separate from the corporate LAN, for managing IP devices and configuration by the ATEN Configurator VK6000, as well as for remote control by ATEN Keypads, Touch Panel or the ATEN Control System app on mobile devices.</li> <li>♦ Default network settings when no dynamic IP address is assigned by a DHCP server, after 30 seconds: IP: 192.168.0.60 mask: 255.255.255.0</li> <li>♦ Supports DHCP server</li> </ul>

## **Placement**


### **Desktop**

To place the control box on a flat surface, such as a desk, simply attach the foot pad set provided onto its 4 corners and place it on the surface.


### **Rack Mount**

The Control Box Gen. 2 can be mounted onto a 19" (1U) system rack. To install your Control Box, follow the corresponding procedure below for your specific model.

1. **VK2100A / VK2150 / VK2200** Using the supplied rack mount kit, attach the 2 mounting brackets onto the sides of the unit with the 6 screws (M3x6) included.

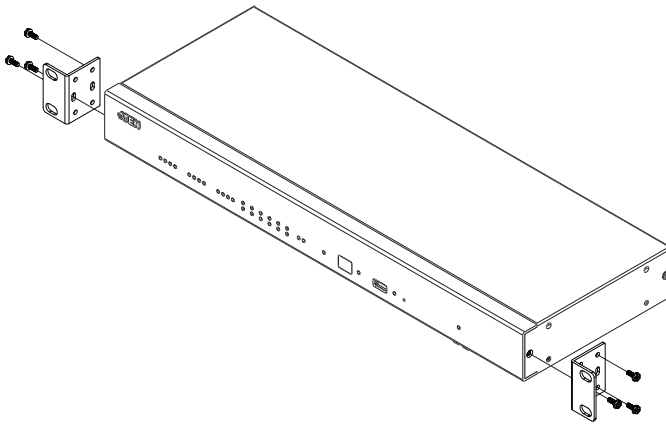

2. Align the mounting brackets' screw holes with that of the front of the rack, and use 4 self-supplied screws to secure the unit onto the rack.

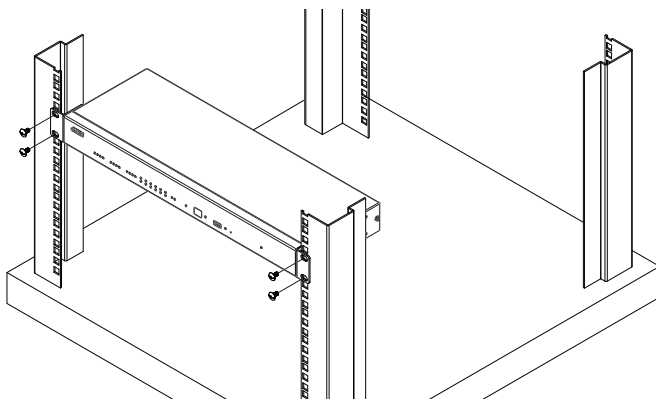


### ■ VK1100A / VK1200


The VK1100A / VK1200 can be mounted to racks using Single Rack Mount kit (2X-049G) or Dual Rack Mount kit (2X-021G). Note that these accessories must be purchased separately.

#### Single Rack Mount (2X-049G)

1. Using the rack mount kit, attach the 2 mounting brackets onto the sides of the unit with the 4 screws (M3x6) included.

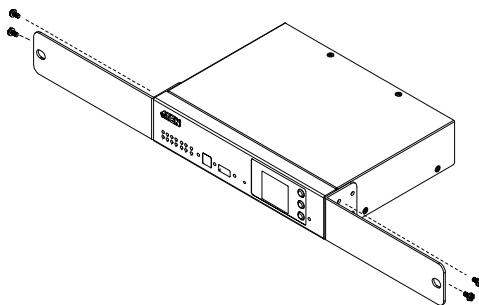


2. Align the mounting brackets' screw holes with that of the front of the rack, and secure the unit onto the rack using 2 self-supplied screws.

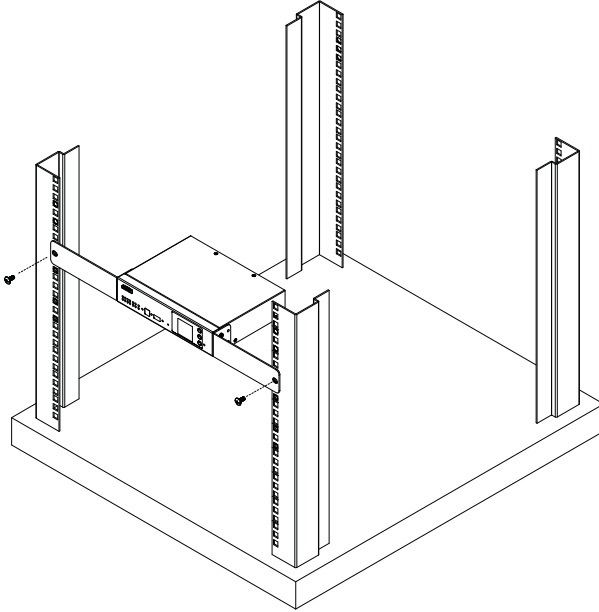


### Double Rack Mount (2X-021G)

1. Remove 2 screws at the bottom and 1 screw at the side from each of the two VK1100A / VK1200 units, as shown below.

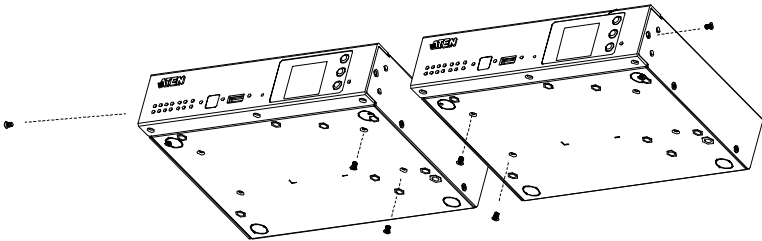


2. Use 4 of the screws from step 2 to secure the two VK1100A / VK1200 units together with the link bracket. Then install the left and right mounting

brackets onto the sides of the units using 2 of the M3x5 and M3x6 screws included.

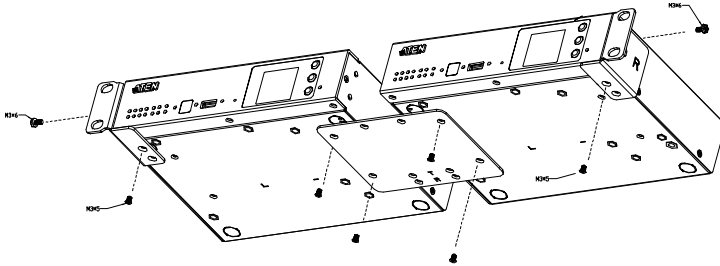

3. Align the mounting brackets' screw holes with that of the front of the rack, and secure the units onto the rack using 4 self-supplied screw.

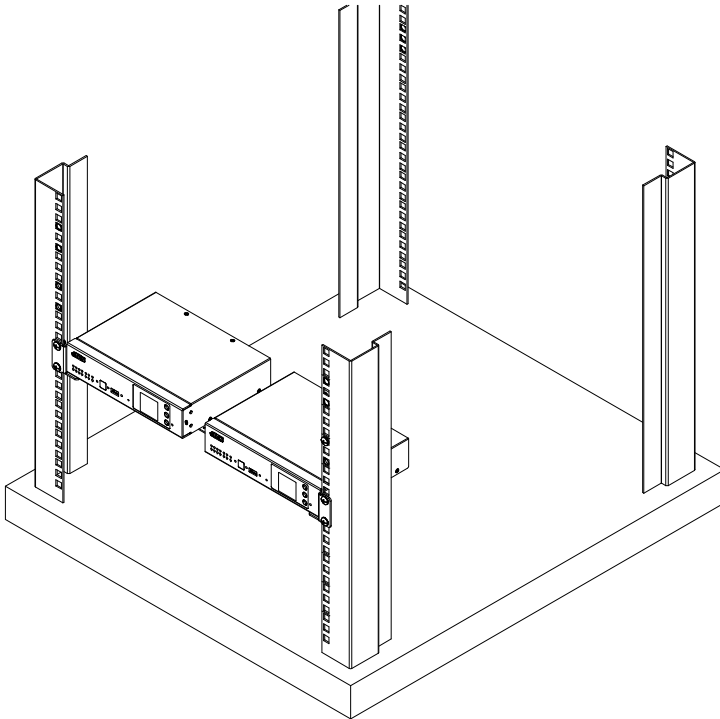



## **Control Box Connections**

To set up each device, refer to the installation diagrams on the pages that follows (each step provides a corresponding page with diagram), and do the following:

1. Use a grounding wire to ground the unit by connecting one end to the grounding terminal and the other end to a suitable grounded object.

---

**Note:** Do not omit this step. Proper grounding helps prevent damage to the unit from surges or static electricity.

---

2. Plug the power cord into the Control Box's power socket, and connect it to an AC power source.
3. Use a Cat 5e/6 cable to connect the VK1100A / VK2100A / VK2150's LAN (Ethernet) port or VK1200 / VK2200's Control LAN port to a secured subnetwork.
4. (Optional) For VK1200 / VK2200, use another Cat 5e/6 cable to connect its LAN port to the corporate network.
5. Use the DC output terminals to wire 12 V DC power connections using the instructions on page 29.
6. Use the relay terminals to wire relay device connections using the instructions on page 31.
7. Use the IR / serial (RS-232 TX) terminals to wire IR or serial device connections using the instructions on page 34.
8. Use the digital I/O terminals to wire digital input / output device connections using the instructions on page 36.
9. Use the 3-pin RS-232 terminals to wire RS-232 serial device connections using the instructions on page 38.
10. Use the 5-pin RS-232/422/485 terminals to wire the corresponding serial device connections using the instructions on page 39.
11. Connect IP-based devices to the same network as the Control Box. Refer to *Ethernet / Control LAN*, page 40 for details.

---


**Note:**

- ♦ For KNX-compliant devices, connect the devices to a KNX IP interface, and then connect the KNX IP interface to the network where the Control Box is installed.
  - ♦ To check if the KNX functions are supported by the Control Box, see *Specifications*, page 323.
- 


12. Start the unit by switching on its power switch.

13. For VK1200 / VK2200, use the LCD panel to set its ID.


VK1100A Installation Diagram

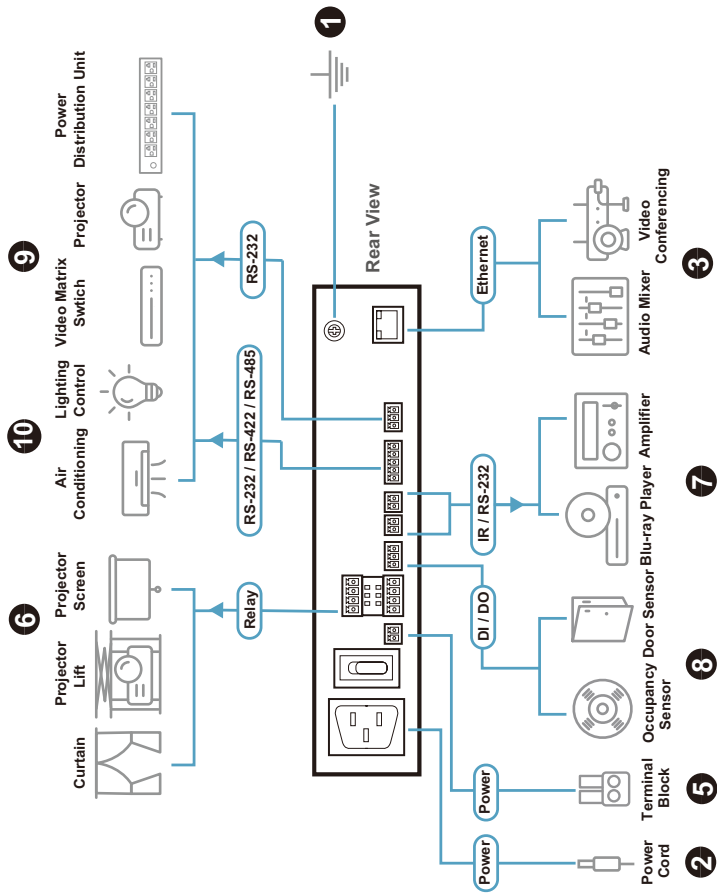


VK1200 Installation Diagram

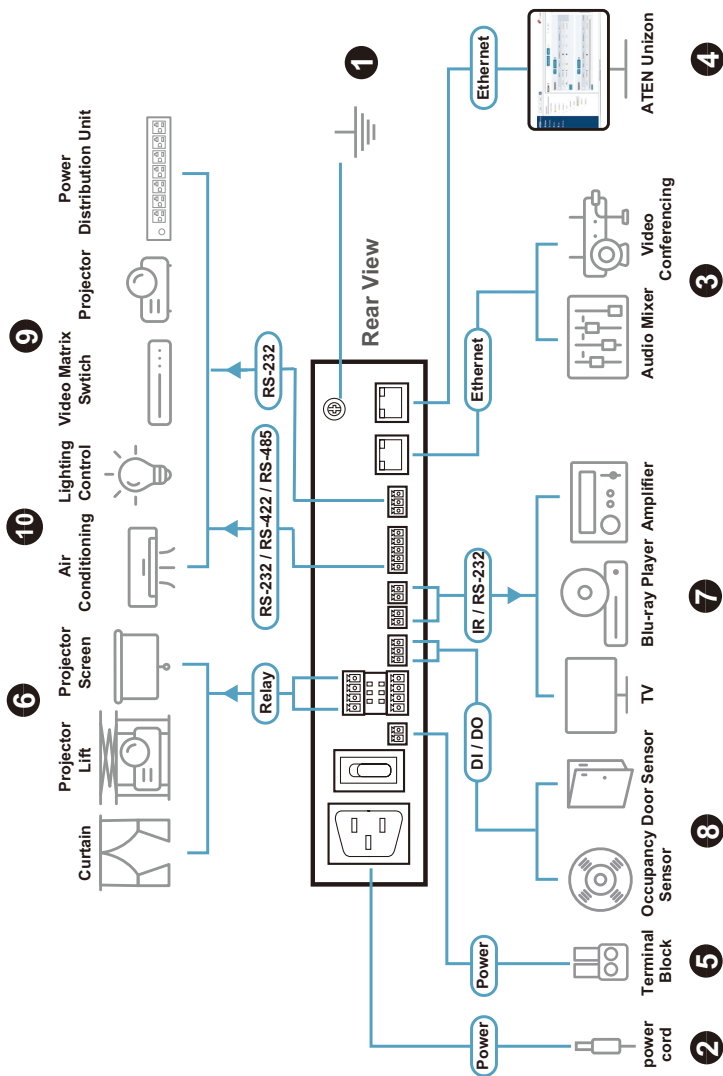


VK2100A Installation Diagram

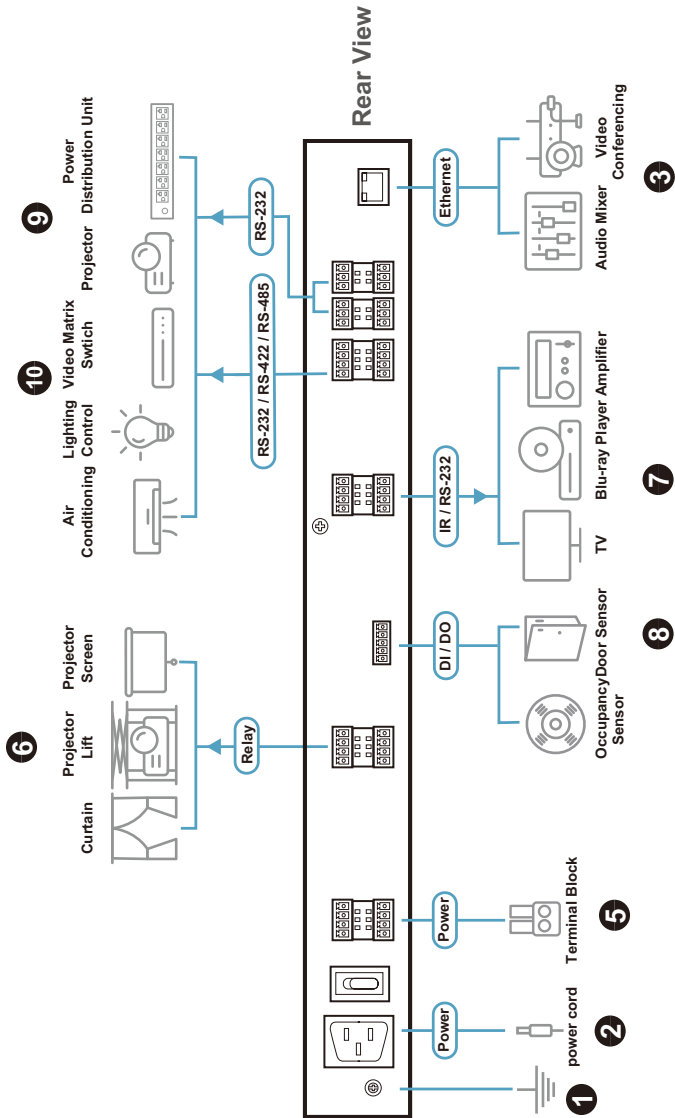

VK2150 Installation Diagram

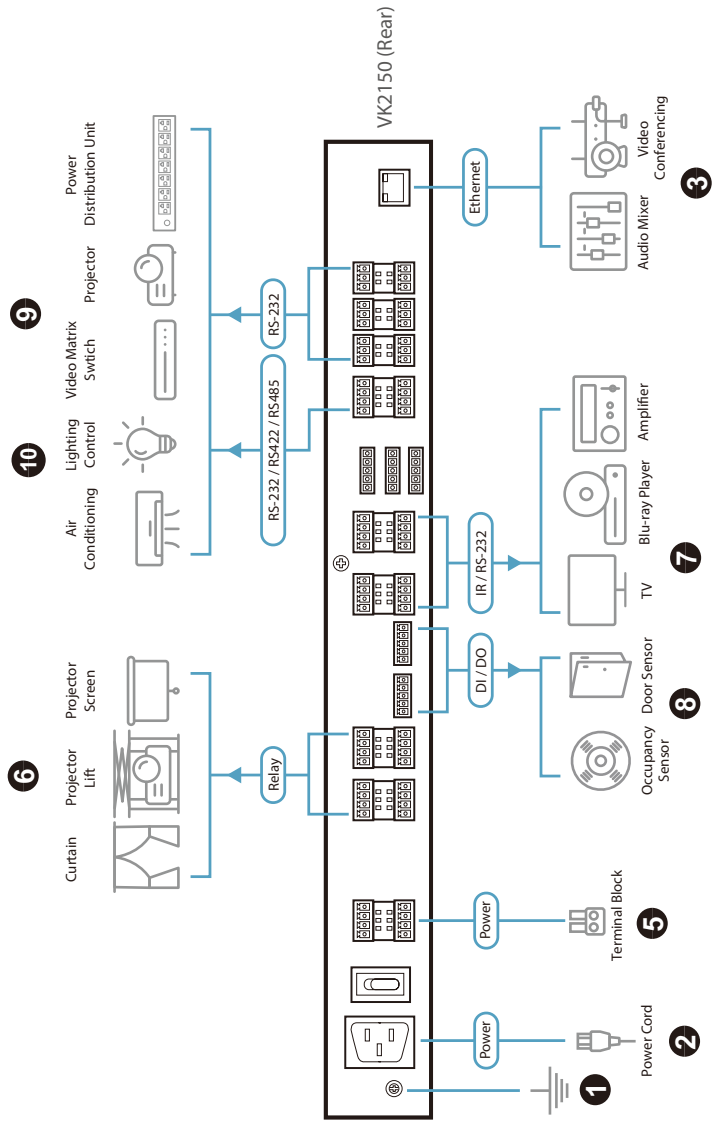

VK2200 Installation Diagram

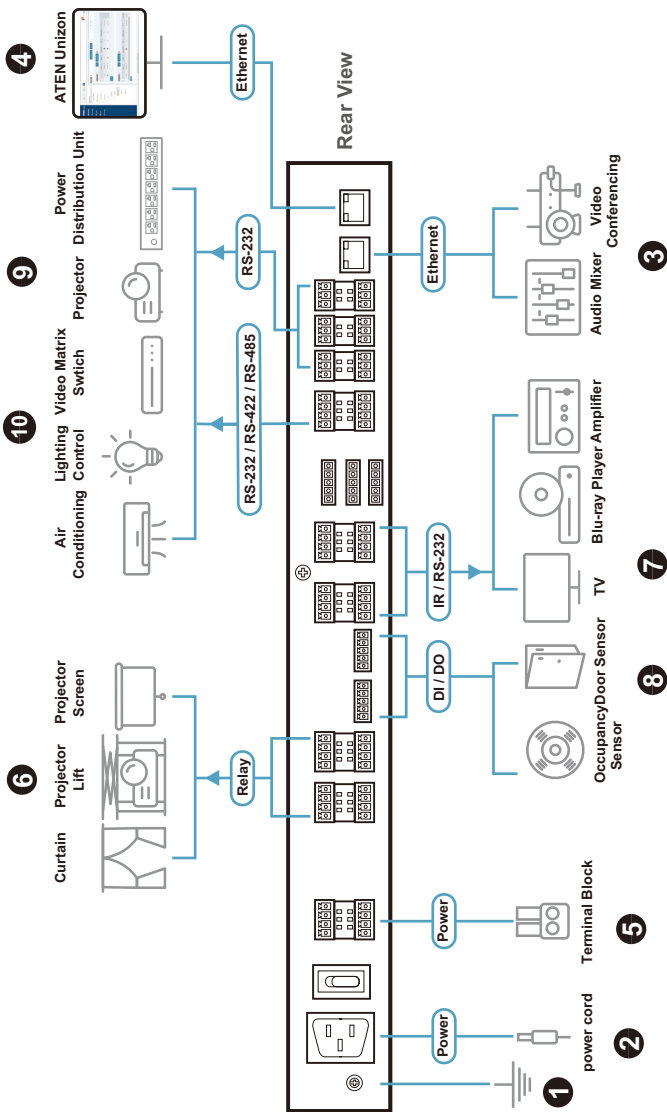

12 V DC Power Output

ATEN Control Box offers the following 12 V DC outputs for providing power to hardware devices:


12V DC Power Output	VK1100A / VK1200	VK2100A / VK2150 / VK2200
Number of Channels	1	4
Max. Power Supply	DC 12 V, 1 A	DC 12 V, 2 A

The outputs can power one or four independent hardware devices, one or four loops for connected relay devices, or one or four digital output devices.

If the combined current of the ports exceeds 1 A (VK1100A / VK1200) or 2 A (VK2100A / VK2150 / VK2200), the DC power overload LED lights orange, an alarm beeps three times, and the ports are turned off. To return power to the ports, power off the Control Box, unplug all hardware connected to the 12 V DC output ports, power on the Control Box, and then plug in the hardware devices, one at a time, and make sure the current does not exceed 1 A or 2 A.


The diagrams on the next three pages show ports on the VK2100A / VK2150 / VK2200. The VK1100A / VK1200 is the same except that it has fewer 12 V DC terminal blocks.

Independent Power Supply

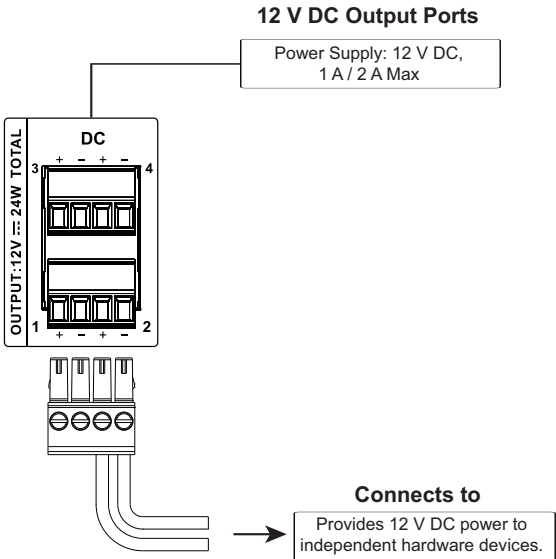




Digital Output Power Supply

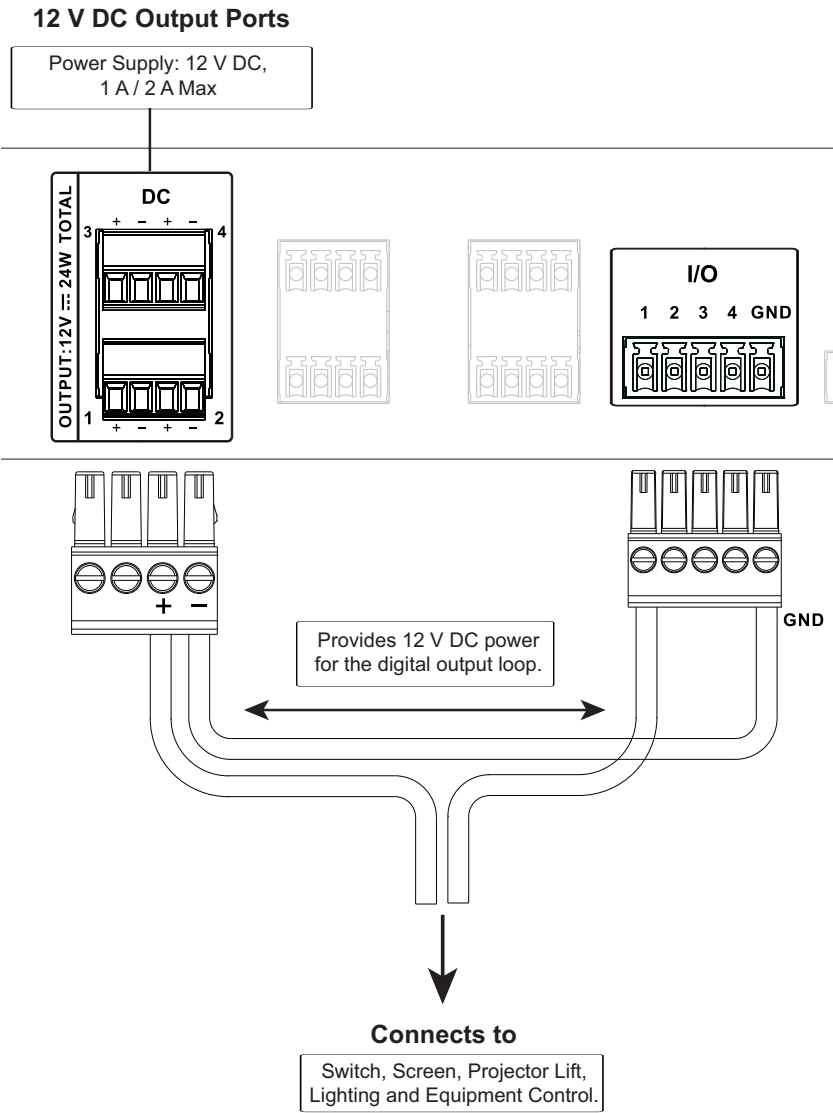

Digital Output Dual Power Supply (VK2100A / VK2150 / VK2200 only)

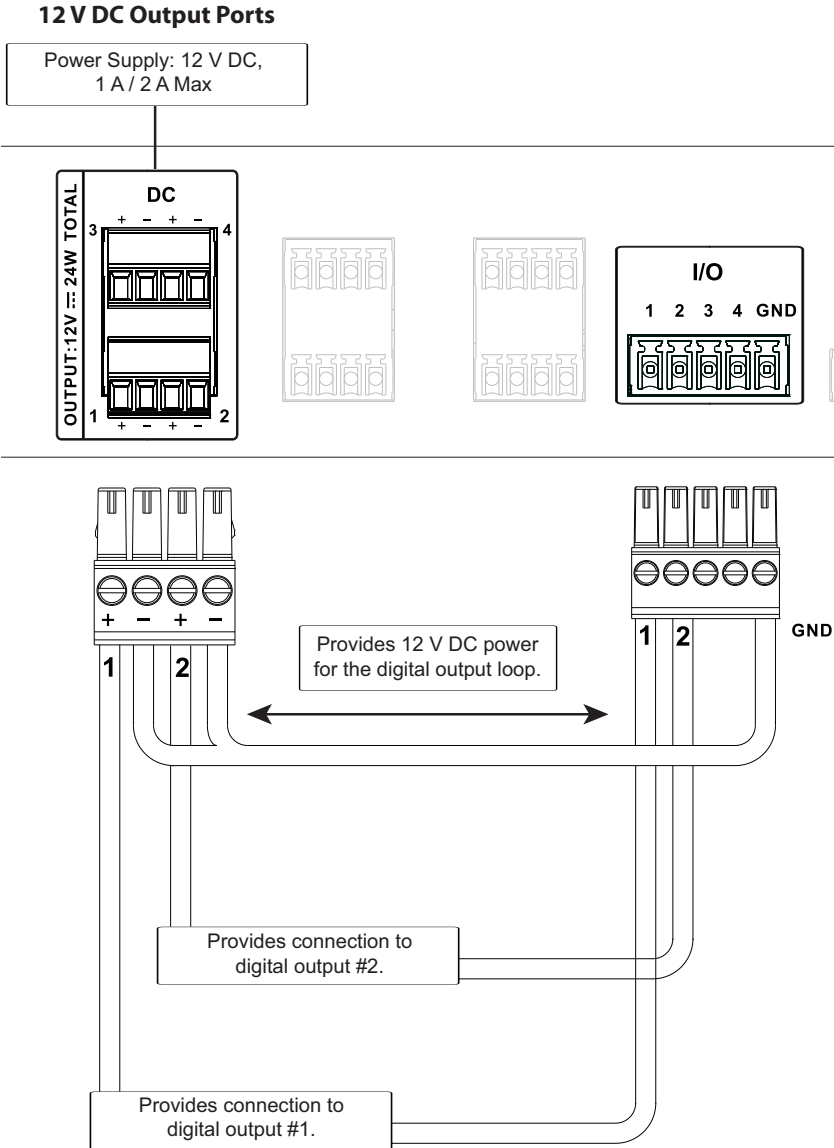


Relay


ATEN Control Box provides the following isolated relays:

Relay	VK1100A / VK1200 / VK2100A	VK2150 / VK2200
Number of Channels	4	8
Contact Rating	24 V DC, 2 A	
Default Status	Normally Open	

Using Self-supplied Power


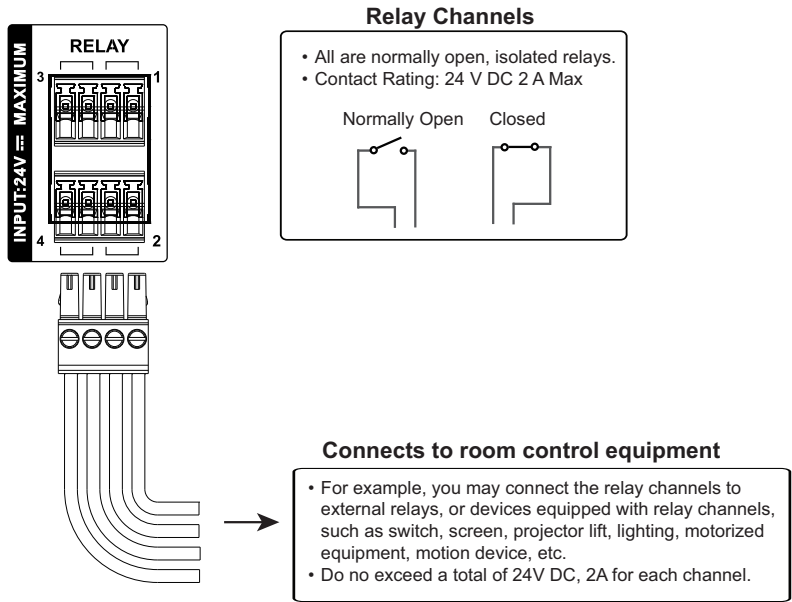


# Relay Power Supply

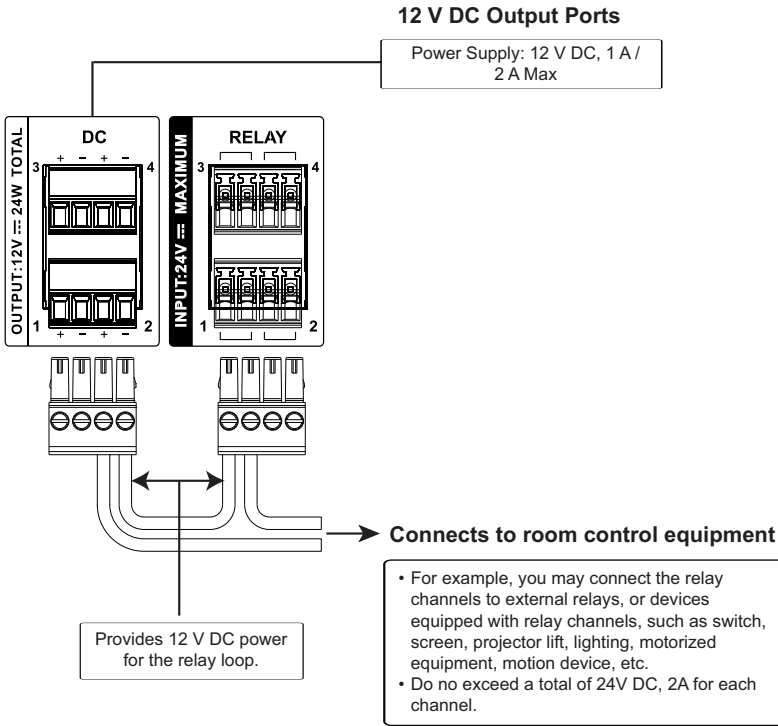

Application: Control Using External Relays


To install external relays, refer to the illustration below where two external relays are used to control a projector screen.

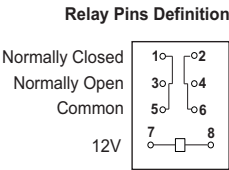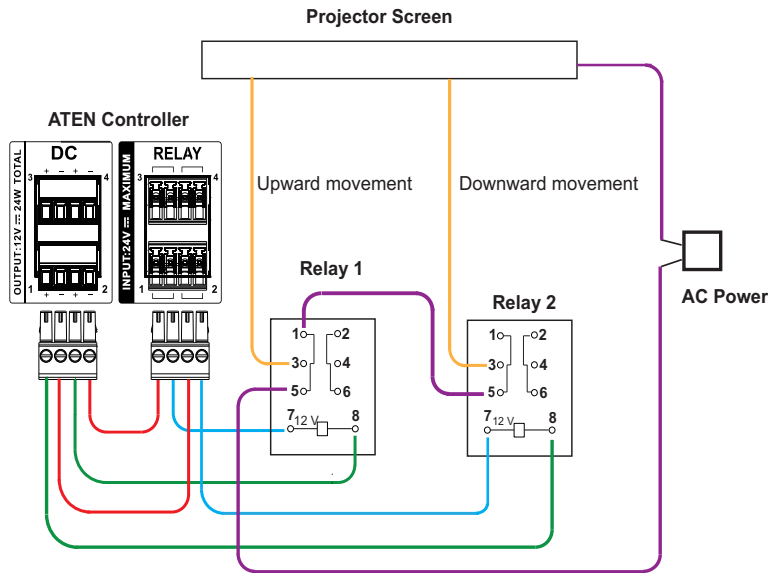

Unidirectional IR / Serial

ATEN Control Box provides the following IR / serial (RS-232) ports:

IR / Serial		VK1100A / VK1200	VK2100A	VK2150 / VK2200
2-Pin IR/Serial		2	4	8
IR	Carrier Frequency	10 ~ 455 kHz		
	Default Level	Low		
Serial (RS-232)	Baud rate	300 ~ 115200 (default: 9600)		
	Data bit	7, 8 (default)		
	Stop bit	1 (default), 2		
	Parity	None (default), Even, Odd		
	Signal Level	TTL (0 ~ 5 V DC)		TTL (0 ~ 5 V DC)

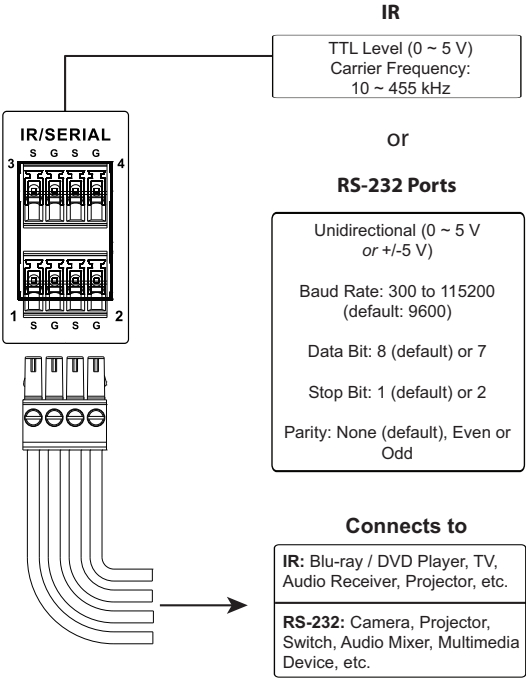


By default, the unidirectional IR / serial channels are set to transmit IR signals.


**IR Connection:** Connect a transmitter cable to a set of IR and ground terminals of the Control Box, and install the IR transmitter on or near the IR device's IR receiving port, as shown on page 35.

**Serial Connection:** Connect a serial device's receiver (RX) and ground terminals to a set of serial (TX) and ground terminals of the Control Box. Then configure the same serial port settings on both the Control Box and the connecting serial device, allowing them to communicate.

## One IR Transmitter

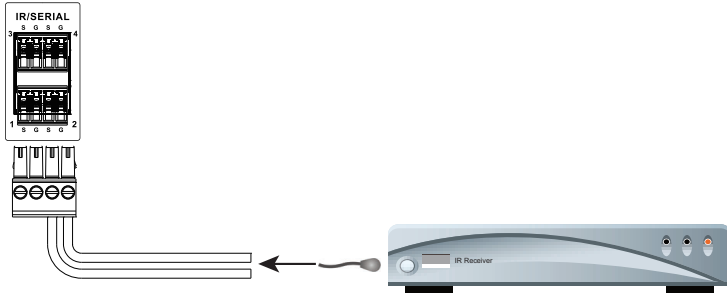

## Two IR Transmitters

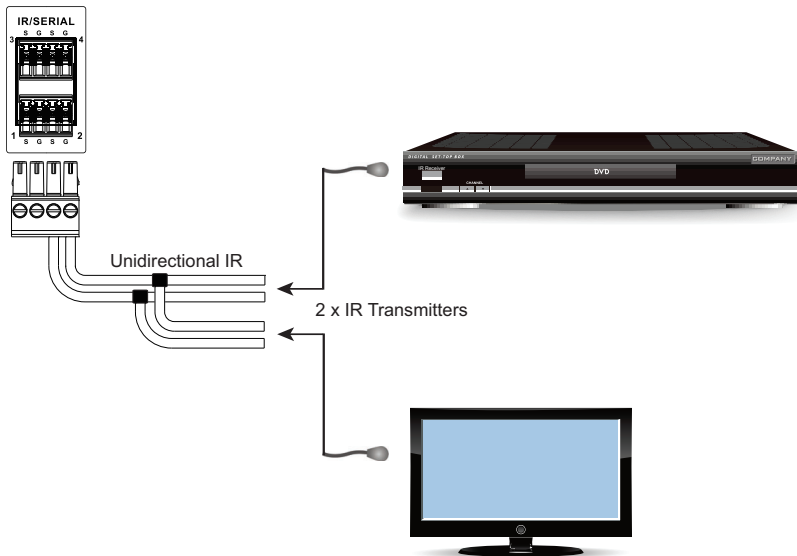

Digital I/O

The Control Box Gen. 2 provides the following digital input / output channels:


Digital I/O		VK1100A / VK1200	VK2100A	VK2150 / VK2200
Number of Channels		2	4	8
Digital Input	VDC Mode	Voltage range: 0 ~ 24 V DC Programmable range: 1 ~ 24 V DC		
	Dry Contact Mode	Pull-up: 2 kΩ to +12 V DC		
Digital Output		Normally Open 300 mA sink from 24 V DC		

Digital Input (Dry Contact):

Connects to digital I/O devices with an input loop — open or closed — for providing indicators from sensors or switches of an event, which can be used by the Control Box to trigger events and/or functions.

Digital Input (VDC Mode):

Connects to DC devices (temperature, current and monitor sensors) for providing voltage signals (1 to 24 V) to the ATEN Control Box, to trigger certain events and/or functions when the voltage signals are above *or* below the defined threshold.

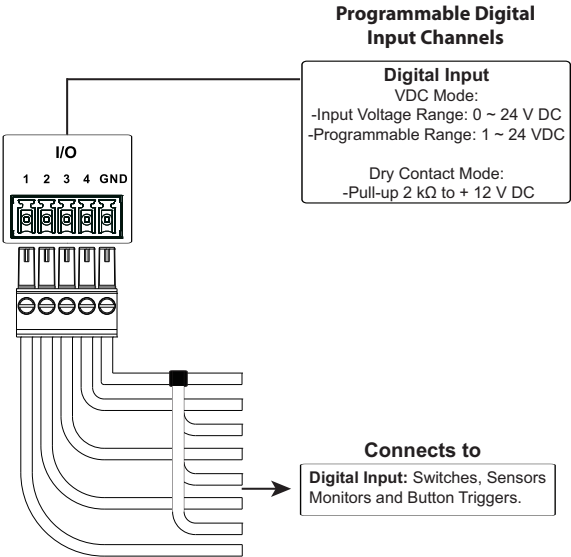


Digital Output:

Provides non-powered dry contact (open and closed) circuit control of



hardware devices, such as electric screens, projector lifts and other motorized equipment, which must be connected using a **relay module**, as shown below.

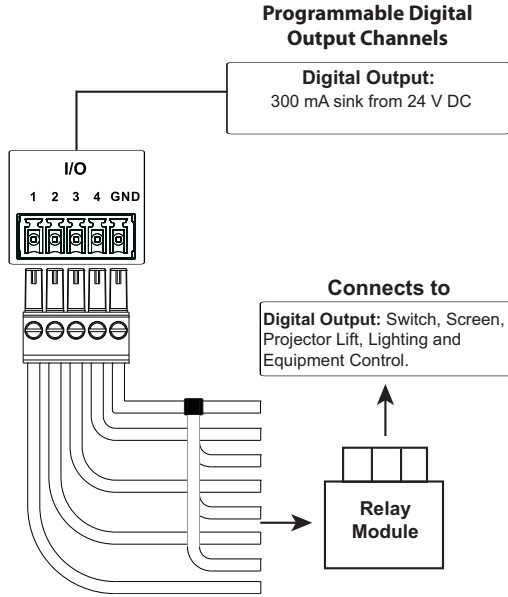


Bidirectional Serial

Control Box Gen. 2 provides the following RS-232/422/485 ports:

		VK1100A / VK1200	VK2100A	VK2150 / VK2200
Number of Channels	3-Pin RS-232	1	4	6
	5-Pin RS-232/422/485	1	2	2
Baud rate		300 ~ 115200 (default: 9600)		
Data bit		7, 8 (default)		
Stop bit		1 (default), 2		
Parity		None (default), Even, Odd		


RS-232 (3-Pin)

Connect to devices for controlling and receiving status messages from them. For bidirectional RS-232 control, the transmit (TX), receive (RX) and ground (GND) terminals must be wired on both the ATEN Control System and the device connecting.

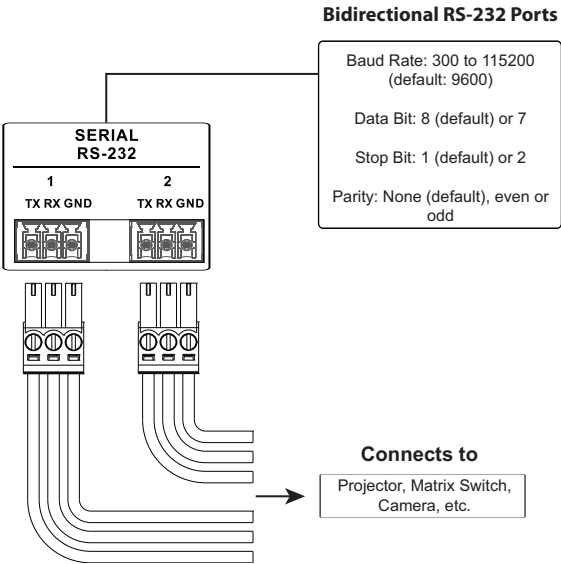

RS-232 / 422 / 485 (5-Pin)

Connect to devices, configurable by pin assignments, for controlling and receiving status messages from them.

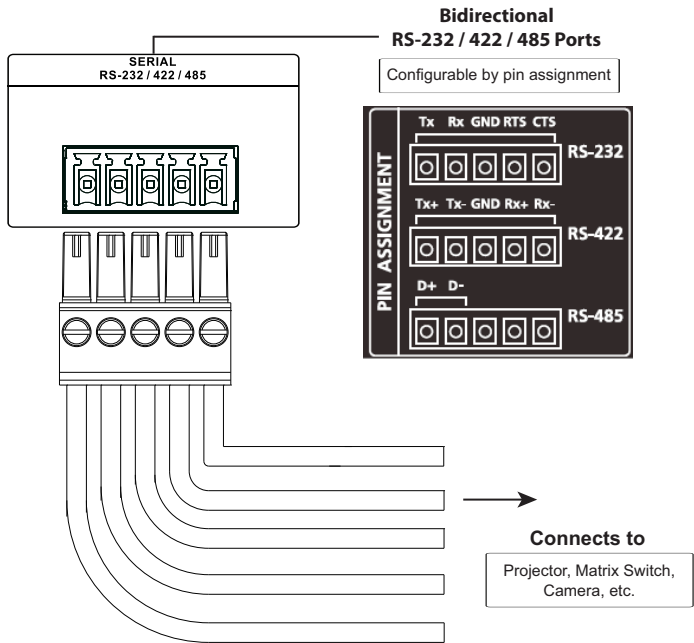


Pin Assignments

RS-232	RS-422	RS-485
pin 2: RX	pin 1: RX-	pin 3: D+
pin 3: TX	pin 2: RX+	pin 4: D-
pin 5: GND	pin 3: TX+	pin 5: GND*
pin 7: RTS	pin 4: TX-	<b>Note:</b> A ground terminal connection is recommended but not required.
pin 8: CTS	pin 5: GND	

Ethernet / Control LAN


The Ethernet / Control LAN port provides an Ethernet connection for controlling up to 8 (VK2150), 25 (VK1100A / VK2100A) or 64 (VK1200 / VK2200) LAN devices and/or remote control by ATEN Keypads, Touch Panel, and the ATEN Control System app on a mobile device in a network.

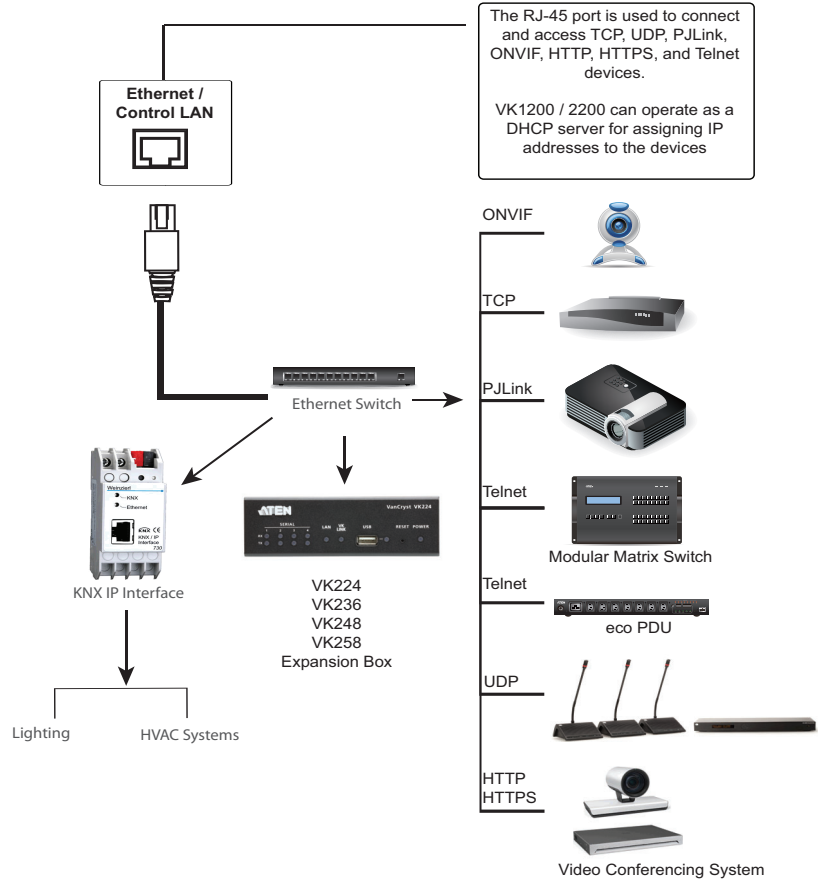


# **ATEN Control Pad**

## **Panel Components**

### **VK0100**

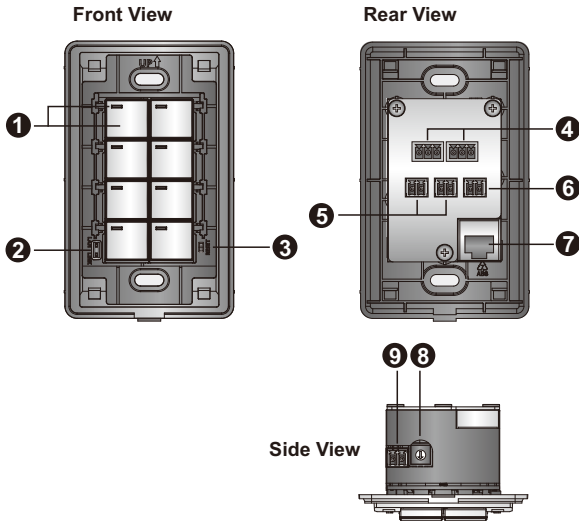

### **VK0200**

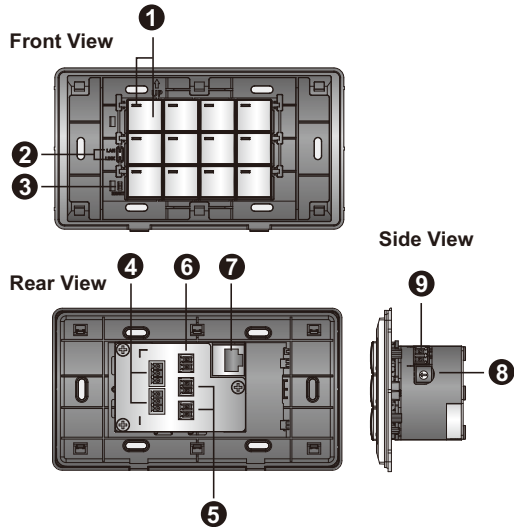

No.	Component	Description
1	buttons and button LEDs	Indicate the status of the Control Pad and if the function on each button, e.g. lighting or projector, is on or off. For detailed information about device/function status under different LED activities, see <i>LED Indications</i> , page 43.
2	system LEDs	Contains a LAN and a link LED to indicate network connection and data transmission status: <ul style="list-style-type: none"> <li>♦ LAN LED lights green to indicate that the Control Pad is connected to network.</li> <li>♦ Link LED lights green to indicate that the Control Pad is actively transmitting and receiving data.</li> </ul>
3	reset button	<ul style="list-style-type: none"> <li>♦ To clear all the configurations except the network settings, press and hold the reset button for 8 seconds.</li> <li>♦ To reset the network settings, press the reset button once.</li> </ul>
4	RS-232 serial ports	Connect up to two RS-232 serial devices.
5	relay channels	Connect up to two relay devices. Relay contacts are normally open, isolated with a contact rating of 24 V DC, 1 A max.
6	digital input Port	Connect to one digital input device that supports programmable input (1 ~ 5 V DC) or dry contact (pull-up 2k ohms to 5 V DC).
7	Ethernet port	Connects to an Ethernet cable to provide power and access to the network.
8	control pad ID switch	Sets an ID for the Control Pad.
9	DC power port	Connects to a 5 V DC power adapter.

## **LED Indications**

Refer to the table below for the status descriptions of a Control Pad indicated by button LEDs.

<b>Button LED Status</b>	<b>LED Activity</b>	<b>Control Pad Status</b>
a button LED	lights orange	The Control Pad is powered on and the button is currently off.
a button LED	lights white	The Control Pad is powered on and the button is currently on.
a button LED	blinks orange and white repeatedly	The function assigned to the button is being executed.
all button LEDs	blink orange and white once	The Control Pad is restoring its default settings.
all button LEDs	blink orange and white repeatedly	The firmware of the Control Pad is being upgraded.

## **Installing the Control Pads**

1. Prepare the installation site.
  - a) Choose a location where cables are free of interference. You can install the Control Pad on walls, desks, and podiums.
  - b) Prepare a recession on the chosen location to accommodate the Control Pad. You can install the Control Pad directly on the chosen location or through a wall box. For recommended cutout dimensions, see *CAD and Panel Cutout Diagrams*, page 353.
2. Connect the Control Pad to various devices, for integration and control, refer to the corresponding interface for the wiring information of each:
  - ♦ *Wiring Information*, page 49
  - ♦ *Relay Connections*, page 50
  - ♦ *Digital Input Device*, page 51

---

**Note:** To expand connection ports on the Control Pad, install ATEN Expansion Boxes.


---

3. To use PoE, connect the Control Pad to a PoE switch via an Ethernet cable. For details, see *Ethernet*, page 52.

---



**Note:** If you do not have a power sourcing equipment for PoE, contact your local sales representative to purchase a power adapter and then follow the steps below to prepare the power cord.

---

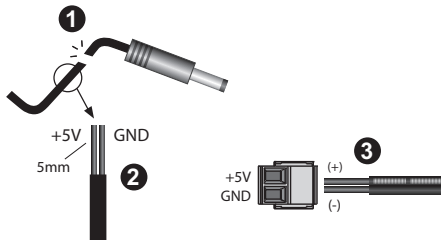

- (1) Cut the connector end of the power adapter.
- (2) Strip 5 mm(0.5 cm) off the insulation cover of the power adapter cable to expose the +5V wire and the grounding wire.
- (3) Insert the expose +5V wire and the grounding wire tightly into the provided 2-pin terminal block connector. Use a voltmeter to determine the polarity of an exposed wire.

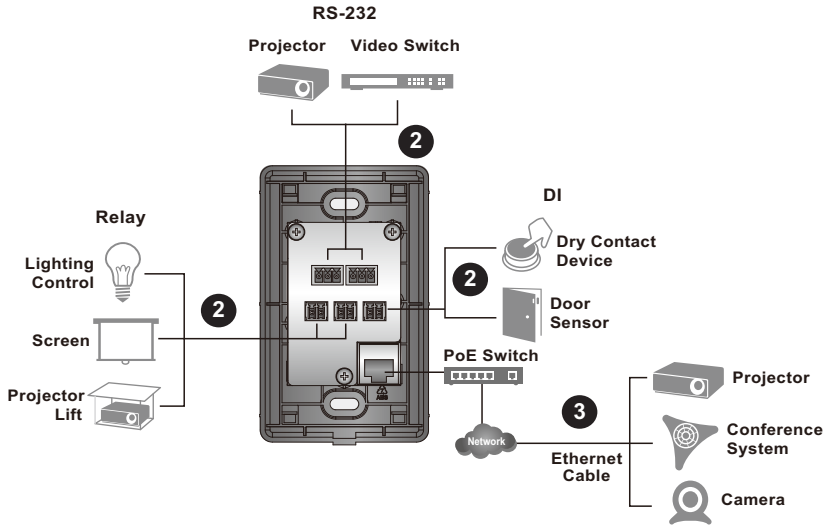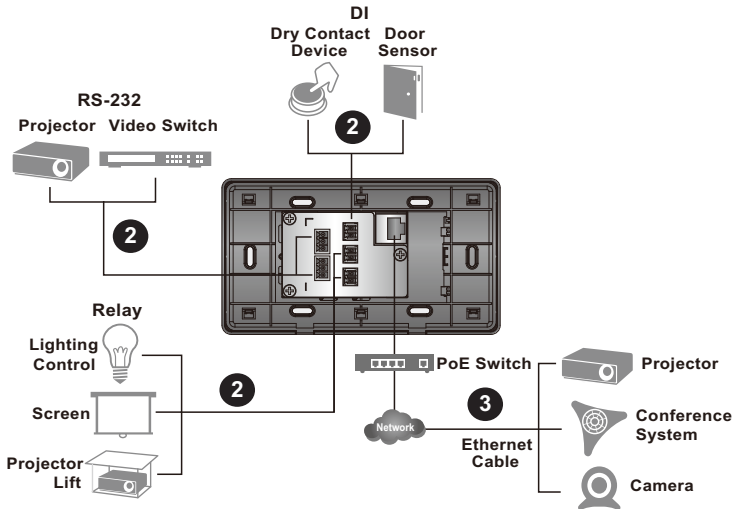

**VK0100****VK0200**

4. Use the ID Switch to assign an ID to the Control Pad.

---


**Note:** It is possible to install more than 16 controllers under the same subnet. In which case, the 17th controller and the ones added after that will each be sharing its ID with another controller. If you have any ATEN Expansion Box and/or Keypad connected to controllers using shared IDs, reconfigure the connection mode. For details, see *Controller Properties*, page 114.

---


5. Power on all the devices. The button LEDs light orange.
6. Assemble the button caps onto the Control Pad.
  - a) Assemble button caps of the same row with each other. Put the button with two latches to the far right.



- b) From the top row, attach each row of button caps to the Control Pad by pressing on the latches.

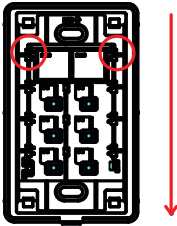


**Caution:** When removing button caps, place your fingers on the top of button caps and then press downwards, as illustrated below. Pressing upwards from the bottom may cause damages to the button caps.

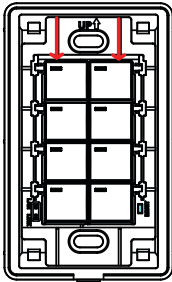


7. Mount the Control Pad to the chosen location with or without a wall box.
  - a) Secure the Control Pad to the chosen location with self-prepared screws.
  - b) Install the supplied faceplate to the Control Pad.


**VK0100**

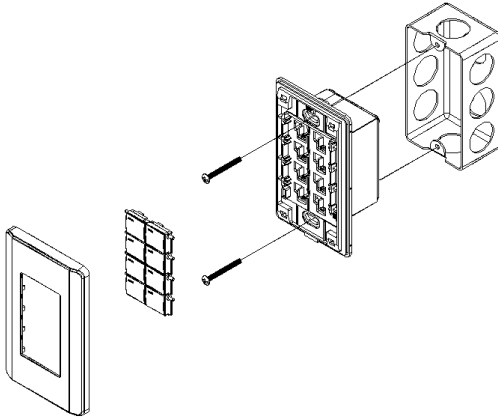

**VK0200 (for EU type)**

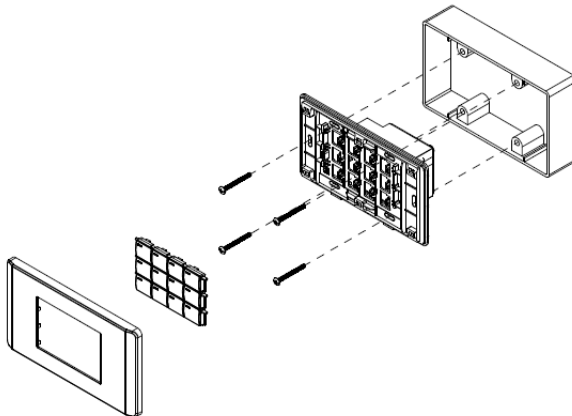


**VK0200 (for MK type)**

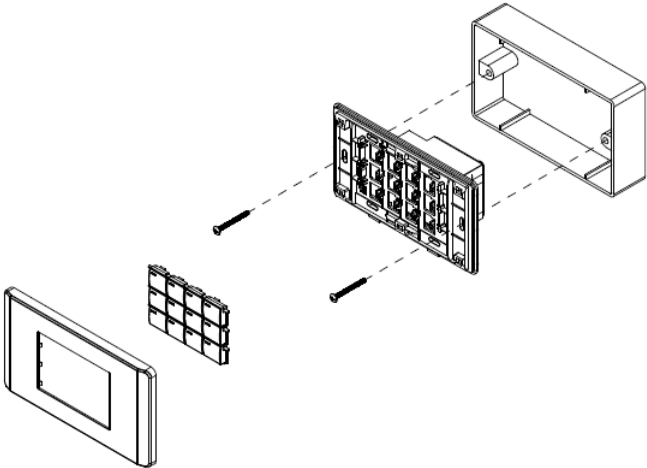

**Wiring Information**


**RS-232 Serial Connection**

The two bidirectional RS-232 ports on the Control Pad provide serial control of hardware devices (projectors, matrix switches, etc.) and receive status messages from the connected devices. For bidirectional RS-232 control, the transmit, receive, and ground pins must be wired on both the Control Pad and hardware device. Each hardware device requires different wiring. Please consult each hardware device's manual for details.

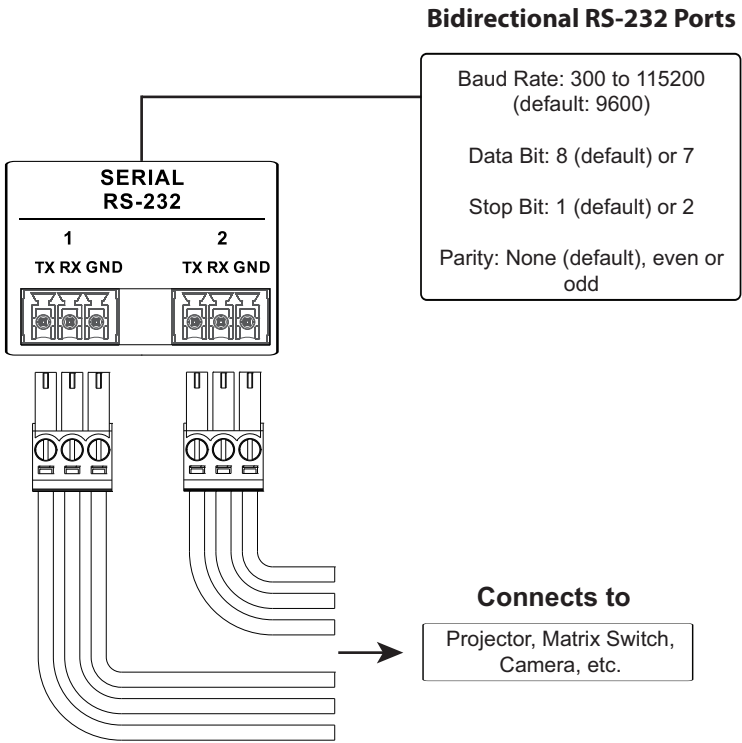


**Relay Connections**

These 2 relay channels provide connections to control hardware devices such as electric screens, projector lifts and other motorized equipment. Each relay is normally open by default.

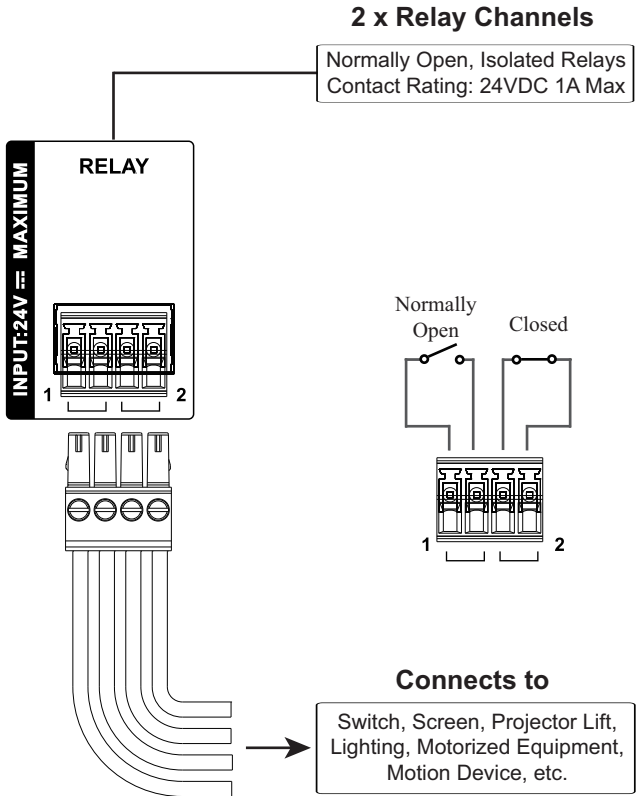

## Digital Input Device

The digital input port on the Control Pad can be used to install a digital input device such as a switch or a sensor. The digital input channel can be configured to the VDC mode or the Dry Contact mode.

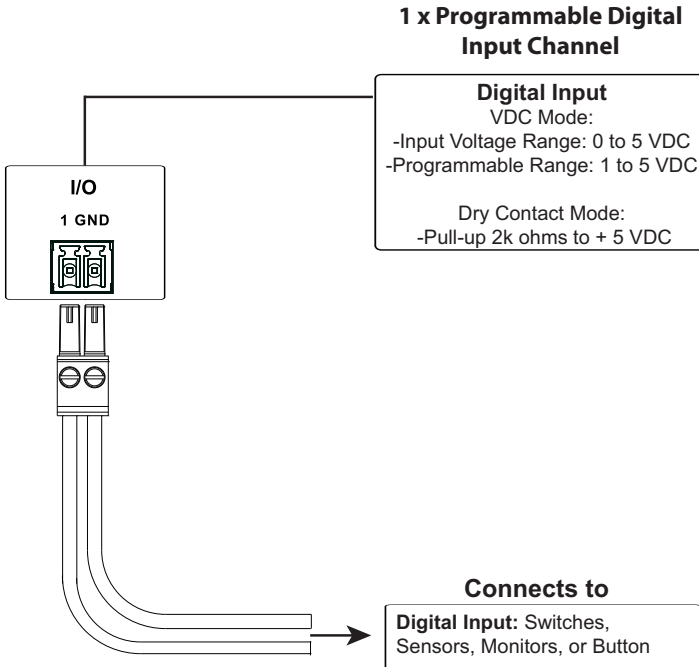

### Digital Input (Dry Contact):


Digital inputs are hardware devices (switches, sensors, monitors) with two circuit signals – open and closed. These two signals provide indicators from sensors or switches of an event. An event can be the on/off power, dry contact, sensor or switch status from a device. This information is used to trigger events and functions through the Control Pad.

### Digital Input (VDC):

Digital input 5VDC hardware devices (temperature, current and monitor sensors) provide voltage signals between 1 and 5. A digital input port detects if a voltage is above/below a specific threshold (1 to 5). If the voltage coming from a hardware device is higher than the set value, the Control Pad will detect the digital input as high. If the voltage coming from a hardware device is lower than the set value, the Control Pad will detect the digital input as low. This information is used to trigger events and functions through the Control Pad.

Ethernet


The RJ-45 port provides an Ethernet connection for accessing the web console (page 77), controlling up to 8 IP devices, and remote control by the Control System app within the same subnetwork.

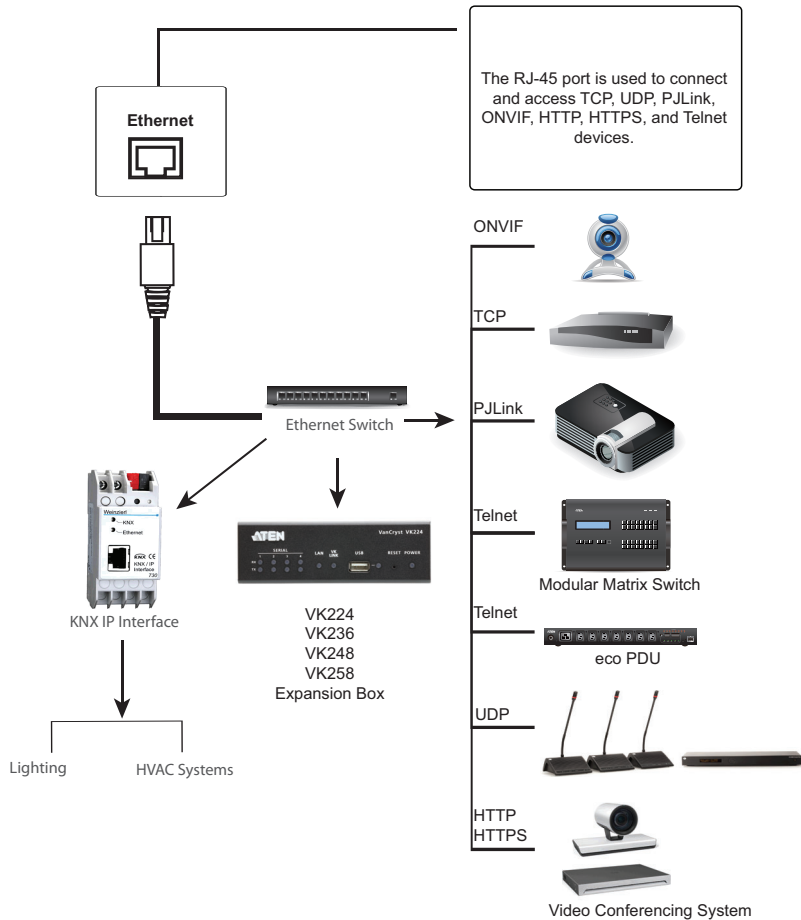



## ATEN Expansion Box

ATEN Expansion Boxes (sold separately) provide additional ports for a flexible expansion of the ATEN Control System. This allows you to add and control additional devices in an environment when more devices are required. With the advantage of an Ethernet-based connection, the expansion boxes are easily connected to the ATEN controller via a LAN connection from a variety of locations across a network. The diagram below provides a setup example using the VK224, a 4-Port Serial Expansion Box.

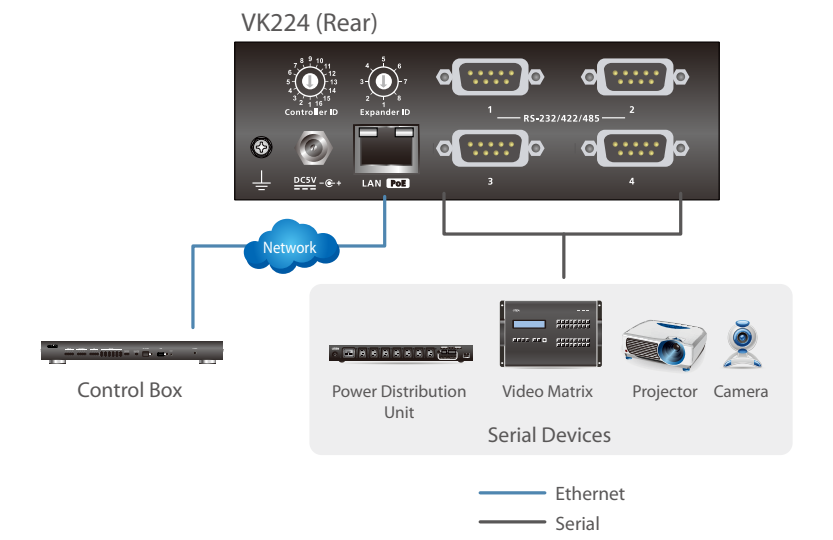

**Note:**


- ♦ To add and configure ATEN Expansion Boxes, see *Left Sidebar*, page 109 and *Expansion Box (Expander)*, page 115.
- ♦ The available Expansion Box models include:

Model	Description
VK224	4-Port Serial Expansion
VK236	6-Port IR/Serial Expansion Box
VK248	8-Channel Relay Expansion Box
VK258	8-Channel Digital I/O Expansion Box

# Control Interface Devices

## ATEN Keypad

The ATEN Keypad mounts to a wall to provide control of hardware through a controller. The setup of the Keypad to the Control System can be illustrated as follows:

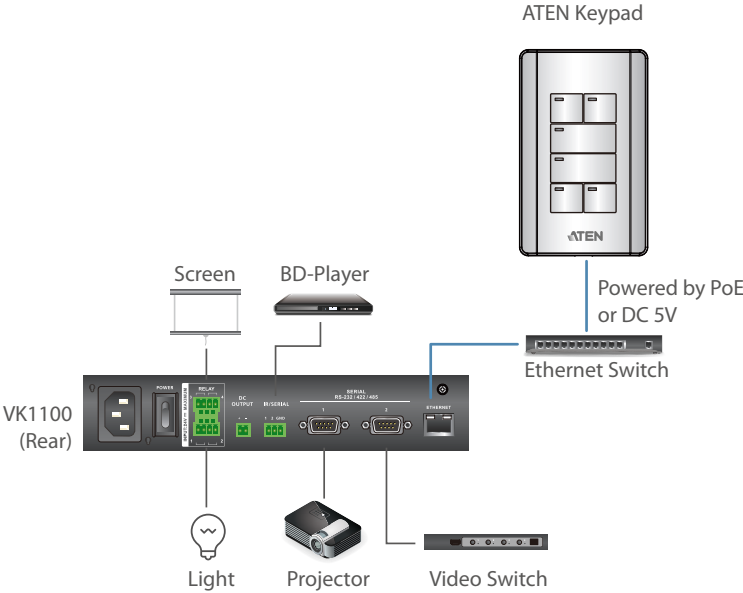

### Note:


- ♦ The following Keypad models are available:

Model	Description
VK108US	8-Button Keypad (US, 1 Gang)
VK112EU	12-Button Keypad (EU, 2 Gang)


- ♦ To have your Keypad buttons customized with text engraving, visit this page to make your order:  
[https://www.aten.com/ext\\_data/global\\_en/VK\\_Keypad\\_Engraving\\_Service/aten\\_keypad.html](https://www.aten.com/ext_data/global_en/VK_Keypad_Engraving_Service/aten_keypad.html)

Hardware Overview

VK108US

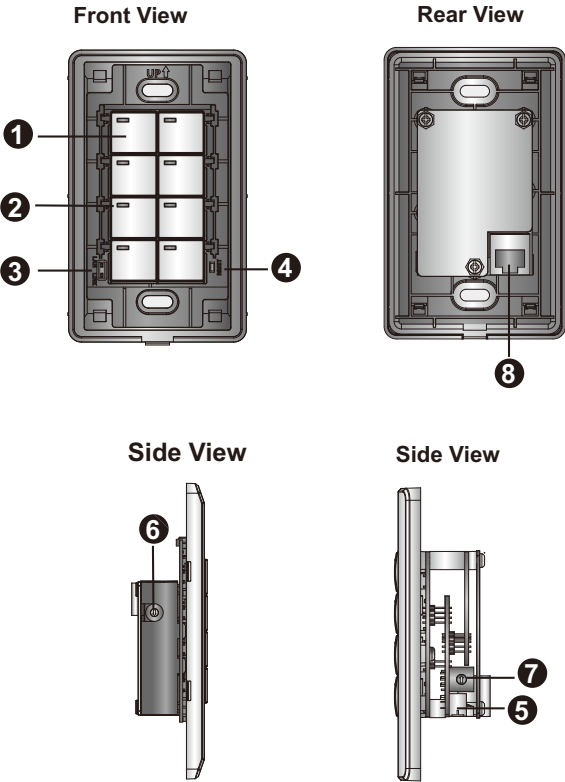

VK112EU

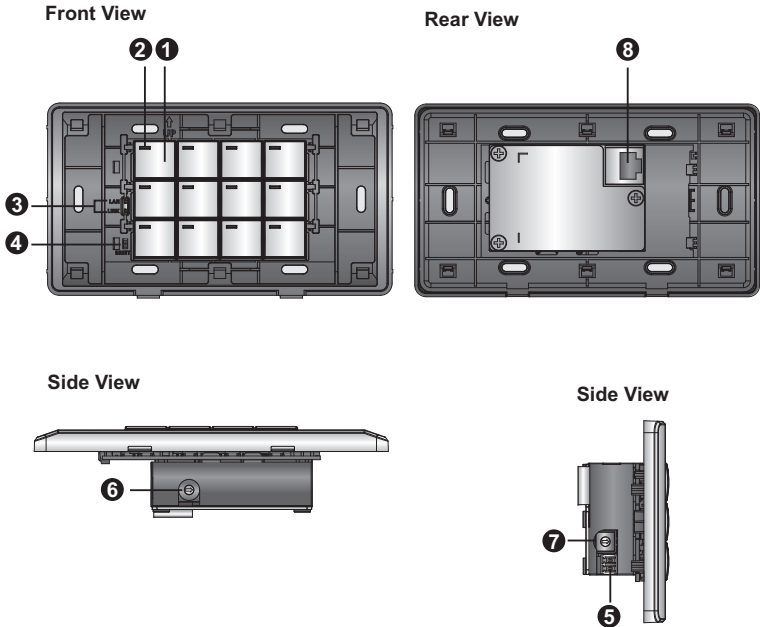

No.	Component	Description
1	buttons	<b>VK108US</b> The Keypad can be customized up to 14 different layouts using 4 to 8 buttons.  <b>VK112EU</b> The Keypad can be customized up to 12 different layouts using 6 to 12 buttons.
2	button LEDs	Indicate function and Keypad statuses. For detailed information, see <i>LED Indications</i> , page 57.
3	system LED indicators	<ul style="list-style-type: none"><li>♦ LAN: lights green to indicate that the Keypad is connected to LAN.</li><li>♦ Link: lights green to indicate that the Keypad is connected to the assigned controller.</li></ul>
4	reset pushbutton	Press to reset the Keypad to its default network settings.
5	DC power	Plug a power adapter into this DC power input.
6	keypad ID switch	Sets an ID to the Keypad (1~8).

No.	Component	Description
7	controller ID switch	Sets the ID of the controller (1 ~ 16) to which the Keypad connects.
8	LAN port	<ul style="list-style-type: none"> <li>◆ Connects the Keypad to LAN</li> <li>◆ Supplies power (PoE) if a power sourcing equipment is installed.</li> </ul>


## LED Indications

Refer to the table below for the status descriptions of a Keypad indicated by button LEDs.


Keypad Button	LED Activity	Keypad Status
a button LED	lights orange	The Keypad is powered on and the button is currently off.
	lights white	The Keypad is powered on and the button is currently on.
	blinks orange and white repeatedly	The function assigned to the button is being executed.
all button LEDs	blink orange and white repeatedly	The firmware of the Control Pad is being upgraded.
	blink orange	The Keypad is disconnected from the Control Box.

Layout Examples

VK108US

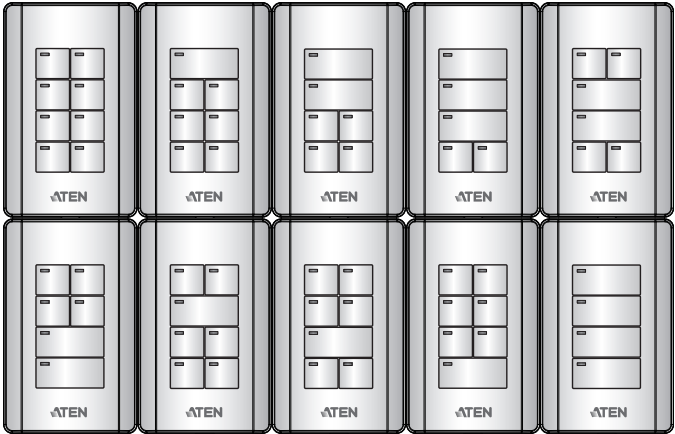

VK112EU

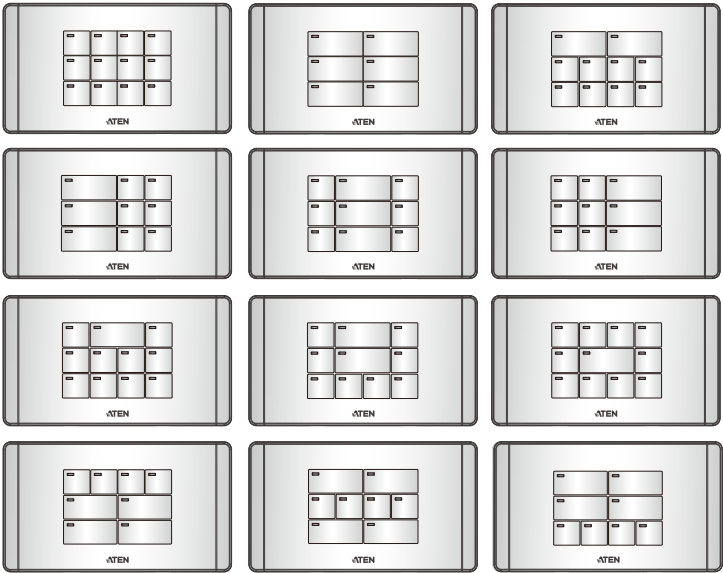

## Installing ATEN Keypad


1. Prepare the installation site.
  - a) Choose a location where cables are free of interference. You can install the keypad on walls, desks, and podiums.
  - b) Prepare a recession on the chosen location to accommodate the keypad. You can install the keypad directly on the chosen location or through a wall box. For recommended cutout dimensions, see *CAD and Panel Cutout Diagrams*, page 353.
2. Use the keypad ID switch to set an ID for the unit, and set the controller ID switch to the ID of the controller to which you wish to connect.

---

**Note:** One ATEN Control Box/ Control Pad can work with up to 8 Keypads.

---

3. Supply power and network connectivity to the keypad. Do one of the following:
  - ♦ Use an Ethernet cable to connect the keypad to a PoE switch.
  - ♦ If you do not have a power sourcing equipment, use an Ethernet cable to connect the keypad to LAN and a power adapter to supply power. Follow the steps below to install a terminal block to the power adapter.

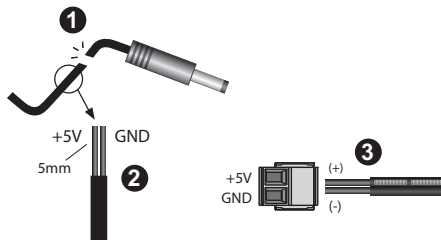

- (1) Cut the connector end of the power adapter.
- (2) Strip 5 mm(0.5 cm) off the insulation cover of the power adapter cable to expose the +5V wire and the grounding wire.
- (3) Insert the expose +5V wire and the grounding wire tightly into the provided 2-pin terminal block connector. Use a voltmeter to determine the polarity of an exposed wire.

The LAN LED light green to indicate that the Keypad is supplied with power and successfully linked to the network.

---


**Note:**

- ♦ Make sure to install the Keypad to the same subnet with its assigned controller.
  - ♦ The Keypad adopts the default IP address **192.168.0.60** if the network switch does not support DHCP. To configure the IP address, log in the web interface using the default IP address and the default password (**password**).
- 


4. Secure the Keypad to the chosen surface and install the button caps and faceplate.

- a) Secure the Keypad to the chosen surface using two screws.


**VK108US**

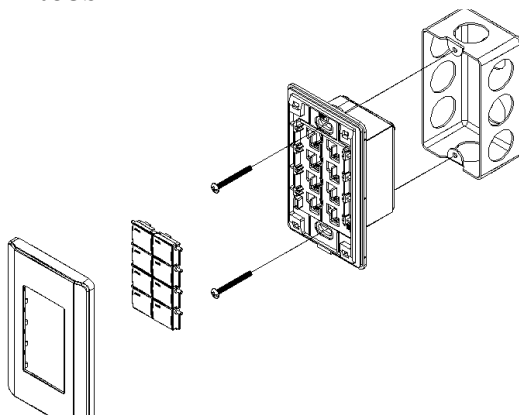

**VK112EU**

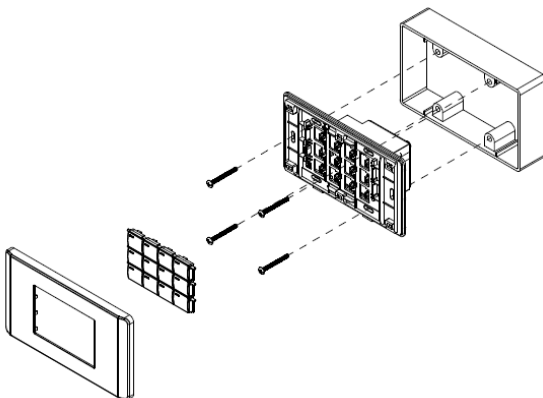

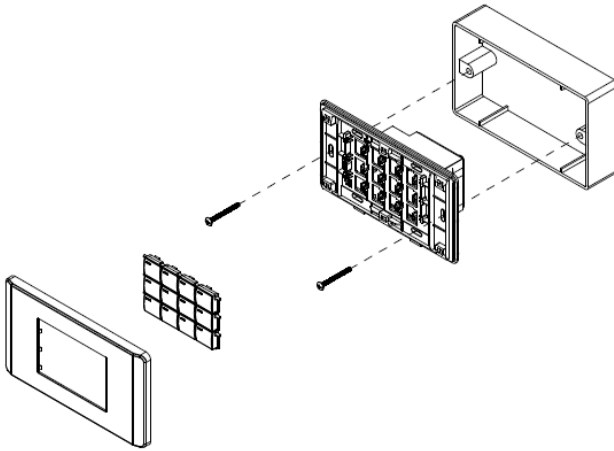


**VK112MK**

b) Follow the layout created in the Viewer and assemble the button caps onto the Keypad.

- ◆ Assemble button caps of the same row with each other. Put the button with two latches to the far right.




- ◆ From the top row, attach each row of button caps to the Keypad by pressing on the latches.

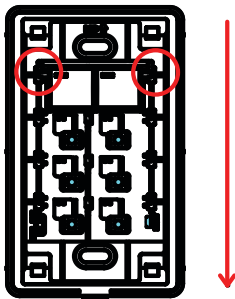

**Caution:** When removing button caps, place your fingers on the top of button caps and then press downwards, as illustrated below.

Pressing upwards from the bottom may cause damages to the button caps.

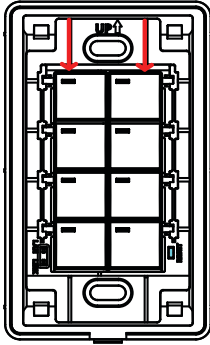


5. Attach the faceplate to the Keypad.

**IMPORTANT:** After installing the Keypad, create a control interface (Viewer) and upload the Viewer to the controller. For details, see *Design*, page 100.

**ATEN 8" Touch Panel (VK320)**

**Hardware Overview**

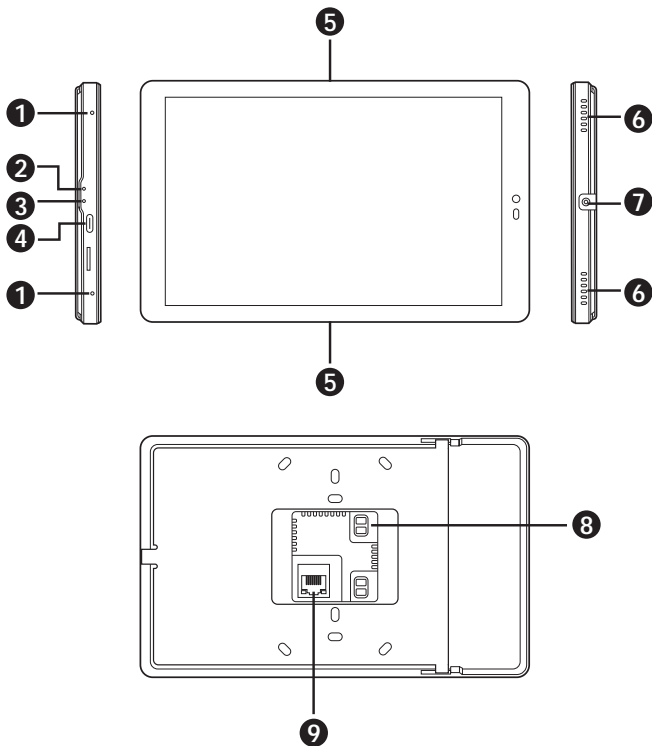

No.	Component	Description
1	microphones	Receive audio input.
2	restart button	Pin this button to restart the device.
3	set button	Pin this button to open the system settings page.
4	USB-C slot	Receives a USB-C cable for firmware upgrades and app updates.
5	LED light bars	Lights up when the touch panel is receiving power.
6	speakers	Play beep sounds to indicate control actions.
7	plate screw	Holds the touch panel to the wall plate.

No.	Component	Description
8	power port	Receives a power jack.
9	Ethernet port	Receives an Ethernet cable which supplies network connectivity. It can also receive power if connected to a power sender (PSE), such as a PoE switch.

## Mounting the VK320 Touch Panel

### Wall Mount

1. (Optional) To use a junction box, cut out a space in the chosen surface to accommodate the junction box.
2. Loosen the plate screw and remove the wall plate from the touch panel.
3. Connect the device to power through PoE or DC power.

#### ♦ PoE

(a) Connect the supplied 90° RJ-45 cable adapter to an Ethernet cable (that is connected to a PoE switch), and then thread the other end of the cable through the junction box and the wall plate.

---

**Important:** Install the wall plate with the screw hole facing outward. For a portrait view of the touch panel, keep the screw hole at the bottom (as illustrated); for a landscape view, install the plate with the screw hole on the right.

---

(b) Secure the wall plate to the junction box using the supplied screws.

(c) Plug the other end of the cable adapter to the PoE port of the touch panel.

#### ♦ Terminal block

Follow the steps in *Preparing the Power Cord to install* the terminal block.

(a) Connect the power adapter to a power source, and then thread the other end of the cable through the junction box and the wall plate.

---

**Important:** Install the wall plate with the screw hole facing outward. For a portrait view of the touch panel, keep the screw hole at the bottom (as illustrated); for a landscape view, install the plate with the screw hole on the right.

---

(b) Secure the wall plate to the junction box using the supplied screws.

- (c) Plug the terminal block to the power port of the touch panel.
4. Slide the touch panel onto the wall plate until it is locked in position, and then secure the touch panel with the screw that you removed at step 2. The LED light bars light green to indicate that the panel is receiving power.

### Tabletop Mount using the VK102 Tabletop Kit

Optionally purchase a tabletop kit (VK102) for using the touch panel on a desktop. For a step-by-step install procedure, visit the VK102 product page and download *VK102 Tabletop Kit Quick Start Guide*.

### Configuring Network Settings

1. Pin the **set** button once. The Settings page appears.
2. Tap **Network & Internet**.
3. Tap the listed settings to configure them as needed.

### Changing the Interface Language

1. Pin the **set** button once. The Settings page appears.
2. Tap **System > Languages & input**.


### Updating Control System App

To update the Control System app on your touch panel, follow the steps below.

---

**Note:** The Control System app can only be updated to a newer version.

---

1. Download the Control System app of your chosen version from the product page and save the file to a type-C USB flash drive.
2. Insert the USB flash drive to the USB Type-C port.
3. From the main page, tap . The system settings page appears.
4. Tap **Storage > USB drive**.
5. Locate and tap the app installer that downloaded. A confirmation message appears.
6. Tap **Continue**, and then **Install** to start the update. When the update is complete, a message appears.

## Upgrading Firmware for ATEN Touch Panel

To upgrade the firmware of the touch panel to a newer version, follow the steps below.

---

**Note:** The firmware of the VK320 touch panel can only be upgraded to a newer version.

---

1. Download the firmware package from the VK320 product page.
2. Unzip the downloaded firmware package and save the file to the root directory of a USB flash drive (in FAT32), e.g. E:\
3. Insert the USB drive to the USB Type-C port of the touch panel.  
The touch panel automatically saves a copy of the firmware file to its system. When the copy is complete, a “transfer completed” message appears.
4. Pin the Set button on the unit, and then tap **System > Advanced > System updates**. The upgrade starts. When the firmware upgrade is complete, the touch panel reboots itself.
5. A message appears to prompt you to remove the firmware file from the touch panel. Tap **Yes** to complete the upgrade.


---

**Note:** Make sure to remove the firmware file to prevent another upgrade.

---

## Other Configurations & Actions


- ◆ To access the settings page, pin the **set** button once.

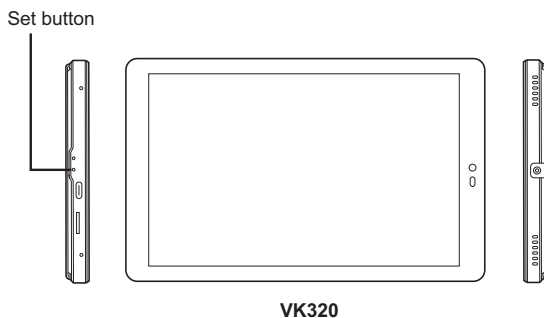

- ◆ To restart the device, pin the **restart** button once.

**ATEN 10” Touch Panel (VK330)**

**Hardware Overview**

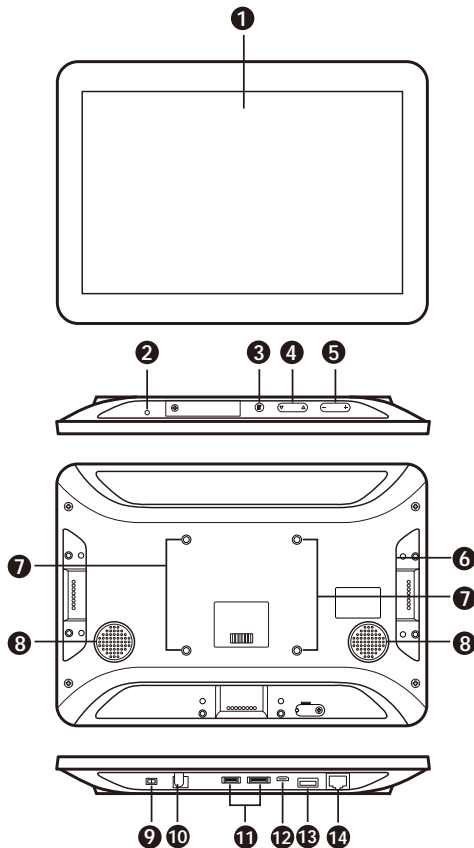

No.	Component	Description
1	touch screen	Tap on the screen to operate the control system and/or configure the touch panel.
2	status LED	Lights on when the touch panel is powered on.
3	function button	Press the Function button to show the settings page.
4	brightness up / down	Press to adjust the display brightness.
5	volume up / down	Press to adjust the volume of the touch panel.
6	stereo audio out	Connects to a stereo audio output.


No.	Component	Description
7	screw holes for panel plate	Screw holes used to secure a panel plate to mount the touch panel on a wall.
8	speakers	Plays beep sounds to indicate control actions.
9	contact pins	Connect to an Access Inspector (VK401) to receive and transmit data.
10	power switch	Turns the touch panel on or off.
11	power jack	Receives a power cord.
12	reserved for debugging purpose	These ports are reserved for debugging.
13	USB Micro-B port	Use this port to upgrade/downgrade the device firmware.
14	USB type-A port	Use this port to update the ATEN Control System app installed in the Touch Panel. For details, see <i>Updating Control System App</i> , page 71.
15	LAN port with PoE	Receives an Ethernet cable which supplies network connectivity. It can also receive power if connected to a power sender (PSE), such as a PoE switch.

## Mounting the Touch Panel

The VK330 Touch Panel supports desk mount, wall mount, or any 3rd-party mounting accessory that is VESA compliant (75 x 75 mm). For more information about the mounting accessories, please visit the product web page.

### Desk Mount

To mount the VK330 on a desk using ATEN desk mount accessory — VK304 — refer to the diagram below.

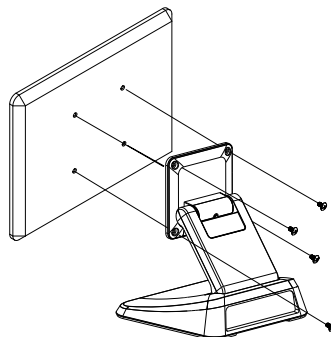




## Wall Mount


To mount the VK330 onto a wall using ATEN wall mount accessory — VK302 — follow the steps and refer to the diagrams below.

1. Using the wall anchors and screws, secure the wall plate to the wall in the illustrated direction. Secure the panel plate to the VK330 using the M4 screws.
2. Slide the panel plate to the wall plate to secure the VK330 onto the wall.

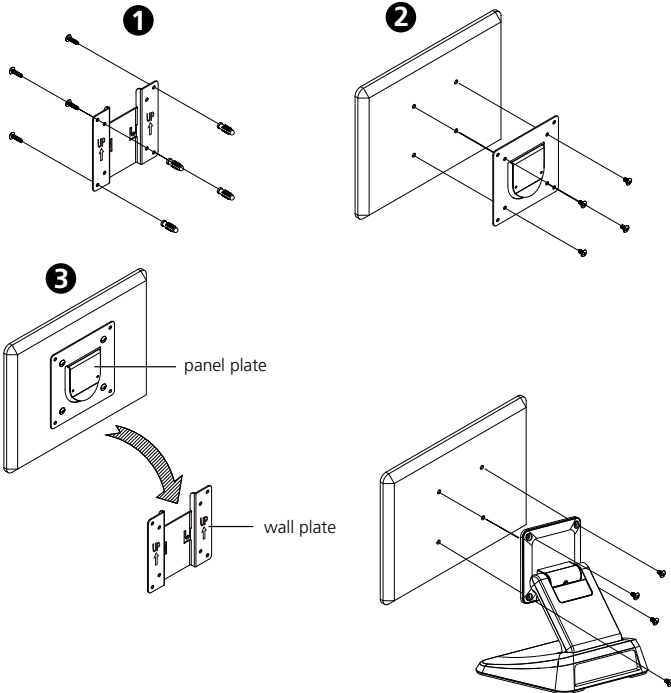

## Installing the Touch Panel

1. Using the 90° RJ-45 cable adapter (if provided for your package edition) and an Ethernet cable, connect the unit to a PoE switch or PoE injector to provide power and access to the network.
2. Put the power switch to **ON**. The status LED lights green and the Touch Panel starts loading and displays the Start page.

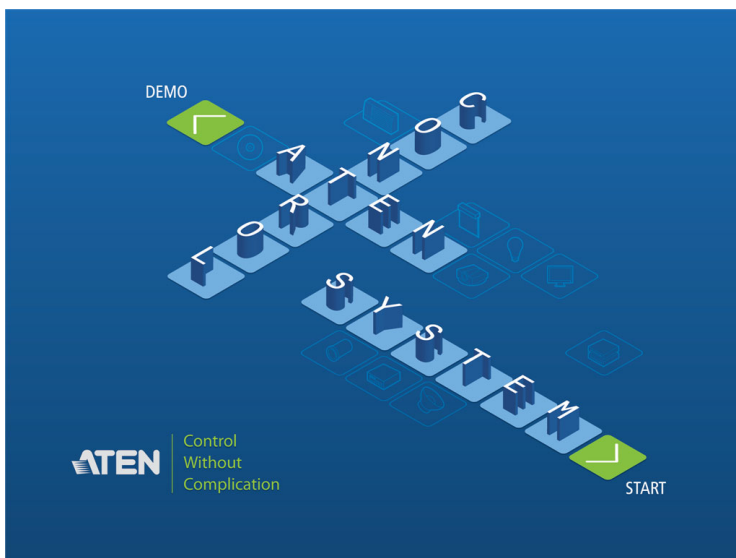

## Operating the Touch Panel

---

**Note:** In highly humid environment, it is advised that you keep the touch panel powered on and in operation to prevent fogging inside the touch panel.

---

- ◆ To configure system settings of the Touch Panel, press the **Function** button on the device open the system settings page.
- ◆ To return to the ATEN Control System app from the settings page, tap **Return to ATEN Control System App**.
- ◆ For details on using the Control System app, see *Demo/Start Screen*, page 296.

## Changing the Interface Language

1. Press the **Function** button.
2. Tap **System > Languages & input > Languages > +Add a language**.
3. Tap a preferred language. The selected option is added to the language list.
4. Tap and hold the language you just added to the top of the list. The Touch Panel uses the language that lists first.

## Configuring the Network Settings

1. Press the **Function** button.
2. Tap **Network & Internet > Ethernet > Ethernet IP Mode** to configure the settings.

## Updating Control System App

To update the Control System app on your ATEN Touch Panel, follow the steps below.


1. Download the Control System app from the product web page and save the file to a USB drive.
2. Insert the USB drive to the USB Type-A port.
3. Press the **Function** button to go to the system settings page.
4. Tap **Storage**. Under Portable Storage, tap the USB device you inserted.
5. Locate and tap the app file (.apk) to start the update.

## Upgrading Firmware for ATEN Touch Panel

To upgrade the firmware on your ATEN Touch Panel, follow the steps below.

1. Download the ATEN Touch Panel firmware package from the product page.
2. Unzip the downloaded firmware package.

3. In the update folder, locate the update.zip file and save it to the root directory of a type-C USB flash drive, e.g. E:\

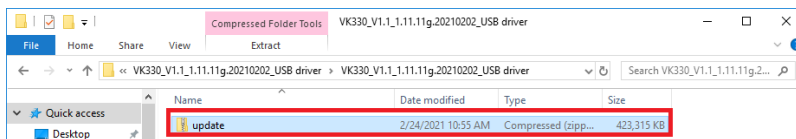

4. Insert the USB flash drive to the USB Type-A port of the Touch Panel.
5. Press the **Function** button to go to the system settings page.
6. Tap **System** > **System updates**.
7. Follow the on-screen instructions to upgrade the firmware.
8. The touch panel reboots itself when the firmware upgrade is complete.

---


**Note:** The Control System App installed on the touch panel may not be of the same version after this upgrade. Update the app to obtain the latest features and benefits.

---

# Accessories

## VK401 Access Inspector

### Components

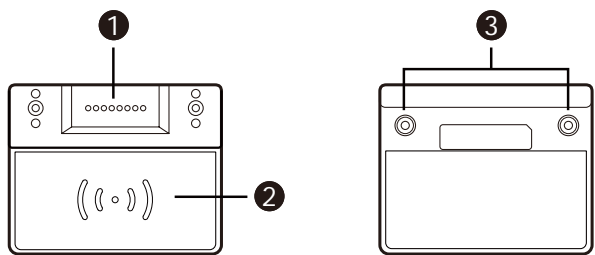

No.	Component	Description
1	contact pins	The contact pins transmit detected data to a VK330 Touch Panel.
2	detection area	Detects access cards.
3	screw holes	Use these screw holes and the provided screws to secure an Access Inspector to a VK330 Touch Panel.

## Installing an Access Inspector to a VK330 Touch Panel


Make sure that you power off the VK330 Touch Panel and disconnect it from the power source before installing the Access Inspector.

---


**Note:** This application requires centralized management of the control system and Room Booking System (with at least one RBS panel) via ATEN Unizon. For more information, see *ATEN Unizon User Manual* and *ATEN Room Booking System User Manual*.

---

1. Attach the VK401 Access Inspector to the VK330 Touch Panel with the VK401's contact pins facing the contact pins of VK330 Touch Panel.

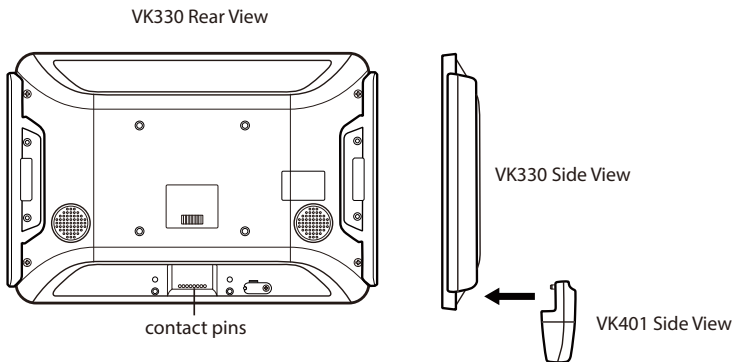

2. Fasten the VK401 to the VK330 using the 2 supplied screws.

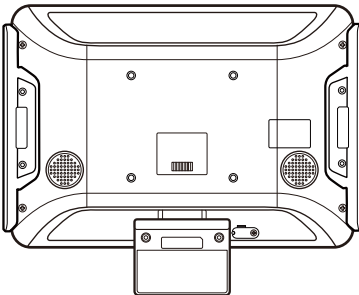

3. Connect the VK330 to the power source and then switch its power switch to turn it on.

# Chapter 3

## Web-based Configuration and Control

### Overview

---

The ATEN controller can be configured over a standard TCP/IP connection via its built-in Graphical User Interface (GUI). Because it can be accessed from anywhere over a network or the Internet, operators can easily log in via a web browser. The web interface can be used to upload licenses, set the access key, enable monitors and upgrade the firmware.

### Determining the IP Address of the Controller

---

- ♦ **DHCP:** When connected to a DHCP network, the ATEN controller is automatically assigned with an IP address upon startup. To determine the IP address of VK1200 / VK2200, see LCD Panel. To determine the IP address of other ATEN controllers, see *IP Installer*.
- ♦ **Non-DHCP:** When no dynamic IP address is assigned to the ATEN controllers within 30 seconds after startup, their default network settings are applied, as described below:

Models		Default IP Address
VK1200 / VK2200	Control LAN	192.168.0.60
	LAN	192.168.1.60
Other ATEN controllers		192.168.0.60


## LCD Panel

For VK1200 / VK2200, users can find its network information on the LCD panel, via *Information*, as illustrated below.



## IP Installer

Using a Windows PC, download the **IP Installer** zip file in *Support and Downloads* from the ATEN controller's product web page. Then extract and execute **IPInstaller.exe**. A window similar to the one below appears.

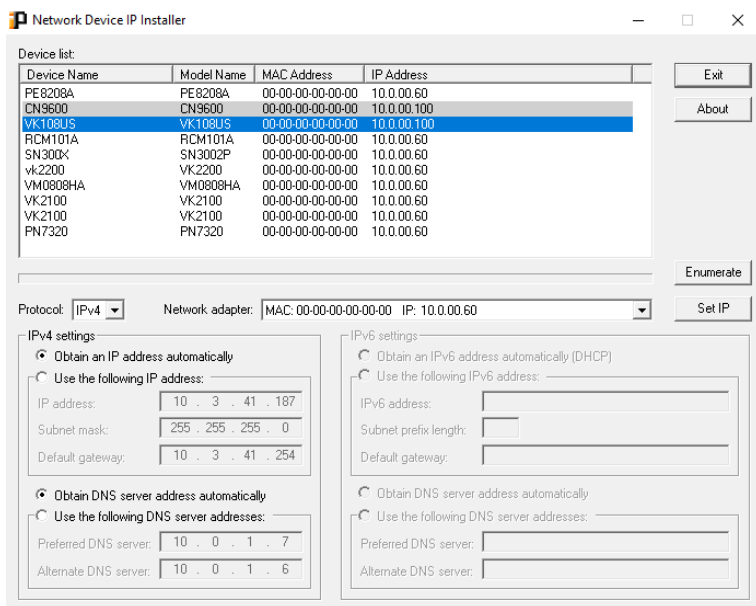


Make sure the proper network adapter is selected and click **Enumerate** to search for and display your ATEN controllers within the *Device List*.



## Login

---

To access the GUI, type the IP address of the controller into the address bar of any browser. If a Security Alert dialog box appears, accept the certificate — it can be trusted. The Welcome screen appears:

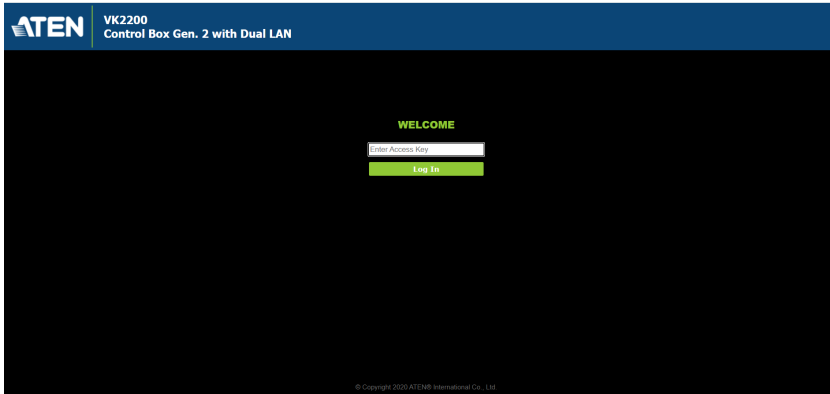


- ♦ The default access key is: **password**
- ♦ Access key requirements:
  - ♦ can be of 30 characters or less
  - ♦ supports the following special characters: hashtag (#), at (@), dot (.), and underscore (\_)
- ♦ Allows up to 30 concurrent logins

# Dashboard

## Overview

The *Dashboard* appears when you successfully log in to the controller. The Dashboard gives a quick view of the current settings and provides a link (Edit button) to each configuration page.

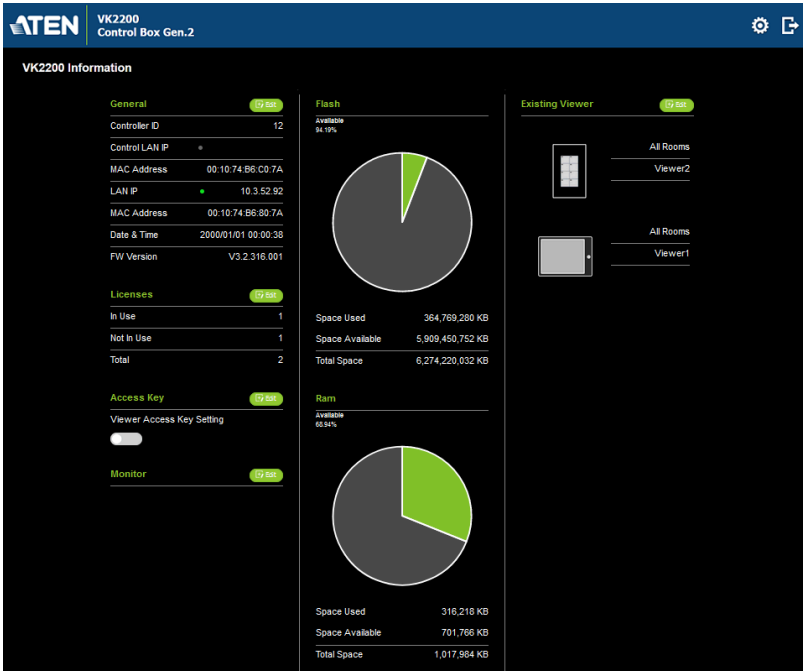

- ♦ The top bar provides two options:





Click to enter the **Settings** page.




Click to log out of the web console.

- ◆ Other buttons and toggle controls include:



Button / Toggle Control	Function
	Click this button to access the configuration page.
	<ul style="list-style-type: none"> <li>◆ Click this button to access the Viewer in a separate web page for remote control.</li> <li>◆ You can also use the URL to remotely access a Viewer from any device with web access or for third-party integration.</li> </ul>
Viewer Access Key Setting	Enable this setting to request for the access key when uploading projects and Viewers to the ATEN controller or when downloading Viewers to mobile devices.
Monitor toggle buttons	Monitors configured for Flags and digital input devices are listed here. Click on the toggle buttons to enable or disable the monitors.

## System Settings

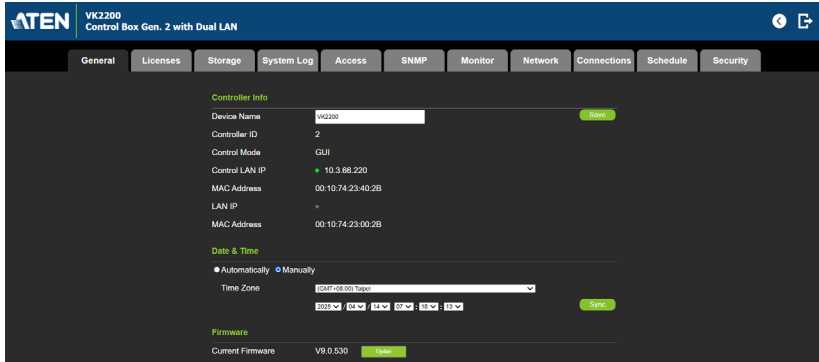The Settings view contains tabs consisting of different configurations of the controller.




The page is divided into two parts:

- ♦ **Interactive Display Panel:** configures the options
- ♦ **Top Bar:** provides icons to exit the settings page and log out of the web session.
- ♦ To access the settings page, log in the controller web GUI, and click .
- ♦ To return to Dashboard, click .

General

The General tab contains network information and the time and firmware upgrade settings.

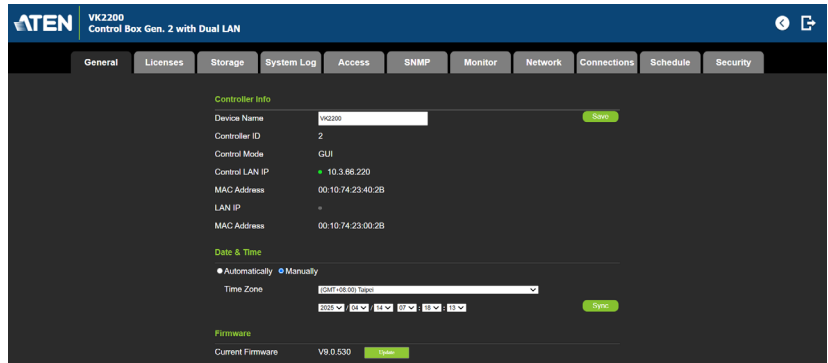

Setting	Descriptions
Controller Info	<p>Provides network and identification information pertaining to the controller.</p> <ul style="list-style-type: none"><li>◆ <b>Device Name:</b> Sets the device name.</li><li>◆ <b>Controller ID:</b> Displays the controller ID # set on the rear of the unit.</li><li>◆ <b>Control Mode:</b> Indicates the current configuration mode for the controller. Note that when the control mode changes from command-line to GUI mode, I/O configurations made through CLI will be lost.<ul style="list-style-type: none"><li>◆ <b>GUI mode:</b> When the controller is in GUI mode, it means that the last configuration was made by uploading a Viewer to the controller or by resetting the controller.</li><li>◆ <b>Command-line mode:</b> When the controller is in command-line mode, it means that the last configuration was made via command line interface.</li></ul></li><li>◆ <b>Control LAN IP:</b> (Applicable to VK1200 / VK2200 only) Indicates the control LAN IP address.</li><li>◆ <b>MAC Address:</b> (Applicable to VK1200 / VK2200 only) Indicates the control LAN IP address.</li><li>◆ <b>IP Address:</b> Provides the IP address of the controller.</li><li>◆ <b>MAC Address:</b> Provides the hardware MAC address of the controller.</li></ul>

Setting	Descriptions
Date & Time	<ul style="list-style-type: none"> <li>◆ <b>Automatically</b> <ul style="list-style-type: none"> <li>◆ <b>Time Zone:</b> Select a time zone for the controller. Choose the city that most closely corresponds to where it is located.</li> </ul> </li> <li><b>NTP Server Settings</b> Assign an NTP server for the controller to synchronizes its clock. If the controller has access to the Internet, configure the <b>Preferred NTP Server</b> and <b>Alternate NTP Server</b> settings. If the controller is installed in a closed network, configure the <b>Preferred Customer Server IP</b> and <b>Alternate Customer Server IP</b> settings.</li> <li>◆ <b>Preferred NTP Server:</b> Select an NTP server to provide synchronization services to the controller. Make sure to use an NTP server that is located close to where the controller is installed to minimize propagation delays.</li> <li>◆ <b>Alternate NTP Server:</b> Select an alternate NTP server to which the controller connects when it is unable to connect to the preferred NTP server.</li> <li>◆ <b>Preferred Customer Server IP:</b> Select this option to use a private NTP server if the controller is installed in a closed network.</li> <li>◆ <b>Alternate Customer Server IP:</b> Select this option to set up a substitute server if the controller is unable to connect to the preferred server.</li> <li>◆ <b>Adjust Time:</b> Sets the interval at which the controller synchronizes its clock with the assigned NTP server.</li> <li>◆ <b>Sync:</b> Click this button to save your configuration and start synchronizing its clock with the assigned NTP server.</li> <li>◆ <b>Manually:</b> Use the drop-down lists to set the controller's time zone, date, and time.</li> </ul>
Firmware	<ul style="list-style-type: none"> <li>◆ Displays the current firmware version of the controller and option to upgrade/downgrade the firmware.</li> <li>◆ To upgrade/downgrade the firmware, click <b>Update</b>. <b>Important:</b> Since the controller file system uses EXT2 for firmware version 3.0 onward instead of FAT32 for prior versions, downgrading a controller firmware from version 3.0 (or from any later version) to a version prior to 3.0 will result in file formatting. In this case, <b>make sure to back up your project file before the downgrade</b>.</li> <li>◆ Select <b>Check FW Version</b> for the controller to check if the device firmware is a later version than the browsed firmware file, and display the result.</li> </ul>

**Licenses for Mobile Control**

A license is a software permit that an ATEN controller grants to a mobile device for remote control. If you have three licenses for a controller, you can have three mobile devices remotely operate the controller at the same time.


**Note:** When using an ATEN Touch Panel for remote control, make sure to upgrade the controller to version 2.8 or later, which recognizes the Touch Panel as an ATEN device and will not require a license.

Refer to the table below for the number of free licenses and the maximum number of licenses each controller supports. To purchase additional copies of license, contact your local sales representative.

Licenses	ATEN Control Box		ATEN Control Pad (VK0100 / VK0200)
	VK1100A / VK2100A / VK2150	VK1200 / VK2200	
No. of free licenses	2	2	0
Max. no. of licenses	16	32	10

You can use the Licenses tab to:

- ♦ Find out the total number of licenses, the number of licenses that are available, and those that are in use
- ♦ Upload licenses to the ATEN controller
- ♦ View license information

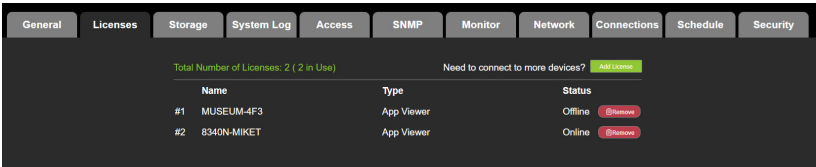

Setting	Description
Licenses	<ul style="list-style-type: none"><li>♦ <b>In Use:</b> displays the number of licenses being used by mobile devices.</li><li>♦ <b>Not in Use:</b> displays the number of licenses available for use.</li><li>♦ <b>Total</b> shows the number of licenses purchased for the controller.</li></ul>
Update License	Clicking <b>Add License</b> opens the <i>Add License</i> window to import new licenses to the controller.
Remove	When a device is accessing the controller, you can click the <b>Remove</b> button to disconnect the session.

# Storage


The Storage tab displays the following information:

Setting	Descriptions
Flash	This section shows the total amount of flash memory on the controller, as well as the space used and the space available for storing Viewers.
RAM	This section shows the total space of working memory on the controller, as well as the space used and the space available for processing.
Existing Viewer	This section lists all the Viewers that are stored on the controller with their name and the assigned room(s). Click <b>Remove</b> to delete a single Viewer or <b>Remove All</b> to delete all Viewers from the controller. Click <b>View</b> to access the Viewer in a separate web page for remote control. For more information, see <i>Access Viewers in Web URL for Remote Control</i> , page 84.

## Access Viewers in Web URL for Remote Control


You can remotely operate controller-managed environments on any computer or mobile device by accessing Viewers from the controller's web GUI. This renders Viewers in separate web pages, allowing you to save these pages to ATEN Unizon or any third-party platform that support web page embed for convenient access and control.

1. Log in the controller web GUI with a valid access key. The Dashboard page appears.

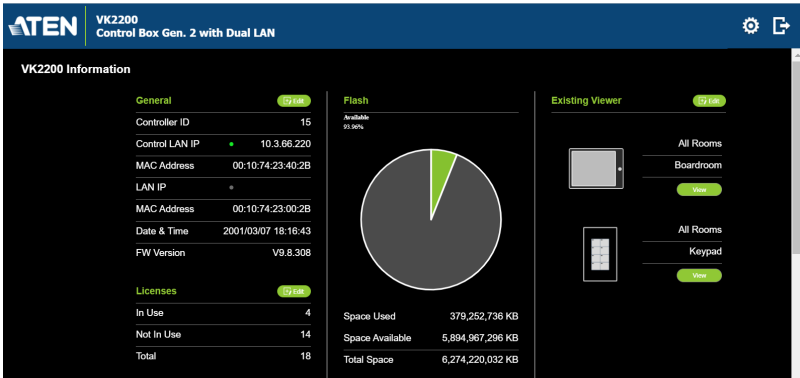




2. From the Existing Viewer section, click **View**. The Viewer appears in a separate web page. For example:

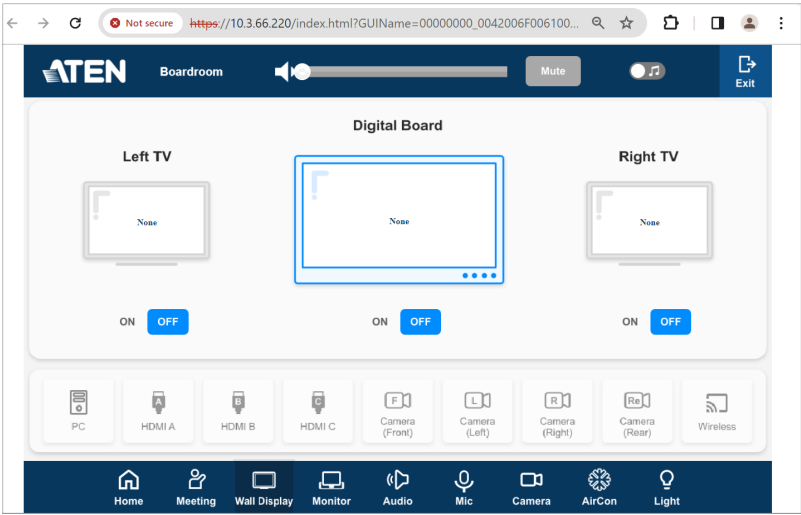


Click on the page to perform control actions.

Access

The Access tab allows you to configure the access key (password) of the ATEN controller’s web interface and to set a validity period for accessing the ATEN Control System using an activation key.

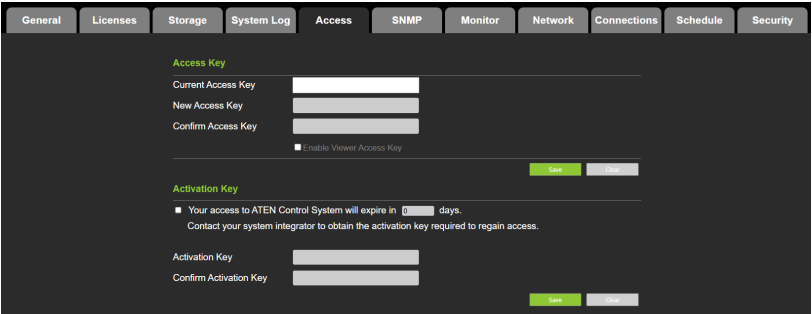


Setting	Description
Access Key	<p>The access key is the password that is required to do the following:</p> <ul style="list-style-type: none"><li>Log in the ATEN controller’s web interface.</li><li>Upload projects and Viewers from Configurator to ATEN controller (page 250).</li></ul> <p>Download Viewers from ATEN controller to mobile devices using ATEN Control System App (page 317).</p> <p>The following settings are available:</p> <ul style="list-style-type: none"><li><b>Current Access Key, New Access Key, Confirm Access Key:</b> Use these three fields to set or change the access key. The default access key is <b>password</b>. <b>IMPORTANT:</b> You will be prompted to modify the access key before you can continue with accessing the web GUI or uploading project files. <b>Note:</b> A valid password should only contain upper-case alphabets, lower-case alphabets, and/or numerals.</li><li><b>Viewer Access Key:</b> Select this option to request for the access key when uploading projects and Viewers to the ATEN controller or when downloading Viewers to mobile devices. Once enabled, you can also configure this setting from the Dashboard tab.</li></ul>

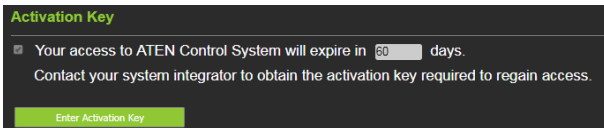Setting	Description
Activation Key	<p>The activation key is a string of letters and numbers used to assign a validity period of accessing the ATEN Control System.</p> <p>To set up a validity period for accessing the ATEN Control System:</p> <ol style="list-style-type: none"> <li>1. Select <b>Your access to ATEN Control System will expire in</b> and type the number of days.</li> <li>2. Type an activation key. Follow the guidelines below when creating your activation key: <ul style="list-style-type: none"> <li>◆ Max number of characters: 32</li> <li>◆ Allowed characters: uppercase and lowercase letters, numbers, and underscore</li> <li>◆ Max. number of days: 999 days</li> </ul> </li> <li>3. Type the activation key again to confirm.</li> <li>4. Click <b>Save</b>. The limit is immediately applied. For example:</li> </ol>  <p><b>Note:</b> Keep the activation key somewhere secure because it cannot be recovered. In case you forget the activation key, press the reset button/switch for 8 seconds to set the ATEN controller to default. This will reset all configuration of the controller to default and remove any projects and Viewers stored on the ATEN controller.</p> <p>To disable the validity period, click <b>Enter Activation Key</b> to type the activation key provided by the system integrator.</p>

## SNMP

ATEN controllers support SNMP. Configure SNMP settings to allow remote monitoring, management, and control of your ATEN controller via SNMP tools. Based on your security requirements, set up either **SNMPv1/v2c community** or **SNMPv3 account information** settings.

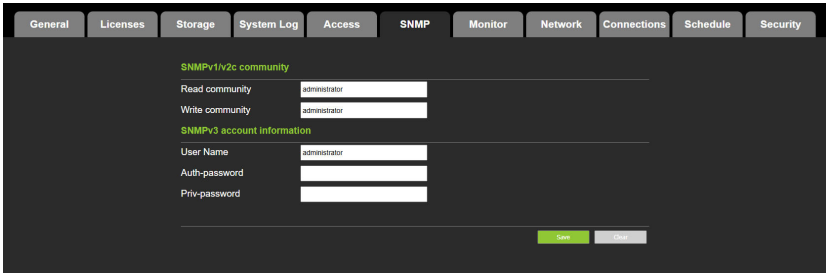

### SNMPv1/v2c Community


- ♦ **Read community:** Enter the read-only string here to allow monitoring of the controller.
- ♦ **Writer community:** Enter the read-write string to allow configuration changes.

### SNMPv3 account information

To set up SNMPv3, provide the controller's **username**, **authentication password**, and **privacy password**. If you are unsure of these credentials, consult your network administrator.

## Monitor

The Monitor tab allows you to view and enable the monitors that have been configured for Flags and digital input devices in ATEN Configurator. Click the slide bar next to the monitor you want to enable or use the drop-down menu to select **All On** or **All Off**.

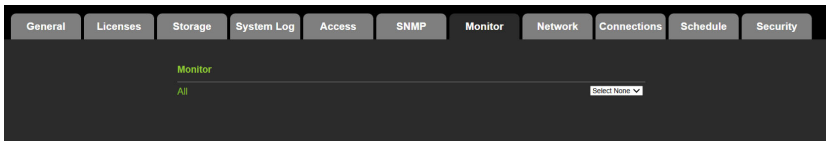

For more information about creating monitors, see *Monitor*, page 203.

**Network**

The Network tab allows you to view and configure the controller’s network settings. Select **Manually (DHCP off)** to set a static *IP Address*, *Subnet Mask*, and *Default Gateway*, or **Use DHCP** to have the server assign an IP address to the controller.

**Note:** Make sure to set the ATEN controller’s IP address and Default Gateway to the same subnet.

LAN

Get IP Address

Manually (DHCP off) ▾

IP Address

Subnet Mask

Default Gateway

Get DNS Server

☒ Manually

☐ Automatically

Preferred DNS Server

Alternate DNS Server

Save

Cancel

**Working as a DHCP Server**

For VK1200 / VK2200 only, the control box can operate as a DHCP server for automated assigning dynamic IP addresses to all of the LAN devices managed via its Control LAN. To do this, follow the steps below.:

Control LAN

Get IP Address

Enable DHCP Server ▾

IP Address

10.3.41.149

Subnet Mask

255.255.255.0

Default Gateway

10.3.41.254

IP Assigned Range

192.168.0.61 - 192.168.0.254

Lease Time (sec.)

7200

1. From the *Get IP Address* drop-down list, select **Enable DHCP Server**, and optionally change the network settings of the ATEN Control System, namely IP address, subnet mask, and default gateway.

- 2. Next to **IP Assigned Range**, define the desired range of IP that can be used for assigning IP addresses to the connecting IP devices.
- 3. Next to **Lease Time**, define the amount of time an assigned IP address becomes available for use after the IP device it is previously assigned to has been inactive for.

**Connections**

The Connections tab allows you to view the connection statuses and IP addresses of licensed devices, ATEN Keypads, and ATEN Expansion Boxes.

General	Licenses	Storage	System Log	Access	SNMP	Monitor	Network	Connections	Schedule	Security
Licensed Devices and Keypads										
	Name		ID	IP Address		Status				
#1	MUSEUM-4F3		N/A	10.3.43.201		Offline				
#2	8340N-MIKET		N/A	10.3.66.144		Online				
Expansion Box										
	Name		ID	IP Address		Status				

**Schedule**

The Schedule tab lists scheduled events predefined using the ATEN Configurator. You can use this tab to do the following:


- ◆ Enable or disable scheduled events.
- ◆ Enable or disable scheduled days

For details on setting up scheduled events, see *Scheduled Events*, page 226.

General	Licenses	Storage	System Log	Access	SNMP	Monitor	Network	Connections	Schedule	Security
Schedule Event										
Name		Repeat		Time						
<input checked="" type="checkbox"/>	OPEN	Weekly		<input type="checkbox"/> Sunday 08:00						
				<input type="checkbox"/> Monday 08:00						
				<input type="checkbox"/> Tuesday 08:00						
				<input type="checkbox"/> Wednesday 08:00						
				<input type="checkbox"/> Thursday 08:00						
				<input type="checkbox"/> Friday 00:00						
				<input type="checkbox"/> Saturday 00:00						
<input checked="" type="checkbox"/>	CLOSE	Weekly		<input type="checkbox"/> Sunday 18:00						
				<input type="checkbox"/> Monday 18:00						
				<input type="checkbox"/> Tuesday 18:00						
				<input type="checkbox"/> Wednesday 18:00						
				<input type="checkbox"/> Thursday 18:00						
				<input type="checkbox"/> Friday 00:00						
				<input type="checkbox"/> Saturday 00:00						

## Security

The Security tab allows you to set up security mechanisms to secure the browsing sessions between your computer and the controller's web console.

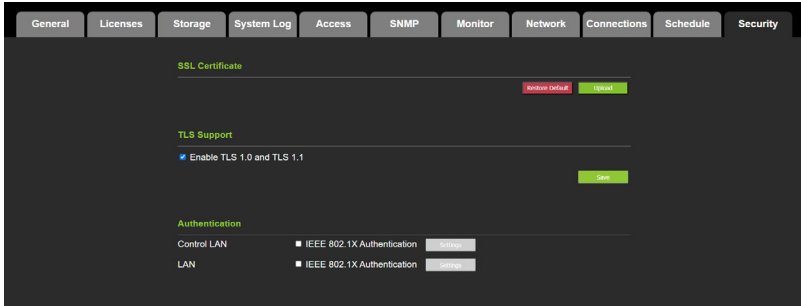

- ◆ **SSL Certificate:** To enable SSL encryption on the controller, purchase and obtain an SSL certificate from a trusted certifying authority and click **Upload** to apply the certificate.
- ◆ **TLS Support:** Each ATEN controller supports TLS 1.0, 1.1, and 1.2 to allow communications with devices supporting different versions of the TLS. If you have any security concerns, disable the **Enable TLS 1.0 and TLS 1.1** setting to only allow communications among devices that support TLS 1.2 and click **Save**.
- ◆ **IEEE 802.1X Authentication:** To enable the 802.1X authentication on the controller, click this checkbox and then click the **Settings** button to configure the required settings.

---

**Note:** Make sure that your network switch is IEEE 802.1X compliant.

---

Refer to the table below for the details of configuration applicable to each authentication method.

Authentication Method	Setup
PEAP	<ul style="list-style-type: none"> <li>◆ <b>CA Certification:</b> Validate the server certificate by enabling <b>Verification of Service Certificate</b>, and then upload a CA certificate.</li> <li>◆ <b>User Name &amp; Password:</b> Enter the credentials required by the authentication server.</li> </ul>

Authentication Method	Setup
EAP-TTLS	<ul style="list-style-type: none"> <li>♦ <b>CA Certification:</b> Validate the server certificate by enabling <b>Verification of Service Certificate</b>, and then upload a CA certificate.</li> <li>♦ <b>Inner Authentication:</b> Based on your network administrator' requirement, select an inner authentication method (<b>MSCHAPv2</b>, <b>CHAP</b>, or <b>PAP</b>).</li> <li>♦ <b>User Name &amp; Password:</b> Enter the credentials required by the authentication server.</li> </ul>
EAP-TLS	<ul style="list-style-type: none"> <li>♦ <b>CA Certification:</b> Validate the server certificate by enabling <b>Verification of Service Certificate</b>, and then upload a CA certificate.</li> <li>♦ <b>Identity:</b> Enter the identity of the controller device.</li> <li>♦ <b>Client Certificate:</b> Browse to upload a client certificate.</li> <li>♦ <b>Client Private Key:</b> Browse to upload a client private key.</li> <li>♦ <b>Private Password:</b> Enable this setting to add a private password.</li> </ul>



# ATEN Configurator (VK6000)


## Overview

The ATEN Configurator (VK6000) is a GUI-based management tool that helps you set up and configure the connected hardware and create control interfaces (Viewer), to be used on control interfaces including mobile devices, ATEN Keypads, ATEN Control Pads and ATEN Touch Panel.


## Installing ATEN Configurator

To install the ATEN Configurator software, do the following:


1. Download ATEN Configurator.
  - a) Visit the ATEN download page.  
<http://www.aten.com/global/en/support-and-downloads/downloads/>
  - b) Search for “VK6000”. A list of downloads for VK6000 appear.
  - c) Click **ATEN\_configurator\_software\_x.x.xxx.zip** to download.
2. Open the downloaded zip file and double-click **ATEN\_configurator\_software\_x.x.xxx.exe** to run the setup. This screen appears.

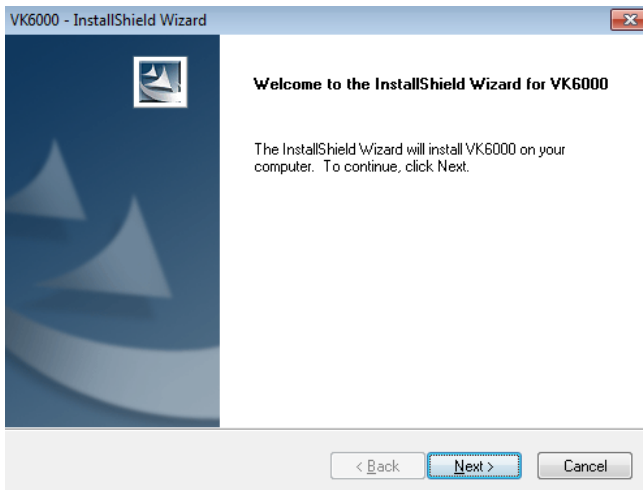


3. Click **Next**. This screen appears.

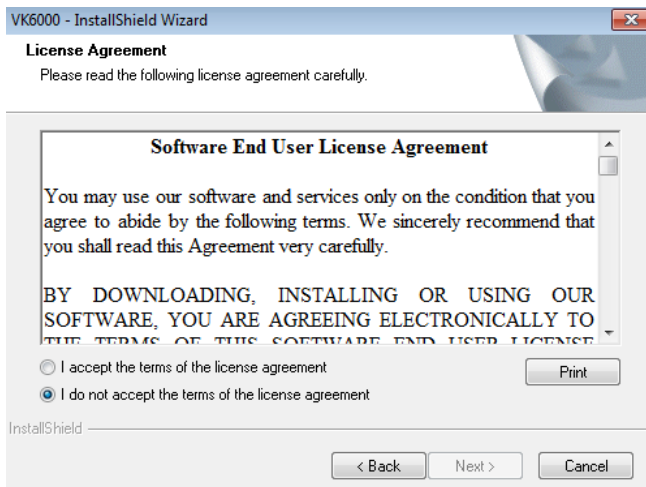


4. If you agree with the License Agreement, select **I accept the terms of the license agreement**, and click **Next**. Click **Print** to print the *Software End User License Agreement*. This screen appears.

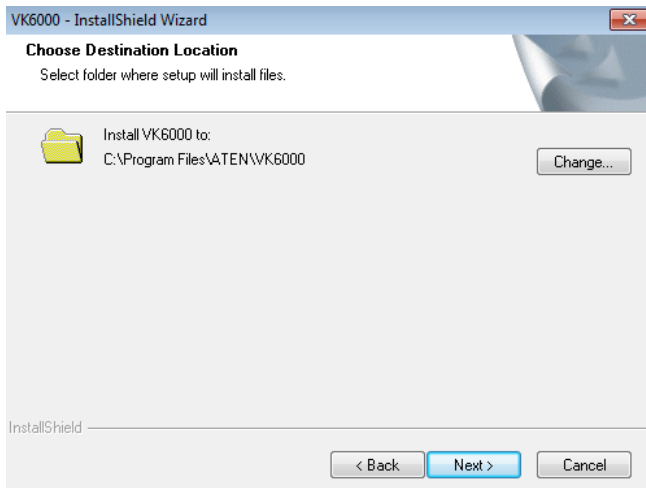

5. To change the destination location, click **Change**. Click **Next** to proceed using the default location. This screen appears.

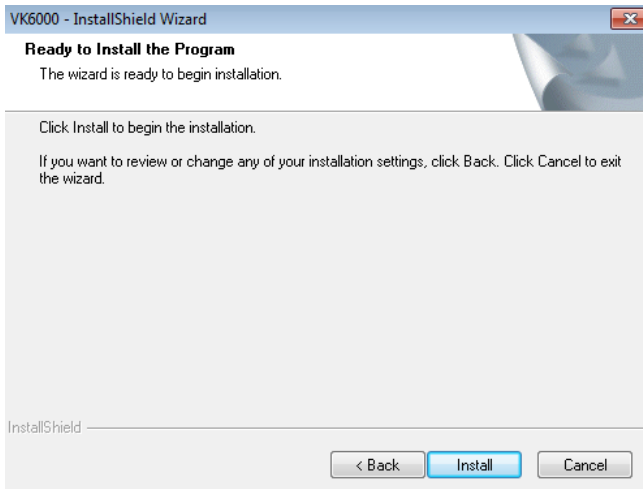

6. Click **Install**. When the process is complete, a confirmation message appears.

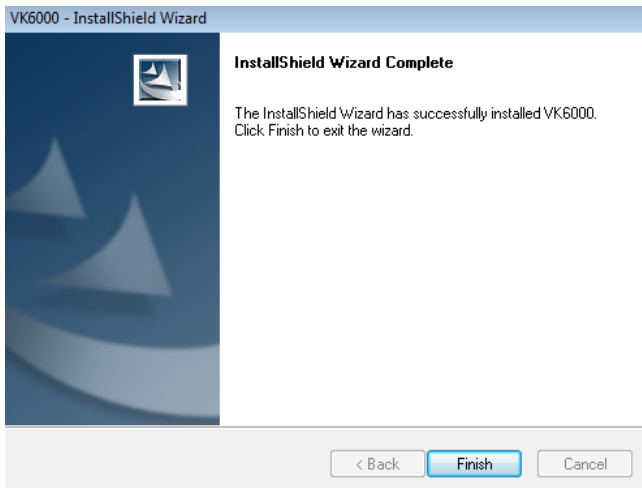

7. Click **Finish**.

## Getting Started Tasks

After you have installed and launched the ATEN Configurator, the main screen (page 98) appears. You will be guided to create and configure a project using the 4 tabs in the Configurator's interface, as illustrated below.



**Hint:** You can click the tabs to switch among different pages for configuration.

The steps below provides an overview of the getting started tasks.

1. In the **Project** tab, do the following.

- ◆ Provide information about the ATEN controller that you have set up.
- ◆ (Optional) Provide client information for the specified ATEN controller.

Click **Add Controller** if you have more than one controller in the environment.


Click **Start Project** to proceed.

2. In the **Device** tab, do the following.

- ◆ Connect each controller with its managed devices by adding them to the controller's Device List, enter the connection settings, and specify the physical locations.
- ◆ (Optional) Add another controller and/or Expansion Box to the project by clicking **Add Controller or Expander**.
- ◆ Connect the Expansion Box with its managed devices by adding them to the Device List.

For more details, see *Configuring Controller-Managed Devices*, page 108.

Click **Design** or the **Viewer** tab to proceed.

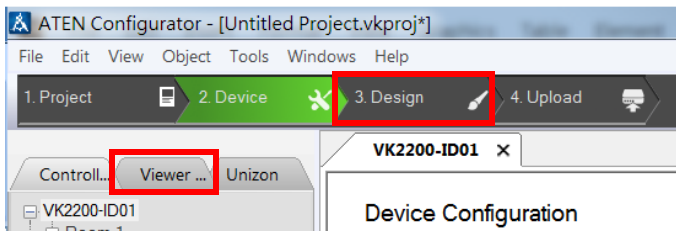


3. In the **Design** tab, do the following.

- ♦ Create and configure a control interface (Viewer). For more information, see *Configuring the Control Interface (Viewer)*, page 128.
  - ♦ (Optional) Set up scheduled events to automatically carry out specified actions.
  - ♦ (Optional) Add additional conditions and actions to buttons using Flags. For details, see *Flag*, page 201.
  - ♦ (Optional) Create a sequence of actions for a button by creating a Macro. For details, see *Macro*, page 224.
  - ♦ (Optional) Create a Variable for a device setting that is controlled by two or more objects in one control interface. For details, see *Variables*, page 228.
4. In the **Upload** tab, upload this Viewer to the controller. For details, see *The Upload Tab*, page 250.

# Main Screen

## Overview

Double-click the **Configurator.exe** shortcut to open the ATEN Configurator software. The *Project* page appears:

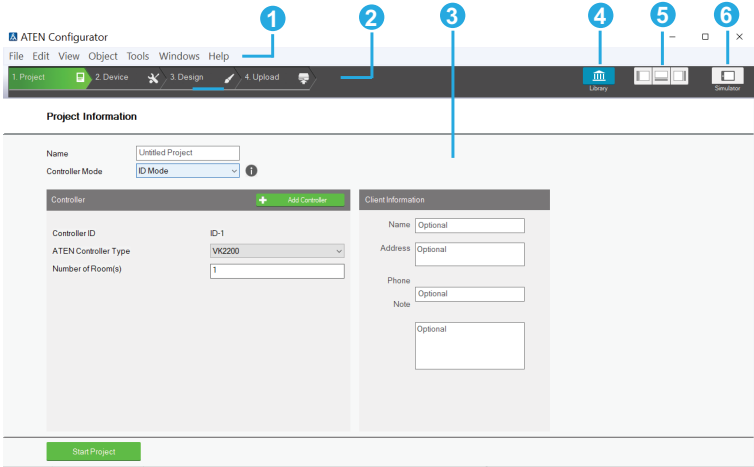

No.	Control	Description
1	Menu Bar	The menu bar contains a group of the Configurator 's main functions by category. For details, see <i>Menu Bar</i> , page 99.
2	Project Bar	The <i>Project Bar</i> contains four tab and the Library icon. Each tab relates to a step required to set up the project. Each step and the Library can be selected by clicking on the bar.
3	Interactive Display Panel	This is the main work area. The page that appears here reflects the project tab that is selected.
4	Library	The Library contains the devices, graphic, flag, macro, and monitor databases. Each section allows you to add custom items or choose from ready made selections.
5	Toggle Bar	These three icons are used as a toggle to show or hide the right, left and bottom control panel.
6	Simulator	The Simulator button is used to test the Viewer after it is created in <i>Design</i> . The simulator allows you to tryout the interface as it would work on a mobile device but without actually controlling devices. Use the mouse to click through the page links.

## **Menu Bar**

The menu bar contains the Configurator's main functions arranged by category. Refer to the table below to find out what each function does.

Menu	Sub-Menu		Description
File	New Project		Select to create a new project.
	Open Project		Select to browse and open a previously saved project.
	Restore Project from Controller		Downloads a previously backed up project from a controller.
	Close		Closes the current project and returns to the Project tab.
	Save		Select to save changes to the current project.
	Save as		Use this option to save the project as a different name.
	Export Viewer to USB (Not supported by ATEN Control Pad)		Exports Viewers and an access key to a USB drive. After exporting the data onto a USB drive, plug the USB drive into the Control Box's USB port to upload the Viewer files and the access key. These files can only be read by the Control Box and are not project files that can be opened by the ATEN Configurator software.
	Project Report		Click to save a PDF file that contains detailed information about each part of the current project.
	Add KNX Device	Import ETS Project	Import an ETS project file for your KNX devices.
		Add Custom KNX Device	Click to add a KNX device. For more details, see <i>Adding KNX Devices</i> , page 113.
Recent Projects		Select to view a list of recent projects that can be clicked on to open.	
Exit		Select to close the project and exit.	

Menu	Sub-Menu	Description
Edit	Undo	Select to undo a change when editing a Viewer in <i>Create &amp; Design Viewer</i> .
	Redo	Select to redo a change when editing a Viewer page in <i>Create &amp; Design Viewer</i> .
	Cut/Copy/Paste	Select to cut, copy or paste text and objects when editing a Viewer page in <i>Create &amp; Design Viewer</i> . When used to copy and paste a button, both the <i>General</i> and <i>Action</i> properties are copied.
	Paste Graphic Only	Select to paste a button's image but not its Action properties in <i>Create &amp; Design Viewer</i> .
	Delete	Select to delete highlighted text and images when editing a page in <i>Create &amp; Design Viewer</i> .
	Delete Action Only	Select to delete the Action properties of a button in <i>Create &amp; Design Viewer</i> .
	Select All / Deselect All	Use either option to select or unselect all objects when editing a viewer page in <i>Create &amp; Design Viewer</i> .
Preferences	Display Language	Use to select the language for the interface.
	SSH Destination	Click to choose the location of the executable for the SSH Client software. To execute the program, go to <b>Tools &gt; SSH Client</b> .
	Interface	<p>Check a box to enable the feature described below:</p> <ul style="list-style-type: none"> <li>♦ <b>Show Welcome Page:</b> displays the Welcome screen when the ATEN Configurator software opens.</li> <li>♦ <b>Auto Page Creation:</b> automatically creates a Viewer page in <i>Create Viewer &amp; Design</i>, for every hardware device that is configured in <i>Select Device &amp; Configuration</i>.</li> <li>♦ <b>Show Password:</b> displays the characters of the access key in the <b>Edit Access Key</b> dialog box.</li> <li>♦ <b>Automatically check for updates:</b> automatically checks for updates and notify the user when an update is available.</li> </ul>



Menu	Sub-Menu	Description
View	These options are available from <i>Create Viewer &amp; Design</i> <i>Edit Viewer</i> .	
	Zoom	Zooms the Viewer page to 25%, 50%, 75%, 100%, 200% or Fit in Window. <b>Note:</b> A mouse wheel can be used to zoom the Viewer page in or out.
	Project Information	Select to go to Project Information.
	Device Configuration	Select to go to Select Device & Configuration.
	Viewer Design	Select to go to Create Viewer & Design.
	Project Upload	Select to go to Search & Upload.
	Properties	Select to show/hide the Properties window when editing a Viewer page.
	Align to Grid	Select to automatically align objects with the grid. This places objects in perfect alignment with the grid dots when they are moved. Use Show Grid to display the grid dots. When Align to Grid is not selected, objects can be placed anywhere on the page.
	Show Grid	Select to display the grid dots on the page. Use with the Align to Grid option to set objects in perfect alignment on the page.
	Show Object ID	Select to show object ID at the top-right corner of each object. An object ID is used to specify an object in some configuration.
Object	Button	Adds a button to the Viewer page.
	Label	Adds a label to the Viewer page.
	Image	Adds an image to the Viewer page.
	Scroll View	Adds a scroll box to the Viewer page, then double-click it to add buttons. Use the box as a scroll window to easily access a list of buttons on the page.
	Video	Adds a video box which allows you to view video. The video box can be resized using the Properties sidebar or by dragging a small box on the boarder to resize it to the desired shape.
	Slider Bar	Adds a slider bar to the Viewer page. Slider bars are used to adjust the value of a device setting, such as the volume level of an audio device.

Menu	Sub-Menu		Description
Object	PowerPoint Control Template		Adds a PowerPoint Control template to the Viewer. This control template is used to control PowerPoint files saved in a target computer.
	Media Control Template		Adds a Media Control template to the Viewer. This control template is used to control media files saved in a target computer.
	Line		Adds a line to visually separate objects on the Viewer.
	Frame		Adds a frame to visually frame an object or to group a set of objects in the Viewer.
	Dial Kit		Adds a dial kit to the Viewer. The dial kit can be used for dialing a meeting.
	iFrame		Adds an iFrame to allow switching of multiple pages on a defined area of a page or Home page.
	Webview		Adds the web view based on a user-specified URL to the Viewer.
	QR code		Adds a QR code based on a user-specified URL to the Viewer.
	Group	Group	Select multiple objects and use <b>Group</b> to lock them together. Objects in the group will move together as one.
		Radio Group	Select multiple buttons and use <b>Radio Group</b> to associate them as follows: selecting a button that belongs to the radio group deselects the previously selected radio button within the same group.
		Ungroup	Select grouped objects and use <b>Ungroup</b> to unlock the group.
	Order	Bring to Front	Moves an object to the top position when objects are layered.
		Send to Back	Moves an object to the bottom position when objects are layered.
		Bring Forward	Moves an object up one position when objects are layered.
		Send Backward	Moves an object down one position when objects are layered.

Menu	Sub-Menu		Description
Object	Align	Left	Aligns two or more selected objects to the Left side of the object that is selected last.
		Center	Aligns two or more selected objects to the horizontal position of the object that is selected last.
		Right	Aligns two or more selected objects to the Right side of the object that is selected last.
		Top	Aligns two or more selected objects to the Top side of the object that is selected last.
		Middle	Aligns two or more selected objects to the vertical position of the object that is selected last.
		Bottom	Aligns two or more selected objects to the Bottom side of the object that is selected last.
	Make Same Size	Width	Resizes two or more selected objects to the same width of the object that is selected last.
		Height	Resizes two or more selected objects to the same height of the object that is selected last.
		Both	Resizes two or more selected objects to the same width and height of the object that is selected last.
	Space Evenly	Across Page Width	Spaces two or more selected objects evenly across the width of the page.
		Across Page Height	Spaces two or more selected objects evenly across the height of the page.
		Between Objects Horizontally	Adjusts the horizontal space between three or more selected objects to the average distance between each of the selected objects.
		Between Objects Vertically	Adjusts the vertical space between three or more selected objects to the average distance between each of the selected objects.

Menu	Sub-Menu	Description
Tools	Database Generator	Opens the ATEN Database Generator which is used to manually add and configure hardware devices. This is where you can create custom devices to add to <i>My Device Library</i> . See <i>ATEN Database Generator</i> , page 253, for details.
	Simulator	The Simulator is used to test a Viewer's interface after it has been created in <i>Design</i> . The simulator allows you to tryout the interface as it would work on a mobile device but without actually controlling devices. Use the mouse to click through the page links.
	SSH Client	This runs the SSH Client software selected under <i>Edit &gt; Preferences &gt; SSH Destination</i> . The SSH Client is used to communicate with the controller.
Windows	New Page	Click to create a new Viewer page or select a page to open in <i>Create Viewer &amp; Design</i> .
Help	About	Provides the firmware version and support information for the Configurator software.
	Check for Updates	Checks if ATEN Configurator is up-to-date.
	Training Videos (Basic)	Click to see how-to videos on tasks involved in configuring a project file.
	Training Videos (Advanced)	Click to see how-to videos on using advanced features such as creating a variable, creating a driver using database generator, and more.
	Driver Downloads	Click to download drivers for third-party devices.
	What's New	Click to see new features and functions in this version.

# Creating Projects

The *Project* tab allows you to enter details about the installation to start the project. Enter the information using the table below as a guide.

ATEN Configurator - []

File Edit View Object Tools Windows Help

1. Project 2. Device 3. Design 4. Upload

Library

Simulator

Project Information

Name

Untitled Project

Controller Mode

ID Mode

Controller

+ Add Controller

Controller ID

ID-1

ATEN Controller Type

VK2200

Number of Room(s)

1

Controller ID

ID-2

ATEN Controller Type

VK1200

Number of Room(s)

1

Remove Controller

Controller ID

ID-3

ATEN Controller Type

VK2200

Number of Room(s)

1

Remove Controller

Client Information

Name

Optional

Address

Optional

Phone

Optional

Note

Optional

Start Project

Control	Description
Name	Enter the project name you are setting up. You can create multiple projects but for most installations only one project is required.


Control	Description
Controller Mode	<p>Click to specify how controllers in this project file connect to Expansion Boxes and Keypads.</p> <ul style="list-style-type: none"> <li>◆ <b>ID Mode</b> (default) <ul style="list-style-type: none"> <li>◆ Controllers connect to Expansion Boxes or ATEN Keypads by matching controller ID, as set using the controller ID switch on the controller panel and configured in the project file (see Controller ID field below) with the controller ID set on the Expansion Box or Keypad.</li> <li>◆ Using the ID mode, a controller can connect up to 8 Keypads of the same model and 8 Expansion Boxes of the same model.</li> </ul> </li> <li>◆ <b>IP Mode</b> <ul style="list-style-type: none"> <li>◆ Controllers connect to Expansion Boxes / ATEN Keypads through their IP address.  <b>Note:</b> When <b>IP Mode</b> is selected, controllers do not use any ID settings on ATEN Keypads or Expansion Boxes as the basis for their connection. However, the controller ID on the controller panel and the project file need to match to successfully apply the configuration.</li> <li>◆ Using the IP mode, the maximum numbers of <b>ATEN Expansion Boxes</b> that controllers can connect are as follows: <ul style="list-style-type: none"> <li>◆ VK0100 / VK0200: 16</li> <li>◆ VK1100A / VK2100A / VK2150: 32</li> <li>◆ VK1200 / VK2200: 64</li> </ul> </li> <li>◆ Using the IP mode, the maximum numbers of <b>ATEN Keypads</b> that controllers can connect are as follows: <ul style="list-style-type: none"> <li>◆ VK0100 / VK0200: 10</li> <li>◆ VK1100A / VK2100A / VK2150: 16</li> <li>◆ VK1200 / VK2200: 32</li> </ul> </li> </ul> </li> </ul>
Add Controller	<p>Click to add controllers to the project. The number added should match the number of controllers installed. A project can have up to 16 controllers.</p>
Controller ID	<p>Displays the controller ID. Make sure the ID in this field matches the ID on the controller so that the project file will be uploaded to the specified controller.</p>
ATEN Controller Type	<p>Select the model for the controller.</p>

Control	Description
Number of Rooms	Enter the number of rooms each controller will control. Each hardware device you add will be associated with a room. When buttons are configured in the <i>Design</i> tab, you can select a <b>Room</b> under <i>Button Action</i> to filter the <i>Device List</i> so that only hardware in that room appears. This link between the controller, devices and room is how the Viewer knows which devices to control.
Name	Enter the client name associated with the project.
Address	Enter the client address associated with the project.
Phone	Enter the client phone number associated with the project.
Remove Controller	Click to delete a controller from the project.
Start Project	Click to begin configuring hardware devices. The <i>Select Device &amp; Configuration</i> tab will open.

# Configuring Controller-Managed Devices

## The Device Tab

The Device tab is used to configure controller ports according to the connected hardware device.

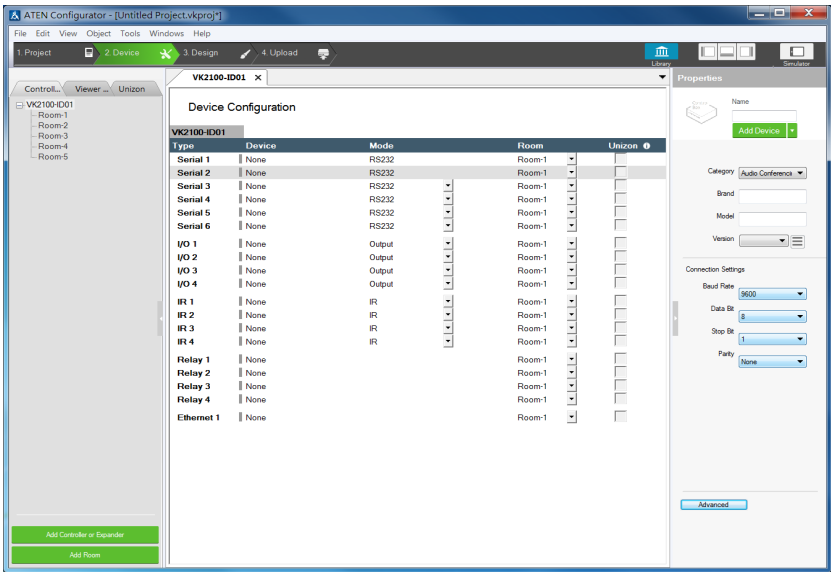

Control	Description
Device List	This section lists the ports for each controller, their connected device, connection mode, device location (room) and if the device is managed by Unizon™. Click on a controller, expansion box or Room in the left sidebar to display the ports. Each port needs to be configured according to the hardware device connected to it. For details, see <i>Left Sidebar</i> , page 109.
Left Sidebar	The left sidebar provides a tree view of the ATEN Control System deployment in each project. Use the sidebar to add/remove a controller, Expansion Box, or Room.
Properties	This section allows you to add and configure controllers, Expansion Boxes, managed devices, and rooms. For details, see <i>Configuring the Control Interface (Viewer)</i> , page 128.
Device Library	Click this icon to open the <i>Library</i> on the <b>Device Library</b> tab which contains a database of hardware devices that can be added to the Device List. For details, see <i>Device Library</i> , page 127.



## **Left Sidebar**

### **Controller**

The *Left Sidebar* provides a tree view of the controllers, Expansion Boxes, and rooms. Each controller in the tree view represents a controller with one or more rooms it manages. Selecting a controller allows you to configure its ports. When a port is configured for a device, it appears listed under the Room.

Each controller must contain at least one room. When installing multiple controllers in one room, add a room with the same name to each controller.

Each controller name ends with an ID number: e.g. VK2200-**ID02**. This ID number is automatically generated when the controller is added into the project. You can also configure this ID in the controller properties settings.

Use this number to set the **Controller ID Switch** on the rear of the controller. This links the controller in the software to the physical device being installed.

Right-click a controller to **Add Room** or **Delete Controller**.

### **Room**

Each room is associated with a controller and a Viewer so that the information is uploaded to the correct controller to control the hardware devices. Right click a room to **Delete** or **Rename** the room. Use the buttons at the bottom of the sidebar to **Add Room**.

### **Expansion Box**

ATEN Expansion Boxes connect over a network to add ports to the controller via its Ethernet port. Clicking Add Controller or Expander opens a window which allows you to select a device to add.

## **Device List**

The Device list shows the controller ports by type. Click a port to view its **Properties**. Double-click a port to open the **ATEN Device Library** and search

for the hardware device to configure the port. Configure each port according to the hardware device connected to it.

VK2100-ID01
X

Device Configuration

VK2100-ID01

Type	Device	Mode	Room	Unizon
Serial 1	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 2	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 3	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 4	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 5	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 6	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
I/O 1	<div><div></div>None</div>	Output	Room-1	<div><div></div></div>
I/O 2	<div><div></div>None</div>	Output	Room-1	<div><div></div></div>
I/O 3	<div><div></div>None</div>	Output	Room-1	<div><div></div></div>
I/O 4	<div><div></div>None</div>	Output	Room-1	<div><div></div></div>
IR 1	<div><div></div>None</div>	IR	Room-1	<div><div></div></div>
IR 2	<div><div></div>None</div>	IR	Room-1	<div><div></div></div>
IR 3	<div><div></div>None</div>	IR	Room-1	<div><div></div></div>
IR 4	<div><div></div>None</div>	IR	Room-1	<div><div></div></div>
Relay 1	<div><div></div>None</div>		Room-1	<div><div></div></div>
Relay 2	<div><div></div>None</div>		Room-1	<div><div></div></div>
Relay 3	<div><div></div>None</div>		Room-1	<div><div></div></div>
Relay 4	<div><div></div>None</div>		Room-1	<div><div></div></div>
Ethernet 1	<div><div></div>None</div>		Room-1	<div><div></div></div>

+ Add More Devices  
+ Add More Devices  
+ Add More Devices  
+ Add More Devices

VK224-ID01

Type	Device	Mode	Room	Unizon
Serial 1	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 2	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 3	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>
Serial 4	<div><div></div>None</div>	RS232	Room-1	<div><div></div></div>

VK248-ID01

Type	Device	Mode	Room	Unizon
Relay 1	<div><div></div>None</div>		Room-1	<div><div></div></div>
Relay 2	<div><div></div>None</div>		Room-1	<div><div></div></div>
Relay 3	<div><div></div>None</div>		Room-1	<div><div></div></div>

Control	Description
Type	Lists the ports of the controller.
Device	Lists the device name entered in Properties.
Mode	<p>Lists the port's communication mode. Click an arrow to select options:</p> <ul style="list-style-type: none"> <li>◆ <b>Serial:</b> RS-232, RS-422, or RS-485</li> <li>◆ <b>I/O:</b> Input (VDC), Input (Dry Contact) or Output</li> <li>◆ <b>IR:</b> IR or R-S232</li> </ul>
Room	<p>Lists the room selected for a device. The rooms available depend on the number of rooms added to the controller. No drop-down menu appears if there is only one room. Each controller must have at least one room. Select the room where the device is installed.</p>
Unizon™	<p>Select this option to allow Unizon™ to manage and monitor the corresponding device.</p> <p><b>Note:</b> Configuration will also be required on Unizon™ for this feature to work. For an overview of how to set up the function, see <i>Centralized Monitoring and Control via Unizon™</i>, page 242.</p>

Control	Description
+ Add More Devices	RS-422, R-S485, LAN and IR ports can cascade additional devices that are connected to the first unit. IR ports can cascade 1 device, RS-422 and RS-485 ports can cascade up to 2 devices and LAN ports can cascade up to 25 devices.

## Adding Devices to the Device List

### Adding Non-KNX-Compliant Devices to ATEN Configurator

To add devices that are not KNX compliant, use one of the following methods.

#### ■ Via ATEN Device Library or My Library

1. In the Device List, click a port where you have physically installed a device.


VK2200-ID01

VK2100-ID02

Device Configuration

VK2200-ID01

Type	Device	Mode	Room	Unizon ⓘ
Serial 1	None	RS232	Room-1	<input type="checkbox"/>
Serial 2	None	RS232	Room-1	<input type="checkbox"/>
Serial 3	None	RS232	Room-1	<input type="checkbox"/>
Serial 4	None	RS232	Room-1	<input type="checkbox"/>
Serial 5	None	RS232	Room-1	<input type="checkbox"/>

2. Click  library. In the pop-up window, click the drop-down list to select **ATEN Device Library** or **My Device Library**, and then double-click an item to add the device. The selected device is added to Device Configuration.

VK2200-ID01 x VK2100-ID02

Device Configuration

VK2200-ID01

Type	Device	Mode	Room	Unizon ⓘ
Serial 1	VM51616H	RS232	Room-1	<input type="checkbox"/>
Serial 2	None	RS232	Room-1	<input type="checkbox"/>
Serial 3	None	RS232	Room-1	<input type="checkbox"/>
Serial 4	None	RS232	Room-1	<input type="checkbox"/>
Serial 5	None	RS232	Room-1	<input type="checkbox"/>
Serial 6	None	RS232	Room-1	<input type="checkbox"/>

## ■ Via the Properties Column

1. In the Device List, click a port where you have physically installed a device.

Type	Device	Mode	Room	Unizon
Serial 1	None	RS232	Room-1	<input type="checkbox"/>
Serial 2	None	RS232	Room-1	<input type="checkbox"/>
Serial 3	None	RS232	Room-1	<input type="checkbox"/>
Serial 4	None	RS232	Room-1	<input type="checkbox"/>
Serial 5	None	RS232	Room-1	<input type="checkbox"/>

2. Use one of the following to add a device.

- ◆ **Select from Library:**

Use this method to automatically bring in default settings for the selected device.


- (a) Click the arrow button and select **Add device from the Library** to open the Library.



- (b) Click the drop-down list to select **ATEN Device Library** or **My Device Library**, and then double-click an item to add the device.


- ◆ **Specify and configure settings**

Use this method to type and configure each setting for the device. When the configuration is complete, click **Add Device**.

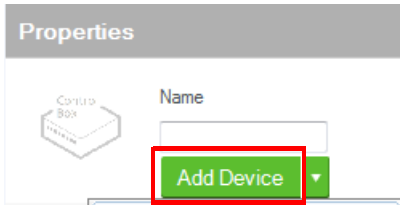

**Note:**

If the device is not in the Library, create the device using Database Generator. For details, see *Editing / Adding a New Device*, page 260.

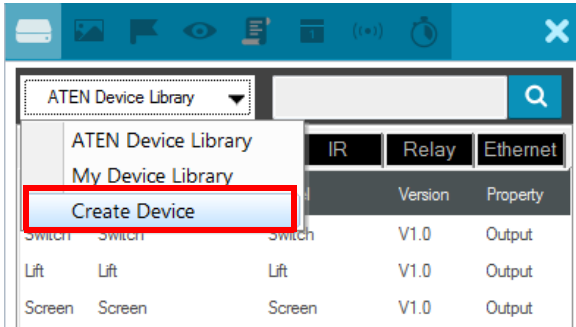
**Adding KNX Devices**

There are two ways to add KNX devices into ATEN Control System projects:

- ◆ Add a KNX device individually (page 113)
- ◆ Import a pre-configured ETS project (page 114)


**■ Adding a KNX Device**

1. In the Devices tab, go to **File > Add KNX Device > Add Custom KNX Device**. A KNX IP Interface (with a default room) is added.

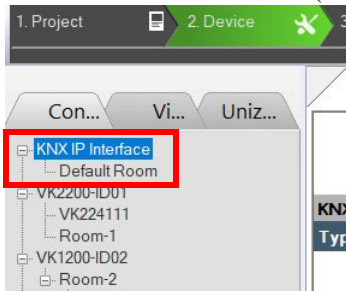

2. On the controller where you wish to add the KNX device, right-click the controller and then select **Add KNX Room > Default Room**.

The KNX device is added.

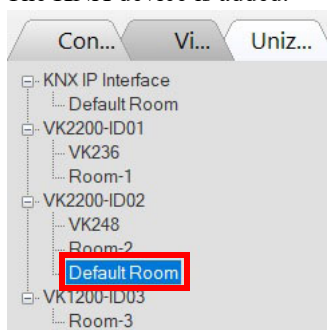

## ■ Importing an ETS Project

1. In the Devices tab, go to **File > Add KNX Device > Import ETS Project**. The configurations for your KNX devices appear in the Controller tab on the left-side bar.
2. In the Controller tab, click on **KNX IP Interface** and type its IP address and port in the Properties column.

## Device Properties

The *Properties* panel provides information and configuration fields for controllers, Expansion Boxes, remote devices, or rooms. Click a device or room from the left sidebar or the Device List to display its properties.

## Controller Properties


Click a controller from the left sidebar or from the Device List to configure or view the following properties.

- ♦ **Name:** Displays the device model.
- ♦ **Controller ID:** Sets the controller ID. With the controller set to ID mode (*Creating Projects*, page 105), the controller connects to ATEN Expansion Box and Keypad by matching this ID with that set on the Expansion Box or Keypad.

## Expansion Box (Expander)

Click an expansion box from the left sidebar or from the Device List to configure or view the following properties

**Properties**

 **Name**  
VK224

**Expander ID** ID01

**Brand** ATEN

**Connection Settings**

**IP Address** Optional

- ♦ **Name:** Displays the device model.
- ♦ **Expander ID:** Select the expander ID. Make sure the ID matches the one set physically on the Expansion Box.
- ♦ **IP Address:** Specify the IP address of the expansion box. This setting is only required when the connection mode (with the controller) is set to **IP mode**. For more information, see *Creating Projects*, page 105.

## Serial Device Properties

Click a serial device from the Device List to configure its properties.

- ◆ **Name:** Displays the device model.
  - ◆ **Add Device:** Use this button to add devices. For details, see *Adding Non-KNX-Compliant Devices to ATEN Configurator*, page 111.
- ◆ **Category:** Displays the category of the selected device.
- ◆ **Brand:** Displays the brand of the selected device.
- ◆ **Model:** Displays the model of the selected device.
- ◆ **Version:** Shows the firmware version selected for the device. Use the drop-down menu to select a different firmware version. Click the menu box next to the version number to open a PDF with the version history. The version history and different versions for a device can be manually added/updated via the Database Generator (see step 3 of *Editing / Adding a New Device*, page 260).
- ◆ **Connection Settings:** Click the drop-down lists to configure the baud rate, data bit, stop bit, parity settings, and flow control for the selected serial device.
- ◆ **Advance Settings:** Click **Advanced** to display the following settings.
  - ◆ **Delay Interval:** Sets a time delay for each command before they are sent to the device.
  - ◆ **Feedback Timeout:** Sets the maximum interval that the controller allows in between parts of a feedback message. The controller uses this value to identify the end of a message.
  - ◆ **End Character:** Type the end-of-text character of the device to inform controller the end of a message and to shorten the response time.
  - ◆ **Keep Connection Alive:** The controller sends a command to the serial device to maintain the connection and avoid timeout issues.
    - ◆ **Command:** Type a command to be sent to the selected device.
    - ◆ **Interval:** Type the interval at which the controller sends the command.

## I/O Device Properties

Click an I/O device from the Device List and select **Input (VDC)**, **Input (Dry Contact)**, or **Output** to configure its properties.

- ◆ **Name:** Displays the device model.



- ♦ **Add Device:** Use this button to add devices. For details, see *Adding Non-KNX-Compliant Devices to ATEN Configurator*, page 111.
- ♦ **Category:** Displays the category of the selected device.
- ♦ **Brand:** Displays the brand of the selected device.
- ♦ **Model:** Displays the model of the selected device.
- ♦ **Version:** Shows the firmware version selected for the device. Use the drop-down menu to select a different firmware version. Click the menu box next to the version number to open a PDF with the version history. The version history and different versions for a device can be manually added/updated via the Database Generator (see step 3 of *Editing / Adding a New Device*, page 260).
- ♦ **Lower Threshold & Upper Threshold:** Set the thresholds according to the hardware device you are connecting and then configure a Monitor (see page 203).
- ♦ **Advance Settings:** Click **Advanced** to display the Delay Interval setting.
  - ♦ **Delay Interval:** Sets a time delay for each command before they are sent to the device.

## IR/Relay Device Properties

Click an IR/Relay device from the Device List to configure its properties.

- ♦ **Name:** Displays the device model.
- ♦ **Add Device:** Use this button to add devices. For details, see *Adding Non-KNX-Compliant Devices to ATEN Configurator*, page 111.
- ♦ **Category:** Displays the category of the selected device.
- ♦ **Brand:** Displays the brand of the selected device.
- ♦ **Model:** Displays the model of the selected device.
- ♦ **Version:** Shows the firmware version selected for the device. Use the drop-down menu to select a different firmware version. Click the menu box next to the version number to open a PDF with the version history. The version history and different versions for a device can be manually added/updated via the Database Generator (see step 3 of *Editing / Adding a New Device*, page 260).
- ♦ **Advance Settings:** Click **Advanced** to display the Delay Interval setting.
  - ♦ **Delay Interval:** Sets a time delay for each command before they are sent to the device.

## Ethernet Device Properties

Click an Ethernet device to configure its properties.

- ♦ **Name:** Displays the device model.
- ♦ **Add Device:** Use this button to add devices. For details, see *Adding Non-KNX-Compliant Devices to ATEN Configurator*, page 111.
- ♦ **Category:** Displays the category of the selected device.
- ♦ **Brand:** Displays the brand of the selected device.
- ♦ **Model:** Displays the model of the selected device.
- ♦ **Version:** Shows the firmware version selected for the device. Use the drop-down menu to select a different firmware version. Click the menu box next to the version number to open a PDF with the version history. The version history and different versions for a device can be manually added/updated via the Database Generator (see step 3 of *Editing / Adding a New Device*, page 260).

## ◆ Connection Settings

Depending on the selected protocol, some of the following settings may not be required and are not displayed.

- ◆ **Protocol Type:** Click to select the protocol for the Ethernet device. The ATEN Control System supports control of devices via telnet, ONVIF, TCP, UDP, HTTP, HTTPS, and WebSocket. Configure the following fields as required.
- ◆ **IP Address:** Type to assign a fixed IP address to the Ethernet device.
- ◆ **Port:** Type to assign a communication port.
- ◆ **Username & Password:** Type the device's login/access credentials.
- ◆ **VE Manager Password:** Type the administrator password of the VE Manager to allow the controller to access video sources connected to the video extenders managed by the VE Manager.
- ◆ **Auth Type:** Sets the authentication type that the device uses.
- ◆ **URIPath:** Type the part of the WebSocket URI that follows its communication port. For example, if the URI is **wss://<host>:31416/Dicentis/API**, type **Dicentis/API** in this field.
- ◆ **SubProtocol:** Type the subprotocol for the Ethernet device. This information shall be available in the device's reference or user manual.
- ◆ **WSS:** Select to encrypt the WebSocket connection.
- ◆ **Edit Additional Info:**
  - ◆ **ExtHeader:** Type the required data for handshake header.
  - ◆ **Extension:** Type the required data for the Sec-WebSocket-Extensions header field.
- ◆ **Edit Login Command:** Click to edit the login command.

## ◆ Monitor Connection

- ◆ **Check Status (ICMP):** Select this option to allow the controller to send control messages to receive connection status for this Ethernet device.  
**Note:** To allow the online/offline status to be accessible to Unizon™ for remote management, select the Unizon™ checkbox that corresponds to the device in the Device List.
- ◆ **NOP (for Telnet only):** Select this option to send a no-operation command to the remote end of a Telnet connection to maintain the connection status of the device with controller.
- ◆ **Stream:** To allow video streaming to the controller via RTSP, select this option and type the streaming IP address, port, and login credentials of the Ethernet device.

- ♦ **Advance Settings:** Click **Advanced** to display the Delay Interval setting.
  - ♦ **Delay Interval:** Sets a time delay for each command before they are sent to the device.
  - ♦ **Delay after Login (for telnet only):** Sets a delay (to allow a connection to be established) before the First and Second Commands are sent to the device.
  - ♦ **Feedback Timeout:** Sets the maximum interval that the controller allows in between parts of a feedback message. The controller uses this value to identify the end of a message.
  - ♦ **End character:** Type the end-of-text character of the device to inform controller the end of a message and to shorten the response time.
  - ♦ **Send command after connection (for telnet and TCP only):** Sends commands to the device after a successful connection has been established.
    - ♦ **Format:** Sets the command format.
    - ♦ **First Command:** Sets the command.
    - ♦ **Second Command:** Sets the second command.
    - ♦ **Automatically reconnect if no return message is received:**  
Select this option to continue reconnection attempts when no return message is received from the device.
  - ♦ **Keep Connection Alive (for telnet and TCP only):** The controller sends a command to the device to maintain the connection and avoid timeout issues.
    - ♦ **Command:** Type a command to be sent to the selected device.
    - ♦ **Interval:** Type the interval at which the controller sends the command.

## Replacing a Controller

Use this feature to help you easily replace a controller and retain the device configurations.

**Note:** Raw commands involving devices that do not exist in the Device List will be removed upon replacement.

1. Make sure the current device configuration conform to the following:
  - ♦ The new controller is equipped with enough ports to accommodate the devices managed by your current controller.
  - ♦ Since the replacement is carried out on a port to port basis, make sure the devices managed by your current controller are added to ports that also exist in the new controller.

For example, to replace a VK2200 (as shown below) with VK1200 (equipped with only 2 serial ports), move the VM5808D on Serial 3 to either Serial 1 or Serial 2.

Type	Device	Mode
Serial 1	None	RS232
Serial 2	None	RS232
Serial 3	VM5808D	RS232
Serial 4	None	RS232
Serial 5	None	RS232

2. In the project file, go to the **Device** tab.
3. From the left sidebar, right-click on a controller you wish to replace and go to **Replace Controller**.

1. Project   2. Device   3. Design   4. Upload

Con... Vi... Uniz...


VK2200-ID01 x

Replace controller

Delete Controller

Type	Device
Serial 1	VK1200
Serial 2	VK2100A
Serial 3	VK1100A
	VK0100
	VK0200


4. From the pop-up menu, click to select a controller for replacement. For example, select **VK2100A**. A warning message about removing raw commands appears.
5. Click **OK**. The controller is immediately replaced with the device configuration retained.

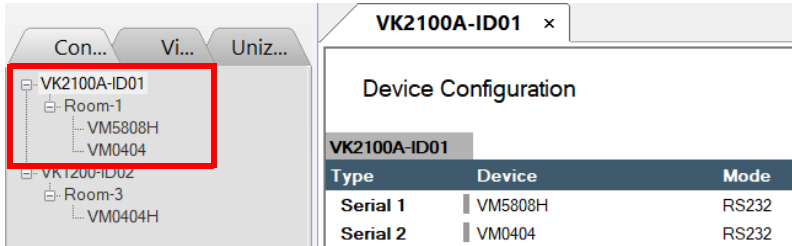


## Moving a Controller-managed Device to another Controller

To move a controller-managed device, along with its configuration to another controller, follow the steps below.

1. In Configurator, click the **Device** tab.
2. In the left sidebar, right-click the device you wish to migrate, go to **Move to**, and then select a controller and a target port.

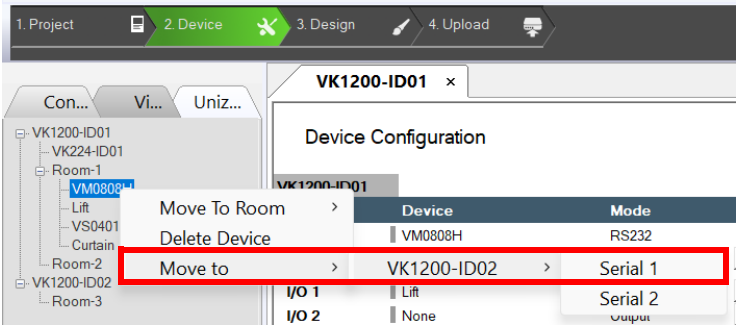

3. The device (along with its configuration) is moved immediately.

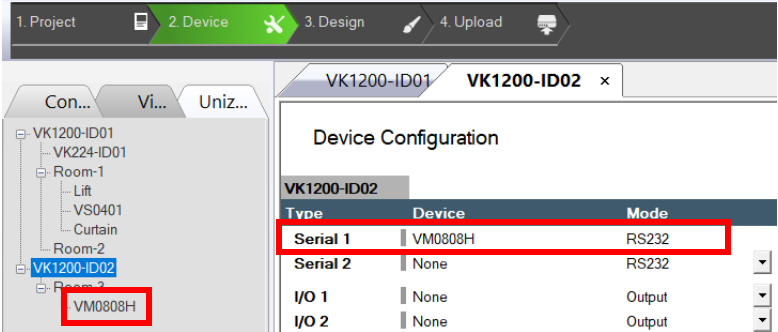




## **Moving a Controller-managed Device to Another Room**

To move a controller-managed device to another room (managed by the same controller), follow the steps below.

1. From the left sidebar, right-click the target device and go to **Move to Room**. A pop-up menu appears listing other rooms of the controller.

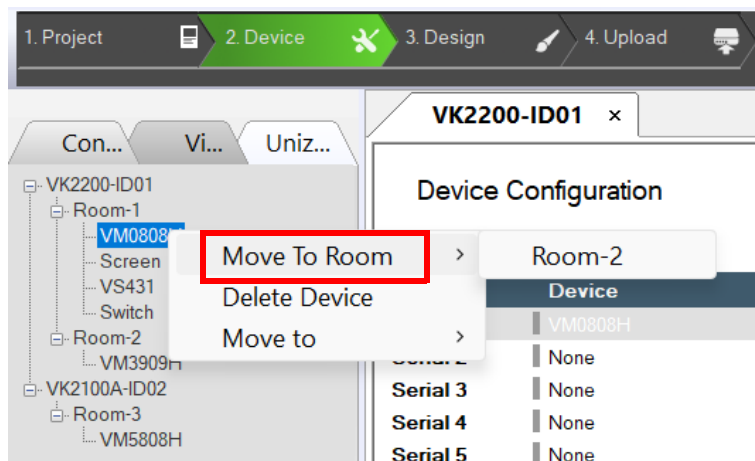


2. Click to select a destination room. The device is immediately moved. If no menu pops up, create a room first and try again.



## Library


The Project Bar provides the **Library** option. Use the *Device Library* tab (shown below) to configure controller ports according to the connected hardware devices. The Device Library provides an extensive database of hardware devices that can be double-clicked or drag-and-dropped into the **Device Configuration** page to configure controller ports. The Device Library is discussed on the next page.

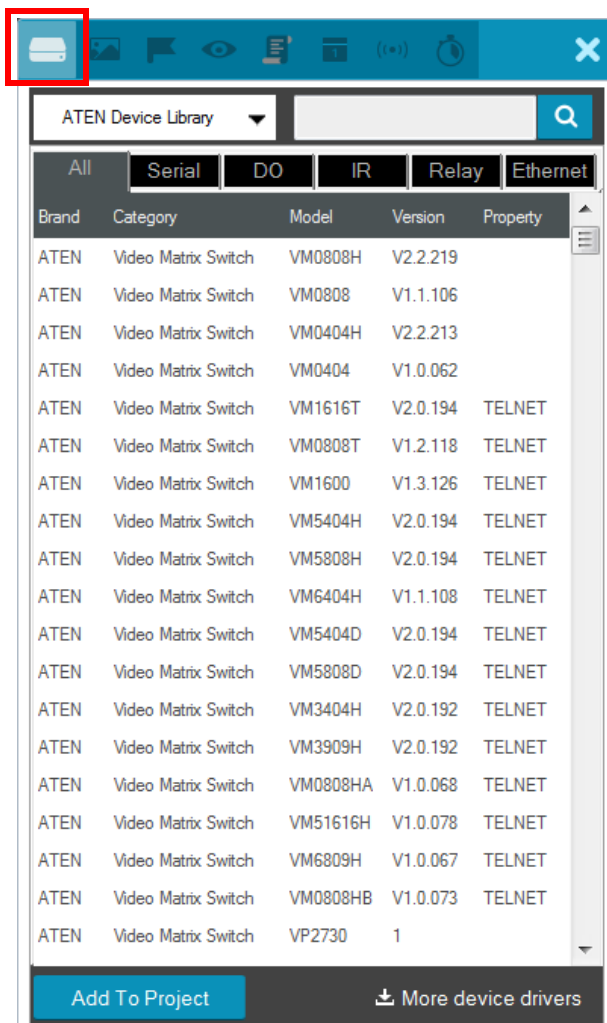




## Device Library

The *Device Library* tab is a database of hardware devices that instantly configure controller ports. Search the library for the device connected to a controller port then add it to configure the port. For devices not in the library, use the *ATEN Database Generator* to create custom hardware (see page 253). Click **Library** on the Project bar or double-click a port on the *Device Configuration* page to open the ATEN Device Library.

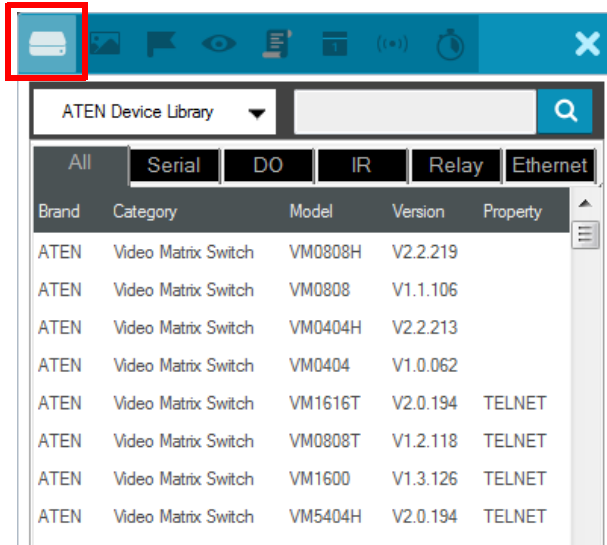

- ♦ Add a device by clicking **Add to Project** or by **drag & drop**.
- ♦ To search for a device type keywords into the box and click .
- ♦ Click a tab to filter by **All**, **Serial**, **DO**, **IR**, **Relay** or **Ethernet**.
- ♦ Click headings to sort by **Brand**, **Device Type**, **Model** or **Version**.
- ♦ Use the drop-down menu to select:
  - ♦ **ATEN Device Library** – ATEN's database of hardware devices.
  - ♦ **My Device Library** – Devices added from the Database Generator.
  - ♦ **Create Device** – Opens the *Database Generator* to create custom hardware devices for *My Device Library* (page 253).

## Configuring the Control Interface (Viewer)


This section provides information on how to configure a control interface, the *viewer*, for your control system and the functions of different control objects.

### Getting Started with Configuring Viewers

Step	Action	Refer to
1.	Understand the usages of Pages and Subpages.	<i>The Design Tab</i> , page 129
2.	Plan and consider the following before creating the viewer: <ul style="list-style-type: none"> <li>♦ required control actions and suitable control elements</li> <li>♦ placement of these control elements among Pages, and on Subpages if needed</li> </ul>	<ul style="list-style-type: none"> <li>♦ <i>Control Object Properties</i>, page 147</li> <li>♦ <i>Viewer List</i>, page 130</li> </ul>
3.	Create a viewer.	<i>Adding Viewers</i> , page 134
4.	Based on your planning, add the required Pages / Subpages.	<ul style="list-style-type: none"> <li>♦ <i>Adding / Removing a Page</i>, page 138</li> <li>♦ <i>Configuring a Subpage</i>, page 139</li> </ul>
5.	Add and configure control objects on the created Pages / Subpages.	♦ <i>Configuring Control Objects</i> , page 143


## The Design Tab

Use the **Design** tab to configure viewers for your control system. A design tab contains following elements to help you create, configure, and manage your viewers:

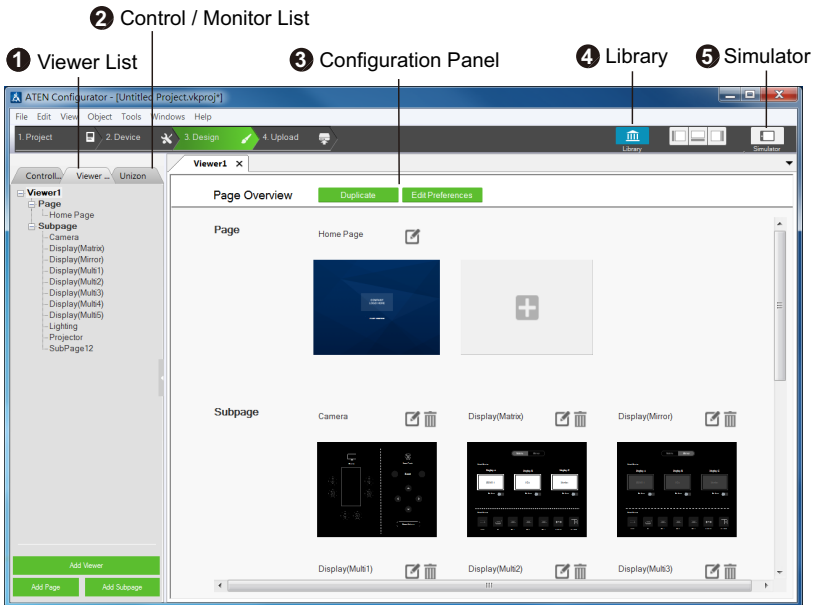


## 1 Viewer List

The Viewer List provides a tree view of added Viewers and the associated control pages, as illustrated on the right.

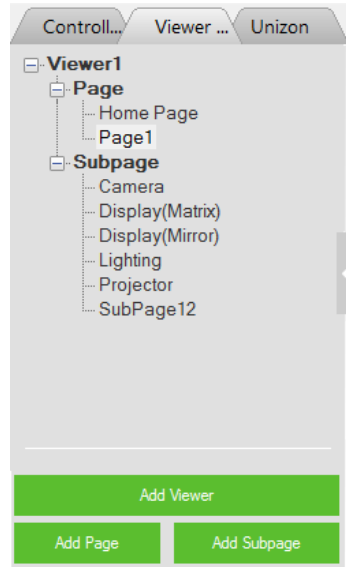


In a Viewer, you may find the following page types:

- ♦ **Home Page:** This is the main page (for mobile devices and ATEN touch panel) or the key layout (for ATEN Control Pads and Keypads). A Home Page typically contains buttons that redirect to frequently used features and control pages, such as display, lighting, air conditioning, etc.

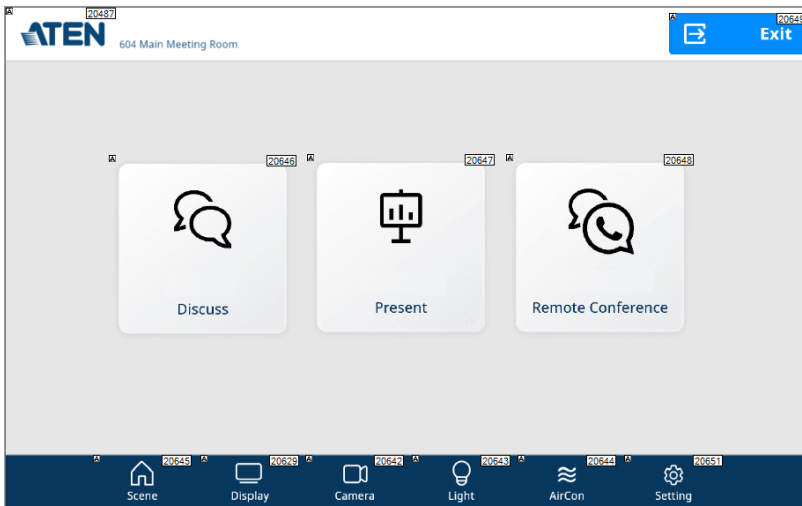


- ♦ **Page:** This is a full-size control page to which you can redirect by tapping an associated button or icon from the Home Page or other Pages.
- ♦ **Subpage:** A Subpage is a reduced-size control page that is embedded within a Home Page or Page through an adjustable frame (the green frame as illustrated below), called the *iFrame*. The advantage of using subpages is that it allows you to retain some elements of the page, such as buttons of a menu bar or a company logo, while switching among different subpages. In the example below, this page is designed to have a menu bar on the left and a reserved area (iFrame) for displaying three subpages that can be switched to by tapping the menu options on the left.

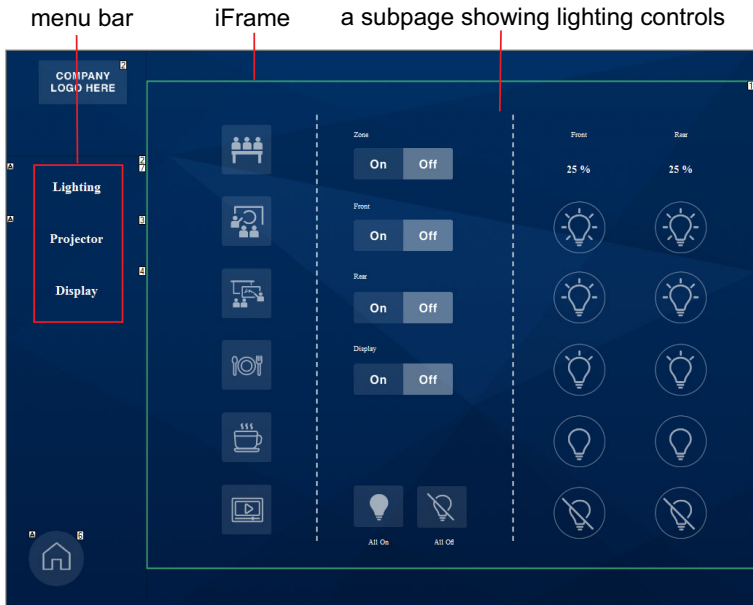

Use Viewer List to add, remove, or edit Viewers and the associated pages. More specifically, you can use the Viewer List to do the following tasks:


- ♦ To add a new Viewer, click the **Add Viewer** button.
- ♦ To add a new Page or Subpage, click the corresponding button at the bottom.
- ♦ To delete, rename, or copy an added page, right-click it from the list.
- ♦ To duplicate the visual design of a control page (without its configurations), right-click it to select **Copy**, and right-click the target Page or Subpage category and select **Paste**.

- ♦ To open a control page, click the Page or Subpage from the Viewer list, the Page / Subpage appears as a separate tab in the configuration panel.
- ♦ To see a thumbnail of the added control pages within a Viewer, click a Viewer from the list. This Viewer appears as a tab in the configuration panel. For example:

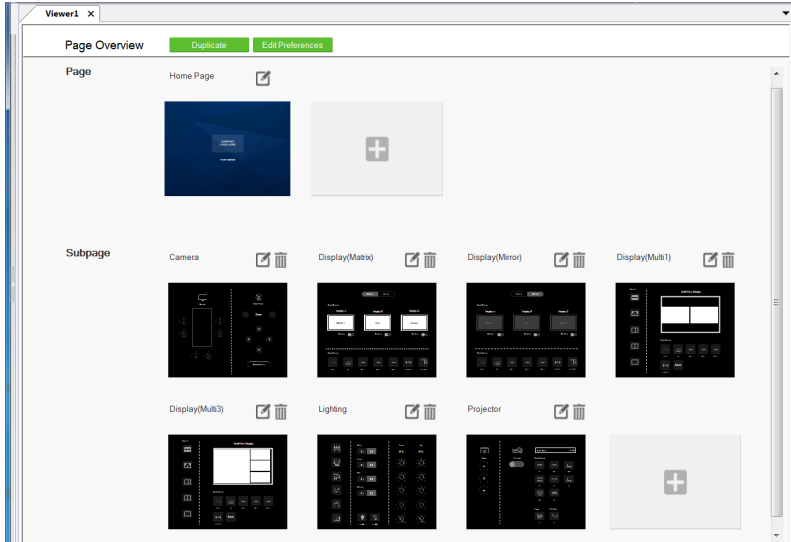

## 2 Monitor / Control List

The monitor / control list shows the functions and settings monitored or controlled by ATEN Unizon™, categorized by device type. For more information about remote management via ATEN Unizon™, see *Centralized Monitoring and Control via Unizon™*, page 242.

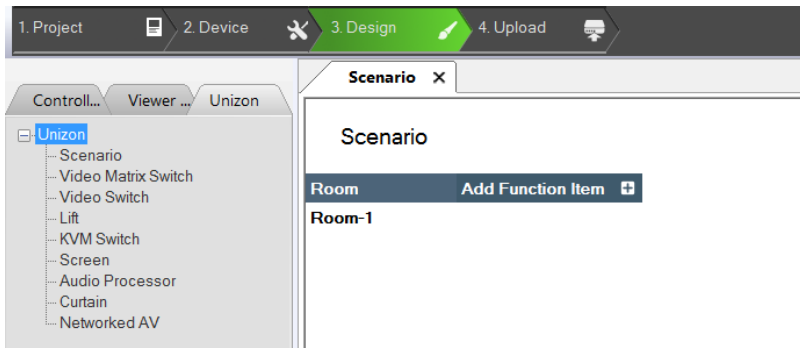



### 3 Configuration Panel

The configuration panel is where the Viewer overview and control pages open in tabs for configuration.


### 4 Library

The Library is a repository of built-in and user-created features and functions, including graphics (page 198), flags (page 201), monitoring events (page 203), macros (page 224), schedules (page 226), and variables (page 228). For an overview of these functions, see *Library*, page 197.

### 5 Simulator

Use the **Simulator** button to simulate the control elements on your Viewer (without actual effect on controller-managed devices). Use the mouse to click through the page links.

**Note:** To view how Subpages appear, click the iFrame of the Subpage and select the Subpage you want to preview for the Preview Subpage setting. Your configuration for the selected Subpage appears.

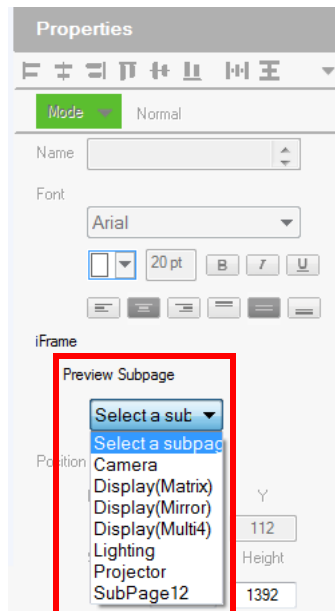


## Adding Viewers

### Deciding How Many & What Viewer to Create

#### Scenario 1


If you have 4 control devices in your project – one ATEN Control Pad, two ATEN Keypads (sharing identical key layout and control functions with each other, but different with the Control Pad), and an iPad, you will need to create 3 viewers, as illustrated on the right.

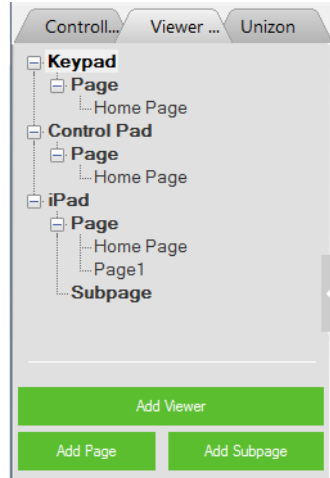

#### Scenario 2

If you have 3 control devices in your project – one ATEN Control Pad and two ATEN Keypads (sharing identical key layout and control functions with each other *and with the Control Pad*), you will need to:

- ♦ create one viewer for Control Pad
- ♦ enable the **Connect Keypad** setting and specify the associated Keypads. This way, the two Keypads will share the layout and control functions specified in this Viewer.

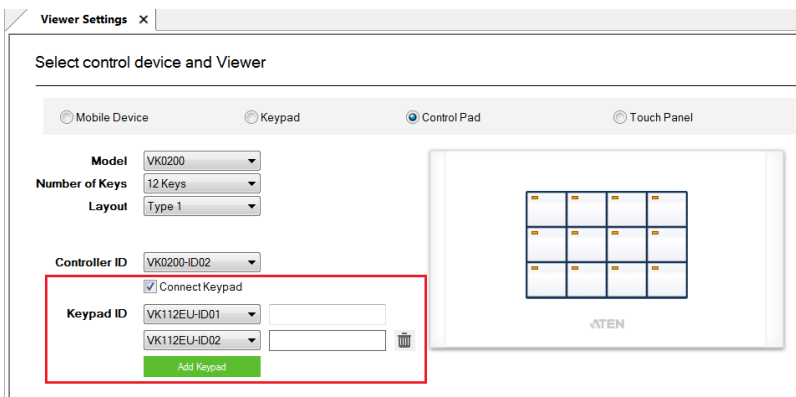

## Configuring a Viewer

1. In the target project file, go to the **Design** tab. The Viewer Settings page appears. If not, click **Add Viewer** from the Viewer List.
2. Select the physical device for the Viewer.

Viewer Settings X

Select control device and Viewer

☒ Mobile Device
 ☐ Keypad
 ☐ Control Pad
 ☐ Touch Panel

Type: iPad  
 Resolution: 2160 x 1620  
 Display Aspect Ratio: 4:3

Done

3. Configure the settings for your selected device.
  - ♦ Mobile Device

Setting	Description
Type	<p>Use this drop-down menu to select the mobile device that will be used to control hardware devices in a room. This sets the resolution for the Viewer to fit on the mobile device's screen. Choose a <b>Custom</b> selection to configure a screen size with the <i>Resolution</i> drop-down menu below it.</p> <p><b>Note:</b> If you select <i>Custom Windows Device</i> – the Windows OS has a limitation for adding buttons to Viewers used on Windows mobile devices. See <i>Windows OS Button Limitation</i>, page 373, for details.</p>
Orientation	<p>Select one of the following display orientation:</p> <ul style="list-style-type: none"> <li>♦ <b>Landscape:</b> A horizontal display where the width is greater than the height.</li> <li>♦ <b>Portrait:</b> A vertical display where the height is greater than the width.</li> </ul>
Resolution	<p>Use this drop-down menu to set a custom screen resolution for the mobile device being used to control hardware devices. This option becomes available when you select one of the <i>Custom</i> selections from the <b>Type</b> drop-down menu.</p>
Display Aspect Ratio	<p>Indicates the aspect ratio used for the selected device.</p>

◆ Keypad

Setting	Description
Model	Specify the Keypad model.
Number of Keys	Specify the total number of keys for your Keypad.
Layout	Specify the Keypad layout. This setting should match the physical Keypad layout (see page 58 for details). Depending on the total number of keys the Keypad has, you may have 1 or multiple options for this setting.
Controller ID	Select the ID number of the controller to which the Keypad will connect. This ID must match the controller ID set on the Keypad (see <i>Hardware Overview</i> , page 55).
Keypad ID	Select the Keypad, distinguished by its ID number to match the Keypad ID set on the Keypad (see page 62). Up to 8 Keypads can connect to one controller.
blank field (after Keypad ID)	For controller to connect to the Keypad through the Keypad's IP address, make sure the controller mode setting (in the <i>Project</i> tab) is set to <b>IP mode</b> , and type the IP address of the Keypad in this field.
Add Keypad	Click <b>Add Keypad</b> to add one or more Keypads that will connect to the same controller and share identical key layout and control functions.

◆ Control Pad


Setting	Description
Model	Specify the model for the Control Pad.
Number of Keys	Specify the total number of keys for your Control Pad.
Layout	Specify the layout for the Control Pad. This setting should match the physical layout (see page 58 for details). Depending on the total number of keys the Control Pad has, you may have 1 or multiple options for this setting.
Controller ID	Specify the ID of the Control Pad.
Connect Keypad	Select this option if the connected Keypad(s) share identical key layout and control functions with the Control Pad.
Keypad ID	Click the drop-down menu to specify the ID of the added Keypad.

Setting	Description
blank field (after Keypad ID)	(Optional) Type the IP address of the Keypad for the controller to identify and establish connection with. Use this feature when you have more than 16 Keypads in the project or when the network switch blocks multicast signals between the Keypad and the controller.
Add Keypad	Click this button to add Keypad that connects to this Control Pad and shares identical key layout and control functions.

◆ Touch Panel



Setting	Description
Type	Use this drop-down menu to select the Touch Panel that will be used to control hardware devices in a room.
Orientation	Select one of the following display orientation: <ul style="list-style-type: none"> <li>◆ <b>Landscape:</b> A horizontal display where the width is greater than the height.</li> <li>◆ <b>Portrait:</b> A vertical display where the height is greater than the width.</li> </ul>
Resolution	Indicates the screen resolution of the selected Touch Panel.
Display Aspect Ratio	Indicates the aspect ratio of the selected device.

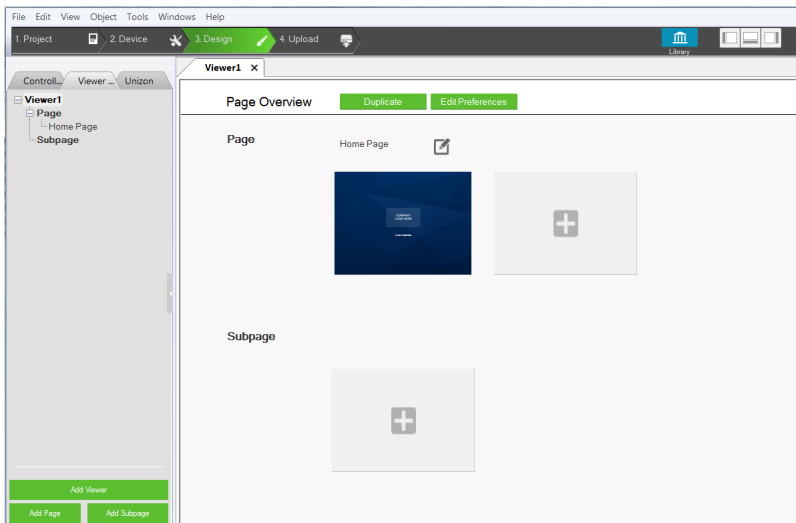
4. Click **Done** to save the configuration. An overview appears.




5. Add or remove the Pages / Subpages to your viewer as required.


## Adding / Removing a Page

- ♦ To add a Page to a viewer, click Add Page from the Viewer list or  from the viewer's Page Overview.
- ♦ To remove a Page, do any of the following.
  - ♦ In the viewer list, right-click the Page and select **Delete**.
  - ♦ In Page Overview, click  for the associated Page to be removed.

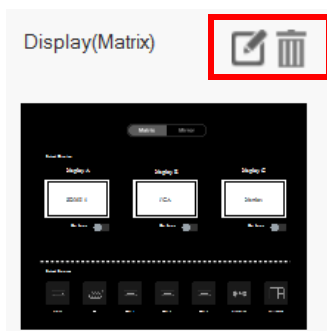


## Configuring a Subpage


1. Click the target viewer from the Viewer List, and then click  to add one or more Subpages to the selected viewer.
2. Make sure the Page contains an iFrame for displaying Subpage controls. If not, right-click within the Page and select **Add iFrame**. A green frame (iFrame) appears.

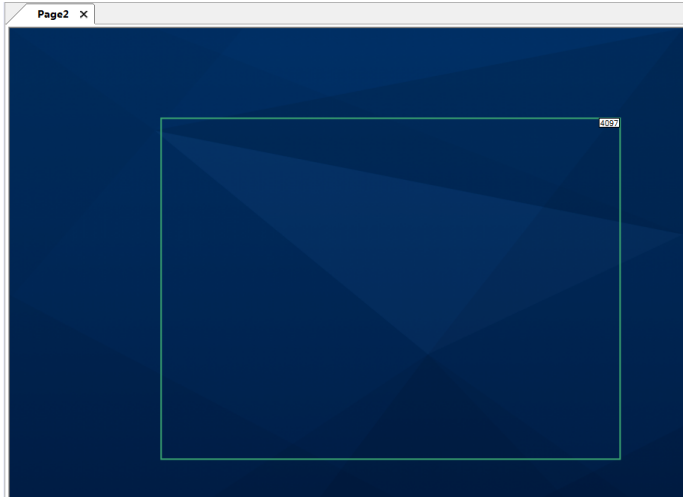

3. Preview a Subpage within the iFrame.
  - a) Click within the iFrame. The iFrame border turns blue.

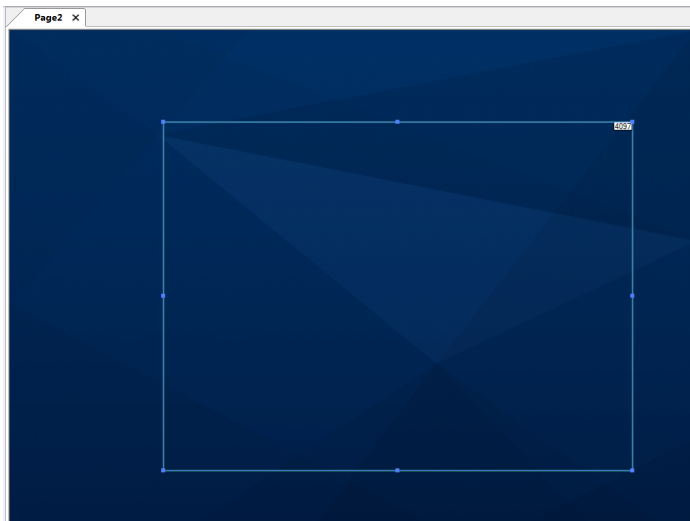

- b) Go to **Properties > Preview Subpage**, and select a Subpage that you have created. The Subpage appears in the selected iFrame.
4. Adjust the size and location of the iFrame.
  - ♦ To move the iFrame, mouse over within the iFrame and then click-and-drag the iFrame.
  - ♦ To resize the iFrame, click within the iFrame, and drag-and-drop the sides or any of the corners to resize.
5. If you have two or more Subpages sharing an iFrame, create a button for switching to each of the Subpages.
  - a) Right-click within the page and select **Add Button**.
  - b) Configure the button properties as required.
  - c) Click the button, click **Link Subpage**, and then double-click a Subpage from the Function column to add the action. For example:

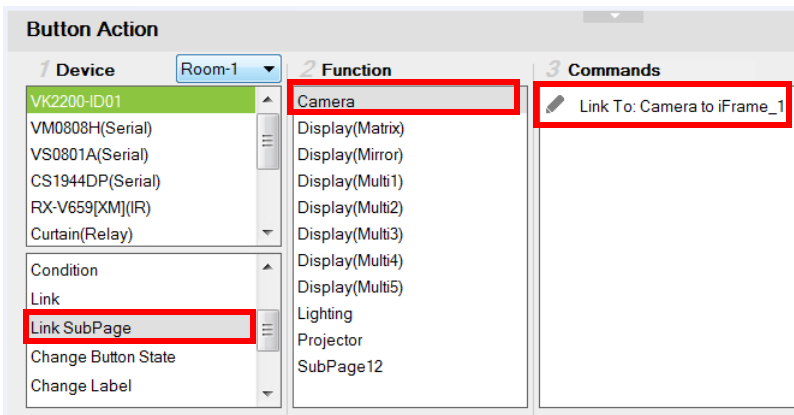


- d) Proceed to configure each button. Now the control page should contain buttons that switch to the defined Subpage.



For example:



6. If you wish to keep a set of controls on the Page and only have them shown when the iFrame is closed, follow the steps below to add and configure a button for this purpose.
  - a) Right-click within the page and select **Add Button**.
  - b) Configure the button properties as required.
  - c) Click the button in the preview area, and add a Link Subpage action of *any* Subpage.
  - d) Double-click the added command and select **Hide** and the iFrame to be hidden.

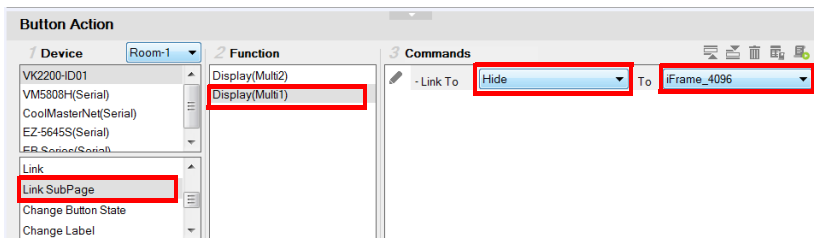

**Note:** The iFrame ID should match the ID indicated at the top-right corner of the iFrame in the preview area.

## Duplicating a Viewer

To duplicate the Viewer along with its Pages / Subpages, do the following.

1. Click the target viewer from the viewer list. The page overview appears.
2. Click Duplicate. The selected viewer is duplicated.

## Viewer Control Objects

### Understanding Control Objects

The ATEN control system supports a wide range of control objects, such as buttons, slider bars, videos, and PowerPoint controls that you can use and customize.


Each button has a symbol in the top left corner to indicate:

- ♦ “A” the button’s actions are configured correctly.
  - ♦ “!” the button’s actions need to be modified or they will not work.
  - ♦ Buttons with no symbol indicate that functions have not been added to it.
- For details on adding functions, see *Button / Slider Bar / Dial Kit Actions*, page 171.




Each object is identified by an ID at the top right corner. These IDs are assigned in the order of creation. These IDs help identify a label when configuring a **Change Label** (page 191) or a button when configuring a **Change Button State** (page 190).

## Configuring Control Objects

1. Use one of the following methods to open the Page you wish to configure.
  - ◆ Click the Page from the Viewer List.
  - ◆ Click its associated Viewer from the Viewer List to open the Page overview and then click  to open the Page.

The Page opens in a tab. For example:

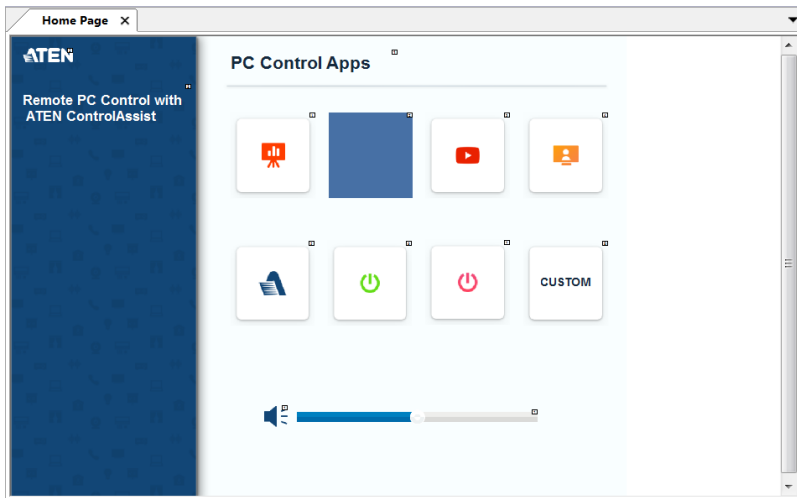


2. To add a control object, right-click any space in the Page, and select an object from the pop-up menu.


---


### Note:

- ◆ For detailed information of each object type, see *Control Object Properties*, page 147.
  - ◆ The Windows OS has a limitation when adding buttons to Viewer pages for use on Windows mobile devices. See *Windows OS Button Limitation*, page 373, for details.
-

3. Click on the added object to configure its settings and/or associated actions.

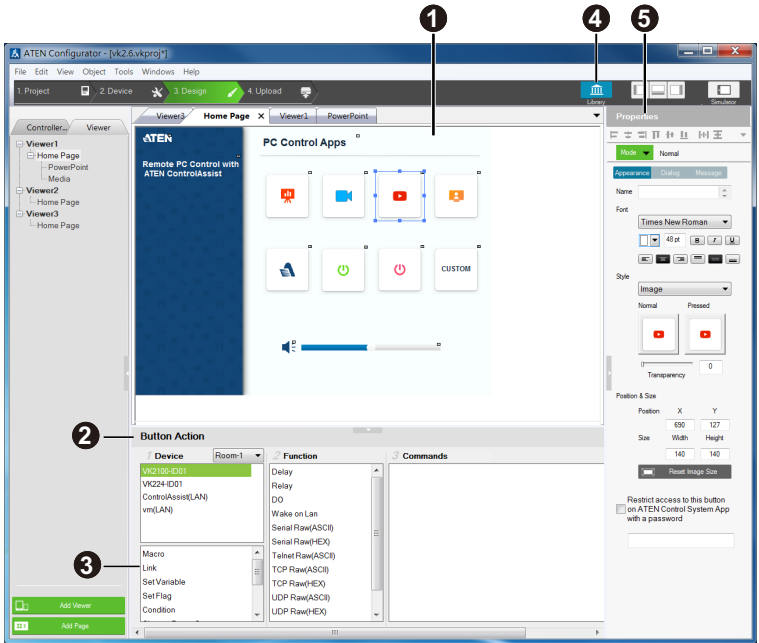

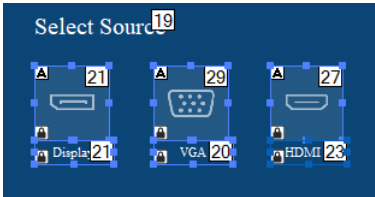No.	Element	Tasks
1	Configuration panel	<p>Shows a preview of the selected Page. You can also do the following on the preview panel:</p> <ul style="list-style-type: none"> <li>◆ To zoom in and out on the preview, scroll the mouse wheel.</li> <li>◆ To relocate an object, drag-and-drop the object.</li> <li>◆ To layer an object, right-click the object and set the Order options.</li> <li>◆ To group multiple objects, drag the mouse to select the objects, right-click on any of the objects and select <b>Group</b>.</li> <li>◆ To align object, drag the mouse to select the objects, right-click on any of the objects and select <b>Align</b>.</li> <li>◆ To lock objects to their assigned locations, drag the mouse to select objects, right-click on any of the selected objects, and then select <b>Lock</b>. A lock icon appears in the bottom-left corner of each selected object.</li> </ul>  <p><b>Note:</b> To unlock objects, right-click on <b>one object at a time</b>, and select <b>unlock</b>.</p> <ul style="list-style-type: none"> <li>◆ To set objects in perfect alignment, use the View menu options to select <b>Show Grid</b> and <b>Align to Grid</b>.</li> </ul>
2	Button Action or Slider Bar Action	<p>Use this panel to define the functions of each button and slider bar. For detailed information, see <i>Button / Slider Bar / Dial Kit Actions</i>, page 171.</p>

No.	Element	Tasks
3	Advanced functions	<ul style="list-style-type: none"> <li>♦ To add additional conditions and actions to buttons, use the Flag function. For more information, see <i>Flag</i>, page 201.</li> <li>♦ For a button to initiate a sequence of actions, create a Macro. For more information, see <i>Macro</i>, page 224.</li> </ul>
4	<b>Library</b> 	Use Library to customize the appearance of the page and its buttons. For more information, see <i>Library</i> , page 126.
5	Properties panel	<p>Use the panel to configure selected object properties. For detailed information about object properties, refer to the following sections:</p> <ul style="list-style-type: none"> <li>♦ <i>Note: The iFrame ID should match the ID indicated at the top-right corner of the iFrame in the preview area.</i>, page 141</li> <li>♦ <i>Object Properties for ATEN Keypad / Control Pad</i>, page 168</li> </ul>

## Control Object Properties

### Buttons

The *Button* properties provide options to configure the appearance of a button, and the confirmation message and progress message before carrying out the associated action.

**Properties**

Mode ▼ Normal

Appearance Dialog Message

Name

Font



Times New Roman ▼

48 pt **B** *I* U

Style

Image ▼

Normal Press


0

Transparency

Position & Size

Position	X	Y
	366	127

Size	Width	Height
	140	140

 Reset Image Size

- ♦ **Alignment** – Aligns a group of objects. Select multiple objects for the buttons to become available:



- ♦ **Mode**

Use this drop-down menu to select one of the following button types.

- ♦ **Normal** – This is a button that stays the same when pressed.
- ♦ **Toggle** – for a button that switches between two images/colors to indicate the button status. This also splits the Commands list under **Button Action** (page 171) – to provide two commands for the button: Toggle ON and Toggle OFF.
- ♦ **Press and Release** – for a button that switches between two images/ colors when pressed and released. This splits the Commands list under **Button Action** (page 171) to provide two commands for the button: Press and Release.
- ♦ **Long Press** for a button that switches between two images/colors when pressed and released. This button continuously re-sends a command to a device as long as it is pressed, at the **Interval** specified (see *Interval*, below) and stops sending the command once the button is released.

---

**Note:** Use the **Normal** or **Long Press** option to set the image/color of the button based on its status.

---

- ♦ **Appearance**

Click the **Appearance** tab to configure the look of the button.

**Note:** The Appearance settings are applicable to all button modes. However, the **Appearance** tab only exists for Normal and Toggle buttons to categorize different sets of settings.

- ♦ **Name** – (optional) type the text you want to use for the button (or slow double-click the button on the Viewer page).
- ♦ **Font** – use the drop-down menu to select the font type.
  - ♦ **Color** – use the drop-down menu to change the color of the text.
  - ♦ **Size** – enter a number (1-200) to set the size of the text for the button.
  - ♦ **Format** – formats text to *Bold*, *Italic* or *Underline* for the button.



- ♦ **Alignment** – click a box to align the text Right, Center or Left; and Top, Middle or Bottom within the button box.
- ♦ **Style** – use the drop-down menu to select the style type.
  - ♦ **Image** – Select this option from the drop-down menu and click **Normal** and **Pressed** to import an image to use as the button's standard background and when the button is pressed.
  - ♦ **Color** – Select this option from the drop-down menu to use color blocks for the toggle button and configure the colors for the normal and pressed status.
  - ♦ **Transparency** – enter a number (0-100) or use the slider-bar to set the transparency of the button.
- ♦ **Send Command Every** (Long Press mode buttons only) – use the drop-down menu to select the amount of time between each command that is sent (repeatedly) to the device while the button is pressed.
- ♦ **Position and Size** – *X* and *Y* position the button at the coordinates entered. *Width* and *Height* set the size of the button box. Click **Reset Image Size** to reset the button size.
  - ♦ **Reset Image Size** – click to reset the button size.
  - ♦ **Set Sync Condition** – automatically synchronizes the button setting to the selected variable. To create variables, see *Variables*, page 228.
- ♦ **Use as status indicator** Select this option to disable the control functioning of the toggle button and use it as a status indicator, which changes its appearance as defined by the Style settings.
- ♦ **Drag-and-drop** – (only applicable to Normal type buttons) Allows drag-and-drop actions such as source assignment to output devices.
- ♦ **Execute first** (only applicable to normal-mode buttons) – Select this option for the button to automatically initiate its actions (commands) when its located page opens.
- ♦ **Restrict access to this button on ATEN Control System App with a password**– Limit the use of the selected button by requesting a password when the button is tapped in the Viewer. To enable this function, click this option and type the password in the box below.

**Note:**

- ♦ This function is only supported by the Normal and Toggle mode buttons (page 148).

- ♦ A valid password should not start or end with a space and should only contain upper-case alphabets, lower-case alphabets, numerals, and/or special characters including ()~:-\_

#### ♦ **Dialog**

Click the **Dialog** tab to set up a confirmation message that displays in the Viewer when the button is pressed.

**Note:** The Dialog settings are only available for Normal and Toggle buttons.

- ♦ **Confirm the associated action with the following message when the button is pressed** – Click the check box to enable this feature.
- ♦ **Action** – Select a button action (**Toggle On** or **Toggle Off**) to display the confirmation message.
- ♦ Content drop-down list – Select one of the following for customization.
  - ♦ **Background** – Customize the wording for the confirmation message. Type the message in the **Name** field and optionally customize its font and style.
  - ♦ **OK** – Customize the wording on the button for carrying out the associated action. Type in the **Name** field and optionally customize its font and style.
  - ♦ **Cancel** – Customize the wording on the button for canceling the associated action. Type in the **Name** field and optionally customize its font and style.

#### ♦ **Message**

Click the **Message** tab to set up a progress message that displays while the associated action is being carried out.


**Note:** The Message settings are only available for Normal and Toggle buttons.

- ♦ **Confirm the associated action with the following message when the button is pressed** – Click the check box to enable this feature.
- ♦ **Action** – Select a button action (**Toggle On** or **Toggle Off**) for displaying the progress message.
- ♦ Content drop-down list – Select one of the following for customization.
  - ♦ **Background** – Configure the wording for the progress message. Type the message in the **Name** field and optionally customize its font and style.
  - ♦ **Progress Bar** – Configure the display duration (in seconds), font, and color of the progress indicator.

## Groups

You can unify the properties of two or more control objects (buttons, slider bars, etc.) at the same time. Depending on the elements that your group of objects have, different properties will be open for configuration. Use your mouse to drag and select the objects from a page, the properties that are open for configuration appear in the Properties column.

For example, if you want to unify the text that appear on multiple buttons, drag and select these buttons and then configure their properties, as illustrated below.

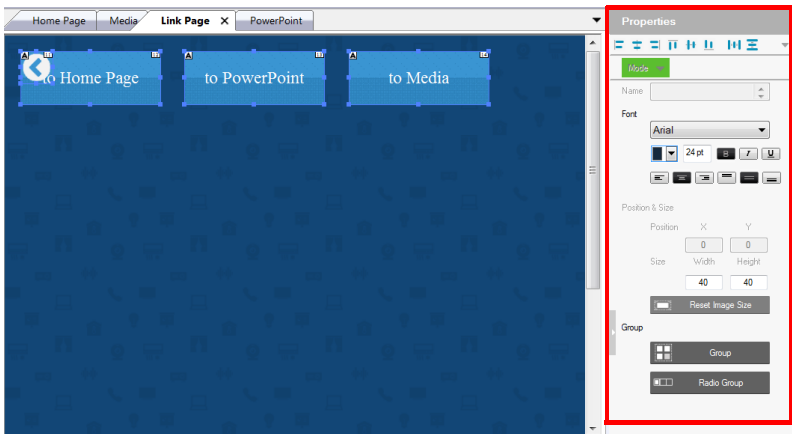

## Labels

The screenshot shows the 'Properties' panel for a 'Label' object. The 'Name' field is set to 'Label'. The 'Font' section shows 'Times New Roman' as the font, '51 pt' as the size, and buttons for Bold (B), Italic (I), and Underline (U). The 'Style' section has a dropdown set to 'Image' and a 'Border/Line' section with a color and width selector. The 'Position & Size' section shows X: 114, Y: 498, Width: 422, and Height: 105. At the bottom, there are buttons for 'Reset Image Size' and 'Set Sync Condition'.

The *Label* properties provide settings for the displayed text and its format.

♦ **Alignment** – Aligns a group of objects. Select multiple objects for the buttons to become available:



♦ **Name** – enter the text you want to use for the label or slow double-click the label on the **Edit** page.

♦ **Font** – use the drop-down menu to select the font type.

♦ **Color** – use the drop-down menu to change the color of the text.

♦ **Size** – enter a number (1-200) to set the size of the text.

♦ **Format**– format text to *Bold*, *Italic* or *Underline*.

♦ **Alignment** – click a box to align the text Right, Center or Left; and Top, Middle or Bottom within the label box.

♦ **Border/Line** – select this option to configure the color, format, and width of the display screen border.

- ♦ **Position and Size** – *X* and *Y* position the label at the coordinates entered. *Width* and *Height* set the size of the label.
- ♦ **Set Sync Condition** – Displays the value of the selected variable in percentage or its raw form. To create variables, see *Variables*, page 228.

## Slider Bars

The screenshot shows the 'Properties' window for a 'Basic Slider Bar'. The 'Mode' dropdown is set to 'Basic Slider Bar'. The 'Name' field is empty. The 'Font' is set to 'Arial' in '21 pt' with bold, italic, and underline options. The 'Direction' is set to 'Horizontal' (radio button selected). The 'Style' dropdown is set to 'Color'. The 'Foreground Color' and 'Background Color' are both set to blue. The 'Knob' is a circular slider knob. The 'Value' section has 'ASCII' selected (radio button), with 'Minimum' set to 0 and 'Maximum' set to 10. The 'Level' is set to 11. A note states: 'The change value will be averaged by calculating: (Maximum Value - Minimum Value) / Levels'. The 'Position & Size' section shows 'Position' with X=465 and Y=380, and 'Size' with Width=844 and Height=53. There are buttons for 'Reset Image Size' and 'Set Sync Condition'.

Right click on a Viewer page and select **Slider Bar** to add a bar. A Slider Bar can control a device, link to another page, or run a macro.

Use the **Mode** drop-down menu to select the type of slider bar (**Basic Slider Bar** or **Advanced Slider Bar**).

### Basic Slider Bar

♦ A slider bar where you enter the minimum and maximum values to calculate the range and levels on a slider bar, and then add one command to configure the Basic Slider Bar's action (See *Slider Value*, page 177). Choose options under **Value** to configure the slider bar's range.

♦ **Direction** – sets the bearing of the slider bar.

♦ **Style:**

To change the color of the slider bar, click the Style drop-down menu and select **Color**, and then click the Foreground Color and Background Color drop-down menus to set up the colors.

To change the appearance of the slider bar, click the Style drop-down menu and select **Image**. And then click on the Track and Level images to browse and upload new images.

♦ **Value** – Sets the total number of levels for the slider bar.

♦ **ASCII / HEX** – click a radio button to select the format for the slider bar values.

♦ **Minimum** – enter the lowest level on the bar.

♦ **Maximum** – enter the highest level on the bar.

- ♦ **Level** – this represents the number of levels on the slider bar. You can calculate the value of each level with the formula: **Maximum Value - Minimum Value / Level = Value Per Level**. The *Level* is automatically calculated according to the Minimum and Maximum values you enter.
- ♦ **Position and Size** – depending on whether the bar is set Vertical or Horizontal you can use either the *Size*: Width or Height box to enter a number to resize the length of the slider bar.
- ♦ **Set Sync Condition** – Automatically synchronizes the slider bar to the selected variable. To create a variable, see *Variables*, page 228.

### Advanced Slider Bar

- ♦ A slider bar where you set the number of levels and add a command for each level in the bar (see *Level*, in the table, on page 171). Choose options under **Value** to configure the slider bar's range:
- ♦ **Direction** – sets the bearing of the slider bar.
- ♦ **Style** – click the drop-down menus to select the Foreground Color and Background Color for the slider bar.
- ♦ **Value** – Sets the total number of levels for the slider bar. *Level* – this represents the number of levels on the slider bar. For each level you must add a separate command in the **Slider Bar Action – Commands** list (see *Level*, in the table, on page 171).

## PowerPoint Control and Media Control Templates

The screenshot shows the 'Properties' window for a control template. It includes a toolbar with various icons, a 'Mode' dropdown set to 'Normal', and a 'Name' field. The 'Font' section shows 'Arial' selected with a size of '10 pt' and buttons for bold, italic, and underline. The 'Style' section has an 'Image' dropdown. Below this are two preview boxes labeled 'Normal' and 'Press', a transparency slider, and a '0' button. The 'Position & Size' section contains input fields for X (441), Y (15), Width (216), and Height (166), along with a 'Reset Image Size' button. At the bottom, the 'Select Device' dropdown is set to 'ControlAssist'.

**Properties**

Mode: Normal

Name:

Font: Arial, 10 pt, B, I, U

Style: Image

Normal Press

Transparency:

**Position & Size**

Position	X	Y
	441	15

Size	Width	Height
	216	166

Reset Image Size

Select Device: ControlAssist

Click a PowerPoint control template or a media control template to configure its position, size, and the PC that controls it.

♦ **Position and Size** – *X* and *Y* position the label at the coordinates entered. *Width* and *Height* set the size of the label.

♦ **Select Device** – Select the PC that stores the PowerPoint or media files using the drop-down list.

## Images

The **Properties** for an image provide options to change and import images to the page. Images can be layered with other objects so that they can be placed as a background or as highlights for buttons (see *Layering Images*, page 157). You can **Group**, **Order**, **Align**, **Make Same Size** or **Space Evenly** from the *Object* menu.

**Note:** For imported images, make sure the file names contain English alphabets and/or numerals only.

The screenshot shows the 'Properties' panel for an image object. At the top, there are icons for various object manipulations. Below these, the 'Mode' is set to 'Normal'. The 'Name' field is empty. The 'Font' is set to 'Arial' with a size of '20 pt'. There are buttons for bold (B), italic (I), and underline (U). The 'Style' is set to 'Image'. Below this, there are two preview boxes: 'Normal' showing a colorful abstract image and 'Pressed' showing a gray box. A 'Transparency' slider is set to 0. The 'Position & Size' section shows the 'Position' with X=394 and Y=290, and 'Size' with Width=304 and Height=281. A 'Reset Image Size' button is at the bottom.

♦ **Style** – shows the image selected. Click inside the box to import an image (\*.png, \*.jpg, \*.jpeg, \*.bmp) to the page.

♦ **Transparency** – enter a number (0-100) or use the slider-bar to set the transparency of the image selected.


♦ **Position and Size** – *X* and *Y* position the image at the coordinates entered. *Width* and *Height* set the size of the image.

♦ **Reset Image Size** – resets the image size.



## Layering Images

Images can be layered with other objects, such as labels and buttons, so that they can be placed as a background or as highlight for the page and/or other objects.

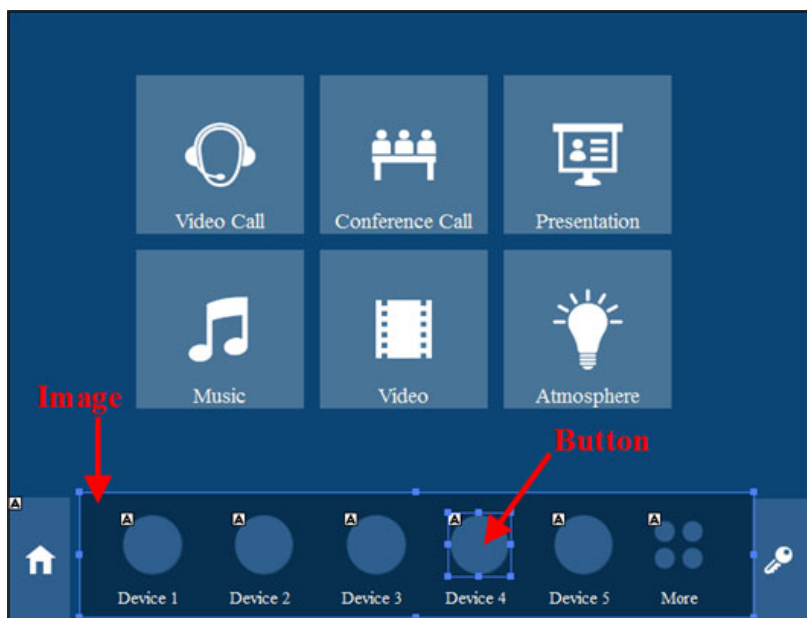

## Videos

A video object is a control used for video preview, video assignment on managed displays, or video streaming by RTSP. For more details of each, see the corresponding section below:

- ♦ **Video previews:** See *Setting Up a Video Preview Window*, page 158.
- ♦ **Video assignment:** See *Setting Up a Video Control Window*, page 158.
- ♦ **Video streaming:** See *Setting Up a Video Streaming Window*, page 161.

### *Setting Up a Video Preview Window*


You can set up video preview windows to view video sources from ONVIF-compliant cameras managed by the controller.

1. In your project file, make sure you have added ONVIF-compliant cameras as Ethernet devices in the Device List.
2. Right-click a viewer page and select **Add Video**.
3. Click the added video object and configure the following properties.
  - ♦ **Mode:** Select **ONVIF**.
  - ♦ **Position & Size:** Configure these settings as required.
  - ♦ **Select Device:** Select the added ONVIF-compliant camera.

### *Setting Up a Video Control Window*

Video control windows are objects on the Viewer which allow you to see previews of video sources (on a source object) or the assigned video sources (on a display object), and to switch video sources by tapping or dragging and dropping actions from the Viewer. Note that video control window is only applicable to ATEN networked video extenders.

For example, the following Viewer contains 8 video control objects, the top 3 are video source objects, each show a preview of its connected video source, and the bottom 5 are display objects, each showing its assigned video source.

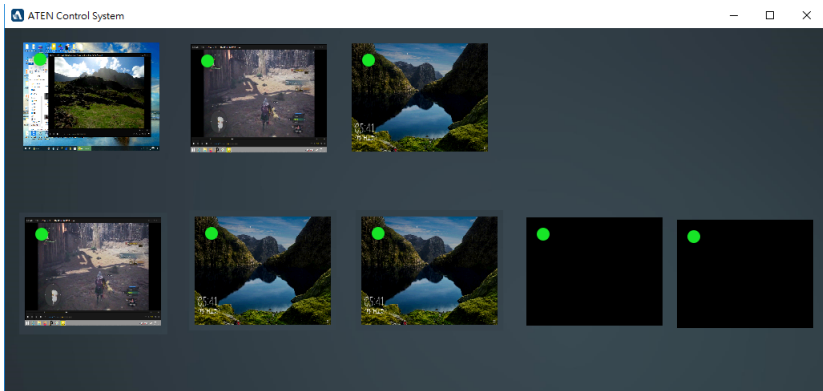

To switch a video source on a display, tap a source object and then tap a display object. The switch takes effect immediately. Alternatively, you can drag-and-drop a source object onto a display object if you have this control action enabled.

To set up a video control object, follow the steps below.

1. In Configurator, you are advised to add at least one **video transmitter** as Ethernet device (to the Device List) for every 4 video control objects to use the as a gateway to obtain previews.

**Important:**


- ◆ Videos can only be transmitted via video transmitters to the controller.
  - ◆ To ensure preview quality:
    - ◆ Add at least one video transmitter (to the Device List) for every 4 video control objects. Adding more video control objects will likely reduce the refresh rate and smoothness of the preview.
    - ◆ Avoid concurrent viewing from more than one user via the Control System App.
    - ◆ Use the VE89 control app to preview video walls.
  - ◆ To ensure stable preview delivery, it is recommended to use the windows version of the Control System App for prolonged viewing or monitoring. Prolonged viewing on iOS platforms may result in automatic termination of the process due to the platform's protection mechanism to ensure its normal functioning.
2. Right-click a Viewer page and select **Add Video**.
  3. Click the added object and configure its properties.
    - ◆ **Mode:** Select **VE89 Series**.

- ♦ **Position & Size:** Configure these fields as required.
- ♦ **Select Device:** Select a video transmitter as the gateway for obtaining a preview of what is displayed on the specified extender (as configured for **Port** and **ID**).  
**Important:** Only connect up to 4 control objects to one device.
- ♦ **Port:** Select the device type. Select **Transmitter** for a source object and **Receiver** for a display object,
- ♦ **ID:** Type the device ID for the specific transmitter or receiver. **Allow drag-and-drop:** Select this option to allow drag-and-drop controls.


4. Click the added object and configure the action.

For example:

(a) Create a variable to store the video source on a source object.

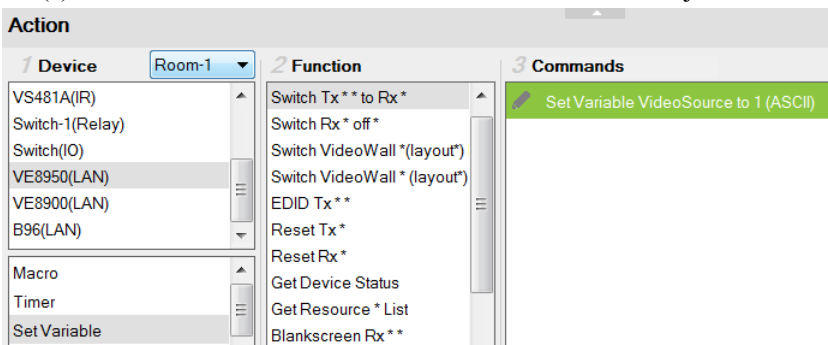

(b) Add the switching action on a display object.

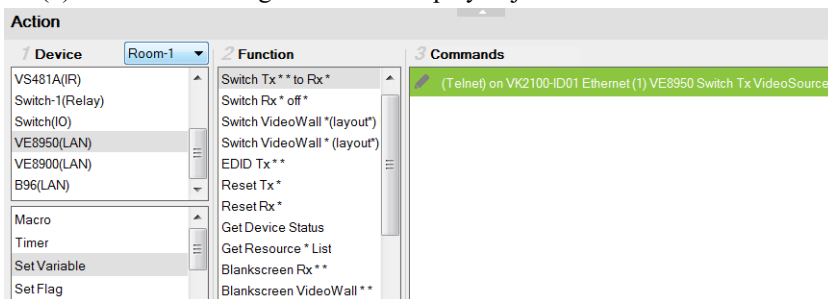

For more information about creating actions, see *Button / Slider Bar / Dial Kit Actions*, page 171.

---

**Note:** To ensure smoothness of video transmission, prevent accessing this Viewer page from two or more devices at the same time.

---


### *Setting Up a Video Streaming Window*

You can set up a window to stream video content via RTSP.

1. In your project file, make sure you have added an RTSP-compliant device and configured the **Stream** settings.
2. In a Viewer page, right-click in the blank space and select **Add Video**.
3. Click the added video object, and configure its properties as follows.
  - ♦ **Mode:** Select **RTSP**.
  - ♦ **Position & Size:** (Optional) Specify the position and size as required. Alternatively, drag any of the object corners for resizing; mouse over the object to drag-and-drop it to reposition within the Viewer page.
  - ♦ **Select Device:** Select the added Ethernet device.
  - ♦ **RTSP Settings**
    - ♦ **Default:** Select this option to use the typical format for the RTSP URL (**rtsp://username: password@ip:port**). Type the RTSP URL of the device in the blank below.
    - ♦ **Custom:** Select this option to use a different RTSP URL format. Type the URL in the blank below.

## Dial Kit

A dial kit template consists of a display screen and a set of dial keys. To configure their appearance, click on the display area or a key.

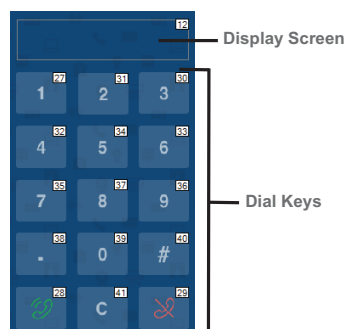

### Properties for Display Screen

**Properties**

Mode Mode

Font

Arial

51 pt

B I U

Style

Image

Border/Li ☒  

Width 2

Position & Size

Position	X	Y
	1120	360

Size	Width	Height
	486	117

### Properties for Dial Key

**Properties**

Mode Mode

Name  

Font

Arial

74 pt

B I U

Style

Image

Normal Pressed

3 3

Transparency 0

Position & Size

Position	X	Y
	1465	511

Size	Width	Height
	141	116

- ♦ **Font** – use the drop-down menu to select the font for the typed text.
  - ♦ **Color** – use the drop-down menu to change the color of the text.
  - ♦ **Size** – enter a number (1-200) to set the size of the text for the button.
  - ♦ **Format** – formats text to *Bold*, *Italic* or *Underline* for the button.
  - ♦ **Alignment** – click a box to align the text Right, Center or Left; and Top, Middle or Bottom within the button box.
- ♦ **Style** – use the drop-down menu to select the style type.


 
---

**Note:** The **image** and **color** settings are only applicable to dial keys.

---

- ♦ **Image** – select this option to import different images for the dial key when it is pressed and not pressed (normal).
  - ♦ **Transparency**– enter a number (0-100) or use the slider-bar to set the transparency of the button.
- ♦ **Color** – select this option to use different color blocks to indicate a pressed and a normal dial key.
- ♦ **Border/Line** – select this option to configure the color, format, and width of the display screen border.
- ♦ **Position and Size** – *X* and *Y* position the button at the coordinates entered. *Width* and *Height* set the size of the button box. Click **Reset Image Size** to reset the button size.

---

**Note:** If you are using the **Call**  and **End Call**  dials, click the dial key to configure its action. For a detailed procedure, see *Example: Configuring actions of dial keys.*, **page 178**.

---


## QR Code

Use a QR code object to provide quick access to web resources.

1. On a viewer page, right-click in any blank space, and then select **Add QR code**. A QR code object appears, encircled in blue.



2. From the settings panel, configure the properties as needed.

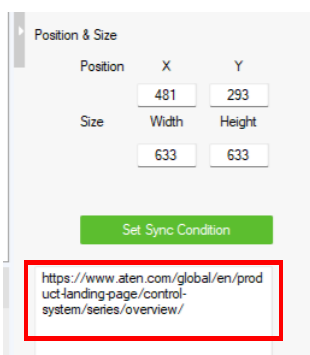


◆ **Position and Size** – X and Y position the object at the coordinates entered. *Width* and *Height* set the size of the QR code.

◆ **Set Sync Condition** – Automatically synchronizes the QR code to the selected variable. To create a variable, see *Variables*, page 228.

◆ Enter the URL of the QR code to the blank space, as indicated in the screenshot.

3. To adjust the size, hold-and-drag on any spare icon on the blue frame. For example:

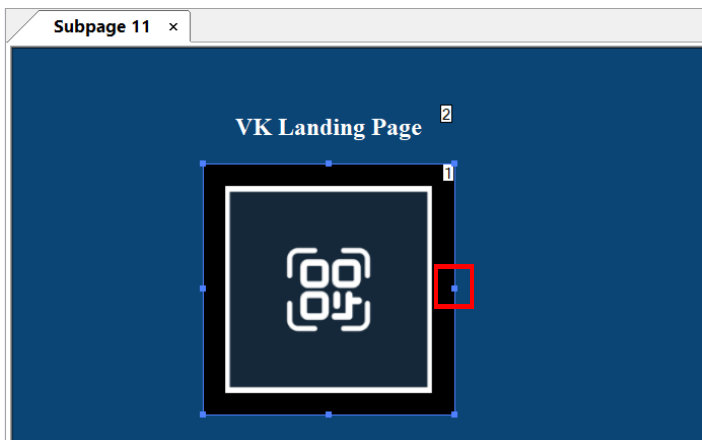



## Webview

A webview object allows you to embed a web page to Control System Viewers, such as a web console of an ATEN device, making it easy to integrate control interfaces without configuring control functions from scratch.

For example, you can embed a mixer web console to Control System Viewer, as shown below.



To add a web view object:

1. On a viewer page, right-click in any blank space, and then select **Add Webview**. A webview object appears, encircled with a blue frame.
2. Configure its properties as needed.

**Position & Size**


Position	X	Y
	7	11
Size	Width	Height
	1734	1369

<https://10.3.43.101/?username=administrator&password=123456>

◆ **Position and Size** – X and Y position the object at the coordinates entered. *Width* and *Height* set the size of the webview object.

◆ Enter the URL of the web page to the blank space, as indicated in the screenshot.

3. To adjust the size, hold-and-drag on any spare icon on the blue frame.  
For example:

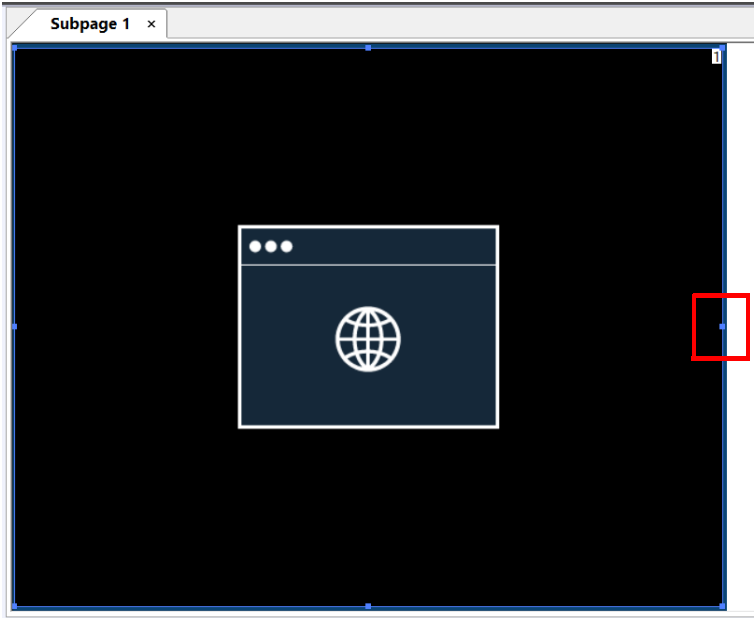

## Frame & Line

Use frames and lines to visually group or separate control objects in your Viewer. Click a frame or line object to configure its properties.

### Frame Properties

**Properties**

**Mode**

Name

Font

**Style**

**Round Corner**

☐

**Transparency**

☐

**Border/Li** ☒

**Position & Size**

Position   
X  Y

Size   
Width  Height

### Line Properties

**Properties**

**Mode**

Name

Font

**Style**

**Round Corner**

☐

**Transparency**

☐

**Border/Li** ☒

**Position & Size**

Position   
X  Y

Size   
Width  Height

- ◆ **Style** – configure the color, format, and width of the line or border of the frame.
- ◆ **Rounder corner** – use the scroll bar or the number box to configure the roundness of the frame corner.
- ◆ **Fill** – select this option to fill the frame with the selected color.
- ◆ **Position and Size** – *X* and *Y* position the frame/line at the coordinates entered. *Width* and *Height* set the size of the frame/line.

## Object Properties for ATEN Keypad / Control Pad

After you have added a Viewer (page 134) for your Keypad / Control, you can start configuring the Viewer. In the Viewer page, click on a button to configure its settings. The following settings appear in the Properties panel.

Properties

Mode Normal

Name

Font

Times New Roman

40 pt

B

I

U

Style

Image

Normal

Pressed

0

Transparency

Send Command After Holding

0.0

Seconds

Position & Size

Position

X

Y

404

286

Size

Width

Height

204

184

Reset Image Size

- ♦ **Mode**

Use this drop-down menu to select one of the following button types.

- ♦ **Normal** – This is a button that stays the same when pressed.
- ♦ **Toggle** – for a button that switches between two images/colors to indicate the button status. This also splits the Commands list under **Button Action** (page 171) – to provide two commands for the button: Toggle ON and Toggle OFF.
- ♦ **Press and Release** – for a button that switches between two images/colors when pressed and released. This splits the Commands list under **Button Action** (page 171) to provide two commands for the button: Press and Release.
- ♦ **Long Press** for a button that switches between two images/colors when pressed and released. This button continuously re-sends a command to a device as long as it is pressed, at the **Interval** specified (see *Interval*, below) and stops sending the command once the button is released.

---

**Note:** Use the **Normal** or **Long Press** option to set the image/color of the button based on its status.

---


- ♦ **Name** – (optional) type the text you want to use for the button (or slow double-click the button on the Viewer page).
- ♦ **Font** – use the drop-down menu to select the font type.
  - ♦ **Color** – use the drop-down menu to change the color of the text.
  - ♦ **Size** – enter a number (1-200) to set the size of the text for the button.
  - ♦ **Format** – formats text to *Bold*, *Italic* or *Underline* for the button.
  - ♦ **Alignment** – click a box to align the text Right, Center or Left; and Top, Middle or Bottom within the button box.
- ♦ **Style** – use the drop-down menu to select the style type.
  - ♦ **Image** – imports an image to use as the button's standard background and click *Pressed* to import an image to use when the button is pressed.
  - ♦ **Color** – allows you to use drop-down menus to select the buttons color for Normal and Pressed.
  - ♦ **Transparency** – enter a number (0-100) or use the slider-bar to set the transparency of the button.
- ♦ **Send Command After Holding** – Sets the required time for holding the button to apply the action for which the button is configured.

- ♦ **Position and Size** – *X* and *Y* position the button at the coordinates entered. *Width* and *Height* set the size of the button box.
- ♦ **Set Sync Condition** – Automatically synchronizes the button to the selected variable. To create a variable, see *Variables*, **page 228**. This option is only available for toggle buttons.

## Button / Slider Bar / Dial Kit Actions




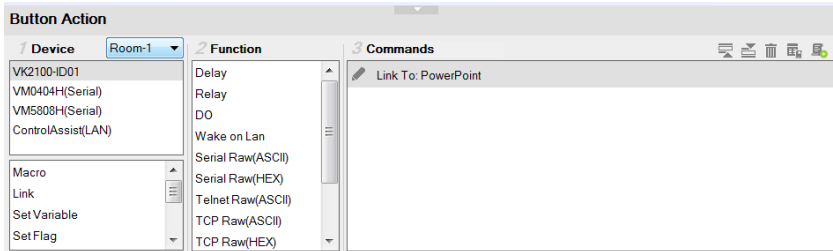

### Understanding Button/Slider Bar/Dial Kit Actions

After you have added a button, slider bar, or a dial kit on your Viewer, define the actions it initiates using the Button/Slider Bar Actions panel. To access the panel, click on a button, slider bar, or dial key in the Viewer. The Button/Slider Bar Action panel appears.

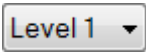

The Button/Slider Bar Actions panel consists of the following elements:

Setting	Description
Device	Lists the added devices and the advanced functions.
Room	<p>Select the room that contains the devices the Viewer will control. Use this drop-down menu to select rooms in the KNX system and display KNX devices. The Viewer will only upload to a controller configured with the same Room name (see <i>Left Sidebar</i>, page 109). Select <b>All Rooms</b> to allow the Viewer to control all rooms. Selecting All Rooms will upload the Viewer to all controllers.</p> <p>The Accessible Room defines what <b>Devices</b> are available to configure new <b>Actions</b> in Button/Slider Bar Properties (see page 171). Only <i>Devices</i> listed under the same <i>Room</i> (see page 109) as the Viewer's Accessible Room will be listed for use in Button/Slider Bar Properties.</p>
Function	Lists the supported functions for your chosen device or advanced option. Double-click a function to add it to the Command List, which shows a sequence of tasks to be executed when specified conditions are met for the button, slider bar, or dial key. For details on functions, see <i>Functions</i> , page 174.

Setting	Description
Commands	Lists the commands that initiate when the button or dial key is pressed. <i>Device</i> and <i>Advanced Option</i> functions can be added and associated in the Commands list together. Commands initiate in the order that they are added to the list. Right-click in the Commands list to use the menu selections: <i>Move Up</i> , <i>Move Down</i> , <i>Copy</i> , <i>Paste</i> , <i>Delete</i> , <i>Save as Macro</i> , or <i>Test Tool</i> .
Toggle ON / Toggle OFF or Press / Release	When the Button <b>Mode</b> (page 148) is set to <i>Toggle</i> or <i>Press and Release</i> , the <i>Commands</i> list splits to set the two c commands:  <b>Toggle ON / Press</b> – lists the commands that initiate when the button is first pressed or pressed and held.  <b>Toggle OFF / Release</b> – lists the commands that initiate when the button is pressed a second time (Toggle), or released (Press and Release). When the button is pressed again, <i>Toggle ON</i> initiates and the cycle repeats.
	The Level drop-down menu appears when an Advanced Slider Bar is selected on the Viewer page. The number of levels in the drop-down menu reflect the <b>Level</b> set in the <i>Advanced Slider Bar</i> 's properties (page 154). Use the drop-down menu to select a level and then add a command for each of the Advanced Slider Bar's levels (see page 177 for details).
	Use <b>Move up</b> to move an action up in the Commands list, or <b>Move down</b> to move an action down in the Commands list.
	Use <b>Delete</b> to remove an action from the Commands list.
	Use <b>Save as Macro</b> to save the commands in the Commands list as a macro.
	Use <b>Test Tool</b> to connect to a controller and test the action(s) in the Commands list.

You can configure a button with **Device** commands (On, Off, Stop, Play, etc.); as a **Macro** to send multiple commands to one or more devices; or as a **Link** to other Viewer pages. *Advanced Options* allow you to add conditions to the commands, as described on the next page.



## Configuring Button/Slider Bar Actions

To add one or more actions to a button, slider bar, or dial key, follow the steps below.

1 Device	2 Function	3 Commands
<div>Room-1</div> <div>           VK2100-ID01            VK224-ID01            ControlAssist(LAN)            vm(LAN)         </div> <div> <b>Macro</b>            Link            Set Variable            Set Flag            Condition            Change Button State            Change Label            Change Group Button State            Change Slider Bar Level            Change Button Name         </div>	<div>Delay</div> <div>Relay</div> <div>DO</div> <div>Wake on Lan</div> <div>Serial Raw(ASCII)</div> <div>Serial Raw(HEX)</div> <div>Telnet Raw(ASCII)</div> <div>TCP Raw(ASCII)</div> <div>TCP Raw(HEX)</div> <div>UDP Raw(ASCII)</div> <div>UDP Raw(HEX)</div> <div>HTTP</div> <div>HTTPS</div>	<div>If Variable1 = Variable1</div> <div>If Variable1 = Variable1</div>

1. In the project file, click to select the button, slider bar, or dial key in the Viewer. The Button/Slider Bar Action panel appears.

2. In the Button/Slider Bar Action panel, select a **Room**.

3. Add commands.

For details on device functions and advanced functions, see *Functions*, page 174.

- a) Click a device or an advanced option to display its supported functions.

- b) Double-click a function to add it to the Commands list.

- c) Repeat step 3a and 3b if you wish to initiate a sequence of actions.


4. In the Commands list, double-click the commands to configure them.

## Functions


Button/slider bar functions can be understood as device functions and advanced functions.

- Device functions** – These are functions that the selected controller or a device managed by the controller initiates. The supported device functions vary depending on the device you select in the Device List, as illustrated below. For details on controller functions, see *Device Functions*, page 176.

Controller functions

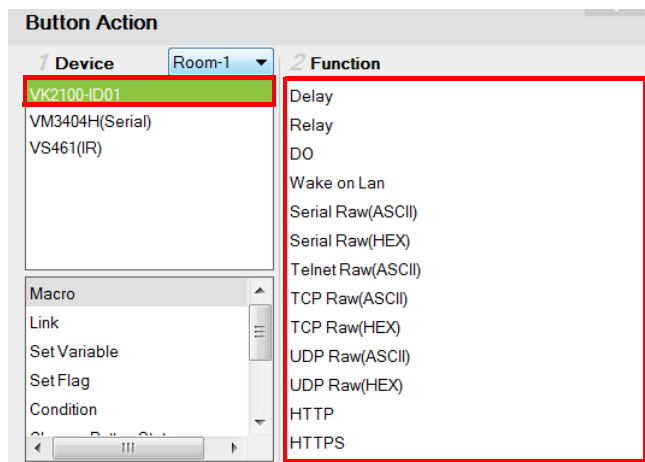

VM3404H functions

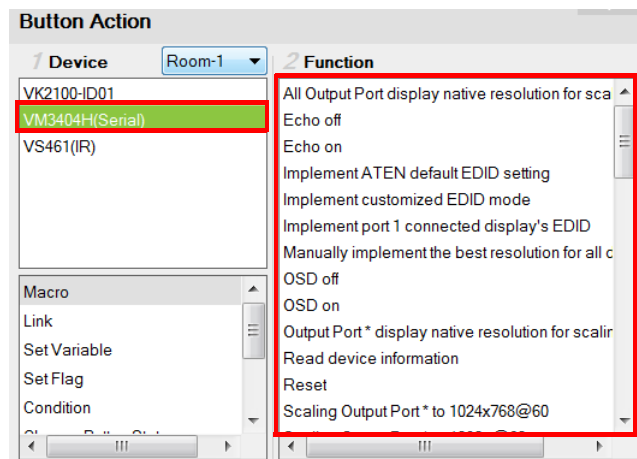

- ♦ **Advanced functions** – These are functions that involve more than one devices in the project. Use the indicated column to select an advanced function, the available options are listed in the Function list. For details about each advanced function, see *Advanced Functions*, **page 179**.


**Slider Bar Action**


1 Device	2 Function
VK2100-ID01	New Macro
VM3404H(Serial)	New Macro (1)
VS461(IR)	
<div style="border: 2px solid red; padding: 5px;"> <b>Macro</b>            Link            Set Variable            Set Flag            Condition            Change Button State            Change Label            Change Group Button State            Change Slider Bar Level            Change Button Name         </div>	


 

## Device Functions

- ◆ Each ATEN controller supports the following functions.
  - ◆ **Delay** – adds a delay in seconds. Enter a number between 0.1-180.
  - ◆ **Relay** – adds an Open, Close, Toggle or Pulse action on the selected controller and Relay port.
  - ◆ **DO** – adds an Open, Close, Toggle or Pulse action on the selected controller and Digital Output port.
  - ◆ **Wake on LAN** – powers on the specified computer (MAC address) over Ethernet.
  - ◆ **Serial Raw (ASCII)** – adds a serial command in the ASCII mode.
  - ◆ **Serial Raw (HEX)** – adds a serial command in the HEX mode.
  - ◆ **Telnet Raw (ASCII)** – adds a telnet command in the ASCII mode.
  - ◆ **TCP Raw (ASCII)** – adds a TCP command in the ASCII mode.
  - ◆ **TCP Raw (HEX)** – adds a TCP command in the HEX mode.
  - ◆ **UDP Raw (ASCII)** – adds a UDP command in the ASCII mode.
  - ◆ **UDP Raw (HEX)** – adds a UDP command in the HEX mode.
  - ◆ **HTTP** – adds an HTTP command.
  - ◆ **HTTPS** – adds an HTTPS command.
  - ◆ **Pronto Hex Code** – adds an IR command using Pronto Hex codes.
  - ◆ **KNX Raw** – adds a KNX raw command. Note that this type of commands can only be used on a custom KNX device. For details about adding a KNX device to ATEN Control System, see *Adding KNX Devices*, page 113.
- ◆ **Value Types**

When a device command has multiple values you can double-click it and use the **Show Flag Menu\*** to select a device setting:

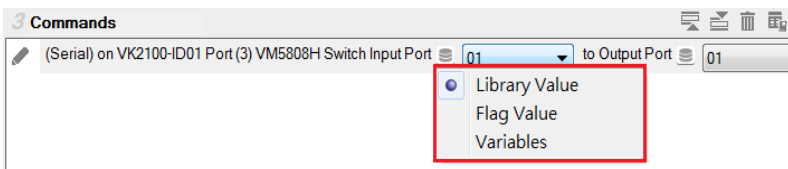


 
- ◆  **04** **Library Value** – use the drop-down menu to select a device setting for the command. The selection of settings in the drop-down menu can be modified using the Database Generator to edit the command string (see *Editing / Adding a New Device*, page 260).


- ◆  **Flag Variable** – clicking this button allows a Flag with a set of values to be selected for the action. The button's action will select a setting according to the Flag value. Each value in a Flag can be set to a different device using a Set Flag (as a button to select the device). When that (Set Flag) button is pressed, the Flag value is set for that particular device, and will be used as the setting for this action, when it's button is pressed.
- ◆  **Variables** – Select this option to use a Variable in the command. After selecting the option, a drop-down menu containing a list of the Variables that you created appear.
- ◆  **Slider Value** **Slider Value** – select this option to configure a *Basic Slider Bar*'s command. The range and change levels are automatically configured according to the minimum and maximum values set for the Basic Slider Bar. This option only appears when a *Basic Slider Bar* is selected on the Viewer page and you are adding **Slider Bar Action** commands.

---

**Note:**The Show Flag Menu allows you to use a single Flag for all devices rather than adding a Conditional Flag for each device.



---

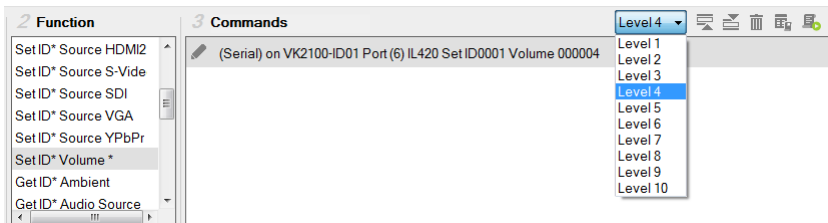
- ◆  **Dial Value** **Dial Value** – select this option to use the string of values that has been dialed using the dial kit via Viewer from a mobile device.
- ◆  **Level** – When an *Advanced Slider Bar* is selected on a Viewer page, the Level drop-down menu appears above the *Commands* list. A command must be added to each level of an Advanced Slider Bar. To configure each level, use the drop-down menu to select a level and then add a command to it.




## Applications of Device Functions


### Example: Configuring actions of dial keys.

Out of the 15 keys on a dial kit, only the **Call**  and **End Call**  keys require configuration, the actions for other keys are pre-configured to send out the number or character as indicated on the keys.

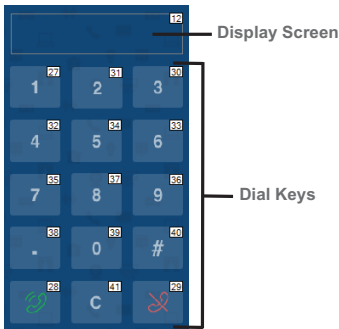


Follow the steps below to add an action to the Call key.

1. Click the **Call** key  in the Viewer to display the Button Action panel.
2. Select a device (e.g. a video conferencing system) and double-click to add a function for the key. In this case, it should be a dialing function.

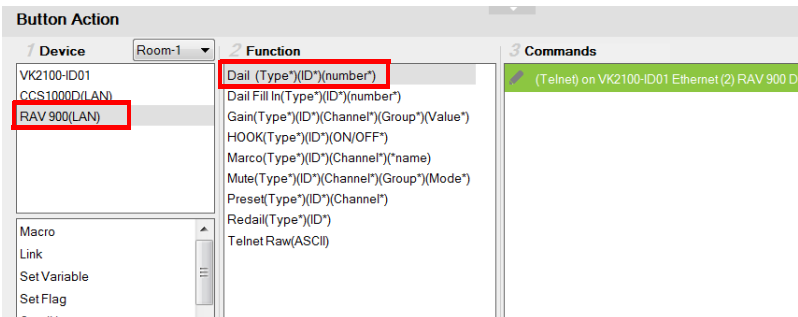


3. Double-click the added command and select **Dial Value**.

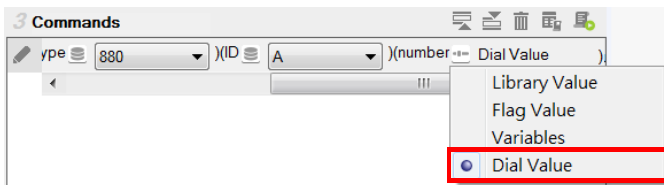


## Advanced Functions

Use advanced options for button/slider actions that involve a series of actions (Macro), actions that involve page redirect (Link), or actions that involve change or update of device settings of multiple objects (Set Variable).

**Note:** Associate **Set Flag**, **Condition**, **Change Button State**, or **Change Label** commands with device commands in the Commands list by dragging and dropping them into a tree view list, which allows them to initiate together (see *Applications of Advanced Functions*, page 184).

- ♦ **Macro** – sends multiple commands to one or more devices. Select to add a macro command from the *Function* list. To create a macro, add multiple device actions to the Commands list, then click the **Save as Macro**  icon or access the function by clicking the *Library* icon (page 98).
- ♦ **Link** – a command used on a button to:
  - ♦ redirect a Viewer Page to another Page when the button is pressed, for example, a Home page button, which redirects the display to the home page.
  - ♦ redirect one or more Viewers to a specified Page when the button is pressed. For example, when an Exit button is pressed, you can have all Viewers (used by touch panels and/or mobile devices in one meeting room) return to their home page.
  - ♦ Configure the following fields for the command:

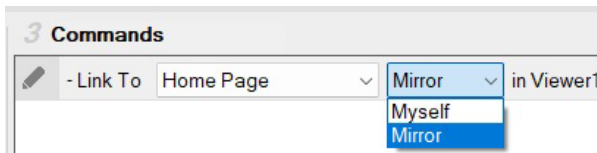

- ♦ Link To: Select a destination page
- ♦ Myself/Mirror: Select **Myself** to have the Viewer link to a selected page only on the tapped device; select **Mirror** to have all the devices that use the same Viewer file to return to the selected page.

For more information on configuring a button, see *Configuring Button/Slider Bar Actions*, page 173.

- ♦ **Set Variable** – creates a variable to represent a device setting (e.g. speaker volume) that can be used by two or more control objects (e.g. slider bar or buttons) in the Viewer. This function is used when you have more than one Viewer objects controlling the same device.

---

**Note:** To complete this setting, go to Properties of the control objects and configure the **Set Sync Conditions** setting.

---

- ♦ **Save Variable** – saves changes to a variable immediately after receiving a new value. The default mechanism is to save new values approximately 30 minutes after receiving the changes. This is to prolong the life expectancy of flash memory of the controller.
- ♦ **Set Flag** – sets a flag value to represent the new device status when a command changes a device setting. Set Flags are added to the Commands list after device commands to change the Flag (device status).
- ♦ **Condition** – adds one or more conditions that must be met for subsequent command(s) to initiate. The conditions can be based on created Variables or feedback values that the controller receives from managed devices.
  - ♦ Use **Variable If** to add a condition by comparing a created variable to a value or another variable. For example, if you want a display a warning message on the Viewer when the volume of a speaker is at its maximum (10 dB), you will need to:
    - (a) Set up a Variable for the speaker volume.
    - (b) Select a **Variable If** condition.
    - (c) Double-click the condition to set the Variable value to **10**.
    - (d) Drag a **Change Label** command and nest it under the condition you selected in step (a).
    - (e) Double-click the Change Label command to type the warning message you wish to display when the speaker volume reaches 10 db.
  - ♦ Append a **Variable Else If** condition to a **Variable If** condition for binary conditions. To add this condition, drag-and-drop it from the Function column to a **Variable If** condition in the Commands column.
  - ♦ Append a **Variable Else** condition to a **Variable If** and **Variable Else If** pair for scenarios with 3 conditions—to describe what action to take when the previous two conditions are false. To add this condition, drag-and-drop it to the **Variable If** condition in the Commands column



- ♦ Use **Multi-Variable If** to add multiple conditions using created Variables. For example:

- Click **+** to add conditions. You can add up to 5 conditions
- Use the drop-down menu to select between **and** and **or**.
- ♦ Append a **Multi-Variable Else If** condition to a **Multi-Variable If** condition for binary conditions. To add this condition, drag-and-drop it from the Function column to a **Multi-Variable If** condition in the Commands column.
- ♦ Append a **Multi-Variable Else** condition to a **Multi-Variable if** and **Multi-Variable Else If** pair for scenarios with 3 conditions—to describe what action to take when the previous two conditions are false. To add this condition, drag-and-drop it to the **Multi-Variable If** condition in the Commands column.
- ♦ **Feedback conditions** – Use feedback conditions for the controller to carry out actions (commands) when the specified feedback value meets the specified conditions. Use **Feedback If**, **Feedback Else If**, and/or **Feedback Else** to fully cover all scenarios in your application.  
**Note:** The Else If and Else conditions can only be nested under the If conditions and can not be used on their own.
- ♦ **Change Button State** – this command changes the image of another button when this button is pressed – allowing the image of any other button to change when the command from this button is sent. Change Button State is added to the end of the Commands lists. When adding this to a **Toggle** button it allows the image to switch with the toggle behavior: *Normal* or *Pressed*. In this situation the Change Button State is added to the end of both the **Toggle ON** and **Toggle OFF** Commands lists.
- ♦ **Change Label** – this option changes a label’s text with text that you enter manually or with text from a device’s return message. A Manual Change Label can be added to the beginning or end and with a Condition in the Commands list. Adding it to a Condition guarantees the label only changes when the command initiates.
- ♦ **Change Group Button State** – this option adds a command that changes the button selected in a **Radio Group** (page 102). Create a Radio Group and then a Function will be listed for it when *Change Group Button State*

is selected. Add the *Change Group Button State* to the *Commands* list of a button and use the drop-down menu to select the button in the Radio Group you want selected.

- ♦ **Change Slider Bar Level** – this option adds a command that changes the level of a **Slider Bar**. Create a Slider Bar and then a Function will be listed for it when *Change Slider Bar Level* is selected. Add the *Change Slider Bar Level* to the *Commands* list of a button and use the drop-down menus to select the **Slider Bar** and **Level** to change.
- ♦ **Change Button Name** – this option adds a command that displays specified text on another button when this button is tapped. A typical application of this command is when you want to show the assigned source on an output device as soon as the source is switched.
  - ♦ **Function** – lists the commands that can be added to the Commands list. Select an option under **Device**, then double-click or drag & drop commands from the *Function* list to add them to the *Commands* list.
- ♦ **Kill Cmd** – cancels received but not-yet-executed commands when the button is pressed, toggled on, or long-pressed.

Configure the following to define the targets of this kill-command action:

1. Select the target Viewer from the Function drop-down menu. The available pages of the selected Viewer are listed.

**Button Action**

**1 Device** Room-1


VK2200-ID01  
VM0404(Serial)  
VS231(IR)  
Screen-1(Relay)  
Screen(IO)

Change Group Button State  
Change Slider Bar Level  
Change Button Name  
Kill Cmd

**2 Function** Viewer1


Home Page  
Display(Matrix)  
Viewer1  
Viewer2  
Viewer3

2. Double-click any listed page to add a kill command. A kill command appears in the Commands column.

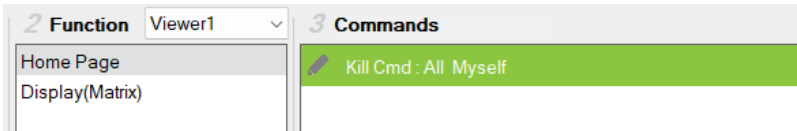

3. Double-click on the added command to define the targets. Available setup combinations include:

	Myself	Mirror
<b>All</b>	Stop all pending actions on the Viewer device <b>where the kill command action is initiated.</b>	Stop pending actions on all Viewers stored on the specified controller.
<b>Viewer</b>		Stop all pending actions on the Viewer device where the kill command is initiated, and <b>also on other Viewer devices that use the same Viewer.</b>
<b>Object</b>	Stop pending actions for the specified control objects (elements) on the Viewer device <b>where the kill command action is initiated.</b>	Stop pending actions for the specified control objects (elements) on all the Viewer device where the kill command action is initiated, and <b>also on other Viewer devices that use the same Viewer profile.</b>

 


## Applications of Advanced Functions

Advanced Options allow you to include conditions with commands in the Commands list. Associate **Set Flag**, **Condition**, **Change Button State** or **Change Label** functions with a command in the Commands list by dragging and dropping them into a tree view listed with the command, so that they initiate in the order listed.


### Set Flag

Adds a Set Flag to change a Flag's value when a command changes a device setting. This sets the Flag value to match the new device setting (e.g. ON or OFF). Always add a Set Flag to a Condition Flag, after the device action(s):

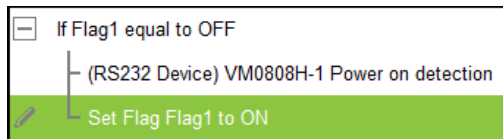

To add a Set Flag:

1. Under **Device**, select **Set Flag**.
2. From the Function list, select the **Flag**.
3. From the **Function** list, drag and drop the **Flag** to add it to the end of the *Condition Flag*, in a tree view list:

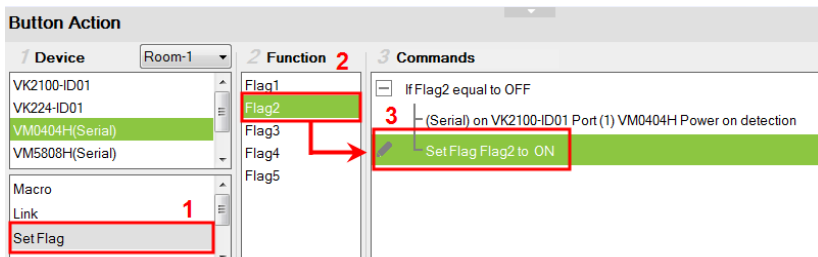


4. Double-click **Set Flag** in the Commands list to use the drop-down menus to set the **Flag** and **Value**.



## Condition


Adds a condition that must be met before the commands listed with it can initiate. When the button is pressed, the Condition's set value must equal the **Flag** or **Feedback** value for the command(s) to initiate. There are two condition types: **Flag** and **Feedback**.

- ♦ **Flag** – Adds a condition based on a Flag's value. "If **Flag** equals **Value**" is true, the condition is met and the commands listed with the Condition will initiate. Always add a **Condition Flag** at the top of the Commands list, drag and drop the device command(s) and then a Set Flag at the end, in a tree view list:

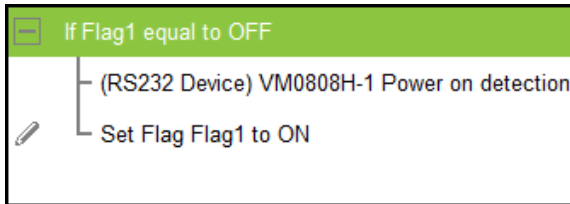


To add a Condition Flag:


1. Under **Device**, click **Condition**.
2. From the Function list, select **Flag**.
3. Double-click **Flag** to add the Condition Flag to the **Commands** list.

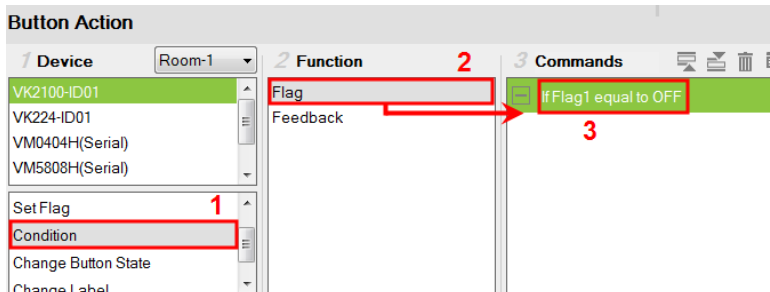

 
4. Double-click the **Condition Flag** in the Commands list to use the drop-down menus to set the **Flag** and **Value**.




5. From the **Function** list, drag & drop device commands to add them to the **Condition Flag**, in a tree view list:

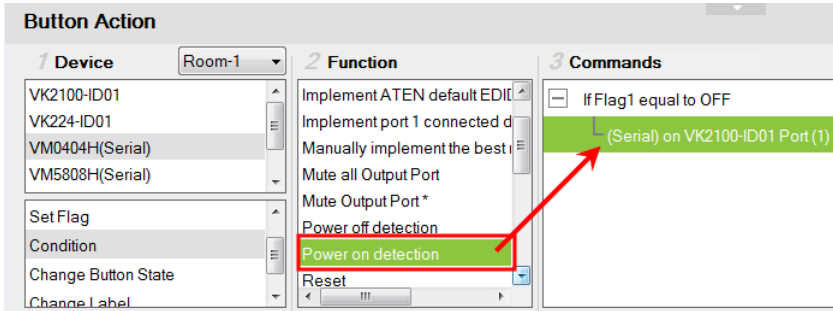

6. Add a **Set Flag** after the last device command in the **Commands** list:

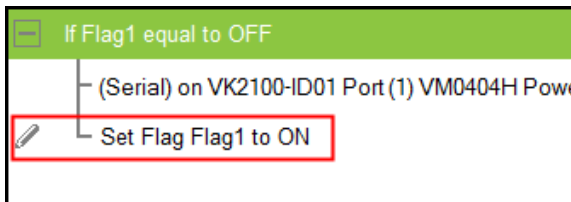

- ♦ **Feedback** – adds a condition based on the **text** from a serial/telnet/TCP device's return message. Always add a **Condition Feedback** to a serial/telnet/TCP command, with command(s) added below the Condition Feedback, in a tree view list:

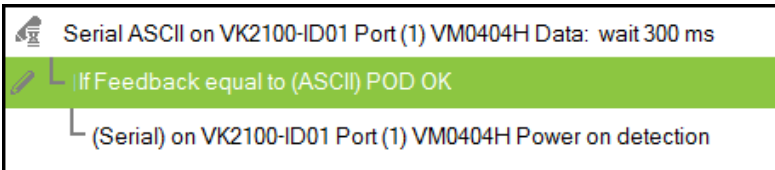

**Receive Time** – when a Feedback condition is added to a device command the **wait** to *Receive Time* drop-down menu appears allowing you to set the amount of time to wait before it stops receiving the return message from the device.


There are three Condition Feedback types:

- ♦ **Equal** – when the text sent from a serial/telnet/TCP device's return message matches **all of the text** entered for a **Condition Feedback Equals**, the commands listed below it will initiate.


- ♦ **Include** – when the text sent from a serial/telnet/TCP device's return message matches **part of the text** entered for a **Condition Feedback Include**, the commands listed below it will initiate.
- ♦ **Bypass** – this option bypasses matching text from the serial/telnet/TCP return message and initiates a **Change Label** command. The label's text will change to the return message sent from the device (i.e. the *Feedback Result*). A **Change Label** must be added to the **Feedback Bypass** for it to work.

To add a Condition Feedback Equal/Include:

1. Under **Device**, click **Condition**.
2. From the Function list, select **Feedback**.
3. From the **Function** list, drag and drop **Feedback** to add it to the Serial/Telnet/TCP command, in a tree view list:

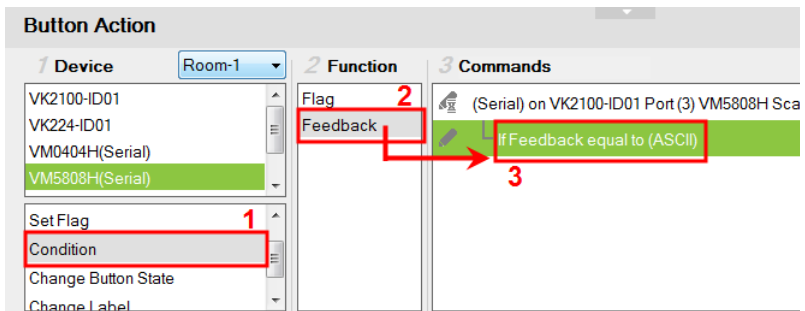


 4. Double-click **If Feedback equals to** in the Commands list and use the drop-down menu to select **equal to** or **include** and enter the **Text**.




Text entered here must match **all** (equal to) or **part** (include) of the text from a serial/telnet/TCP device's return message for the command(s) to initiate. Use the **ASCII / HEX** drop-down menu to select the format.

5. From the **Function** list, drag & drop device command(s) to add them to the **Feedback Equal/Include Condition**, in a tree view list:

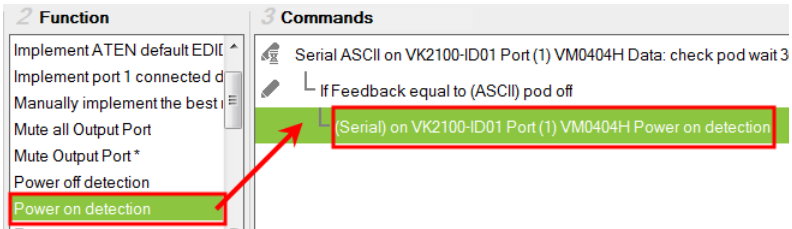


To add a Feedback Bypass Condition with Change Label:

1. Under **Device**, click **Condition**.
2. Select **Feedback** from the Function list.
3. From the **Function** list, drag and drop **Feedback** to add it to the Serial/Telnet/TCP command, in a tree view list:

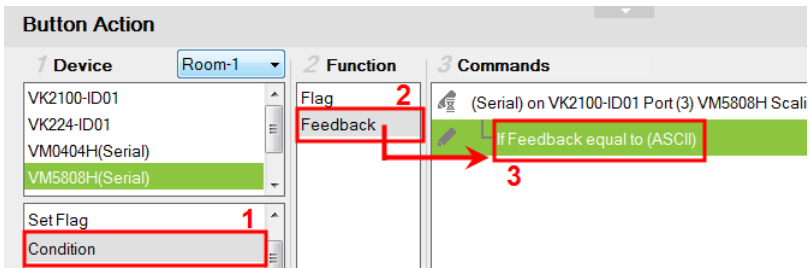

 
4. Double-click **If Feedback equals to** in the Commands list and use the drop-down menu to select **bypass**.




5. Under **Device**, select **Change Label**.
6. From the Function list, select the **Viewer Page** where the label is located.



7. From the Function list, drag and drop the **Viewer Page** to add it to the **Feedback Bypass Condition**, in a tree view list:

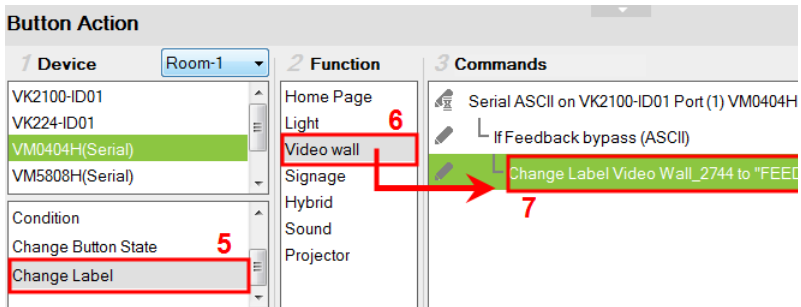

 8. Double-click **Change Label** in the Commands list and use the drop-down menu to select a label. Labels are identified by object IDs (see page 146).




The label's text will change to the serial/telnet/TCP device's return message.

## Change Button State

This option is used to change another buttons image when this button is pressed – allowing the button image to switch depending on the status: *Normal* or *Pressed*. Change Button State is added to the end of the Commands lists and should point to a **Toggle** button. Adding this to a **Toggle** button allows the image to switch with the toggle behavior: *Normal* or *Pressed*.

To add a Change Button State:

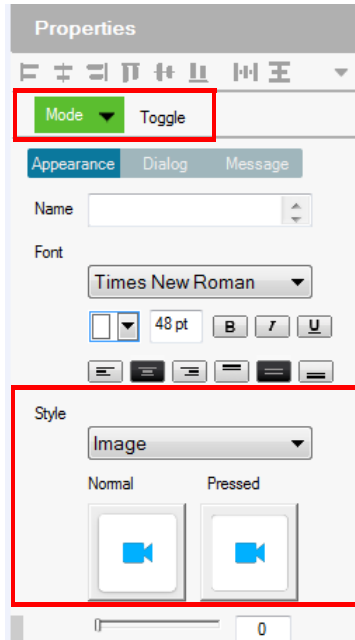

1. Under **Properties**, use the **Mode** drop-down menu to select a button type.
2. Under **Style**, click the **Normal** and **Pressed** button to select an image/color\* for the button's state.


---

**Note:** Use the *Style* drop-down menu to select **Image** to import an image file for the button state, or **Color** to choose a color format for the button state.


---

3. Add the Toggle ON and Toggle OFF device commands to the Commands lists.
4. Under **Device**, select **Change Button State**.

5. In the Function list, select the **Viewer** page.
6. Select the **Toggle ON** radio button, then in the Function list, double-click the **Viewer** page to add it to the end of the *Toggle ON* commands in the Commands list.
7. Select the **Toggle OFF** radio button, then in the Function list, double-click the **Viewer** page to add it to the end of the *Toggle OFF* commands in the Commands list.

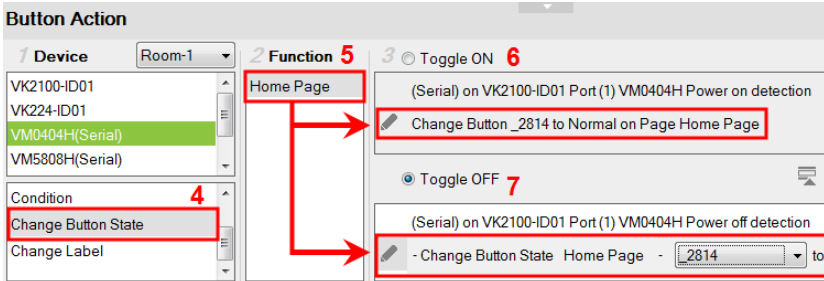


 8. In each Commands list, double-click the **Change Button State** command to set the **Button** and **State** (*Normal* or *Pressed*).




## Change Label

Changes a label's text with text that you enter manually or with text from a serial/telnet/TCP device's return message (*Feedback Result*). A **Change Label** that uses a return message, must be added to a Feedback Bypass Condition (page 188). A **Manual Change Label** can be added anywhere in the Commands list. Adding it to a Condition guarantees the label changes only when the command initiates.

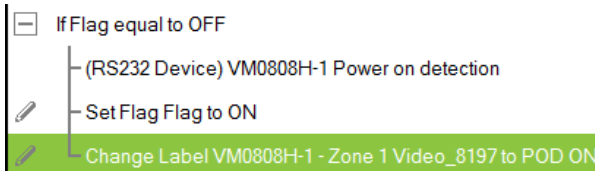


To add a Manual Change Label:

1. Under **Device**, click **Change Label**.
2. In the Function list, select the **Viewer page** where the label is located.
3. Double-click or drag and drop the **Viewer page** to add the Change Label to the **Commands** list.

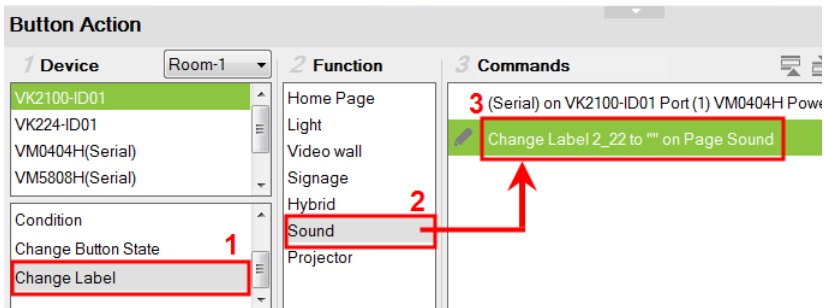

 4. Add a **Change Label** to *multiple* or *Toggle ON / Toggle OFF* Command lists to have the same label change text for different actions.
5. In the Commands list, double-click **Change Label** to use the drop-down menu to select a **Label** and input the **Text**. This is the text in the label that will appear when the button is pushed.




Repeat the steps to add a Change Label for the reverse action (i.g., **On** and **Off**).

## Change Group Button State


Adds a command that changes the selection in a *Radio Group* (see page 102). To use this function, first create a *Radio Group* and then add a button to the Viewer page. Add a **Change Group Button State** independently or with a device command:

To add a Change Group Button State:

1. Under **Device**, select **Change Group Button State**.
2. From the **Function** list, select the **Viewer Page** where the Radio Group is located.
3. From the **Function** list, drag and drop the **Viewer Page** to add it to the *Commands* list:

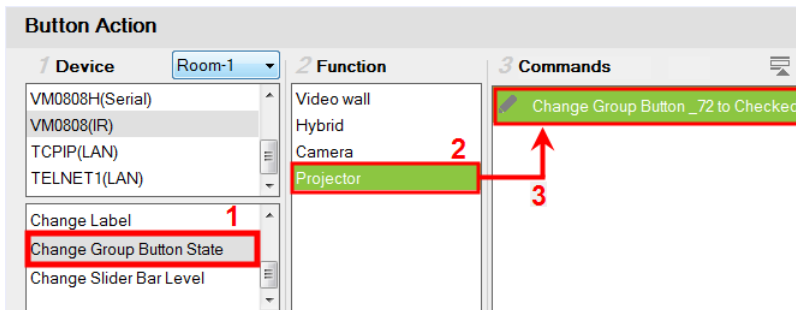

4. Double-click **Change Group Button** in the *Commands* list and use the drop-down menu to select the **Button**.

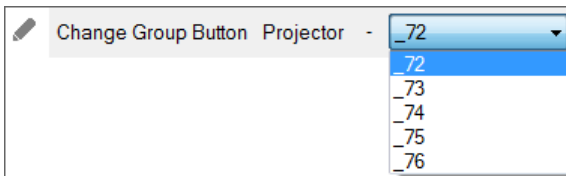


## Change Slider Bar Level


Adds a command that changes the level of a *Slider Bar*. To use this function, first create a *Slider Bar* on a *Viewer page*. Add a **Change Slider Bar Level** independently or with a device command.

To add a Change Slider Bar Level:

1. Under **Device**, select **Change Slider Bar Level**.
2. From the **Function** list, select the **Viewer Page** where the Slider Bar is located.
3. From the **Function** list, drag and drop the **Viewer Page** to add it to the *Commands* list:

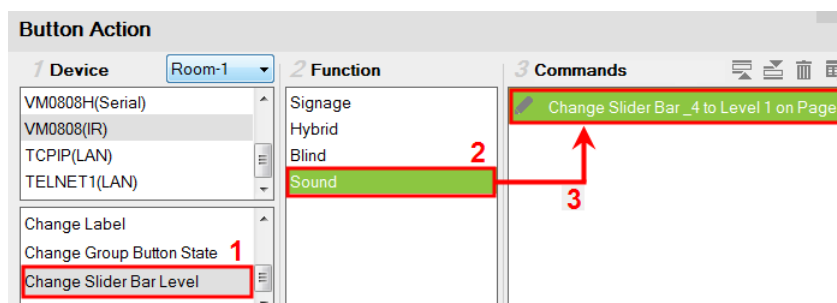

 4. Double-click **Change Slider Bar** in the *Commands* list and use the drop-down menus to select the **Slider Bar** and **Level**.




## Change Button Name

The Change Button Name command is used to display specified text on a selected button when the configured button is tapped. An application of this command is indicating the assigned source for a display device on a Viewer as soon as the source is assigned. This way, you can keep track of the source that is currently showing on a particular display device.

### Example:

- ◆ Indicate the currently assigned source on a display device (in the Viewer).
- ◆ Assume an environment consisting of one monitor and five sources buttons (computer, laptop, camera...etc.), as illustrated below, and that when a source button is tapped, the source will be immediately assigned to the display.

**Configuration goal:** To have the assigned source printing on the display button (on the Viewer page), configure each source button so that when it is tapped, the following actions (commands) initiate: (1) Display the source to the display; (2) Print the name of the assigned source onto the display device.

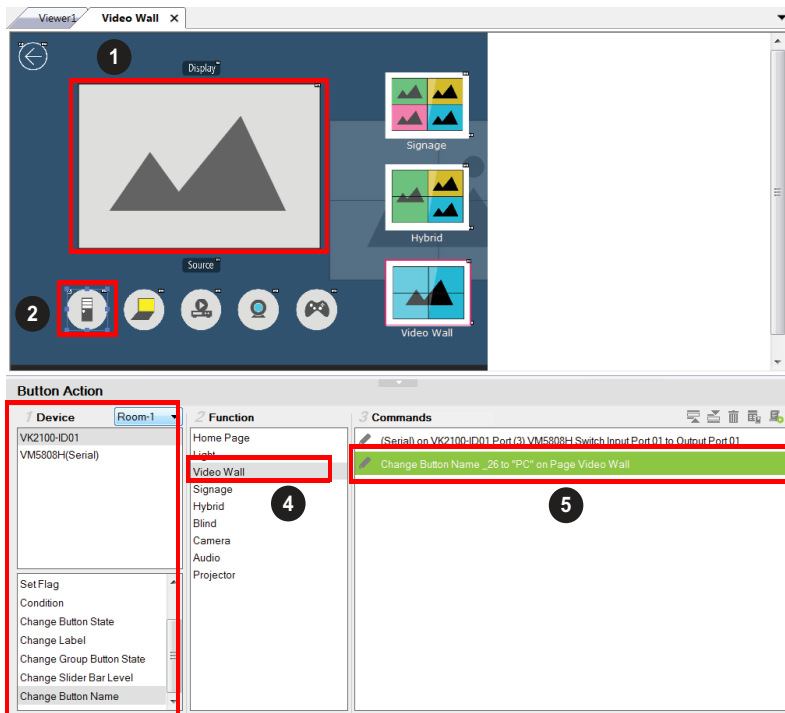


The screenshot illustrates the ATEN Configurator interface for configuring a Video Wall. The top window, titled 'Viewer1 Video Wall', shows a 'Display' button (1) and five source buttons: Signage, Hybrid, and Video Wall (2). The bottom window, titled 'Button Action', shows the configuration for the 'Video Wall' button. The 'Device' column lists 'VK2100-ID01' and 'VM5008H(Serial)'. The 'Function' column lists 'Home Page', 'Light', 'Video Wall' (4), 'Signage', 'Hybrid', 'Blind', 'Camera', 'Audio', and 'Projector'. The 'Commands' column shows the command 'Change Button Name \_26 to "PC" on Page Video Wall' (5).






1. Click a source button to display the Button Action panel.
2. In the Button Action panel, select **Change Button Name**.
3. From the **Function** list, double-click the Viewer page where the source button is located. In this example, double-click the **Video Wall** option. The Change Button Name command is added.
4. From the **Commands** list, double-click the Change Button Name command and configure the following.
  - ♦ Select the ID of the display button to indicate the location of print the text. In this example, it is the video wall's ID.
  - ♦ Type the text you wish to show when the source button is tapped. In this example, enter "PC".
5. Follow steps 1 to 4 to configure each of the source buttons.



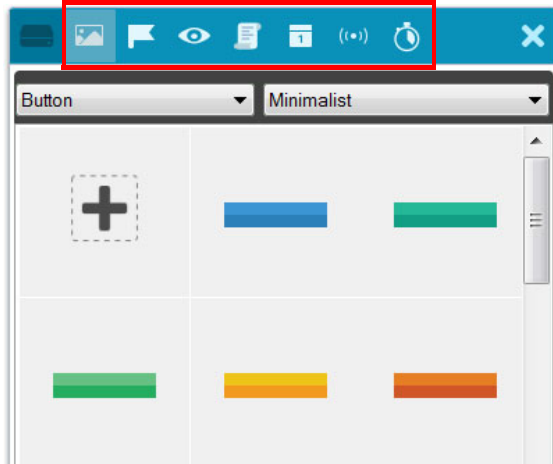

## Library

The **Library** icon on the Project bar offers the following functions. The table below provides an overview of each function.



Control	Description
 Graphic Library	Find graphic templates such as backgrounds, buttons, device icons, and control interfaces for your viewer. For details, see <i>Graphic Library</i> , page 198.
 Flag	Flags are created to include parameters when settings are changed to indicate the current status. For details, see <i>Flag</i> , page 201.
 Monitor	Monitors allow you to set Conditions for Digital Input (dry contact) and Digital Input (VDC) signals and Flags on a port that will initiate an Action. In addition, you can create <b>Listen to port</b> and <b>Query port</b> monitors which check a device's status to initiate actions. For details, see <i>Monitor</i> , page 203.
 Macro	Macros initiate a sequence of actions on one or more hardware devices. For details, see <i>Macro</i> , page 224.
 Schedule	Click to create scheduled events. For details, see <i>Scheduled Events</i> , page 226.


Control	Description
 Variables	Creates a Variable for a device setting (e.g. volume) that is controlled by two or more objects (e.g. slider bar or buttons) on the Viewer. When the device setting is changed through one of the objects, its setting is automatically synced and reflected on all the objects. For details, see <i>Variables</i> , page 228.
 Timer	A timer event is a device action that initiates as soon as the defined countdown time is up. The advantage of using a timer event, as opposed to a combination of delay command and device command, is that it saves time by executing the defined action while other actions (commands) within the series execute. For more details, see <i>Timers</i> , page 237.




### Graphic Library

The **Library** icon on the Project bar provides a *Graphics* tab and drop-down menus with ready-to-use graphics for backgrounds, buttons, icons and device interfaces. Device Interface provides entire page layouts that you can use as templates for different types of devices. Double-click or drag and drop graphics to add them to the page. Images can be imported for icons and buttons in various formats (\*.png, \*.jpg, \*.jpeg, \*.bmp).


### Button

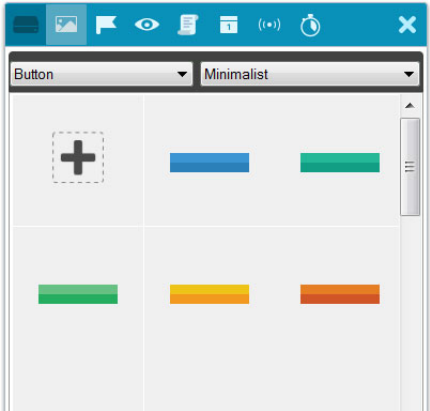


## Background

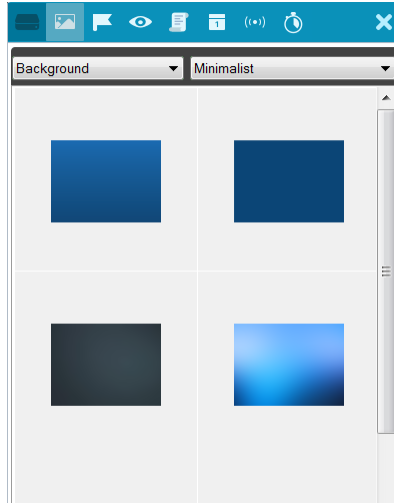

## Image (Device Icon)

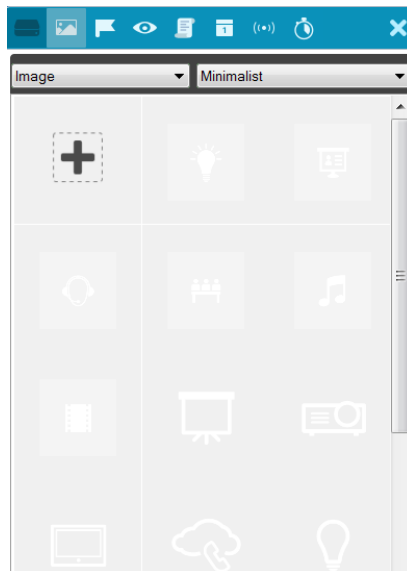

Device Interface

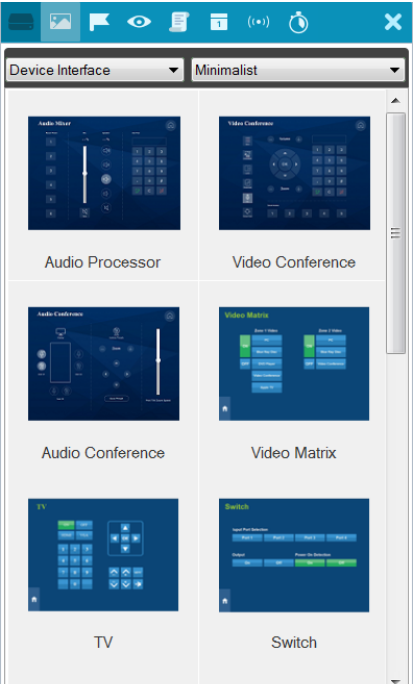



## Flag

*Flags* are created for control buttons to include parameters for when settings are changed or requests are made to change settings on a device. Flags indicate what the status is and what action to take according to the value. Flags are added as actions to *Button Properties* as a **Condition** or **Set Flag** value.


*Conditions* tell a button to initiate associated actions if the flag value is true: “If **Flag** equals **Value**” initiate the action. Actions are associated with a condition so that they only initiate if the flag value is correct. That way an ON command is only sent to a device if the current flag value is OFF.

*Set Flag* changes the flag value when a device setting has changed. So that if a device is OFF and the action turns the device ON, adding a “Set Flag 1 to ON” will change the flag value to ON. Now the flag’s value matches the device status so that actions associated with flag Conditions will initiate accordingly.

Create flags for a device and add them as a *Condition* and *Set Flag* value in the *Action – Button Properties* (see *Button / Slider Bar / Dial Kit Actions*, page 171).


To create a Flag:


1. Select **Flag** and click . The *New Flag* menu appears.

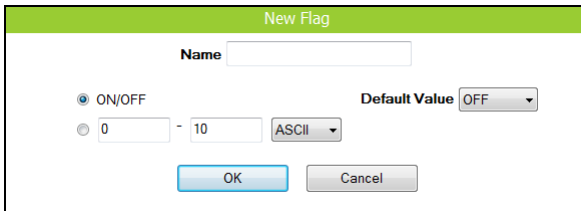

The *New Flag* dialog box has a green title bar. It contains a text field for **Name**. Below it are two radio buttons: **ON/OFF** (selected) and **0**. To the right of the **0** radio button is a range box with **0** and **10** and a dropdown menu set to **ASCII**. To the right of these is a **Default Value** dropdown menu set to **OFF**. At the bottom are **OK** and **Cancel** buttons.

2. Enter a **Name** and select a radio button to set the flag value.
  - ♦ Select **On/Off** and use the drop-down menu to select the *Default Value*.
  - ♦ Enter a range (1-100) for the values in the two boxes and use the drop-down menu to select the *Default Value*. Use the drop-down menu to select the format ASCII or HEX.

3. Click  to create more flags or double-click a flag to edit it. The flags will appear in the list, as shown below.

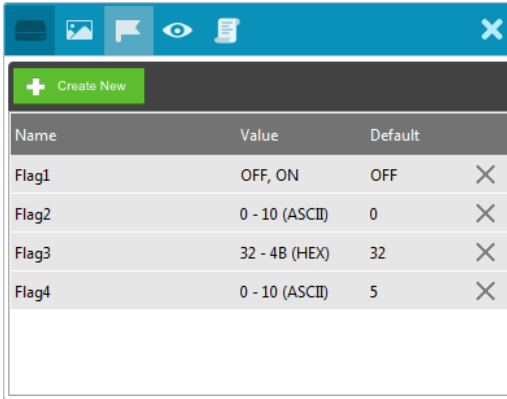

Name	Value	Default	
Flag1	OFF, ON	OFF	X
Flag2	0 - 10 (ASCII)	0	X
Flag3	32 - 4B (HEX)	32	X
Flag4	0 - 10 (ASCII)	5	X

- ♦ **Name** – Lists the Flag names which have been created.
  - ♦ **Value** – Lists the flag's values or range of values.
  - ♦ **Default** – Lists the flag's default value.
  - ♦ **X** – Deletes a flag from the list.
4. Select **Condition** or **Set Flag** to add flags as a command in Button Action by selecting a button on a Viewer page (see *Button / Slider Bar / Dial Kit Actions*, page 171).



## Monitor

### Understanding Monitor

A *Monitor* allows you to set conditions on a port using **Digital Input** (VDC) and **Digital Input** (Dry Contact) signals, return messages, and Flags. When the condition is met, the controller will initiate the desired action. Digital Input (VDC) hardware devices provide voltage signals between 1 and 24. Digital Input (Dry Contact) hardware devices provide open and closed circuit signals. Hardware devices with return messages can be monitored using **Listen to port** or **Query port** conditions via text they transmit. These signals provide indicators from sensors or switches of an event. An event can be the temperature, power, dry contact, sensor, switch status, or message from a device. There are two parts to a monitor, the **Condition** and **Action**.

### Monitor Page Options

There different types of monitors you can create to fulfill different scenarios. A monitor (as illustrated below) contain the following configuration fields:

**Monitor** [X]




If:  Type:  Query Frequency:

**Condition** Satisfy:

1 Device	2 Status	3 Condition
Listen to port	VK0200-ID03(Serial Port 1)	
Query port	VK0200-ID03(Serial Port 2)	
Flag	VK0200-ID03(TCP Server)	
IO Input		
Variable		

**Action**

1 Device	2 Function	3 Commands
Room-3	Delay	
	Relay	
	Wake on Lan	
	Serial Raw(ASCII)	
	Serial Raw(HEX)	
	Telnet Raw(ASCII)	
	TCP Raw(ASCII)	
	TCP Raw(HEX)	

Control	Description
Type	<p>Use this drop-down list to select a monitor type:</p> <ul style="list-style-type: none"> <li>♦ <b>If</b> – select this option for a single condition monitor. “If” the single condition is met, the action initiates. For details, see <i>Creating an If Monitor</i>, page 209.</li> <li>♦ <b>Switch</b> – select this option for multiple conditions that use more than one “If” conditions for the monitor. In this type, if one of the conditions is met, the monitor will initiate the action. For details, see <i>Creating a Switch Monitor</i>, page 212.</li> <li>♦ <b>Bypass</b> – select this option to transmit device feedback message to the selected variable actively listening for a message or by receiving a return message from the specified devices. For details, see <i>Creating a Bypass Monitor</i>, page 216.</li> <li>♦ <b>While Loop</b> – select this option to execute the specified actions at the defined frequency (Query Frequency). For details, see <i>Creating a While Loop Monitor</i>, page 218.</li> <li>♦ <b>Professional</b> – select this option to create variables and load values into these variables using programming script. For details, see <i>Creating a Professional Monitor</i>, page 219.</li> </ul>
Name	Enter a name for the monitor.
Query Frequency	Use this drop-down menu to select how frequently the monitor checks a device for a signal.
Condition	Use this section to add one or more conditions that will need to be met for the Action to initiate. You can create up to 32 conditions for each monitor. For details, see <i>Condition Types</i> , page 205.
Action	Use this section to create the commands that will initiate when the monitor’s conditions are met. For details, see <i>Device Functions</i> , page 176 and <i>Advanced Functions</i> , page 179.
	Click to hide or display the Device and Status/Function columns in the Condition and Action lists so that you can see a complete row of Conditions/Commands.
	Click to move an selected command up or down in the Commands list.
	Click to remove an selected command from the Commands list.




## Condition Types


Note that you can create up to 32 conditions for each monitor.


### ◆ Listen to port / Query port

- ◆ (*Query port only*) Click **F(x)** to open the drop-down menu to select a device command to send out; or enter a command string; and then the click *Edit Return Message* icon and do as explained below.

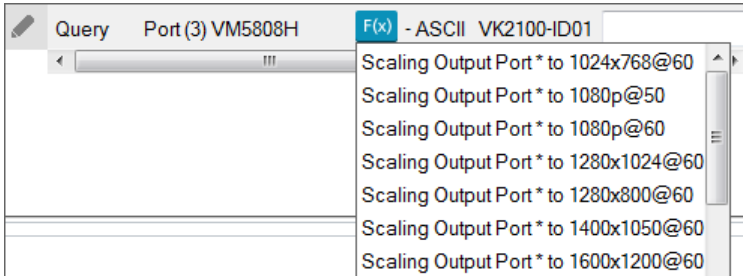

### ◆ Edit Return Message

(*Listen to port / Query port*) Next configure the parameters for the return message from the device. This message must match for the condition to be met. In the **Condition** list double-click the command and then click  to open the **Edit Return Message** window:

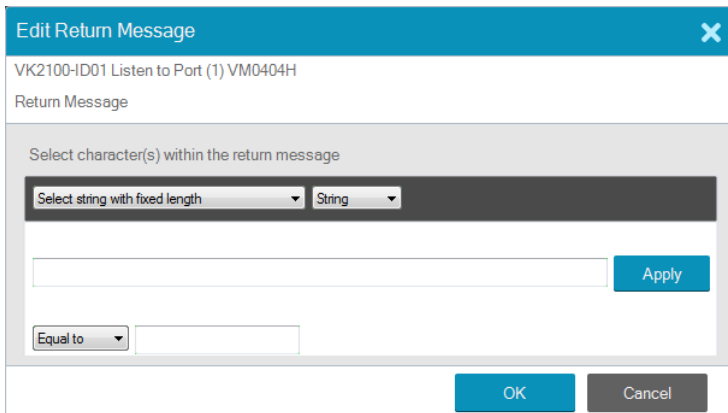

Use the drop-down menu and enter a string of that will represent the characters in a return message from the serial device:

### ◆ Select string with fixed length




Use this to set a string of characters that are set within a fixed parameter. Enter a string of characters and use the **S** to set the start of the string and **E** to set the end and then click **Apply**. The return message will need to fit the fixed string of characters set in the text box next to the *Drop-Down Menu* (see next page) for the monitor to be triggered.

- ◆ **Select string with a non-fixed length**



Use this to set a string of characters where the parameters are variable. Enter a string of characters and use the **S** to set the start of the string and **E** to set the end and then click **Apply**. The return message will need to fit the fixed string of characters set in the text box next to the *Drop-Down Menu* (see below) for the monitor to be triggered.

- ◆ **Drop-Down Menu**

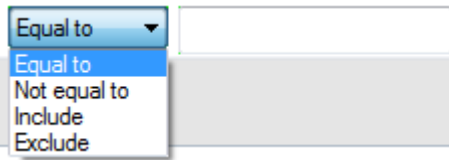

Above, enter characters that the *Select string with fixed length* or *Select string with non-fixed length* string must match and how they must be matched: **Equal to**, **Not equal to**, **Include**, or **Exclude** for the condition to be triggered.

- ◆ **Flag**

Creates a flag condition for the monitor. Use the drop-down menus to set a format (how the flag value must be matched) and the flag value for the condition to be triggered.



- ◆ **I/O Input**

Create a trigger signal from a device according to the voltage. Only device with a Digital Input (dry contract) or Digital Input (VDC) port appear in the Status list. Double-click a device in the **Status** list to add it to the

Condition list. Double-click the command in the **Condition** list to configure the setting:



The High or Low status tells the Monitor to initiate an Action when the device signal is above or below the threshold setting\* for the port:

#### Digital Input (VDC)

- ♦ High - states that when the voltage signal is above the **Upper** Threshold to initiate the Action.
- ♦ Low - states that when the voltage signal is below the **Lower** Threshold to initiate the Action.

#### Digital Input (Dry Contact)

According to an open or closed circuit status for the port:



- ♦ Open - states that when the circuit is **Open** to initiate the Action.
- ♦ Closed - states that when the circuit is **Closed** to initiate the Action.

## Functions


- ♦ **Delay** – adds a delay in seconds. Enter a number between 0.1-180.
- ♦ **Relay** – adds an Open, Close, Toggle or Pulse action on the selected controller and Relay port.
- ♦ **DO** – adds an Open, Close, Toggle or Pulse action on the selected controller and Digital Output port.
- ♦ **Wake on LAN** – powers on the specified computer (MAC address) over Ethernet.
- ♦ **Serial Raw (ASCII)** – adds a serial command in the ASCII mode.
- ♦ **Serial Raw (HEX)** – adds a serial command in the HEX mode.
- ♦ **Telnet Raw (ASCII)** – adds a telnet command in the ASCII mode.
- ♦ **TCP Raw (ASCII)** – adds a TCP command in the ASCII mode.
- ♦ **TCP Raw (HEX)** – adds a TCP command in the HEX mode.
- ♦ **UDP Raw (ASCII)** – adds a UDP command in the ASCII mode.
- ♦ **UDP Raw (HEX)** – adds a UDP command in the HEX mode.
- ♦ **HTTP** – adds an HTTP command.
- ♦ **HTTPS** – adds an HTTPS command.
- ♦ **TCP Feedback Raw (ASCII)** – adds a feedback in ASCII format to having received a monitored input from a TCP client device.
- ♦ **TCP Feedback Raw (HEX)** – adds a feedback in HEX format to having received a monitored input from a TCP client device.


## Creating an If Monitor

To create a monitor for a device port with a **Condition** that initiates an **Action**, do the following.

1. In the Design tab, click **Library**  and click **Monitor** .
2. Select a controller to which you want to create the monitor.



3. Click .
4. Select **If** from the drop-down menu and enter a name for the monitor.
5. Use the drop-down menu to set the **Query Frequency**.
6. Select **All Conditions** or **Any Conditions**.

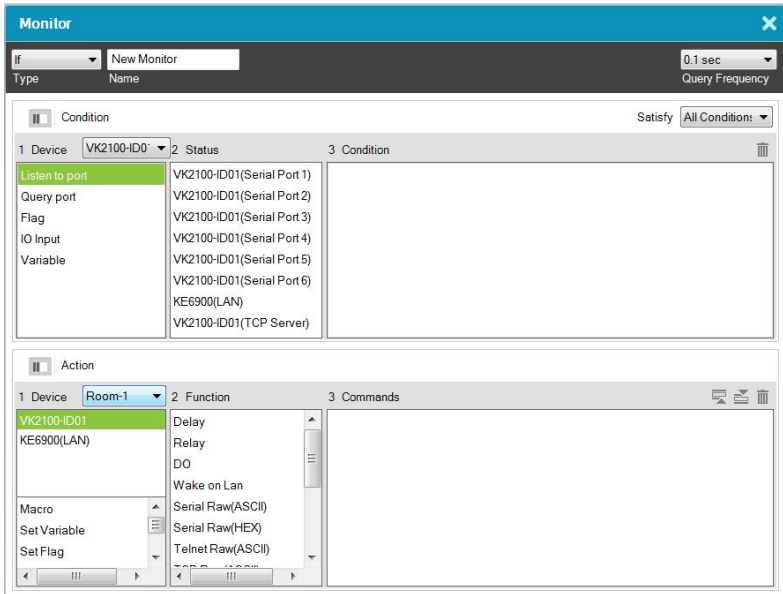

These options are only for advanced setups that require multiple events from hardware devices connected to multiple conditions. Most devices only require one signal Status added to the *Condition List* to initiate an *Action*. Most installations will not need to use this option, therefore it can be ignored.


- ♦ **All Conditions:** Add multiple conditions – all of which must be met for the Action to initiate.
  - ♦ **Any Conditions:** Add multiple conditions – one of which must be met for the Action to initiate.
7. Under **Device**, select a **Controller** from the drop-down menu, and then choose one of the following monitor types. For details, see *Condition Types*, page 205.
    - ♦ **Listen to port** – to create a monitor that actively listens for a message from the device. Under **Status**, double-click a device port to add it to the **Condition** list.
    - ♦ **Query port** – to create a monitor that sends out a command to the device until a feedback message is received from the device.
    - ♦ **Flag** – to create a flag condition for the monitor.
    - ♦ **I/O Input** – to create a trigger signal from a device according to the voltage.
  8. Under **Status**, double-click to add a device port or flag to the *Condition* list. Then double-click the device port or flag in the Condition list to configure the condition settings.

---

**Note:** To set the controller as a TCP server, use the **TCP Server** option in the Status column, and make sure to type a TCP server port in the controller's properties settings (page 114).


---

9. (Optional) Use the Operator option to add additional High or Low conditions (see step 4, page 210).
10. Go to the *Action* section at the bottom of the page to select the hardware **Device** and add the **Function** to the **Commands** list, as explain in the steps that follow.

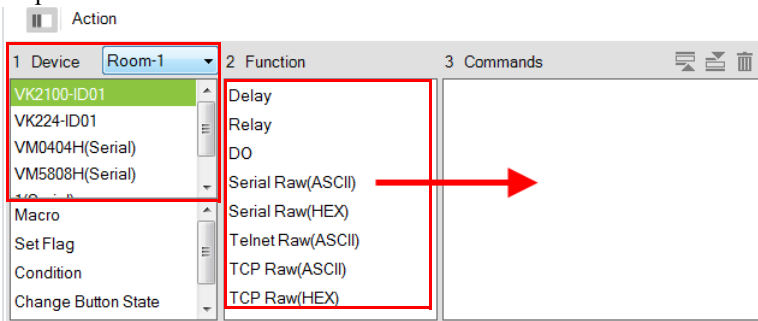


**Note:** For more information about Functions, see *Button / Slider Bar / Dial Kit Actions*, page 171.

a) First select the hardware under **Devices**.

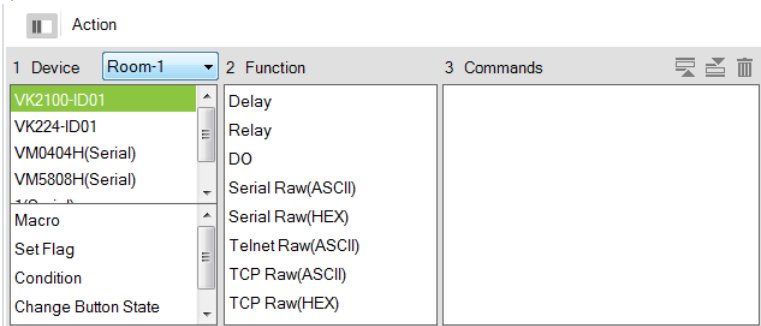

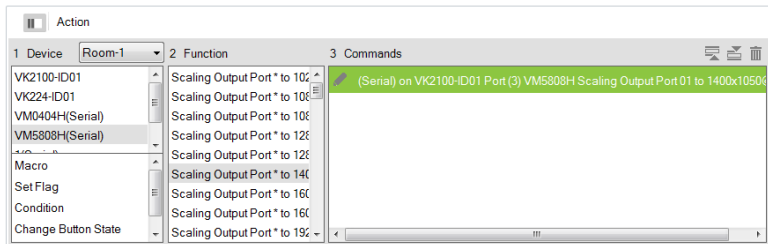

b) Under **Function**, double-click a command to add it to the **Commands** list. This **Command** initiates when the **Condition** is met. For details on Functions and Commands, see *Device Functions*, page 176 and *Advanced Functions*, page 179.




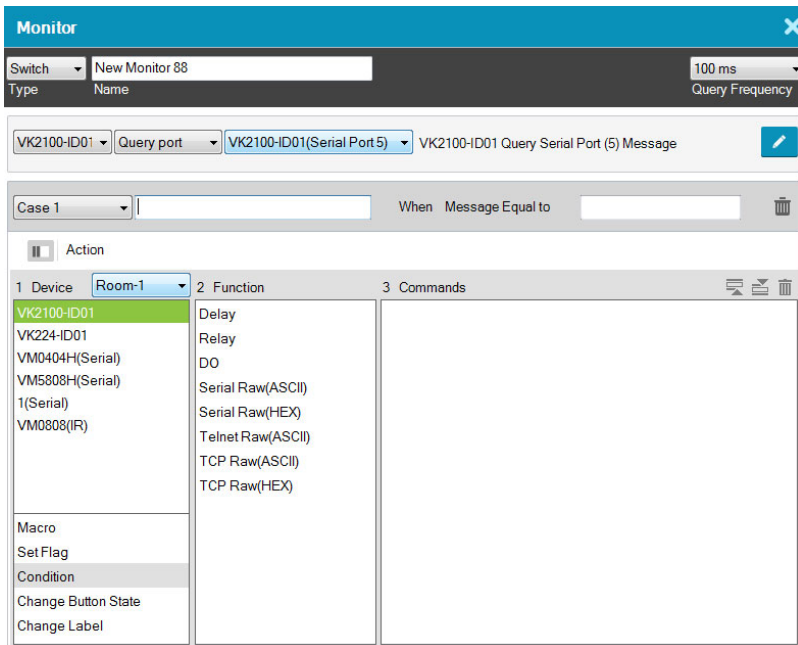
**Note:** If you have configured the controller as a TCP server, add **TCP Feedback Raw (ASCII)** or **TCP Feedback Raw (HEX)** command to provide feedback to the TCP client.

## Creating a Switch Monitor


1. In the Design tab, click **Library**  and click **Monitor** .
2. Select a controller to which you want to create the monitor.




3. Click .
4. Select **Switch** from the drop-down menu and enter a name for the monitor.
5. Use the drop-down menu to set the **Query Frequency**.
6. Use the options to create multiple condition comparisons, as explained below.






Control	Description
Type	Use the drop-down menu to select: <b>If</b> – select this option for a single condition comparison monitor. <b>Switch</b> – select this option for multi-condition comparisons that use multiple “If” comparisons for the command.
Name	Enter a unique name for the monitor.
Query Frequency	Use this drop-down menu to select how frequently the monitor checks a device for a signal. Options are: 100 ms - 1 second.
Drop-Down Menus	Under the <i>Type</i> drop-down menu are four addition drop-down menus used to configure the Switch Condition: <ul style="list-style-type: none"> <li>♦ <b>Controller</b> – use the first drop-down to menu select the controller for a Switch condition.</li> <li>♦ <b>Listen to port / Query port</b> – use the second drop-down menu to select the condition type for a Switch condition (see step 4, page 210 for details).</li> <li>♦ <b>Serial Device Port</b> <ul style="list-style-type: none"> <li>♦ Use the third drop-down menu to select a serial device port and configure <i>Edit Return Message</i> (to configure, see <i>Edit Return Message</i>, page 205).</li> <li>♦ To set the controller as a TCP server, use the <b>TCP Server</b> option in the Status column, and make sure to type a TCP server port in the controller’s properties settings (page 114).</li> </ul> </li> <li>♦ <b>Case</b> – use the fourth drop-down menu to add cases by selecting <b>Add More Cases</b> for comparison that need to be met before monitor’s condition will initiate. In the left text box enter a name for the Case, in the right text box enter the character string that the return message should match.</li> </ul>
Action	Use this section to create commands for the monitor. See <i>Button / Slider Bar / Dial Kit Actions</i> , page 171, for details on configuring commands.
	Click this icon to switch to the Action list view so that you can see a complete row of the command’s functions. This is a toggle button.
x	Closes the Monitor window.

- Go to the *Action* section at the bottom of the page to select the hardware **Device** and add the **Function** to the **Commands** list, as explain in the steps that follow.

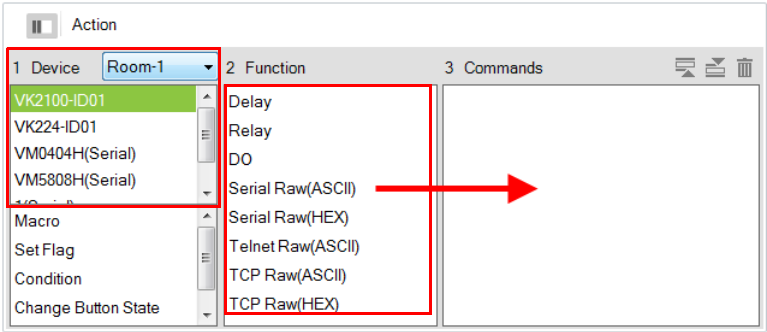


**Note:** For more information about Functions, see *Button / Slider Bar / Dial Kit Actions*, page 171.

8. First select the hardware under **Devices**.

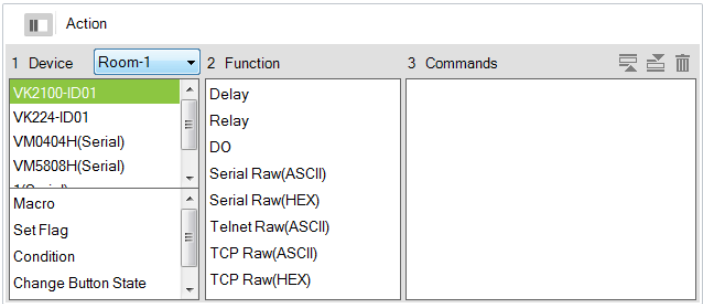

9. Under **Function**, double-click a command to add it to the **Commands** list. This is the **Command** that initiates when the **Condition** is met. For details on what each function does, see *Device Functions*, page 176 and *Advanced Functions*, page 179.

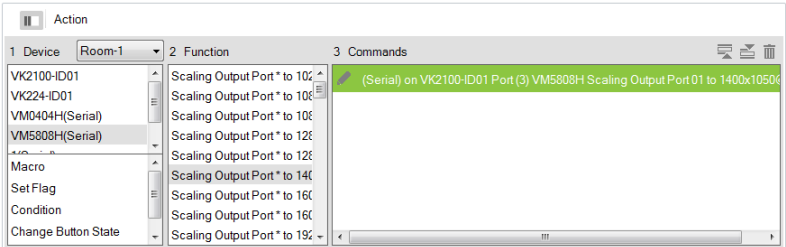

---


**Note:** If you have configured the controller as a TCP server, add **TCP Feedback Raw (ASCII)** or **TCP Feedback Raw (HEX)** command to provide feedback to the TCP client.



---

10. You can also add a **Macro, Link, Set Flag** or Monitor's **Condition**.
11. After adding all the functions to the *Commands* list, the **Switch** monitor is complete.


## Creating a Bypass Monitor

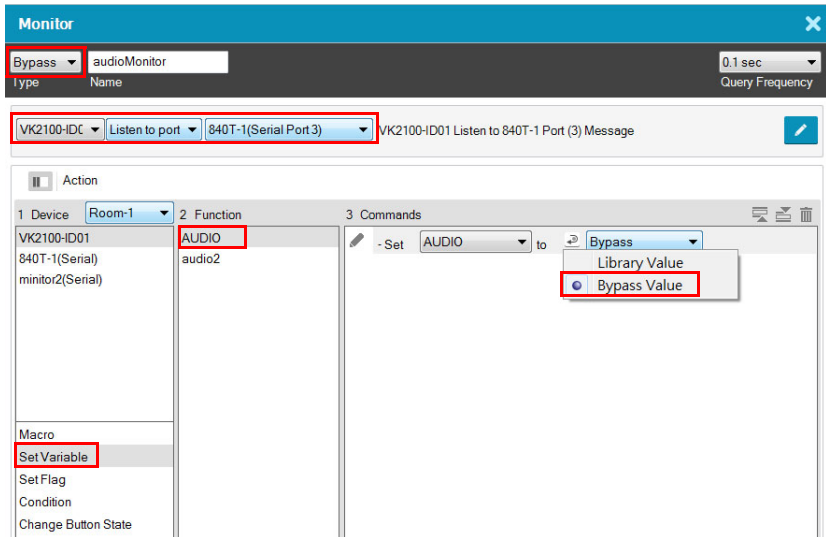Follow the steps below to create a bypass monitor.



 
1. In the Design tab, click **Library**  and click **Monitor** .
2. Select a controller to which you want to create the monitor.



3. Click .
4. Select **Bypass** from the drop-down menu and enter a name for the monitor.
5. Configure the following settings.
  - ♦ **Query frequency:** sets how frequently the monitor checks the device for a signal. Valid values range from 100 ms to 1 second.
  - ♦ In the second drop-down list, select one of the following:
    - ♦ **Listen to port:** actively listens for a message from the specified device.
    - ♦ **Query port:** when a setting is changed on the specified device, the device sends a feedback message to the controller, informing the latest setting.
  - ♦ In the last drop-down list, select the port or the device to be monitored.


6. Configure the actions.



- a) Select **Set Variable**.
- b) Double-click the variable you wish to update when controller detects a change for the specified device setting.
- c) For a variable, double-click the command and select **Bypass**.




## Creating a While Loop Monitor

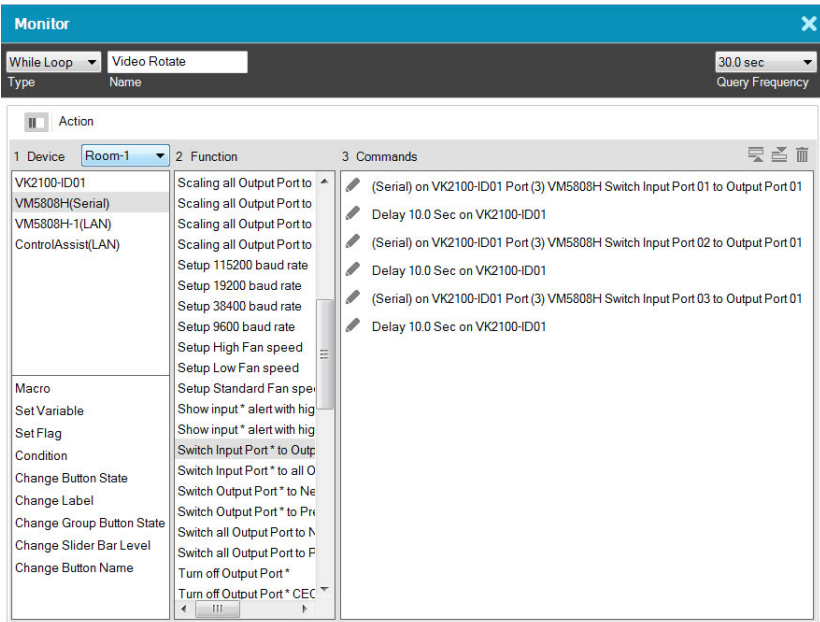Follow the steps below to create a while loop monitor.



1. In the Design tab, click **Library**  and click **Monitor** .
2. Select a controller to which you want to create the monitor.




3. Click .
4. Select **While Loop** from the drop-down menu and enter a name for the monitor.
5. Use the Query Frequency drop-down menu to define the frequency at which the device checks for signals.
6. From the Device List, select a device.
7. (Optional) Select an advanced option. For details, see *Advanced Functions*, page 179.

8. Double-click a function to added it to the **Commands** list. For details, see *Device Functions*, page 176 and *Advanced Functions*, page 179.
9. Configure the added commands if required.

## Creating a Professional Monitor

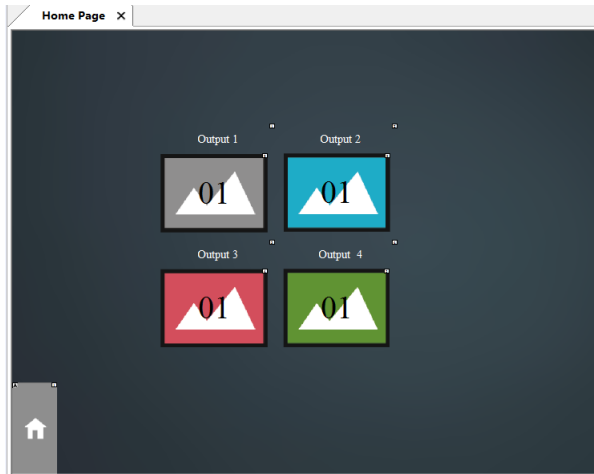

**Example:** Keep track of the assigned sources by indicating the input port number of the assigned source on each of the four screens on a Viewer page, as illustrated below.




For the controller to print the port number of the assigned source on each screen and keep this information up-to-date, the controller needs to:

- ♦ constantly keep track of the assigned source
- ♦ constantly print the port number on each screen icon

Follow the steps below to create a professional monitor.

1. In the Design tab, click **Library**  and click **Monitor** .

2. Click  to create a new monitor.

3. Configure the following settings.

- ◆ From the Type drop-down menu, select **Professional**.
- ◆ Name the monitor.
- ◆ Define the query frequency.

4. Configure the condition settings.

In this example, the controller VK2100 is set to query the input and output ports of the Matrix Switch, VM6404H, that connects to the controller every 0.1 second.

- ◆ Add the condition(s) that must be met for initiating actions. For details on conditions, see *Condition Types*, page 205.
- ◆ Select a **Trigger Mode** for the added conditions.
  - ◆ **And:** Only initiate the added actions (commands) if the values of all specified inputs change.



- ♦ **Or:** Initiate the added actions (commands) if the value of any specified input changes.
- ♦ **Independent:** Use this option when you have multiple sets of actions. The added actions (commands) initiate if the corresponding set of inputs change in value.
- ♦ **Always:** Initiate the added actions (commands) at the specified frequency.

## 5. Configure the Action settings.

a) Click **Edit** to script the codes.

---

### Note:

- ♦ This editor follows Lua's programming rules. ATEN suggests using Notepad++ to script the codes before adding them to the Editor.
  - ♦ For details on built-in commands, see *Built-in Commands*, page 222.
  - ♦ When scripting codes for I/O inputs, use lower case "l" to represent the close status (e.g. `input_io == 'l'`), and "h" to represent open status (e.g. `input_io == 'h'`).
- 

In this example, use Script Editor to:

- ♦ Convert data format.
- ♦ Create four variables representing the assigned input for each screen. In this example, *InputNToOutput1*, *InputNToOutput2*, *InputNToOutput3*, and *InputNToOutput4* are created.
- ♦ Load the input number of the assigned source to the created variables.

Below is sample of the scripts used for this scenario:

```
function vk_parser(input)
    local vminput = vk_hex_toascii(input)
    -- local vminput = input
    if vminput == nil or vminput == "" then
        return
    end

 
    local map = {}
    for vmout, vmin in string.gmatch(vminput, "o{([0-9])}i{([0-9])} video [^ ]* audio [^ ]* [^ ]*") do
        map[vmout] = vmin
    end

    local vk_var_1_InputNToOutput1 = map["01"]
    local vk_var_2_InputNToOutput2 = map["02"]
    local vk_var_3_InputNToOutput3 = map["03"]
    local vk_var_4_InputNToOutput4 = map["04"]

    vk_docommands_1_VMRead(vk_var_1_InputNToOutput1, vk_var_2_InputNToOutput2, vk_var_3_InputNToOutput3, vk_var_4_InputNToOutput4)
end
```

b) Add actions.

In this example, add four Change Button Name commands:




For details, see *Device Functions*, page 176 and *Advanced Functions*, page 179.

### Built-in Commands

Command	Description
jsonobj	Converts JSON strings to tables.
vk_ascii_to_hex	Converts strings from ASCII to Hex.
vk_docommands_ID_name	<p>Defines the commands to be executed, e.g., vk_docommands_1_output. A</p> <p>the user should define his/her own commands and their corresponding IDs. As long as the ID does not change, the command name can change.</p> <p>The same ID cannot be used for two different commands. The same applies to command names.</p>
vk_hex_to_ascii	Converts strings from Hex to ASCII.
vk_parser(input1, input2)	<ul style="list-style-type: none"> <li>◆ Use this command to indicate a start to a set of scripts.</li> <li>◆ The brackets should contain equal number of inputs that you added in the Professional Monitor setup.</li> <li>◆ If the Trigger Mode is set to independent, the script should contain only one input, but the number of parsers should match the number of inputs added to the Monitor, e.g. vk_parser_1(input), vk_parser_2(input).</li> </ul>
vk_var_ID_name	Create a variable.

## Duplicating a Created Monitor


To duplicate a created monitor to another controller, right-click a monitor, mouse over **Duplicate**, and then select a target controller.

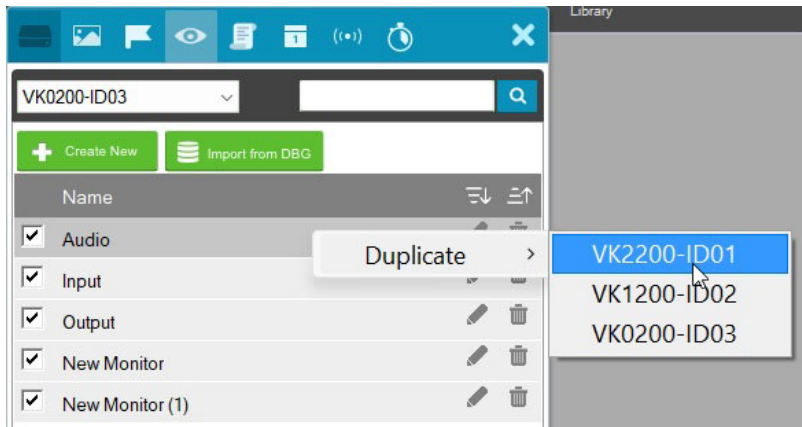





## Macro


Macros allow you to create a button that will initiate a sequence of actions across the same or different hardware devices. This saves time by allowing multiple devices to initiate actions all at once from one button. For example, you can create a macro to start a video presentation by adding functions to: dim lights, power on source, power on display, lower screen and play source. You can also add time delays between actions in a macro. Each project can store up to 104 macros.

When you click  from the Library's **Macro** tab, the window opens:

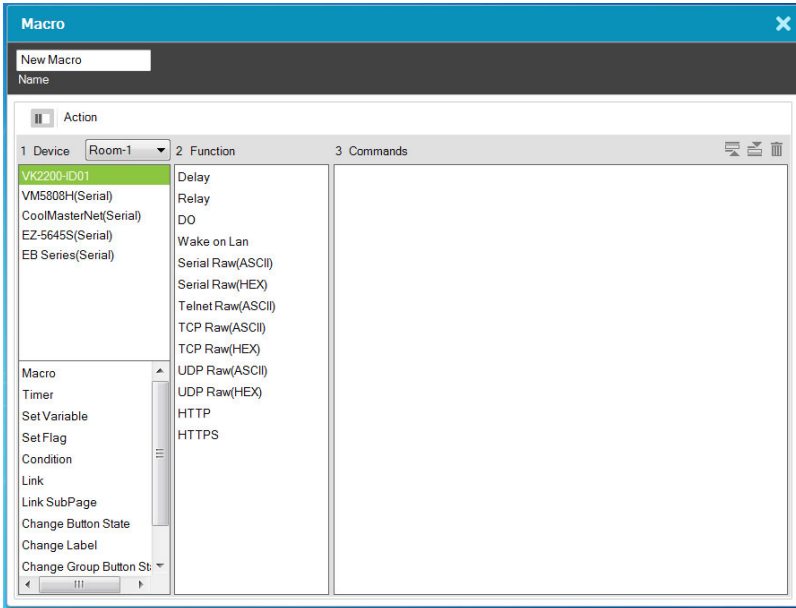

To create a macro:

1. Select **Macro** and click .
2. Enter a **Name** and select a **Viewer** from the drop-down menu, then click **OK**.
3. Go to the *Actions* section at the bottom of the page to select hardware under **Device** and add the **Function** to the **Commands** list:

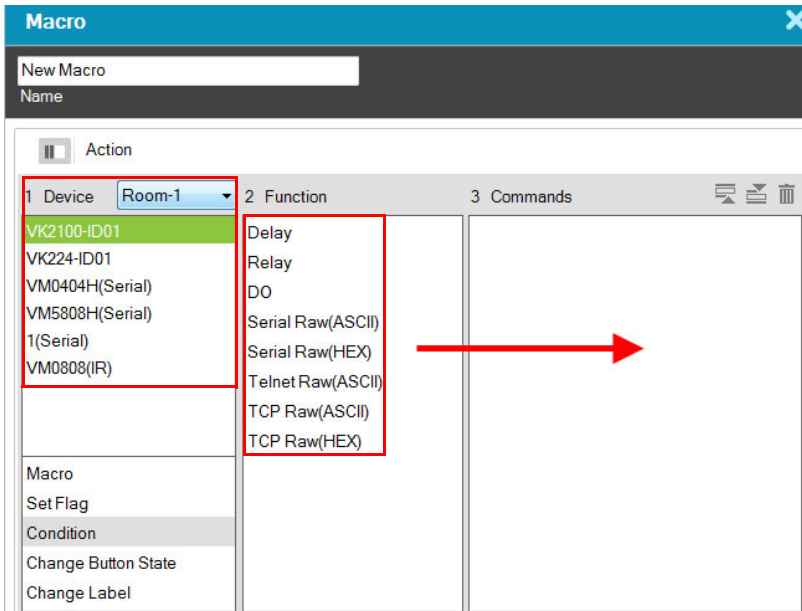

**Note:** For more information about adding Functions, see *Button / Slider Bar / Dial Kit Actions*, page 171.



4. After adding all the functions to the *Commands* list, the macro is complete.
5. In *Create Viewer & Design*, create a button and add a macro to the *Button Action* properties (see page 171) by selecting **Macro** under *Devices* (see *Device Functions*, page 176 for details).







## **Scheduled Events**

You can have one or a series of tasks execute recurringly on specified time of the day. Each project can store up to 60 scheduled events. Note that this feature is not applicable to Control Pads.

### **Creating a Scheduled Event**

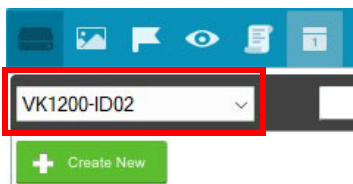
1. In the Design tab, click **Library**  and click **Schedule** .
2. Select a controller to which you wish to create an event.



3. Click . A new event window appears.
4. Name the event.
5. Click  to specify a recurring schedule for the event.
6. Configure event actions.
  - a) In the Device column, select a device.
  - b) In the Function column, double-click the desired functions. The corresponding commands appear in the Commands column. For details on what each function does, see *Device Functions*, page 176.
  - c) In the Commands column, double-click each command to configure the settings.
7. Optionally add system functions. For detailed information, see *Applications of Advanced Functions*, page 184.
8. These commands will initiate in the listed order. To change the order of the commands, click .

## Duplicating a Scheduled Event

To duplicate a created event to another controller, right-click an event from the event list, mouse over **Duplicate**, and then select a target controller.

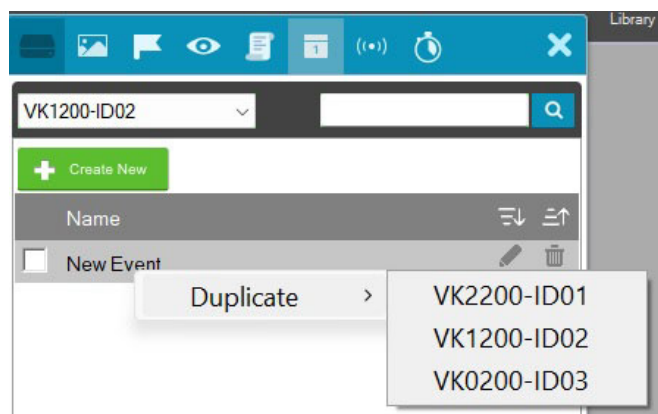


## Variables

### Understanding Variables

A Variable is a value holder that stores a single device setting (e.g. speaker volume) and can be assigned to multiple control objects (e.g. a slider button, a maximum volume button, and a minimum volume button). This way, when a device setting is adjusted via a Viewer object, the new setting will be loaded into this Variable and then reflected to all Viewer objects that use this Variable. Each project can store up to 128 Variables.

Below is a Variable list that has two variables created, temperature and speaker volume, for devices controlled by VK1200-ID02.

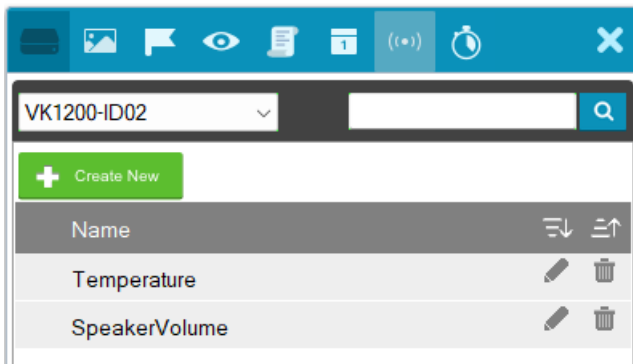


This feature is useful for automatic synchronization of device settings, especially when you have two or more objects in a Viewer controlling a single device setting. Take the example of controlling a speaker volume on a Viewer. On your Viewer, you may have a slider bar which you use to adjust the volume, a button that sets the speaker to its maximum volume, and another button for minimum volume. When you tap the maximum volume button, you would like the following status changes reflected on the Viewer:


- The maximum volume button shows a toggle-on status
- The minimum volume button synchronized with this setting and shows a toggle-off status
- The slider bar synchronizes with this setting and moves to its highest volume




## Creating a Variable for Devices that Return Feedback Messages

Follow the steps below to configure a Variable if the Variable (device setting) is for a device that returns feedback messages to the controller.

1. Create a Variable for the device setting (e.g. speaker volume).
  - a) In the **Design** tab, click **Library**.
  - b) In the pop-up window, click the **Variable**  icon.
  - c) Using the indicated drop-down list, select the controller which controls the target device. The variables created for the devices managed by the selected controller are listed.

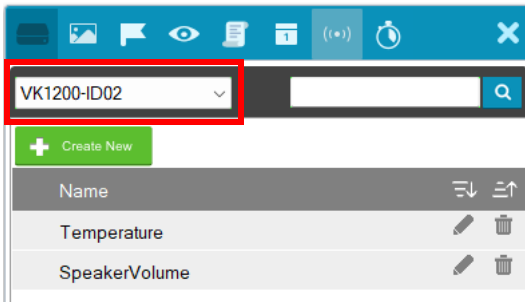

- d) Click . A Variable setup page appears.
- e) In the setup page, configure the following settings.
  - ♦ **Name:** Type a name for the Variable.
  - ♦ **String format:** Select the string format for the target device.
  - ♦ **Setting range:** Type two numbers to define the range for the variable. Valid numbers include negative numbers and numbers that contain one decimal place.  
**Note:** If one of the numbers contains a decimal place (e.g. -5.0), make sure to specify the other number in the same format (e.g. 10.0).
  - ♦ **Unicode:** (Only available for string variables) Select this setting for multilingual text to be encoded and represented correctly in the variable.
  - ♦ **Default value:** Type a default for the setting.
  - ♦ **Description:** Optionally add additional information for the variable.

Your settings may look like this:

2. Configure control objects for the Viewer. For details, see *Configuring the Control Interface (Viewer)*, page 128.

a) In the **Design** tab, add control objects to your Viewer.

**Note:** The Variable function is only applicable to toggle buttons, basic-mode slider bars, and radio groups of normal buttons. Configure the **Mode** setting before you proceed.


- b) For a slider bar object, click it in the Viewer page and configure the **Value** settings in Properties.
- c) In Properties, click **Set Sync Condition** and select the variable you created using the drop-down list.


3. Create a Monitor to set up the conditions for which the device sends its latest setting to the variable. For detailed steps, see *Creating a Bypass Monitor*, page 216.


## Creating a Variable for Devices that Do Not Return Feedback Messages

Follow the steps below to configure a Variable if the Variable (device setting) is for a device that *does not* return feedback messages to the controller.

1. Create a Variable for the device setting (e.g. speaker volume).

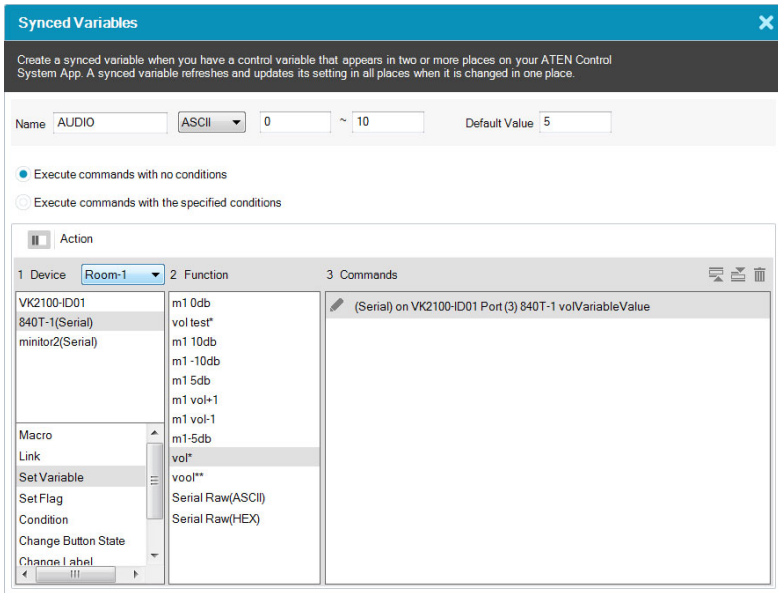

- a) In the **Design** tab, click **Library**.
- b) Click the **Variable**  icon.
- c) Using the indicated drop-down list, select the controller which controls the target device. The variables created for the devices managed by the selected controller are listed.

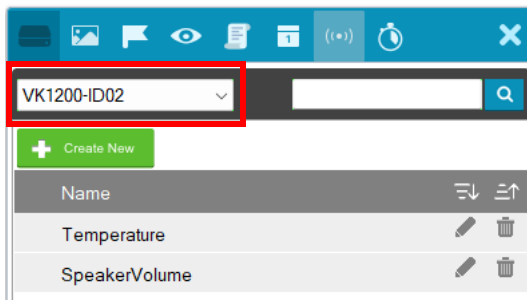

d) Click . A Variable setup page appears.

e) In the Setup page, configure the following settings.

- ♦ **Name:** Type a name for the Variable.
- ♦ **String format:** Select the string format for the target device.
- ♦ **Setting range:** Type two numbers to define the range for the variable. Valid numbers include negative numbers and numbers that contain one decimal place.

**Note:** If one of the numbers contains a decimal place (e.g. -5.0), make sure to specify the other number in the same format (e.g. 10.0).

- ♦ **Unicode:** (Only available for string variables) Select this setting for multilingual text to be encoded and represented correctly in the variable.

**Note:** This feature is only effective if the target controller uses firmware v3.6 or later.

- ♦ **Default value:** Type a default for the setting.
- ♦ **Description:** Optionally add additional information for the variable.
- ♦ Select a command execution type.
  - ♦ **Execute commands with no conditions:** Execute the command (action) when the value of the specified Variable changes.
  - ♦ **Execute commands with the specified conditions:** Execute the corresponding command (action) when the value of the Variable matches.

## 2. Configure control objects for the Viewer.


a) Add a control object to the Viewer. For details, see *Configuring the Control Interface (Viewer)*, page 128.

 
**Note:** Make sure to configure the mode setting before proceeding to the next step.

b) For a slider bar, click it and configure value settings in Properties.

c) Click **Set Variable**, and then double-click the Variable you created in step 1.


d) In Properties, click **Set Sync Condition** and select the Variable you created using the drop-down list.

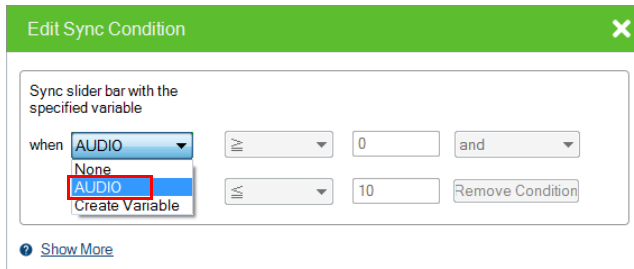

3. Repeat steps (a) to (d) with each of the objects. If you select **Execute commands with the specified conditions**, follow the steps below to add commands.
  - a) Refer to step 4 to first configure the control objects.
  - b) Click Library, click the **Variable**  icon, and then click the Variable you created in step 1.
  - c) Click the drop-down list below the Execute commands with the specified conditions option and select a condition.

- d) Add an action (command) when this condition is met. Select a device, double-click a desired function, and then double-click the command to configure the setting.


In the case of speaker volume, when the volume changes to 0 (i.e. the condition is **Variable = 0**), the action will be “to change the speaker volume to 0”, as illustrated below.

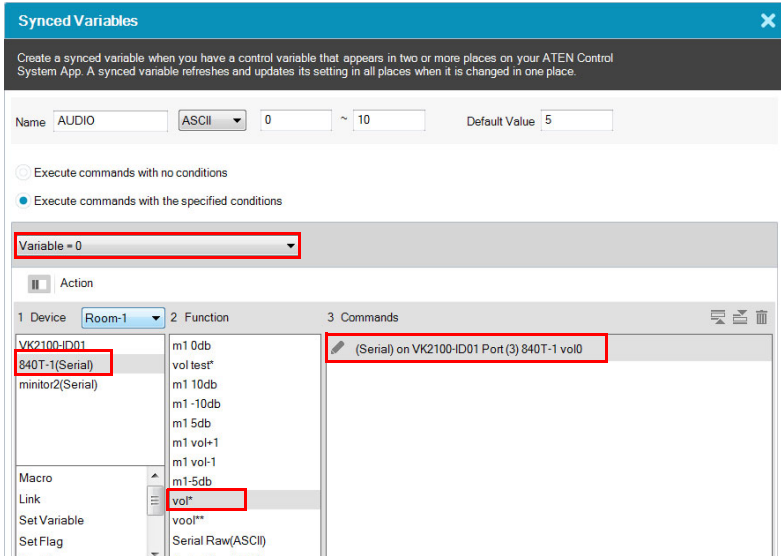

- e) Repeat steps 2(c) and 2(d) to add one or more actions to each condition.

4. If you select **Execute commands with no conditions**, follow the steps below to add commands.


- a) In the **Device** list, click to select the device. In this example, the mixer, **840T-1(Serial)**, is selected.
- b) Double-click the action (command) and change the value type to **Variable Value**.

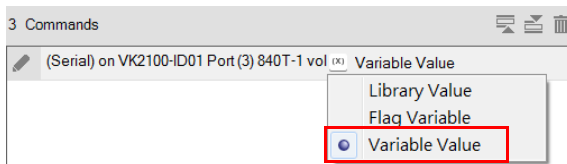


## Creating a Button for Bypassing Feedback to a Variable


Instead of creating a monitor event which automatically monitors the specified parameter at a defined interval, you can save the controller bandwidth by creating a button which performs the monitoring and saves the feedback to a variable only when pressed.

 1. Create a variable for storing the received feedback. Select **STRING** for the variable. Configure other settings as required.


- a) In the **Design** tab, click **Library**.
- b) Click the **Variable**  icon.
- c) Using the indicated drop-down list, select the controller which controls the target device. The variables created for the devices managed by the selected controller are listed.

- d) Click . A Variable setup page appears.
- e) In the Setup page, configure the following settings.
  - ◆ **Name:** Type a name for the Variable.
  - ◆ **String format:** Select *STRING*.
  - ◆ **Unicode:** (Only available for string variables) Select this setting for multilingual text to be encoded and represented correctly in the variable.
  - ◆ **Default value:** Type a default for the setting.

- ♦ **Description:** Optionally add additional information for the variable.
  - ♦ Select a command execution type.
    - ♦ **Execute commands with no conditions:** Execute the command (action) when the value of the specified Variable changes.
    - ♦ **Execute commands with the specified conditions:** Execute the corresponding command (action) when the Variable matches
2. In a Viewer page, create a button object.
  3. Configure its button actions.
    - a) Add a command for receiving feedback.
    - b) Select **Condition** and then drag-and-drop a **Feedback If** command under your feedback command.

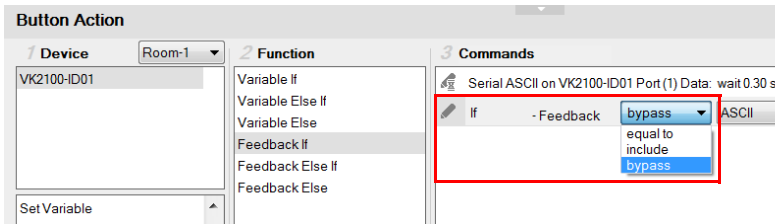

- c) Set the feedback to **bypass**.
4. Add a variable command. Select a variable to store the feedback and then select **Bypass**.

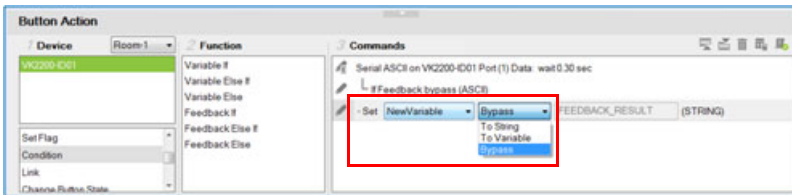



## Timers

A timer event is used to initiate a device action as soon as the defined countdown time is up. The advantage of using a timer event, as opposed to a combination of delay command and device command, is that it saves time by executing the defined action while other actions (commands) within the series execute.


On top of initiating a specified action, you can also create additional controls on the Viewer to manually restart or stop the action. For example, for a start meeting button, you would like to initiate the following series of actions when triggered:

Sequence of Action	Target Device	Device Action	Requirements
1	projector	Turn on the projector	It takes 8 seconds for the projector to turn on and get ready.
2		Set the projector to switch to its HDMI source	This action can only be initiated when the projector is turned on.
2	ATEN Matrix Switch	Display input 1 to display 1 via ATEN Matrix Switch (VM5808H)	This action is independent of the previous one, and can be initiated at the same time.
3	projector screen	Bring down the projector screen	-
4	air conditioner	Turn on air conditioner	-
5	lighting system	Turn on the lights	-

Among these actions, action #2 (switching source on a projector) can be designed as a timer event because:



- ♦ it needs a countdown (of 8 seconds) before the action can be initiated
- ♦ the remaining actions can be initiated without action #2 being completed

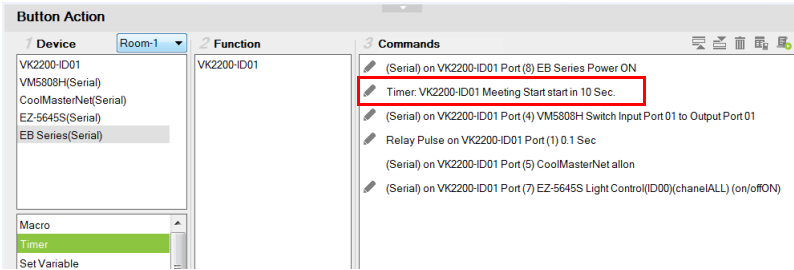
The configuration for the start meeting button is as follows, with the projector source switching configured as a timer event:




## Configuring a Timer Event


1. Create a timer event in the Library.

- a) In Configurator, go to **3. Design > Library** , and then click **Timer**  in the pop-up window. This screen appears.

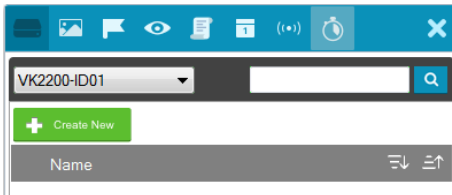

- b) Select a controller to which you wish to create the timer event to.

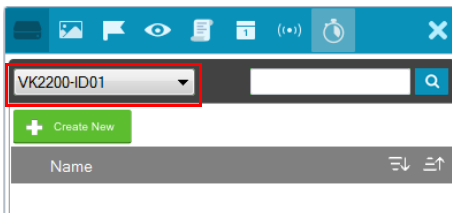


- c) Click . The Timer window appears.
- d) Add a device action (command). For more details about commands (device actions), see *Configuring Button/Slider Bar Actions*, page 173. For example, for a projector to switch its input source to HDMI, click the device in the Device column and then double-click the input source

command from the Function column. Double-click the added command to select **HDMI** for the Input Source.



To see only the added actions (commands) in this view, click  .


e) Rename the timer event and configure the countdown duration.

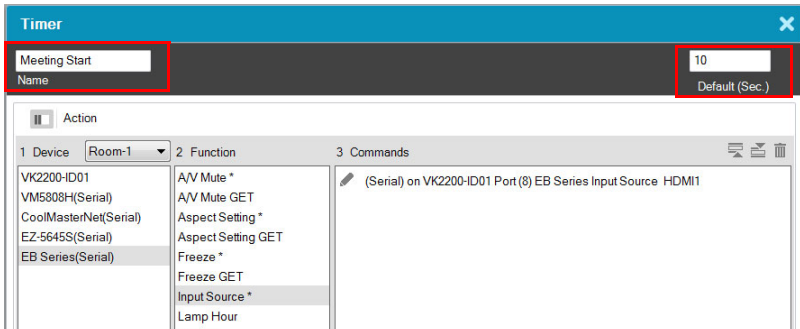


2. Apply the timer to a control element (e.g. a button or a slider bar).

a) Click the target control element.


Example: a meeting start button

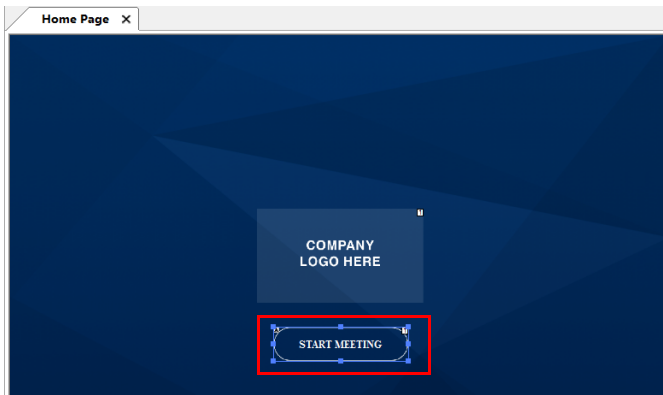

- b) In Action settings, click the target device (for the timer event), click **Timer**, and then double-click a function to add a timer event.

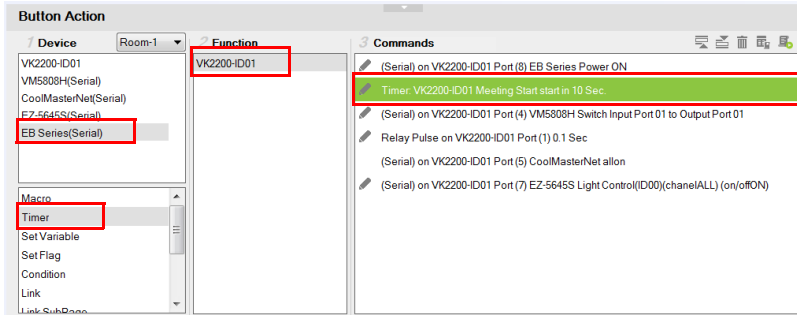

- c) To configure the timer, double-click the added timer in the Commands column and select from the drop-down menus.

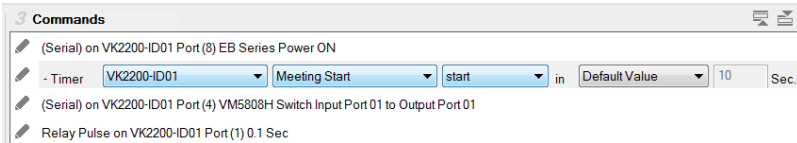

The following settings are available:

 
- ♦ controller:
- ♦ timer: to change the current timer to another that is already created in the Library.
- ♦ timer type: you can change the action from starting a specified action to stop or restart.
- ♦ countdown duration

The timer action starts counting down as soon as the associated control is triggered, and the action initiates when the countdown time is up.

3. (Optional) Create another control (e.g. a button) for stopping or restarting the timer.


- a) Add the control element to the Viewer page.

- b) Click the control element, and add the timer event you created in step 1, and double-click the command to select **Restart** or **Stop** from the drop-down list.



## Duplicating a Created Timer

To duplicate a created timer to another controller, right-click a timer, mouse over **Duplicate**, and then select a target controller.

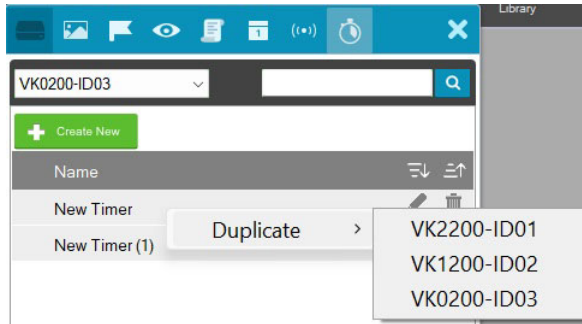

## Centralized Monitoring and Control via Unizon™

---

### Overview

#### **Unizon™**

Unizon™ is a server-based software for centralized monitoring and control of standalone ATEN Video Matrix and ATEN-controller-managed AV devices, including ATEN and third-party devices. One ATEN control system allows management from up to two Unizon™ servers. Note that a license is required for using Unizon™. For more information, see *ATEN Unizon™ User Manual*.

#### **Monitor ATEN-controller-managed Devices via Unizon™**

When an ATEN-controller-managed AV device is added to Unizon™, the following information is available in the Unizon™ platform:

- ♦ connection status with Unizon™
- ♦ current IP address
- ♦ firmware version
- ♦ license usage (only applicable to ATEN controllers)

You can also create parameters to be monitored via Unizon™. For example, you may want to monitor the total hours used on a projector lamp so that you can arrange for replacement in advance when the accumulated lamp hour reaches a specified number. For setup details, see *Creating a Monitor Item*, page 244.

#### **Control ATEN-controller-managed Devices via Unizon™**

You can remotely operate ATEN-controller-managed devices via Unizon™, such as switching video sources on displays, changing the resolution setting, etc., by creating control items in the controller project file. For setup details, see *Creating a Control Item*, page 247.

## Enabling Monitoring and Control via Unizon™

Follow the steps below to enable monitoring and control of controller-managed devices via Unizon™.

1. In Configurator, select devices to allow management via Unizon™.
  - a) Open the target project and go to the **Device** tab.
  - b) In the Unizon column, select devices for remote management via Unizon™. For example:

The screenshot shows the 'Device Configuration' window for 'VK2100-ID01'. The table lists various devices with columns for Type, Device, Mode, Room, and Unizon. The 'Unizon' column is highlighted with a red box, indicating where to enable remote management.


Type	Device	Mode	Room	Unizon
Serial 1	VM0808H	RS232	Room-1	<input checked="" type="checkbox"/>
Serial 2	VM1616T	RS232	Room-1	<input checked="" type="checkbox"/>
Serial 3	None	RS232	Room-1	<input type="checkbox"/>
Serial 4	None	RS232	Room-1	<input type="checkbox"/>
Serial 5	None	RS232	Room-1	<input type="checkbox"/>
Serial 6	None	RS232	Room-1	<input type="checkbox"/>
I/O 1	Switch	Output	Room-1	<input type="checkbox"/>
I/O 2	None	Output	Room-1	<input type="checkbox"/>
I/O 3	None	Output	Room-1	<input type="checkbox"/>
I/O 4	None	Output	Room-1	<input type="checkbox"/>
IR 1	VS481A	IR	Room-1	<input type="checkbox"/>
IR 2	None	IR	Room-1	<input type="checkbox"/>
IR 3	None	IR	Room-1	<input type="checkbox"/>
IR 4	None	IR	Room-1	<input type="checkbox"/>
Relay 1	Switch-1		Room-1	<input type="checkbox"/>
Relay 2	None		Room-1	<input type="checkbox"/>
Relay 3	None		Room-1	<input type="checkbox"/>
Relay 4	None		Room-1	<input type="checkbox"/>
Ethernet 1	VE8950	TELNET	Room-1	<input checked="" type="checkbox"/>
Ethernet 2	VE8900	TELNET	Room-1	<input type="checkbox"/>
Ethernet 3	B96	ONVIF	Room-1	<input type="checkbox"/>

2. (Optional) Create parameters for monitoring and/or control. For detailed steps, see:
  - ♦ *Creating a Monitor Item*, page 244
  - ♦ *Creating a Control Item*, page 247
3. Upload the project to the controller.
4. On Unizon™'s web interface, add the controller. For details, see *ATEN Unizon™ User Manual*.


## Creating a Monitor Item

1. Open the project file, go to **Design > Unizon**, and click on the device category of the target device to open the configuration page.

Example: To add a monitor item to a third-party projector, click **Projector**.

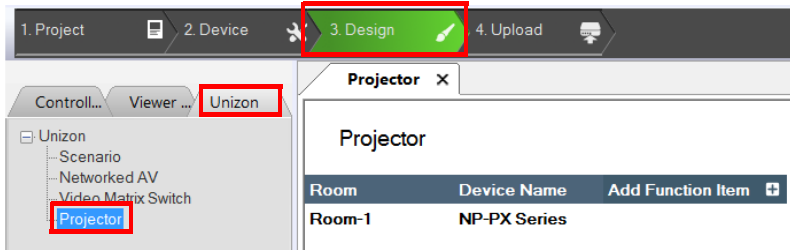


2. In the configuration page, click **Add Function Item** and then select **Add Monitor Item** in a pop-up dialog box. A new monitor item is added.

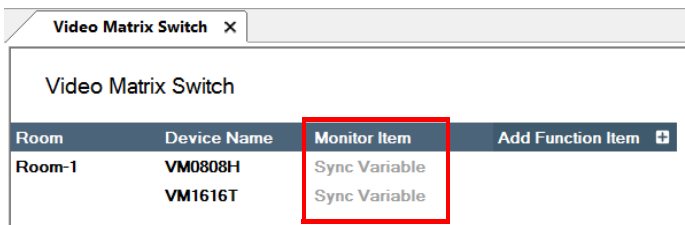

3. Double-click the header **Monitor Item** to rename the parameter.

Example: Rename it to Lamp Hour.

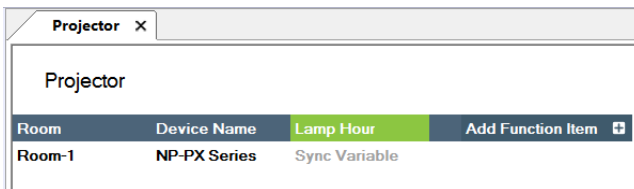

4. Create a variable to store the value of the parameter and optionally configure alert settings.

Example: Create a variable to store the accumulated lamp hour and set up an alert at a specific number.

- a) Under the monitor item you just created, click **Sync Variable**. The Properties panel appears on the right.



- b) In the Properties panel, click **Set Sync Condition**. The Edit Sync Condition dialog box appears.
- c) In the General tab, click the first drop-down menu and select **Create Variable** to create a variable. For details about creating variables, see *Variables*, page 228.
- d) In the General tab, select the variable you just created and configure related settings. For example:

The screenshot shows the 'Edit Sync Condition' dialog box with a green header bar containing a close button (X). The dialog has two tabs: 'General' (selected) and 'Monitoring'. It is divided into three steps:

- Step 1:** 'Select synchronized variables.' It contains a 'Use' label and a dropdown menu currently showing 'LampHour'.
- Step 2:** 'Variable display.' It contains a 'Select expression' label and a dropdown menu currently showing 'Raw Data'.
- Step 3:** 'Edit label unit style.' It contains a text input field with 'hr' and a label 'Ex: %, dB, ...'.

At the bottom left is a link 'Show More' with a question mark icon. At the bottom right are two buttons: 'Save' (green) and 'Cancel' (grey).

e) Optionally set up alerts for this monitor item. For example:

Edit Sync Condition

General

Monitoring

Step 1

☒ Set alert levels

Step 2

Edit Sync Condition

Moderate alert

All

2000

Add Condition

Critical alert

All

2200

Add Condition

Show More


Save

Cancel

## Creating a Control Item

1. Open the project file, go to **Design > Unizon**, and click on the device category of the target device to open the configuration page.

Example: To add a control item to a Video Matrix, click **Video Matrix Switch**.

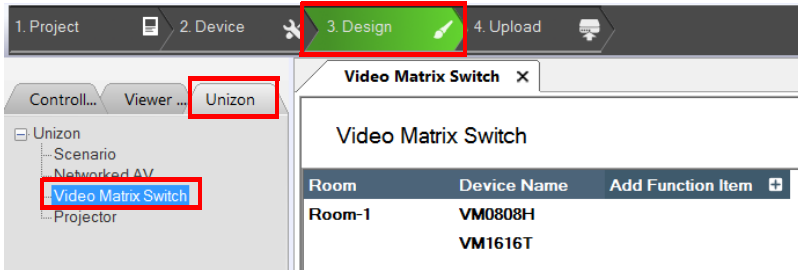


2. In the configuration page, click **Add Function Item** and then select **Add Control Item** in a pop-up dialog box. A new control item is added.



3. Double-click the header **Control Item** to rename the parameter.

Example: Rename it to Output 1.

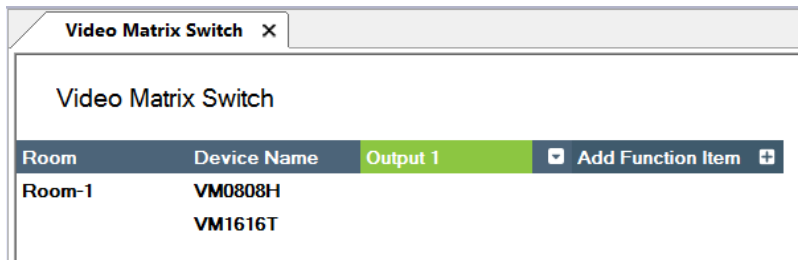


4. Add and configure control options to this item.

Example: Create input 1 to 4 as options for switch the source on output 1.

a) Click .

b) In the pop-up dialog box, type the name of the control option and click **Create**. Proceed to create all the control options as required.


Example: Type **Input 1** and click **Create**. Add Input 2, 3, and 4.

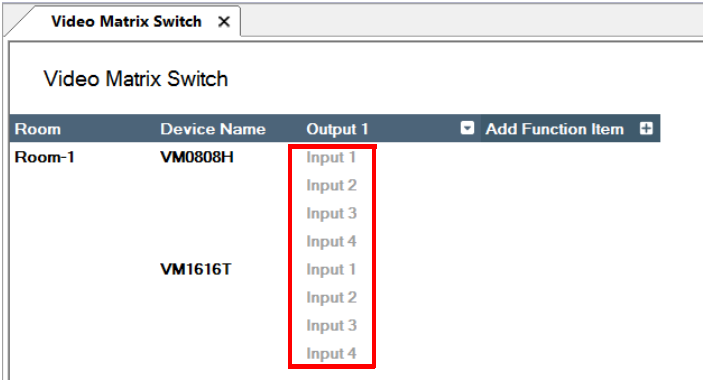

c) Click **Input 1** and add the action in the Action panel. Proceed to configure each control action.


Note:

- ♦ The same entries are created for all devices in the list. Skip this step if the control action does not apply.
- ♦ For full details about configuring control actions, see *Configuring Button/Slider Bar Actions*, page 173.

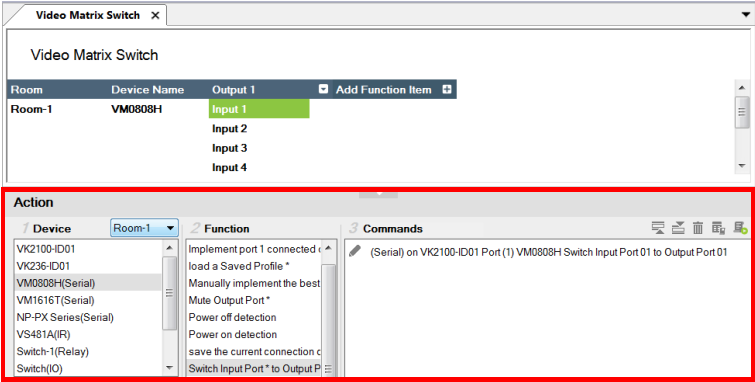

## Removing a Monitor / Control Item

To remove a monitor or control item, right-click the header and select **Delete**.

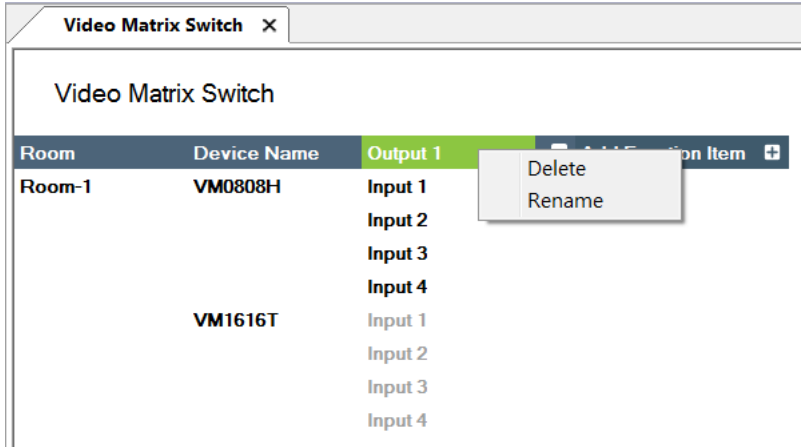

## The Upload Tab

The *Upload* page allows you to upload Viewers and/or back up projects to controllers.

The screenshot shows the '4. Upload' tab in the ATEN Control System interface. At the top, a progress bar indicates the steps: 1. Project, 2. Device, 3. Design, and 4. Upload (highlighted in green). Below the progress bar, the instruction reads: 'Start the controller search by IP address via Auto Search or manually.' There are two search options: 'Intelligent Search' with an 'Auto Search' button and the text 'Search for all controllers on the LAN', and 'Search by IP address' with a text input field and a search button. Below these, a section titled 'Please select the viewer to upload.' contains a list of viewers: 'VK1100-ID02' (checked), 'Viewer1' (checked), and 'VK2100-01' (unchecked). Each viewer entry has a lock icon and an information icon. An 'Edit Access Key' button is located to the right of the viewer list. Below the viewer list, the instruction 'Please check the connection and controller ID' is displayed. At the bottom, there is a green 'Upload to Controller' button and a checkbox labeled 'Upload this project along with the Viewer' which is checked.

To back up a project and its Viewers to a controller:

1. Browse for the ATEN controller where you wish to save the configured Viewers.
  - ◆ Auto Search: Browses for controllers on the same LAN with the Configurator.
  - ◆ Search by IP address: Use this function to browse for controllers that are on different LANs to the Configurator.

2. Verify the selected controller and viewer and configure the selection if required.

1. Project 2. Device 3. Design 4. Upload

Start the controller search by IP address via Auto Search or manually.

Intelligent Search  
Auto Search  
Search for all controllers on the LAN

Search by IP address  
[Input Field] [Search Icon]

Please select the viewer to upload. [Edit Access Key](#)

☒ VK1100-ID02

☒ Viewer1

☐ VK2100-01

Please check the connection and controller ID

[Upload to Controller](#) ☒ Upload this project along with the Viewer





- ♦ Controller highlighted black: This is the controller that is found in the network and its ID matches the one you specified in this project file. The viewers created for the controller are listed below this item.
  - ♦ Controller highlighted gray: This is the controller that also exists in the network, but does not match the controller ID specified in this project file.
3. Optionally click on the following to configure password authentication settings.

---

**Note:** Due to security concerns, the access key of any ATEN controller will need to be modified at least once before the controller can be accessed for any of its functions. If you have not modified the access key, the upload will not be performed. To resolve this issue, log in to the controller's web interface and follow the on-screen prompt to modify the access key.

---

- ♦ **Edit Access Key:** Click to edit the access key you entered for uploading Viewers to the controller and download Viewers from a mobile device.

- ♦ **Note:** A valid access key should only contain upper-case alphabets, lower-case alphabets, and/or numerals.  : An access key is required to upload Viewers to the controller and download Viewers from a mobile device.
- ♦  : An access key is *not* required to upload Viewers to the controller and download Viewers from a mobile device.
- ♦   : The access key has been changed on the controller's web interface (Dashboard). To change the lock status, click on the icon and type the new access key to proceed.


#### 4. Click **Upload to Controller**.

---

**Note:** By default, the project file is uploaded along with your selected Viewers. To only upload the selected Viewers, click **Also upload project file** to disable the function.

---

### **Viewing Controller Information**

Click  to view the controller's information.

- ♦ **IP Address:** Displays the IP address.
- ♦ **MAC Address:** Displays the MAC address.
- ♦ **License:** Displays the number of licenses available and in use.
  - ♦ **Select License:** Allows you to load a new license file.
  - ♦ **Reset License:** Resets all license(s) in use by mobile devices. This will disconnect all mobile device connections to the controller.
  - ♦ **Firmware Version:** Displays the firmware version.
- ♦ **Capacity:** Displays the amount of space available for uploading Viewers.
- ♦ **Viewers:** Lists the Viewers currently stored on the controller.
  - ♦ **Remove Viewer:** Click the trash can icon to remove the Viewer stored on the controller.
- ♦ **Project:** Lists the project file currently stored in the controller.




# ATEN Database Generator

## Overview

The *ATEN Database Generator* is a repository that allows you to establish and store commands for operating devices managed by ATEN Control System, and reuse them when configuring Viewers.

## Accessing the Database Generator

In ATEN Configurator, goto **Tools > Database Generator**. The following window appears with the Add Device to My Library dialog box opened if you are accessing the Database Generator for the first time.


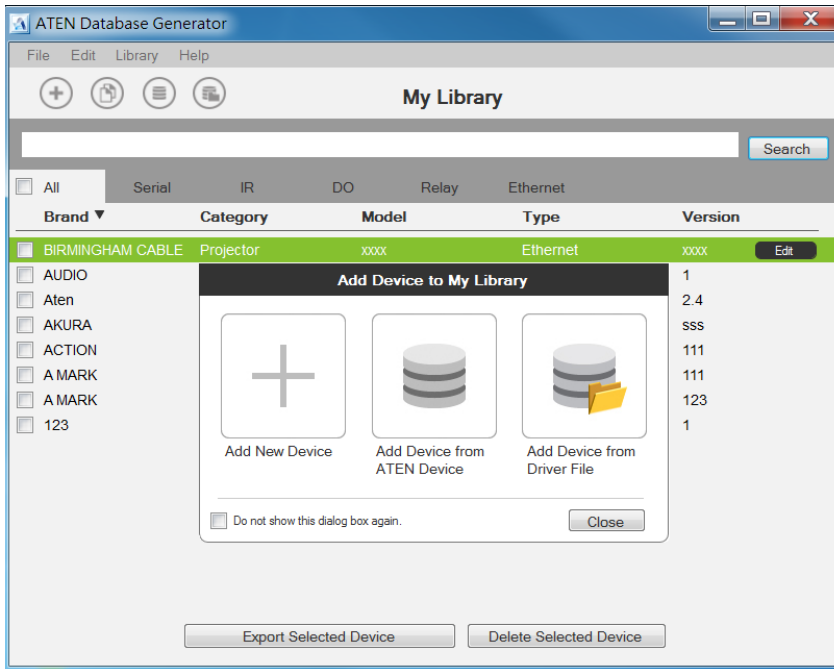


Menu	Description
Add New Device	Configure a custom hardware device to add to My Library.

Menu	Description
Add Device from ATEN Device Library	Add devices from the ATEN Device Library to My Library.
Add Device from Driver File	Add devices from a database file (*.vkd) to My Library.
Check Box	Click <i>Do not show this dialog again</i> to prevent the dialog from appearing when the Database Generator is opened. Use the Preferences menu option to bring the dialog window back.
Close	Click the <b>Close</b> button to exit the dialog window.
Add New Device	Configure a custom hardware device to add to My Library.


## My Library

*My Library* allows you to create custom hardware devices which can be selected to configure ports on the controller. **My Library** lists all the hardware devices that you have created, added, and edited using the Database Generator. You can create new hardware devices or add existing devices from the ATEN Device Library (page 280). These devices can then be selected from **My Device Library** for use.

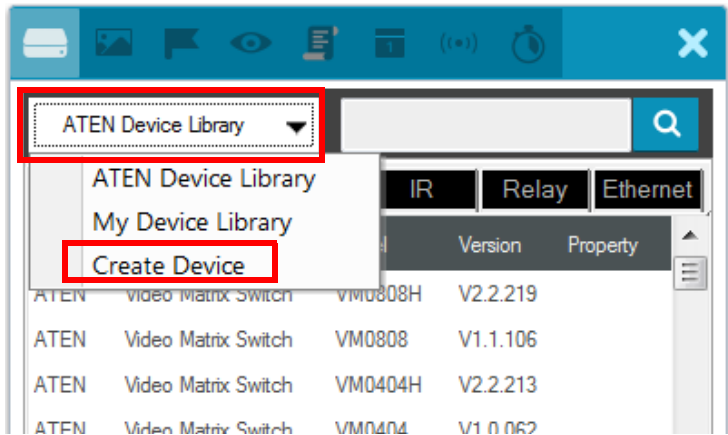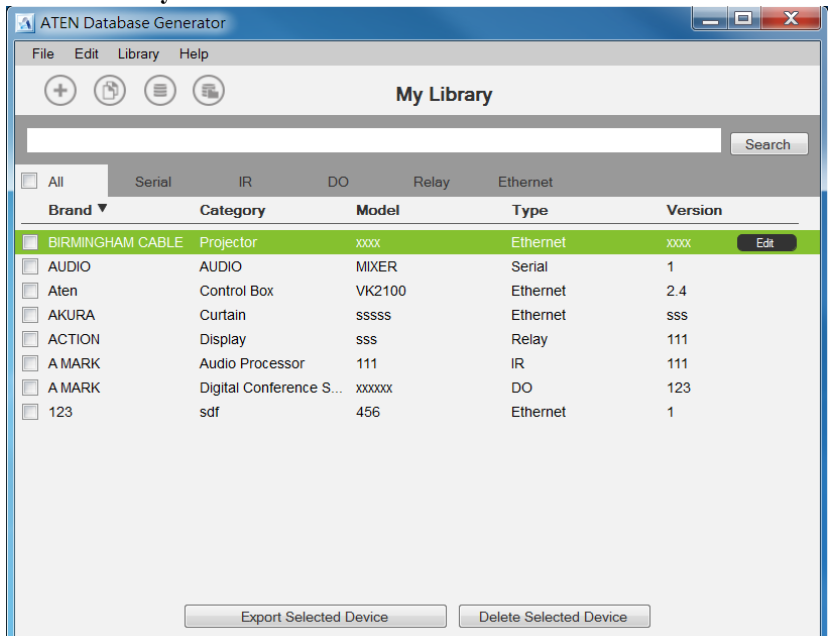

## Function Tabs

More functions can be accessed from the function tabs toward the top of the My Library window. Refer to the table below for information about each function.

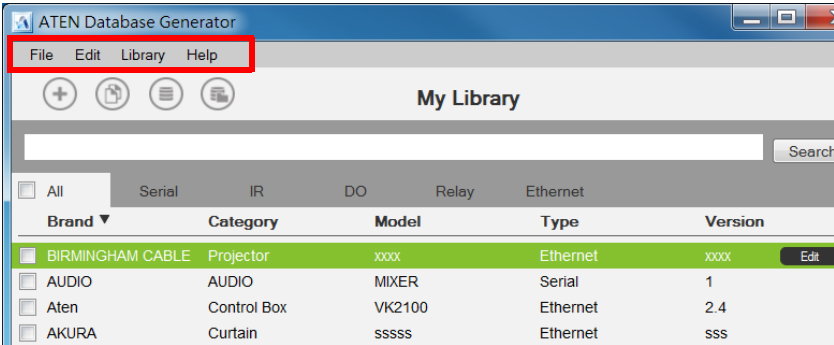


Tab	Description
File	<p>The <i>File</i> menu provides options to:</p> <ul style="list-style-type: none"> <li>♦ <b>Add New Device:</b> Configure a custom hardware device to add to Device Library.</li> <li>♦ <b>Add Device from ATEN Device Library:</b> Add devices from the ATEN Device Library to My Library.</li> <li>♦ <b>Add Device from Driver File:</b> Add devices from a data-base file (*.vkd) to My Library.</li> <li>♦ <b>Export My Library:</b> Saves My Library as a database file (*.vkd) that can be imported later.</li> <li>♦ <b>Export Selected Device:</b> Saves the selected device(s) as a database file (*.vkd) that can be imported later.</li> <li>♦ <b>Controller Connection:</b> Searches for a controller to test the connection or run the learning mode for the IR port.</li> <li>♦ <b>Quit:</b> Exits the program.</li> </ul>

Tab	Description
Edit	<p>The <i>Edit</i> menu provides options to:</p> <ul style="list-style-type: none"><li>♦ <b>Delete:</b> Deletes the selected devices from the data-base.</li><li>♦ <b>Duplicate:</b> Makes a copy of the selected device(s) and adds them to the library with the extension “-Copy”</li><li>♦ <b>Preferences:</b> Provides options to:<ul style="list-style-type: none"><li>♦ Set the <i>Language</i></li><li>♦ <i>Show Add Device dialog on startup</i></li><li>♦ <i>Show IR Learning tips</i></li><li>♦ Set the <i>IR Learning Timeout</i> - how long to attempt a connection to an IR device before IR learning stops.</li></ul></li></ul>
Library	<p>Provides a list of the Libraries that you can open to select devices from and edit or add to My Library. The libraries that are listed here appear when you select a database using <i>Add Device from Driver File</i>.</p>
Help	<p>Provides support and software version information.</p>

## Controls on the My Library Window

You can add new devices by creating a new device, duplicating an existing device, selecting a device from the ATEN Library or importing a driver file. Use the check boxes to select individual devices or **All** to select the entire list.

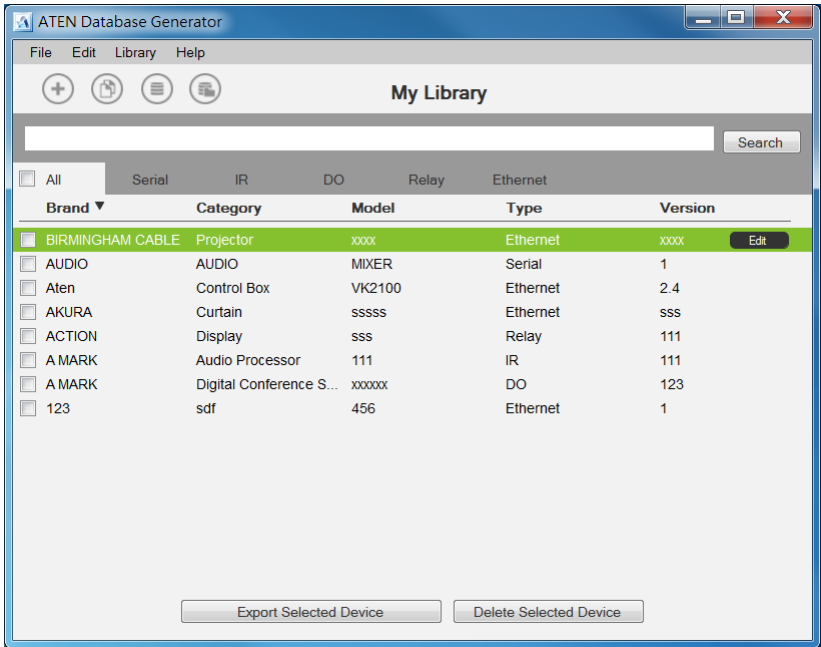

Click to add a new custom device to the database.



 
Select a device and click this icon to create a duplicate.




Click to add and edit a device from the ATEN Device Library.



Click to add a device from the driver file.



 Select a device and click **Edit** to change the settings.



Key in word strings then click **Search** to find a device.

- ♦ Click **All**, **Serial**, **IR**, **DO**, **Relay** or **Ethernet** to filter the list by type.
- ♦ Click **Brand**, **Category**, **Model**, **Type** or **Version** to sort the devices.
- ♦ Click **Export Selected Device** to save the selected devices.
- ♦ Click **Delete Selected Devices** to remove the selected devices.

## Editing / Adding a New Device

---

To edit or add a device to My Library, do the following:


1. From the menu select **File** → **Add New Device**, or select a device from My Library and click **Edit**.
2. Under **General**, use the drop-down menus or type in the *Brand Name*, *Category*, *Model* and *Version*.

**Note:** The *Category* determines what buttons are auto generated when a Viewer page is created for the device.

3. Use the **History** button to open the *Version History* editor and make notes about the updates being made to the device configuration. You can create and use different versions of the same device and track the changes. The version history can be viewed and different versions selected from the ATEN Configurator, under device **Properties**.
4. Check the hardware type and configure the device. ATEN database generator supports serial, IR, digital output, relay, and Ethernet devices. For more information about configuring each of these device type devices, refer to the following sections.
  - ♦ Serial: See *Serial Device*, page 261.
  - ♦ IR: See *IR Device*, page 266.
  - ♦ Digital output: See *Digital Output Device*, page 268.
  - ♦ Relay: See *Relay Device*, page 269.
  - ♦ Ethernet: See *Ethernet Device*, page 270.



# Serial Device

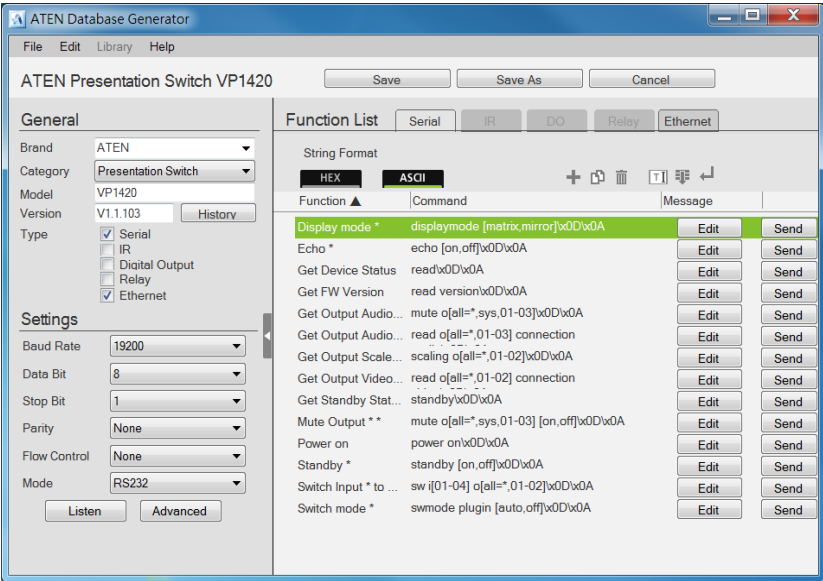

Click to add an Action.



Click to create a duplicate of the Action.



Click to delete the selected action.



Click to enter a string within () which allows the text to be edited from the VK6000 in the *Button Action - Commands* list (see page 173).



Click to add a drop menu into a Command string, and then enter the number sequence in the brackets []. The **Function** name must include an asterisk (\*) for each drop menu in the Command string. The drop-down menu will appear where the (\*) is entered in the Function name.

---


**Note:** To allow reserved characters to be part of the command, type a backslash “\” in the command column, followed by the special character.

---



Click to add an *Enter* into the Command string.

Right-click one or more serial commands to copy and paste them as Ethernet commands of all protocols (except HTTP/HTTPS):

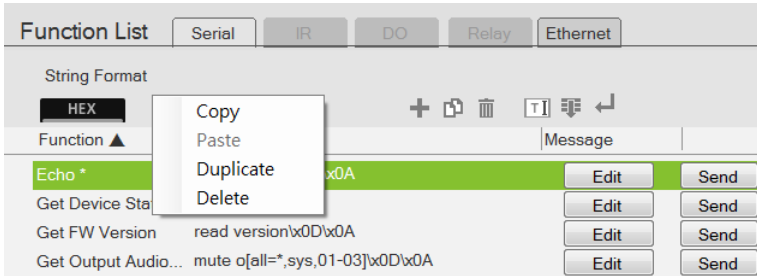

- ♦ **Settings** – Use the drop-down menus to set the: *Baud Rate, Data Bit, Stop Bit, Parity, Flow Control* and *Mode* settings.
- ♦ **Listen** – Use this function to create a list of device parameters that you want the controller to monitor by receiving notifications on setting or status changes of the specified parameters.

---

**Note:** To set up queries for the status of a device parameter, go to the Function List and click **+** to add the querying action as a command.

---

#### ♦ **Advanced**

- ♦ **Delay Interval** – Sets a time delay for each command before they are sent to the device.
- ♦ **Feedback Timeout** – Sets the maximum interval that the controller allows in between parts of a feedback message. If the controller has not received any feedback for longer than the specified Feedback Timeout, the controller identifies the last bit of the received information as the end of a feedback message.
- ♦ **Receive Duration** – Sets the allowed duration of time for the serial device to receive a complete message from the controller.
- ♦ **Checksum Type** – To have the checksum automatically calculated and filled in by the controller, select **Modbus** for this setting.


- ♦ **Keep Connection Alive** – Specify an interval that the controller waits before sending the specified command to test if the connection to the serial device is up or down.
- ♦ **Function List** – Use this section to configure the device functions by adding actions to the list.
  - ♦ **String Format** – Use the buttons to select HEX or ASCII. To use HEX strings with ASCII one, select ASCII and type \x before typing the HEX strings.

**Note:** HEX strings are also supported under the ASCII format.

- ♦ **Function** – Lists the actions created for a device. A Function name must include an asterisk (\*) if you are adding a drop menu to the Command string. Double-click to edit the function name.
- ♦ **Command** – Shows the command string created for the action. Double-click to edit the string.
- ♦ **Message** – The Message column is used to create and store feedback and/or queries for the corresponding command.
  - ♦ For more information about adding feedback, see *Testing Commands*, page 276.
  - ♦ For more information about creating queries, see *Configuring Queries*, page 278.


- Click **Send** to connect to a controller and test the typed command.


Please select a controller.

 Intelligent Search

Intelligent Search

Searches for all controllers on the LAN

 Search by IP Address



	Controller ID	Model Name	IP Address	MAC Address	Firmware
<input type="checkbox"/>	ID-1	VK2100	10.3.41.119	00:10:74:b2:01:74	2.7.262.002

Serial

OK

Cancel


- Click to select a controller from the list. Use the **Refresh** button to refresh the list. To browse for controllers in the LAN, click the **Intelligent Search** button or type the IP address of the controller.
- Click **OK** to proceed to test the command. For details, see *Testing Commands*, page 276.

### Text Command Tools

The following formats allow you to enter command strings with text that provide special features. These formats work in Serial and Ethernet commands.


- ()** entering text in () allows the command to be edited in the VK6000.  
**Example:** (A1 A9) (A8 B6) – this command string will provide two editable text boxes from the VK6000 in the *Button Action - Commands* list which allow you to change the command string:

3 Commands

 (Serial) on VK2100-ID01 Port (2) 3 Function name

- ◆ = using the equals sign before a text command allows you to type in words which will show up in a drop-down menu to describe the command, rather than show the text command itself.

**Example:** `[Power On=0A,Power Off=0B,Standby Mode=0C]` – this command string will provide a drop-down menu with three choices using the text before the equal signs to describe each command – from the VK6000 in the *Button Action - Commands* list:

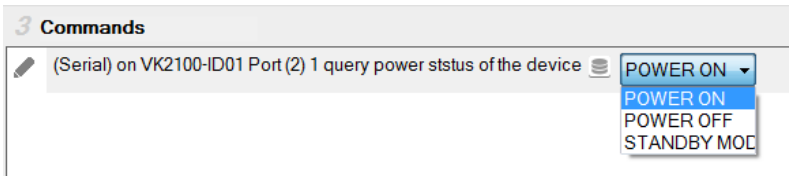

- ◆ “” quotation marks allow three symbols (, = @) to be added to a command that uses the equal sign as described in the example above. Three symbols not allowed within the quotation marks include (“” () []). Quotation marks can be used to the left of = in a **HEX** command; on either side of = in an **ASCII** command; and anywhere in an **Ethernet** command.

**HEX Example:** `[“Power=On”=0A,”POWER=Off”=0B]`

**ASCII Example:** `[“Power=On”=pwn,”POWER=Off”=pwf]`

In the HEX example, **“Power=On”** allows the equal sign to be inserted before **=0A**. If the quotes are removed, the command **Power=On=0A** would fail as an *Invalid String*.

## IR Device




Click to add an Action.



Click to create a duplicate of the Action




Click to delete the selected action.

- ◆ **Settings** – Use the drop-down menu to set the **Repeat** setting (number of times a signal is sent): *1 Time*, *2 Times* or *3 Times (Default)*.
- ◆ **Advanced**
  - ◆ **Delay Interval** – Sets a time delay for each command before they are sent to the IR device.
  - ◆ **Receive Duration** – Sets the allowed duration of time for the IR device to receive a complete message from the controller.
- ◆ **Function List** – Use this section to configure the IR functions by adding actions to the list.
  - ◆ Click  to add an action. In the pop-up dialog box:
    - ◆ **Auto Learn:** Select this option to add the action through learning,
    - ◆ **Manual Input:** Select this option to add the action using Pronto hex codes. Double-click the command to enter the Pronto code for the device.

**Note:** To obtain Pronto codes for a control system managed, third-party device, search Internet forums or the manufacturer's product web pages.

- ♦ **Quick Mode** – Click to run Learning Mode for all IR actions in the Function List. When the Quick Mode window opens, click Start, a pop-up window appears to select a controller. Check a box to select a controller and click Select. Click Start a second time to run Quick Mode using the *Learn* instructions below.
- ♦ **Function** – Lists the actions created for a device. Double-click to edit the Function the name.
- ♦ **Status** – Reports the status (**Tested**, **Failed**, **Learned**) of the Learn and Test buttons.
- ♦ **Learn** – Use to transfer commands from an IR remote to the Control Box. Click **Learn**. The Select Controller window appears.
  - ♦ Click to select a controller from the list. Use the **Refresh** button to refresh the list. To browse for controllers in the LAN, click the **Intelligent Search** button or type the IP address of the controller.

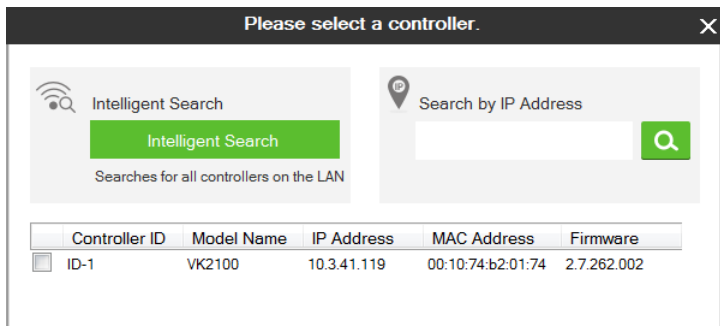

- ♦ Click **Learn** a second time to start learning mode. When the IR Learn LED flashes green, point the IR remote at the Control Box's front panel IR Receiver and push a button on the remote. Press the button on the remote just as you would when using it with the hardware device. If the device responds to a *long hold* or *quick tap* of the remote's button then you must press the button in the same manor (long hold or quick tap) when it using for Learning mode. The Control Box will beep and the Learn LED will light solid (then turn off) when IR learning is successful. The LED also turns off if Learning mode times out.
- ♦ **Test** – Use to test if commands are sent successfully to the Control Box and hardware device.

- ♦ Click **Test**, a pop-up window appears to select a controller and the IR port. Check a box to choose a controller and use the drop-down menu to select the IR port and then click **Select**.
- ♦ Click **Test** a second time to test if the IR data transmits successfully to the Control Box. Check the hardware device to confirm that it responded appropriately.
- ♦ The **Status** column reports the Learn and Test results.

## Digital Output Device

AUDIO SOURCE Projector

Save Save As Cancel

General

Brand: AUDIO SOURCE

Category: Projector

Model:

Version: History

Type: ☐ Serial ☐ IR ☒ Digital Output ☐ Relay ☐ Ethernet

Settings: Advanced

Function List: Serial IR DO Relay Ethernet

Function	Command
Function name 1	Open



Click to add an Action.



Click to create a duplicate of the Action



Click to delete the selected Action.

- ♦ **Advanced** – Click to use the *Delay Interval* drop-down menu to set a timed delay for each command before it is sent to the device.
- ♦ **Function List** – Use this section to configure the Digital Output device functions by adding actions to the list.
  - ♦ **Function** – Lists the actions created for a device. Double-click to edit the Function name.
  - ♦ **Command** – Shows the command selected for the action. Click the drop-down menu to select an action (Open, Close, Toggle, Pulse).



## Relay Device

AUDIO SOURCE Projector

Save Save As Cancel

**General**

Brand: AUDIO SOURCE

Category: Projector

Model:

Version: History

Type: ☐ Serial ☐ IR ☐ Digital Output ☒ Relay ☐ Ethernet

**Settings**

Advanced

**Function List** Serial IR DO Relay Ethernet

Function Command

Function	Command
Function name 1	--



Click to add an Action.



Click to create a duplicate of the Action



Click to delete the selected Action.

- ♦ **Advanced** – Click to use the *Delay Interval* drop-down menu to set a timed delay for each command before it is sent to the device.
- ♦ **Function List** – Use this section to configure the Relay device functions by adding actions to the list.
  - ♦ **Function** – Lists the actions created for a device. Double-click to edit the Function name.
  - ♦ **Command** – Shows the command selected for the action. Click the drop-down menu to select an action (Open, Close, Toggle, Pulse).

# Ethernet Device

General

BrandAUDIO SOURCE

CategoryProjector

Model

VersionHistory

Type

Serial

IR

Digital Output

Relay

Ethernet

Settings

ProtocolTELNET

Port23

Advanced

Function ListSerialIRDORelayEthernet

+


Function ▲


Command


Feedback


Function name 1


Send

 Click to add an Action.


 Click to create a duplicate of the Action.

 Click to delete the selected action.


 Click to enter a string within ( ) which allows the text to be edited from the VK6000 in the *Button Action - Commands* list (see page 173).

 Click to add a drop menu into a Command string, then enter the number sequence in the brackets []. The **Function** name must include an asterisk (\*) for each drop menu in the Command string.

**Note:** To allow reserved characters to be part of the command, type a backslash “\” in the command column, followed by the special character.

 Click to add an *Enter* into the Command string.

Right-click one or more Ethernet commands (except HTTP/HTTPS) to copy and paste them as serial commands:

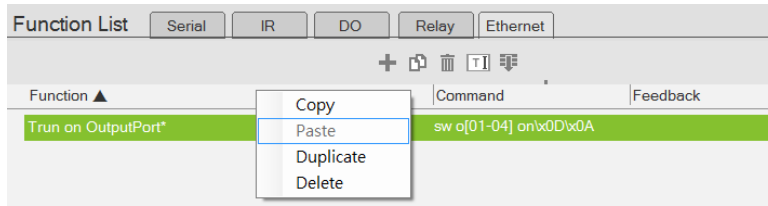

For special command string tools, see *Text Command Tools*, page 264.

◆ **Settings**

- ◆ **Protocol** – Click the drop-down list to select a protocol for the device
- ◆ **Port** – Type the port number for the device.
- ◆ **Advanced** – Click to configure the following settings. The supported settings may vary depending on the device protocol and authentication type.

Delay Interval	Sets a time delay for each command before they are sent to the device.
Delay Time after Login	Sets a time interval that the controller waits to request for login credentials of a device after establishing connection with the device.
Receive Duration	Sets the allowed duration of time for the Ethernet device to receive a complete message from the controller.
Send command after successful connection	Enter a <i>First</i> and <i>Second Command</i> to send to the device after a successful connection has been established.
Auth Type	Sets the authentication type for the device.
Timeout	Specifies the maximum time that the device allows for receiving each feedback message from the device before timing out.
URI path	Type the part of the WebSocket URI that follows its communication port. For example, if the URI is <b>wss://&lt;host&gt;:31416/Dicentis/API</b> , type <b>/Dicentis/API</b> in this field.
Sub-protocol	Type the subprotocol for the Ethernet device. This information shall be available in the device's reference or user manual.
ExHeader	Type the required data for handshake header.
Extension	Type the required data for the Sec-WebSocket-Extensions header field.
Login Command	Sets the command for logging in to the device.

Parameter	<p>Sets the parameters (keys) of the device that are required for the controller to connect to the device. For example, the device username and password are required when connecting to the device, and the valid values are <b>admin</b> and <b>123456</b> respectively.</p> <div><div>Parameter</div><div>Key ?</div><div>Value</div></div> <div><table><tr><td>username</td><td>x</td><td>admin</td><td>x</td><td>x Remove</td></tr><tr><td>password</td><td>x</td><td>123456</td><td>x</td><td>x Remove</td></tr></table></div> <div>+ Add Additional Key &amp; Value</div>	username	x	admin	x	x Remove	password	x	123456	x	x Remove
username	x	admin	x	x Remove							
password	x	123456	x	x Remove							
Keep Connection Alive	Specify an interval during which the controller sends the specified command to make sure the it is connected to the Ethernet device.										
Automatically reconnect if no return message is received	Check this box if you want to continue reconnection attempts when no return message is received from the device.										
WSS	Select to encrypt the WebSocket connection.										
Use Default	Click this button to restore to default settings.										

- ♦ **Function List** – Use this section to configure the device functions by adding actions to the list.
- ♦ **String Format** – Use the buttons to select *HEX* or *ASCII*. (TCP only)
- ♦ **Function** – Lists the actions created for a device. A Function name must include an asterisk (\*) for each drop menu you add to the Command string. Double-click to edit the function name. The drop-down menu will appear where the (\*) is entered in the Function name
- ♦ **Command** – Shows the command string created for the action.
  - ♦ To edit a command for a Telnet, PJLINK, ONVIF, or TCP compliant device, double-click the **Command** field (green area in the interface).
  - ♦ To edit a command for an HTTP or HTTPS compliant device, click the **Edit** button. The Edit HTTP(S) Command window appears. To write commands in JSON format, enable the **JSON format** checkbox.

**Note:** When **JSON format** is enabled, the drop menu function (using square brackets) will be disabled.

The screenshot shows the 'Edit HTTP(S) Command' dialog box. It has a title bar with the text 'Edit HTTP(S) Command' and a close button (X). Below the title bar, there are two dropdown menus: 'Type' (set to 'HTTP') and 'Method' (set to 'GET'). There are also three icons: a list icon, a refresh icon, and a save icon. The main area of the dialog is divided into four sections: 'URI', 'Parameter', 'Header', and 'Body'. Each section has a 'Command' field and a 'Clear' button. The 'URI' section has a 'Command' field with a 'Clear' button. The 'Parameter' section has a 'Command' field with a dropdown arrow and a 'Clear' button. The 'Header' section has a 'Command' field with a dropdown arrow and a 'Clear' button. The 'Body' section has a 'Command' field, a 'JSON format' checkbox, and a 'Clear' button. At the bottom right of the dialog are 'Save' and 'Cancel' buttons.

- ♦ **Feedback** – Stores return messages generated by testing the command strings. Double-click to manually add or remove stored messages. This function is not applicable for ONVIF devices.

- ♦ **Send** – Click this button to test the command for the function. The return messages can be saved to Feedback.

This screen appears when **Send** is clicked. Select a controller for the device to connect and configure the fields such as device IP address.

Please select a controller.

**Intelligent Search**  
Intelligent Search  
Searches for all controllers on the LAN

**Search by IP Address**  
Search by IP Address

Controller ID	Model Name	IP Address	MAC Address	Firmware
<input type="checkbox"/> ID-1	VK2100	10.3.41.119	00:10:74:b2:01:74	2.7.262.002
<input type="checkbox"/> ID-3	VK2100	10.3.41.97	00:10:74:b2:01:99	2.6.253.002

HTTP(S)

IP Address

Encryption **None**

**OK** **Cancel**


Intelligent Search	Click to locate controller without specifying an IP address. This option only searches for controllers on the same local area network. For controllers across a network device, such as a router or switch, you must specify the IP address.
Search by IP address	Enter the IP address and click <b>Search</b> to locate a controller.
Controller ID	Use the check box to select the Controller, fill in the IP Address, Username and/or Password and then click <b>OK</b> . Next use the instructions below this table.
Refresh	Click this button to refresh the Controller ID list.
IP Address	Type the IP address of the device.
Username	Type the device's username.
Password	Type the device's password to grant access right to the controller.

Receive message for	Specifies the maximum allowed time that the device receives messages from the selected controller.
---------------------	--

**Note:** The username and password are not required for UDP and TCP devices, and the username is not required for PJLINK devices.

## Testing Commands

After selecting a controller for the device and configure the required settings (if any) in the select controller window, click **OK** to proceed to test the typed command. The Test Command window appears.

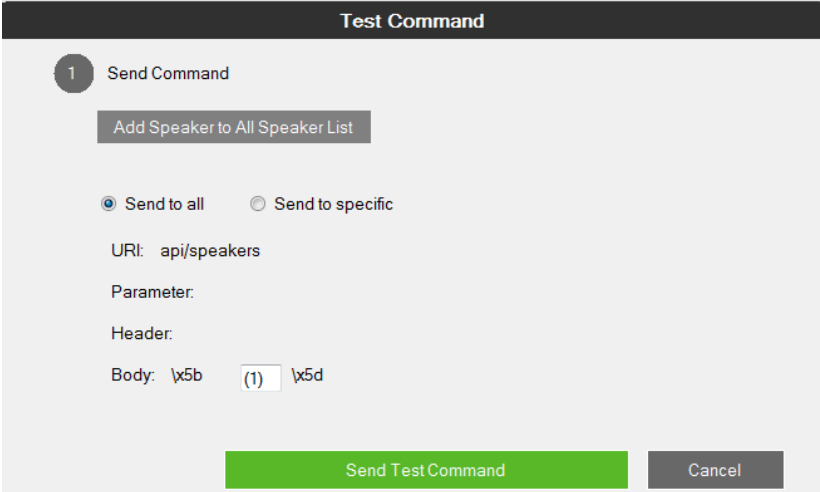

**Test Command**

1 Send Command

Add Speaker to All Speaker List

☒ Send to all ☐ Send to specific

URI: api/speakers

Parameter:

Header:

Body: \x5b (1) \x5d

Send Test Command Cancel



Select which device to send command to by choosing **Send to all** or **Send to specific** and then click **Send Test Command**. This window appears.

**Test Command**

2 Feedback message

Function	Feedback
Add Speaker to All Speaker List	Waiting

Add Pause

**Saved Feedback Message**

Add feedback...

Save & Exit Cancel

The test results will appear in the yellow area of the window and the feedback messages listed in the Feedback column.


- ♦ **Add** – Click to save a feedback message in the Saved Feedback message window.
- ♦ **Pause / Continue** – Click to pause sending/receiving the command/return message.
- ♦ **Save & Exit** – Save the feedback messages to the list and close the window.

## Configuring Queries


You can set up queries to actively monitor parameters of a serial or Ethernet device and store the obtained value into a variable for reuse in a control system project.

Take the example of querying the cumulative number of hours that a projector lamp has been used to be able to estimate the remaining lifespan and plan for replacement in advance.

1. In Database Generator, click **Edit** to enter the settings page for the projector.

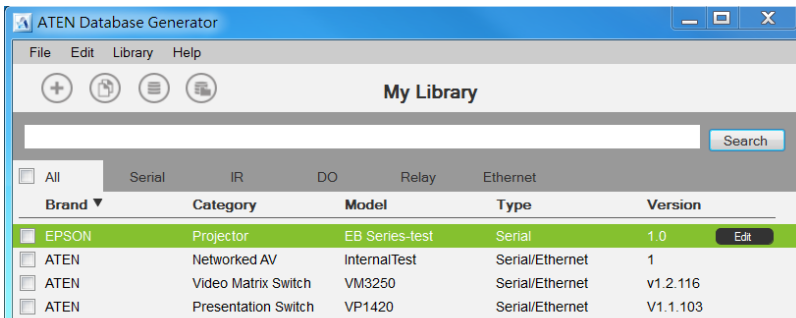

2. Add a command by clicking **+** and double-click the command column to type the command of requesting for the cumulative lamp usage (hour). Consult the user manual for the device to find out the operation command.

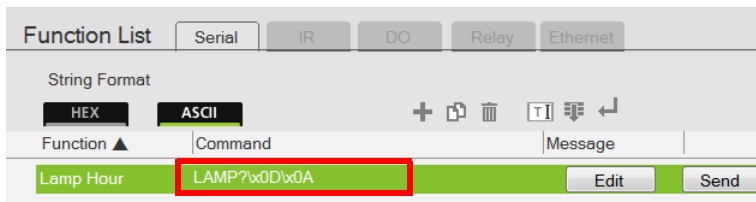

3. Set up a variable to store the queried value.
  - a) In the Message column, click **Edit**. The Edit Messages window appears.
  - b) Click the **Script** tab and click **+Add Script** and name the script.

c) Write up a script to create a variable that stores the requested value, in this case, the cumulative lamp hour.

FeedbackScript

Read Lamp Hour

+ Add Script

1 Edit Script

Script Information

Query0.1 SecTrigger Modeand

function vk\_parser(input)

if input == nil or input == "" then

return

end

for index, hour in string gmatch(s, "LAMP(%?+)") do

local index = tonumber(index)

projectorInfoTable[index] = {}

\_G[Projector\_TAG\_DEFINE\_LAMP] = hour

end

2 Configure Variable

Variable List

Name	Type	Range	Default
vk_var_...	S...		NULL


Next

Save

d) Click **Save**.

## ATEN Library

The *ATEN Library* can be accessed from the project bar and provides the complete list of hardware devices available in the database. The You can add any device in the ATEN Library to My Library. Once a device is added to My Library, the device settings can be edited as needed.

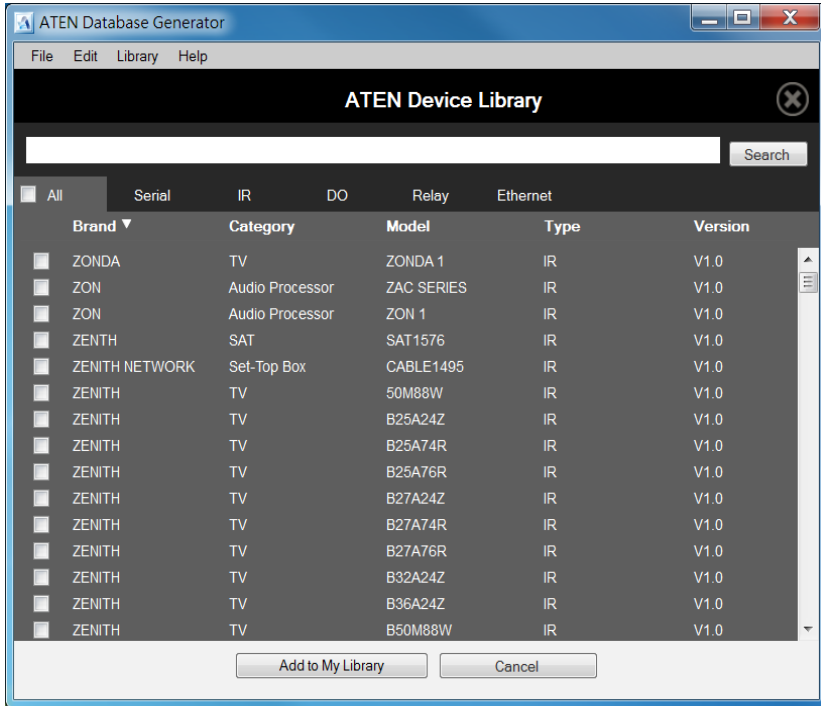

- ♦ Use the check boxes to select devices to add to My Library. Check **All** to select all devices in the list.
- ♦ Key in word strings then click **Search** to find a device.
- ♦ Click **All**, **Serial**, **DO**, **IR**, **Relay** or **Ethernet** to filter the device list by type.
- ♦ Click **Brand**, **Category**, **Model**, **Type** or **Version** to sort the devices.
- ♦ Click **Add to My Library** to add the selected devices to My Library.
- ♦ Click **Cancel** to return to My Library.

## Chapter 6

# Remote PC Control

### Overview

---

While being capable of controlling serial, IR, I/O, and relay equipment, ATEN controllers also support remote control of computers. This control is achieved with a program, ControlAssist, that grants control right to a specified ATEN controller via the network. When a computer is installed with ControlAssist, you can remotely perform the following:

- ♦ Control PowerPoint slides
- ♦ Control media files through Windows Media Player
- ♦ Initiate actions on third-party programs using hotkeys that have been defined for the programs
- ♦ Perform system control such as shutting down the computer, execute command prompt, set system volume, and run a program

---

**Note:** For a full list of supported actions, see *Supported PC Control Actions*, page 292.

---

### Specifications

---

- ♦ Supported computers
  - ♦ Only Windows-based computers are supported for remote control.
  - ♦ Each computer is deemed as an Ethernet device to the ATEN controller, and therefore follows the specification that each controller can support up to 25 Ethernet devices.
- ♦ To use ATEN Viewers on a Windows platform, make sure to install Internet Explorer version 11 or later.
- ♦ PowerPoint File Control
  - ♦ ControlAssist only supports PowerPoint files that contain 200 slides or less, and are created using Microsoft Office 2007/2010/2013, or WPS Office.
  - ♦ ControlAssist only supports the following PowerPoint file formats: pps, ppt, and pptx.

♦ Media File Control

- ♦ ControlAssist only supports media files created using Windows Media Player.
- ♦ When a media file is remotely enabled and controlled using an ATEN Viewer, the file opens in Windows Media Player and this setting can not be changed.
- ♦ If you encounter any issues playing a media file, try install a third-party video codec.
- ♦ ControlAssist only supports control of the following media file formats:

Category	File Formats
Windows Media format	asf, wma, wmv, wm
Windows Media Metafiles	asx, was, wvx, wmx, wpl
Microsoft Digital Video Recording	dvr-ms
Windows Media Download Package	wmd
Audio Visual Interleave	avi
Moving Pictures Experts Group	mpg, mpeg, m1v, mp2, mpa, mpe, m3u
Musical Instrument Digital Interface	mid, midi, rmi
Audio Interchange File Format	aif, aifc, aiff
Sun Microsystems and NeXT	au, snd
Audio for Windows	wav
CD Audio Track	cda
Indeo Video Technology	ivf
Windows Media Player Skins	wmz, wms
QuickTime movie file	mov
MP4 audio file	m4a
MP4 video file	mp4, m4v, mp4v, 3g2, 3pg2, 3gp, 3gpp
Windows audio file	aac, adt, adts

## Setting Up Remote PC Control


---

Follow the steps below to install the required programs on the target computers, configure the associated controller, and customize the Viewer for remote PC control.

1. Make sure you have installed Microsoft Visual C++ Redistributable for Visual Studio 2015 to the target computer. To download the package, go to <https://www.microsoft.com/en-us/download/details.aspx?id=48145>
2. Install ControlAssist on the computer you wish to control. For detailed steps, see *Installing ControlAssist on Target Computers*, page 283.
3. Add the computer into the control system. For detailed steps, see *Adding Target Computers to the Control System*, page 286.
4. Create a control interface to be used on a licensed mobile device.
  - ♦ For detailed steps, see *Configuring a Control Interface*, page 288.
  - ♦ For details on licenses, see *Licenses for Mobile Control*, page 83.

### Installing ControlAssist on Target Computers


Follow the steps below to install ControlAssist on the computers you wish to control.


1. Download ControlAssist.
  - a) Visit the ATEN download page:  
<https://www.aten.com/global/en/products/professional-audiovideo/control-system/controlassist/>
  - b) Search for “VK6000”. A list of downloads for VK6000 appears.
  - c) Click **ControlAssist\_Vx.x.xxx.zip** to download.
2. From the downloaded file, double-click **ControlAssist\_Setup** to install the program. An installation wizard appears.
3. Follow the on-screen instruction to complete the installation.
4. When the installation is complete, ControlAssist  runs in the system tray.

---

**Note:** Keep the ControlAssist program enabled in the system tray to allow the controller to establish connection with the computer.

---

5. To configure ControlAssist, right-click  in the system tray and select **Settings**. This window appears.

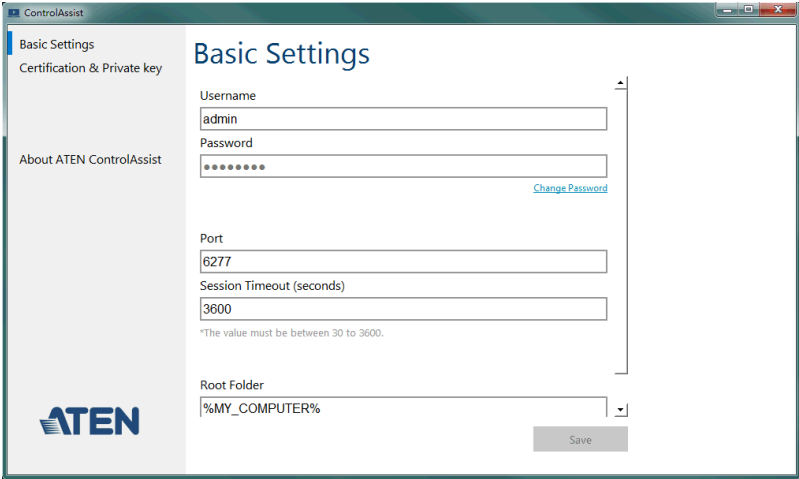

Click the **Basic Settings**, **Certification & Private Key**, or **About ATEN ControlAssist** to access the following settings/information.

Control	Default	Description
<b>Basic Settings</b>		
The settings with which an ATEN controller needs to establish connection with the computer and to gain control right.		
Username	admin	The credentials required for an ATEN controller to establish connection with the computer.
Password	password	<b>Note:</b> To change the username and password, make sure to log in the computer using an Administrator account.
Port	6277	The port through which ATEN Configurator establishes connection with the ControlAssist-installed computer.
Session timeout	3600	The maximal time allowed for the controller to establish connection with ControlAssist.
Root Folder	N/A	This field specifies the computer path under which files are display in the PowerPoint Control and Media templates' file list. To display files at the computer's partition level, type <b>%MY_COMPUTER%</b> in this field.




Control	Default	Description
<b>Upload SSL Certificate and Private Key</b>		
Upload an SSL certificate and its private key to secure sessions between the computer and the connected controller.		
Certificate	Default certificate	Click <b>Choose a file from...</b> to browse for an SSL certificate.
Private key	Default private key	Click <b>Choose a file from...</b> to browse for a private key SSL certificate.
<b>About ATEN ControlAssist</b>		
Version	N/A	Indicates the release version.
Visit Official Website	N/A	Click to open the official website for more information.

**Note:** If the text in the ControlAssist window appears oversized, change the desktop font size to its default, and then log in the computer again to resolve the issue.


## **Adding Target Computers to the Control System**

After you have installed ControlAssist on the computers you wish to control, follow the steps below to establish connection between the controller and the target computers.


1. From ATEN Configurator, locate and open your project file.
2. Click the **Device** tab, and from the Ethernet device type category, click on a blank device or click **Add More Devices** to add one.
3. Click **Library**. This window appears.

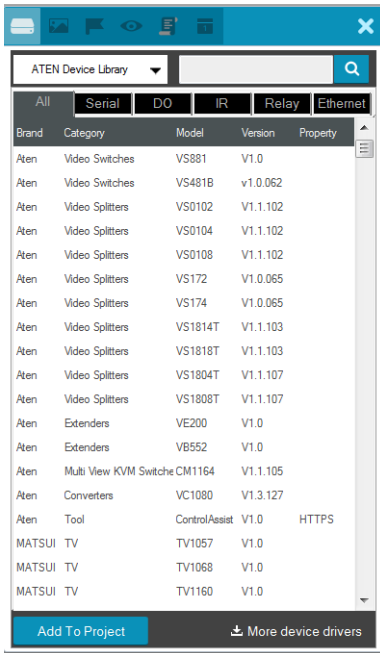

- Use the search box to search for “controlassist” to load the ControlAssist database. This screen appears.

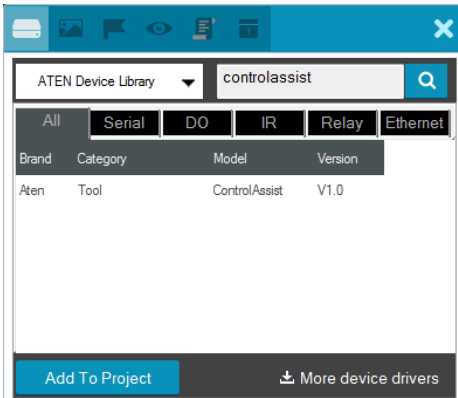

- Click **Add to Project**. This computer, identified as an Ethernet device installed with ControlAssist, appears in the Device Configuration List.

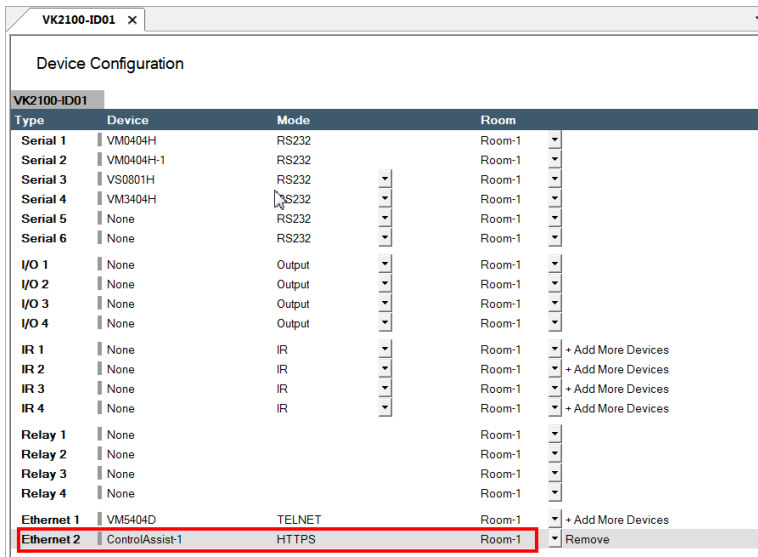

- Select the newly added device and configure the Properties settings on the right of the interface.

**Hint:** If you have more than one computers installed with ControlAssist, change the device name to distinguish these PCs.


For details on Properties settings, see *Ethernet Device Properties*, page 119.

## Configuring a Control Interface


### Example 1:

Follow the steps below to create a control interface that allows you to browse and play any file from the specified root folder (see page 283) in the target computer. You can follow the the same logic for creating a media control page.


1. In the **Design** tab, make sure your home page contains a presentation button and the Viewer contains a PowerPoint page.

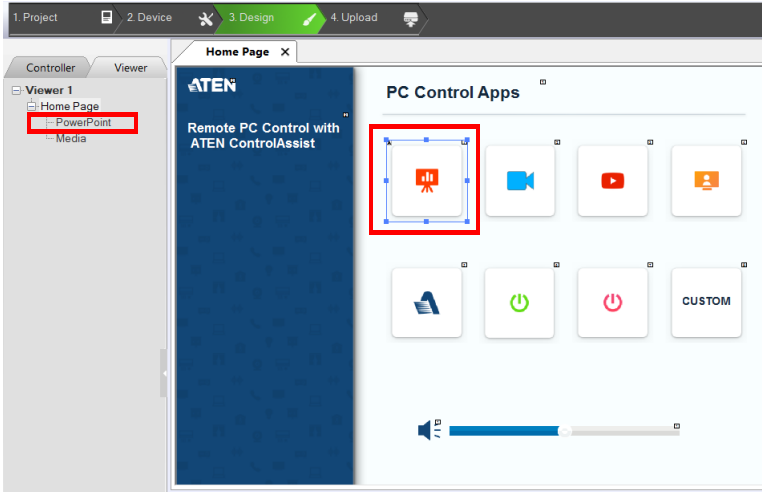

2. Configure the button to have it link to the PowerPoint page if pressed in the Viewer.
  - a) Click the presentation button.
  - b) Select **Link** and then double-click the **PowerPoint** page.

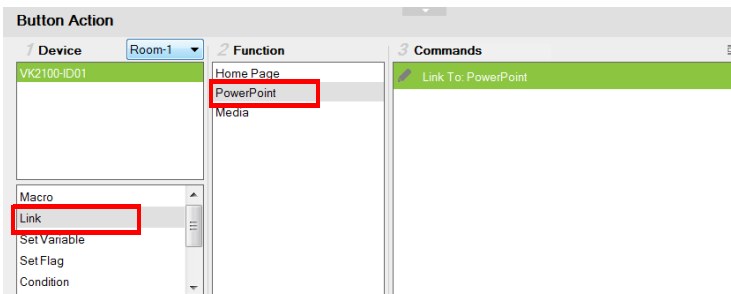


3. Configure the PowerPoint page if you did not use a built-in Viewer template.
  - a) In the left sidebar, click **PowerPoint**.
  - b) In the PowerPoint page, right-click any blank spot and select **PowerPoint Control Template**. A pre-made screen is added.

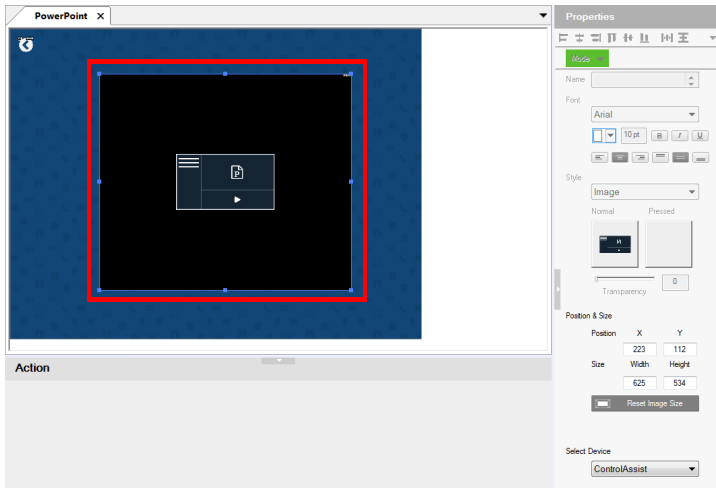

- c) In the Properties column, use the **Select Device** drop-down menu to select the PC that stores the PowerPoint files you want to play.

## Example 2:

Follow the steps below to create a quick access button for opening and playing a specific PowerPoint file. You can follow the same logic to create a button for opening and playing a specific media file.

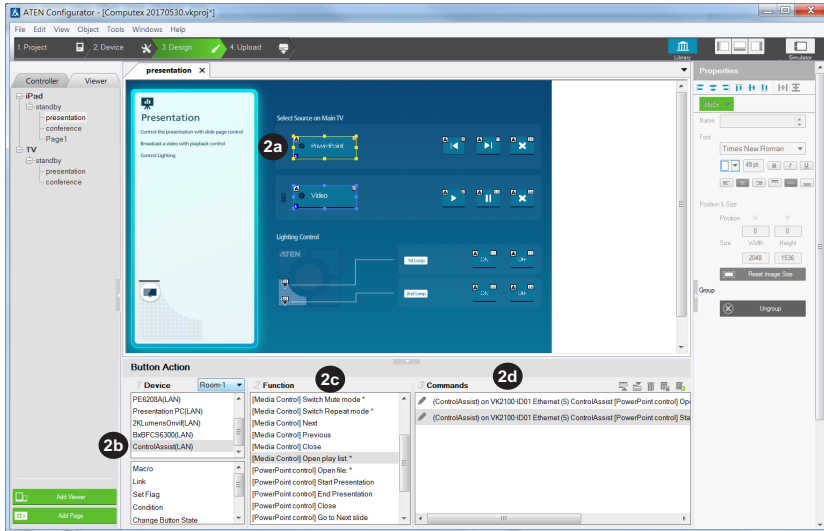

1. Create an outlook for the interface.
  - a) In ATEN Configurator, click the **Design** tab.
  - b) Click **Add Page** and rename the page to “presentation”.
  - c) Customize the interface and add control buttons using the **Properties** settings in the right-hand column. For details, see *Configuring the Control Interface (Viewer)*, page 128.
2. Define the action of each button. For example, for the **PowerPoint** button to open and start a slide show when pressed, do the following:
  - a) In the preview pane, click the **PowerPoint** button.
  - b) Select **ControlAssist (LAN)**.
  - c) Double-click [**PowerPoint**] **Open file** and then [**PowerPoint**] **Start presentation**.
  - d) Configure the commands and arrange them in the order of execution.

**Tip:** The asterisk (\*) at the end of a Function indicates that it requires configuration in the Commands column.

For details on supported control actions, see *Supported PC Control Actions*, page 292.

3. From the **Upload** tab, deploy and back up the project to the controller. For details, see *The Upload Tab*, page 250.

## Supported PC Control Actions

Command	Function
<b>Note:</b> Commands indicated with an asterisk require configuration after being added to the Commands column in the Configurator.	

### [Media Control]

**Note:** The commands in this group apply to Windows Media Player only.

Close	Closes the player.
Next	Plays next in the playlist.
Open file*	Opens and plays the specified file in Windows Media Player.
Open playlist*	Opens and plays the specified playlist in Windows Media Player.
Pause	Pauses the playback.
Play	Plays the opened file in Windows Media Player.
Previous	Plays previous in the playlist.
Set volume to*	Sets the player to a specified volume.
Stop	Stops the playback.
Switch to full screen mode*	Enables or disables the player to full-screen display.
Switch to mute mode*	Enables or disables mute mode.
Switch to repeat mode*	Enables or disables repeated play.
Volume*	Adjusts the player's volume up or down.


### [PowerPoint Control]

Open file*	Opens the specified PowerPoint file.
Start presentation	Starts the slide show of the specified PowerPoint file.
End presentation	Ends the slide show of the specified PowerPoint file.
Close	Closes the opened PowerPoint file.
Go to next slide*	Goes to the next slide.
Go to previous slide	Goes to the previous slide.
Go to slide	Goes to a specified slide number.

### [System Control]

Open file*	Opens a specified file saved in the target computer.
Open URL*	Opens a specified URL.
Run program*	Runs an application.
Shut down PC	Shuts down the computer.

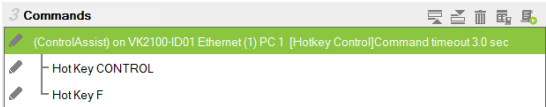

Command	Function
<b>Note:</b> Commands indicated with an asterisk require configuration after being added to the Commands column in the Configurator.	
Set volume*	Adjusts the computer's volume.
Execute Command Prompt*	Executes the specified command via Command Prompt.
Bring application to top*	Keeps the window of the specified program on top of other windows that are open on the desktop.
<b>[Hotkey Control]</b>	
Create action	<p>Executes the associated hotkey(s) on the program that opens topmost on the computer desktop.</p> <p>For example, if you have "Ctrl + f" defined as the hotkey for extending a program to full screen in the program itself, to remotely simulate this action, you should have one Create action command associated with two Select key commands, one defined as "Ctrl", and the other as "f":</p> 
Select key*	<p>Use this command to specify the hotkey as defined in the target program. If the hotkey involves pressing two or more keys at the same time, you will have two or more <i>Select key</i> commands associated to one <i>Create action</i> command. See the example in the <i>Create action</i> command above.</p>

**Note:** Adhere to the following guidelines when specifying file paths:

- ◆ Include the file name and file extension of the target file.
- ◆ Use double backward slashes between folder levels.
- ◆ If the file path contains space, put the file path in double quotations.
- ◆ The following are examples of valid file paths:  
"C:\\ControlAssist\\Presentation.pptx"  
"C:\\ControlAssist\\Presentation Demo.pptx"

This Page Intentionally Left Blank

# Chapter 7

## ATEN Control System App

### Overview

---

The ATEN Control System App is a platform that allows you to operate your control system using pre-made Viewers on mobile devices with an iOS, Android, or Windows platform.

### Requirements

---




Make sure your mobile device uses a supported version of the mobile operating system listed below before installing the app.

Mobile Operating System	Supported Version
iOS	13.0 or later
Android	8.0 or later
Windows	10.0 or later

### Installing the App

---

To install the ATEN Control System App on a mobile device, do the following:

1. From the mobile device, tap the **App Store**  or Google Play  icon.
2. In the search box, type “aten control”.
3. Tap *ATEN Control System*, and then download and install the app.
4. The ATEN Control System icon  appears on the mobile device. Tap the icon to open the app.

---


**Note:** The button sound is enabled by default. To mute button sound, go to Settings of the mobile device, find ATEN Control app and disable the button sound setting.

---

## Demo/Start Screen

---

When you open the ATEN Control System app for the first time, the demo/start screen appears:

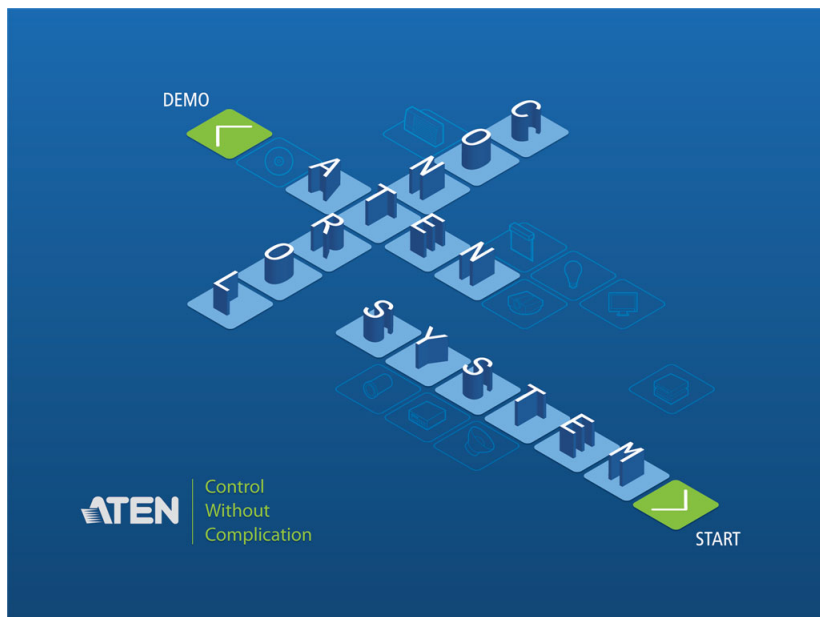


Tap **Demo** to try the ATEN Control System app. Tap **Start** to find a controller and download Viewers (see *Overview*, page 301).

**Note:** The default demo/start screen appears until a Viewer is downloaded to the Control System app. After a Viewer is downloaded, the default demo/start screen will reappear only if the app is reinstalled, which will also delete all Viewers.

---


The Demo page provides two sample Viewers. Tap either one to view the controls of different hardware devices.

To return to the demo/start page, tap **Quit Demo** at the top right corner.

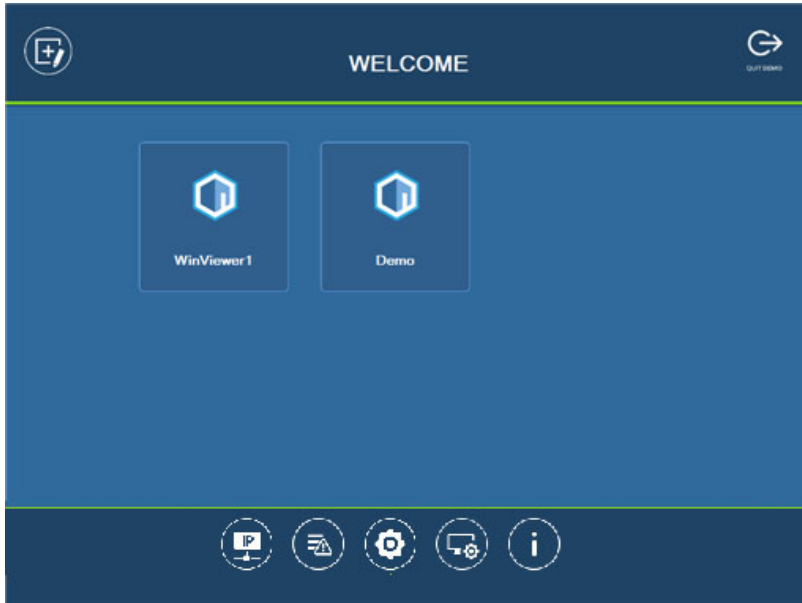


Select a Viewer or press any of the buttons on the Welcome page to demo the app. The first Viewer's name will depend on the OS of the device.

## WinViewer1 / iPad / Android1

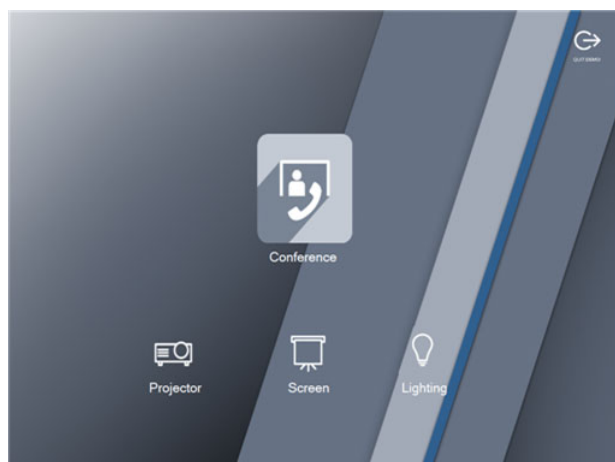

This demo shows a Conference call interface with controls for a **Projector**, **Screen** and **Lighting**. Tap any of the device icons to open each of the following control pages:



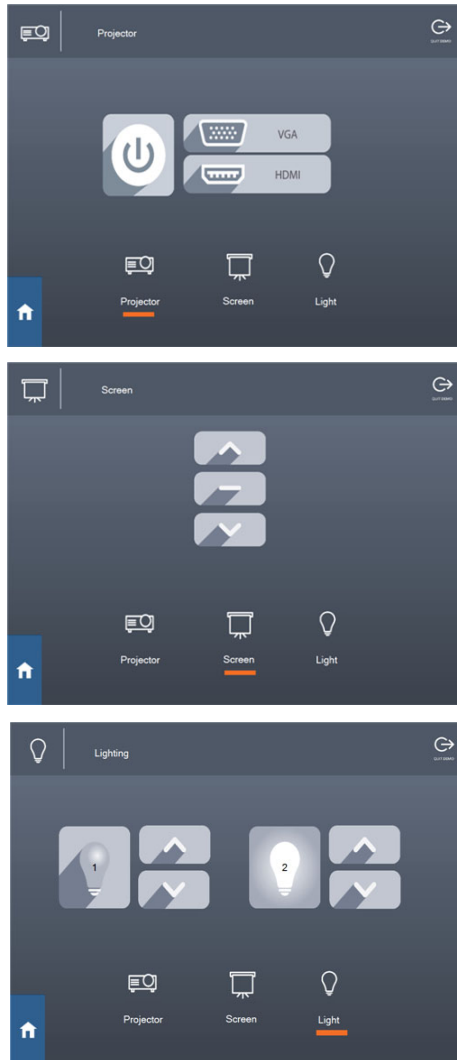


## Demo

This demo shows different buttons that can be pressed to control the **Projector**, **Lights**, **Video Wall** and **Camera**. Tap the icons to view control pages for each device. Tap the **Quit Demo** icon to return to the previous page, or press on the background until the logout dialog appears.



## Control Pages

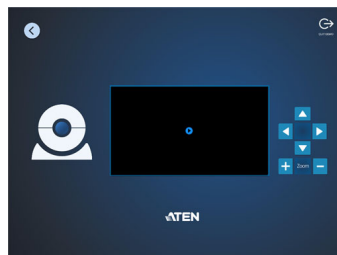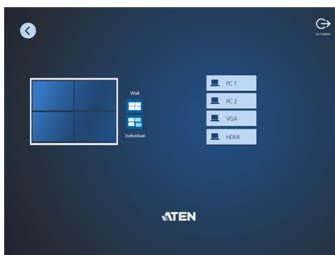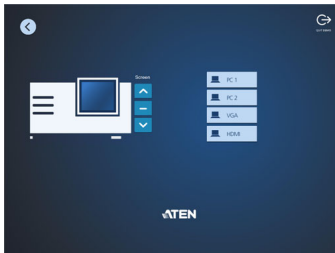


The images above show control pages for the **Projector**, **Lights**, **Video Wall** and **Camera** in *Demo*. Tap the **Home** icon in the lower left corner to return to the previous page, or press on the background until the logout dialog appears. To return to the demo/start page, tap **Quit Demo** at the top right corner.



## Overview

### Welcome (List of Viewers) Page

The *Welcome* screen is the home screen of the ATEN Control System app. It lists downloaded Viewers and provides administrative options. Tap a Viewer to open the controls for a room (see *Configuring the Control Interface (Viewer)*, page 128), or use the administrative options listed below.

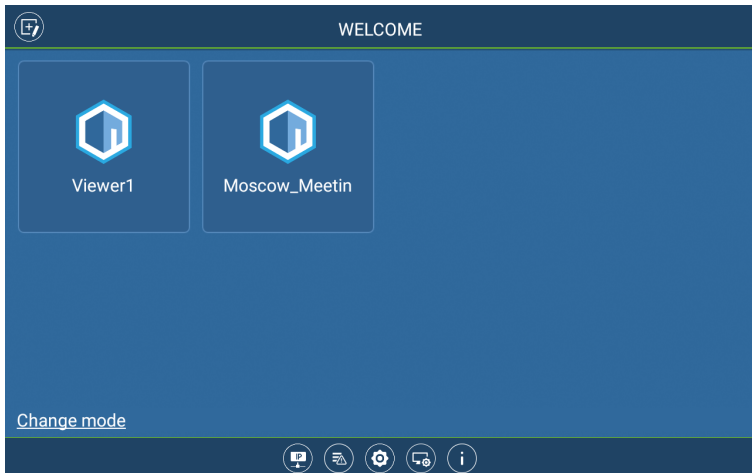




Control	Description
	<b>Manage Viewer</b> – Use this page to add, update, and remove downloaded Viewers. See page 302 for details.
	<b>Manage LAN Device</b> – Use this page to access controller's web console or configure the network settings for controllers and the devices that they manage. See page 303 for details.
	<b>Log Report</b> – Use this page to lookup logs to troubleshoot connectivity issues. See page 308 for details.
	<b>Preferences</b> – Use this page to set a password for accessing the app or configure the app's usage settings. See page 309 for details.
	<b>Settings</b> – Use this page to access the system settings page of ATEN Touch Panel. This tab is only accessible when the Control System app is used on an ATEN Touch Panel.
	<b>Information</b> – This page provides information about the ATEN Control System's software version. See page 316 for details.



### Manage Viewer

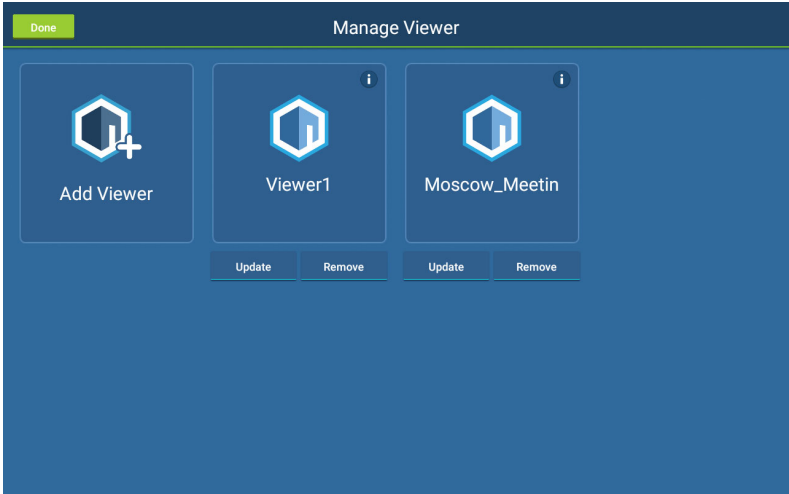The *Manage Viewer* page allows you to add, update, and remove downloaded Viewers. To download Viewers, tap **Add Viewer**.






Control	Description
	Tap <b>Add Viewer</b> to download Viewers. See page 317 for details.
	Tap the <i>Information</i> icon to view the <b>MAC Address</b> , <b>IP Address</b> and <b>Controller ID</b> of the controller associated with the Viewer.
Update	Tap <b>Update</b> to connect to the controller and download an updated version of the Viewer. After the update, the “Downloaded Successfully” prompt will appear
Remove	Tap <b>Remove</b> to delete the Viewer. A dialog box will appear to confirm deletion of the Viewer.  Tap <b>Delete</b> to remove the Viewer, or <b>Cancel</b> to cancel the deletion.  <b>Note:</b> Viewers are only deleted on the mobile device, and will still be available on the controller.
Done	Tap <b>Done</b> to return to the Welcome page.



## Manage LAN Device

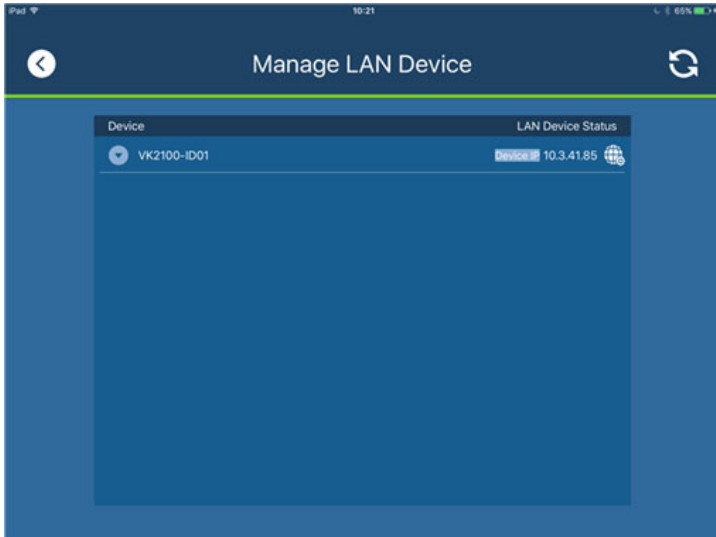The *Manage LAN Device* page allows you to edit network settings for the controllers and LAN devices added in the Configurator software (see *Device Library*, page 127).



Control	Description
	Tap to expand controllers to view connected LAN devices.
	Tap to open the web GUI (Chapter 3, Web-based Configuration and Control).

Depending on the LAN device you select, different options are available. Tap on a device to open the settings page. Use **Edit** to change settings, **Apply** to save or **OK** to exit.

## Controller

VK2100-ID01	<b>Edit</b>
Device IP	10.3.41.85
Router IP	
MAC Address	00:10:74:b2:01:99

---

**Done**

VK2100-ID01	
Device IP	192.168.0.8
Router IP	
MAC Address	00:10:74:b2:01:99

---

**Apply** **Cancel**

## PJLink Projector

PJLINK	<b>Edit</b>
IP Address	192.168.11.12
Port	4352
Password	*****

---

**Done**

PJLINK	
IP Address	192.168.11.12
Port	4352
Password	*****

---

☐ Show Password

**Apply** **Cancel**

## Telnet

TELNET	<b>Edit</b>
IP Address	192.168.11.12
Port	4352
Username	User 82
Password	*****

---

**Done**

TELNET	
IP Address	192.168.11.12
Port	4352
Username	User 82
Password	*****

---

☐ Show Password

**Apply** **Cancel**

## ONVIF

ONVIF	Edit
IP Address	<input type="text" value="192.168.11.12"/>
Username	<input type="text" value="User 82"/>
Password	<input type="password" value="*****"/>

---

Done

ONVIF	
IP Address	<input type="text" value="192.168.11.12"/>
Username	<input type="text" value="User 82"/>
Password	<input type="password" value="*****"/>

☐ Show Password

---

ApplyCancel

## TCP

TCP Device	Edit
IP Address	<input type="text" value="192.168.11.12"/>
Port	<input type="text" value="4352"/>

---

Done

TCP Device	
IP Address	<input type="text" value="192.168.11.12"/>
Port	<input type="text" value="4352"/>

---

ApplyCancel

## UDP

UDP Device	Edit
IP Address	<input type="text" value="192.168.11.12"/>
Port	<input type="text" value="4352"/>

---

Done

UDP Device	
IP Address	<input type="text" value="192.168.11.12"/>
Port	<input type="text" value="4352"/>

---

ApplyCancel

## **Simulating Viewer Controls with Demo Mode**

You can preview Viewers and simulate control actions without connecting to a controller using the demo mode.

1. To simulate controls of a target Viewer, download the Viewer file.


For details, see *Download Viewer*, page 317.

---

**Note:** If you wish to use built-in Viewers, skip this step.

---

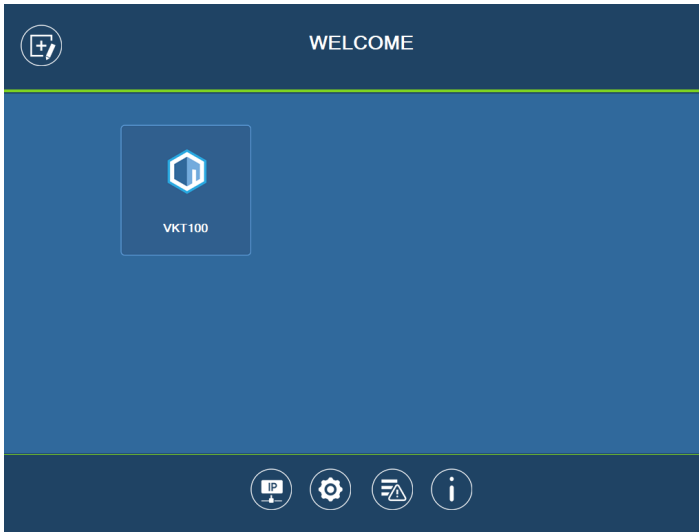

2. Tap the ATEN Control app icon from your mobile device. This screen appears.





---

**Note:** If you have not downloaded any Viewers to the app, a Demo/Start page appears. Tap **Demo** to use built-in Viewers for the simulation.

---


3. Tap Settings . The Preferences page appears.
4. Tap **Enable demo mode** to select the setting and tap **Set**. Demo mode is immediately applied.
5. Tap  to return to the Welcome page.
6. Tap a Viewer to view and try out its control interface.

- ♦ To close the Viewer, long tap any space on the mobile device and click **OK** in a pop-up dialog box.
- ♦ To disable demo mode, close the Viewer and then go to **Settings**  to disable the demo mode setting.



## Log Report

The *Log Report* page lists information and errors which can be used to troubleshoot issues. Tap and drag the list to scroll through the logs. Tap **Back** to exit.

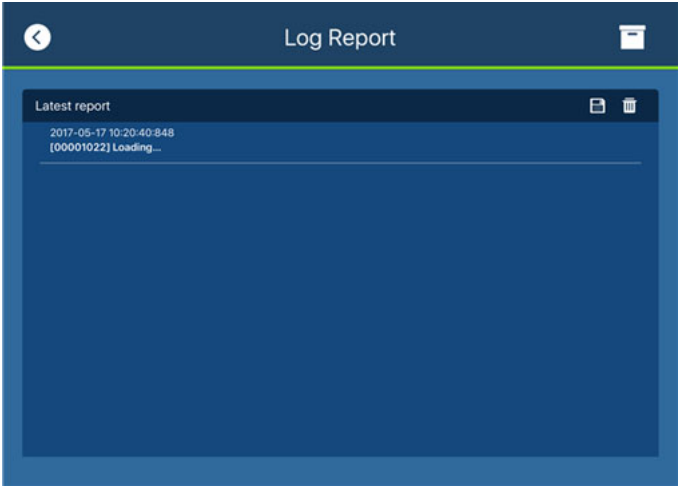

Control	Description
	Tap <b>Save</b> to save the log file.
	Tap <b>Report History</b> to view saved logs (see page 315).
	Tap <b>Delete</b> to delete the log information.
	Tap <b>Back</b> to exit.





## Preferences

The *Preferences* page provides settings for operation preferences of the Control System app, access to Room Booking System, and AppSwitcher.

### General

- ♦ **Seconds to press before the exit dialog appears:** This sets the duration of idle time. When the app idles for the specified duration, an Exit dialog appears to check if the user wants to close the app.
- ♦ **Screen Mode**

**Note:** This setting only takes effect on Viewer control pages.

  - ♦ **Screen saver:** Select this option to start a screen saver when the mobile device has idled for the specified duration.
  - ♦ **Screen lock:** Select this option for the mobile device to lock the screen based on its related setting on the mobile device.
  - ♦ **Always on:** Select this option to have the screen on all the time.
- ♦ **Enable password protection:** To restrict access to app settings and prevent unwanted configuration, enable password authentication for leaving the control pages.



- ♦ **Allow keyboard usage when this app is in full screen:** Enable this option to allow keyboard operation when the app is in full screen.
- ♦ **Notify me when this app disconnects from the Internet:** Select this option to notify the user when the app disconnects from the Internet.
- ♦ **Connect to ATEN Control System devices based on the Manage Device IP list:** Select this option for the app to identify and connect to controllers by IP address instead of the controller ID. This is useful when you create projects by duplication, in which case you do not need to re-configure the controller ID in each project.
- ♦ **Show alert messages for Ethernet devices managed by the controller** (only applicable to the iOS version of the app): Enable this setting to receive status notifications for the managed Ethernet devices.
- ♦ **Always open viewers in full screen** (only applicable to the Windows version of the app): Enable this setting to open Viewers (i.e. control pages, for examples see page 298) in full screen.
- ♦ **Show minimize, maximize, and close buttons** (only applicable to the Windows version of the app): Enable this setting to show the minimize, maximize, and close buttons at the top-right corner of a Viewer (i.e. control page, for examples see page 298).
- ♦ **Enable demo mode:** Select this setting to allow viewing of the control pages within the Viewer (with no actual effects) when no controller is connected.
- ♦ **Enable physical buttons on Viewer device** (only applicable to VK330): To prevent access to physical buttons on the touch panel, disable this setting.
- ♦ **Use fast connection:** Enable this setting for the Viewer to connect to its designated controller more quickly by skipping the checkup of extension boxes to the controller.

## Receiving Room Usage Notifications from ATEN Room Booking System

You can receive notifications of room usage including check-in, check-out, and reservation extension on ATEN Touch Panel / Android mobile device as soon as the action is made.

This feature also requires management and configuration of ATEN Unizon. For more information, see *ATEN Unizon User Manual*. The Access to RBS control setting merely allows the device to be able to receive notifications from ATEN Unizon.

### Allowing Room Usage Notifications

1. Go to **Preferences**  > **Advanced** page, enable **Access to RBS control** to allow ATEN Unizon to send notifications to the mobile device.
2. (Optional) Enable/disable notification sound.
3. Tap **Set** to save the settings. The RBS control icon  appears.

### Remote RBS Control

You can check in, check out, or extend meeting reservation using ATEN Touch Panel / Android mobile device.

To allow these remote actions:


1. Go to **Preferences** > **Advanced**.
2. Enable the **Access to RBS Control** setting and tap **Set**.  
The RBS control icon appears.


## AppSwitcher




You can maximize the usage of an ATEN Touch Panel (VK330) using AppSwitcher which allows you to install multiple apps (ATEN or third-party apps) on the Touch Panel and to switch apps should your need changes.

### Adding Apps to ATEN Touch Panel And AppSwitcher

Follow the procedure below to install apps to an ATEN Touch Panel and to add them to AppSwitcher to make them available for switching.

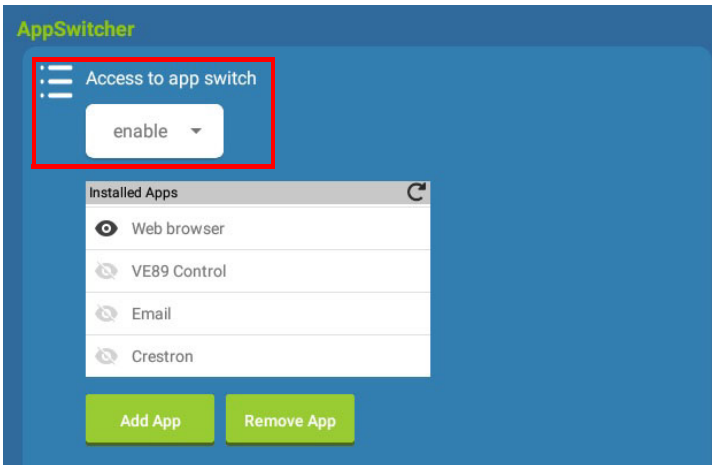
1. Go to **Preferences**  > **Advanced**, enable the **Access to app switch** setting.





2. Tap **Add App** to install an app to the mobile device.
3. Tap  to refresh the list. The installed apps appear on the list.
4. To make an app available for switching, tap the app to add it to AppSwitcher. Apps added to AppSwitcher are marked with black  icon. Tap again to unselect. You can add multiple apps to AppSwitcher.
5. Tap **Set**. The **AppSwitcher** control icon  appears.
6. To uninstall an app, tap **Remove App**.


## Using AppSwitcher

You can switch among the installed and added apps using AppSwitcher.


1. On your Viewer, find the **AppSwitcher** control .

If you can not find the control, go to **Preferences**  > **Advanced** page, enable the **Access to app switch** setting, and tap Set. The AppSwitcher control should appear.

2. Tap . A list of available apps appear.

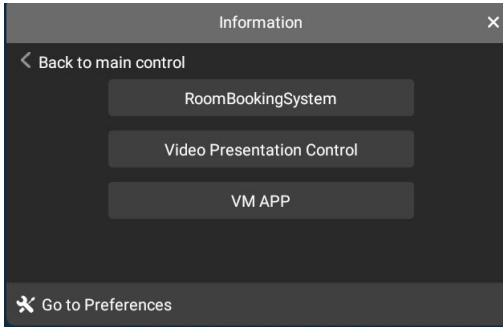

3. Tap from the list to switch the control to the selected app.  
For example:

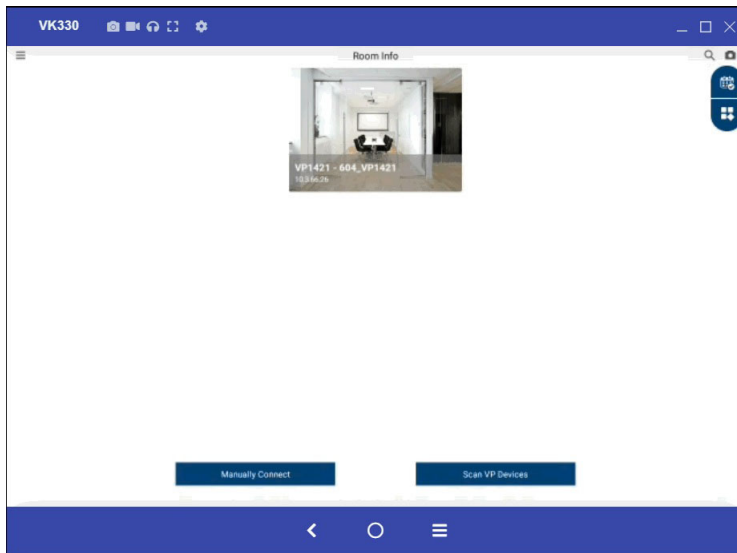

---

**Note:** If the app you wish to use is not in the list, tap **Go to Preferences**, and then make sure the app is installed and added to AppSwitcher. For detailed instructions, see *Adding Apps to the Device and AppSwitcher*, page 312.

---

4. To return to the previous control page, tap **Back to main control**.



## Report History

When you tap **Report History**, you can view and export logs. Saved log files are listed by date in the left column. Tap a log file to view it in the window to the right. Tap and drag the list to scroll through the logs. Tap **Back** to exit.

Reports	20170426_1.vklog
Apr 27, 2017	2017-04-26 15:16:25.854 [20020903] Receive Quick Action FeedBack
20170427_2.vklog 20170427 11:25 saved	
20170427_1.vklog 20170427 11:20 saved	2017-04-26 15:16:25.883 [00020112] Action Feedback : 4261415601 enable
	2017-04-26 15:16:26.009 [00000006] Send Quick Action Request to (fe000ab1_press)
Apr 26, 2017	2017-04-26 15:16:26.009 [00020910] Send Quick Command 10.3.41.85 Success.
20170426_2.vklog 20170426 15:42 saved	2017-04-26 15:16:26.157 [20020903] Receive Quick Action FeedBack
20170426_1.vklog 20170426 15:16 saved	2017-04-26 15:16:26.203 [00020112] Action Feedback : 4261415601 enable
	2017-04-26 15:16:26.322 [00000006] Send Quick Action Request to (fe000ab1_press)
	2017-04-26 15:16:26.322 [00020910] Send Quick Command 10.3.41.85 Success.
	2017-04-26 15:16:26.491 [20020903] Receive Quick Action FeedBack
	2017-04-26 15:16:26.492 [00020112] Action Feedback : 4261415601 enable




Tap **Export** to send the log as an e-mail attachment.



## **Information**

The *Information* page displays the ATEN Control System's version.

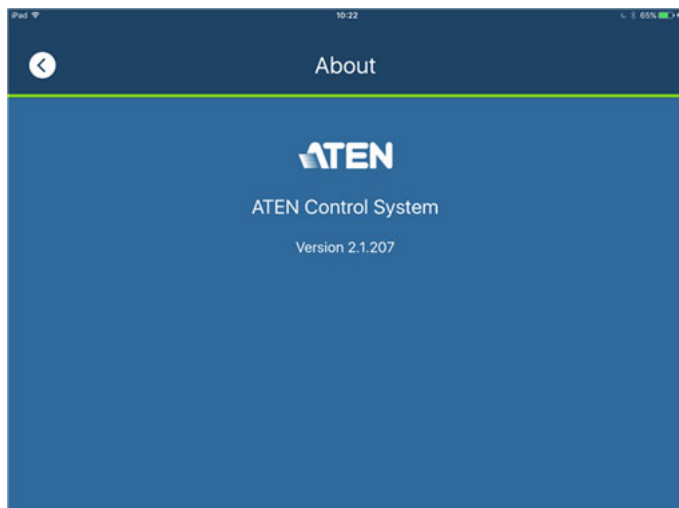






## Download Viewer

The *Download Viewer* page allows you to search for controllers and download Viewers. This page is accessed from *Welcome* → *Manage Viewer* → **Add Viewer**.

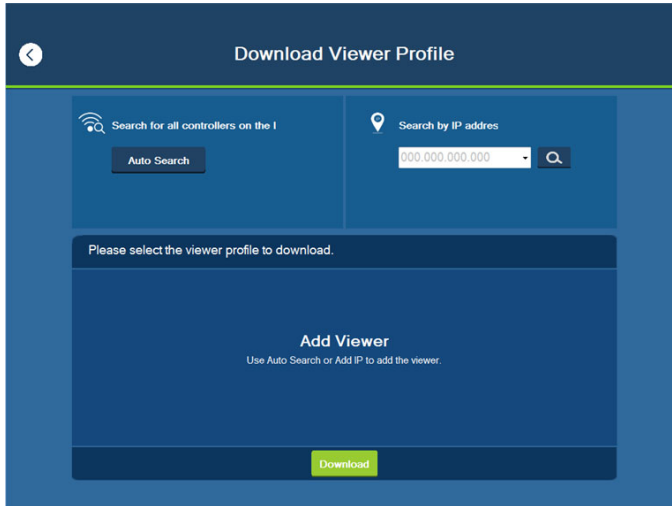



Control	Description
Search by IP Address	Tap to enter a controller's IP address, then tap the Search icon to find it. When controllers are found on the network, they are listed in the Add Viewer box. A <b>Search History</b> drop-down menu will appear for previously searched IP addresses.
Auto Search	Auto Search allows you to search for controllers without specifying an IP address. The controller must be powered on and connected to the same local network.
Add Viewer	This panel lists the controllers that have been found on the network. Each controller lists Viewers that can be downloaded to the mobile device. To upload Viewers to a controller, see <i>The Upload Tab</i> , page 250.
Back Icon	Back returns you to the Welcome page.
Download	After you select the Viewers you want to download, click <b>Download</b> to start the process.

Download

Downloading Viewers

When controllers are found, they appear in the *Add Viewer* panel. Check the boxes of the Viewers you would like to download, then tap **Download**.

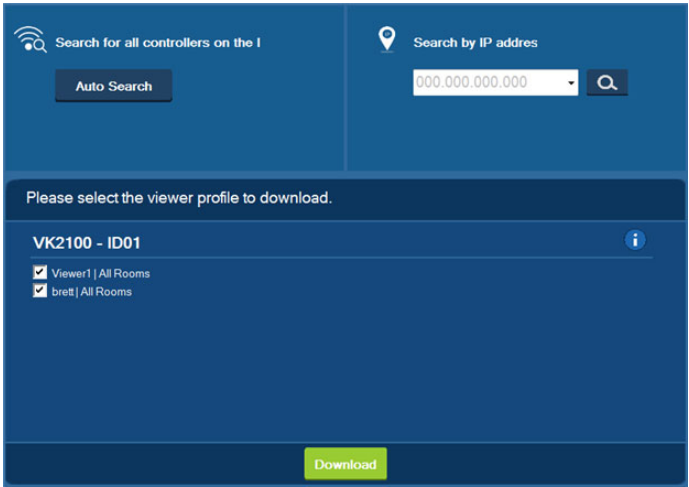

Control	Description
Add Viewer	<p>The main window lists the controllers that have been found on the network. Under each controller is a list of Viewers with a check box. Use the check boxes to select the Viewers you want to download, then click <b>Download</b>. If the Lock icon appears, you will be prompted to enter the access key.</p> <p>After Viewers download, the “Downloaded Successfully” prompt appears. Tap <b>Done</b> to return to the Welcome page where the Viewers will be listed.</p> <p><b>Note:</b> After you download a Viewers to the mobile device, the default Welcome screen no longer appears.</p>
Access Key	<p>When the a Viewers requires an access key a window appears prompting you to enter the key. Enter the correct access key and then click <b>OK</b> to download the Viewers from the controller. To set the access key, see <i>The Upload Tab</i>, page 250.</p>
	<p>Tap the Information icon to view the <b>IP Address</b>, <b>MAC Address</b> and <b>License</b> information of the controller. The license information provides the total number of licenses available and the number in use.</p>

# Appendix

## Safety Instructions

---

### General

- ♦ Read all of these instructions. Save them for future reference.
- ♦ Follow all warnings and instructions marked on the device.
- ♦ This product is for indoor use only.
- ♦ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ♦ Caution: Risk of explosion if the battery is replaced by an incorrect type. Always dispose of used batteries according to the proper instructions.
- ♦ Do not use the device near water.
- ♦ Do not place the device near, or over, radiators or heat registers.
- ♦ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ♦ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ♦ Never spill liquid of any kind on the device.
- ♦ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ♦ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ♦ To prevent damage to your installation it is important that all devices are properly grounded.
- ♦ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- ♦ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ♦ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.

- ♦ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ♦ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
  - ♦ The power cord or plug has become damaged or frayed.
  - ♦ Liquid has been spilled into the device.
  - ♦ The device has been exposed to rain or water.
  - ♦ The device has been dropped, or the cabinet has been damaged.
  - ♦ The device exhibits a distinct change in performance, indicating a need for service.
  - ♦ The device does not operate normally when the operating instructions are followed.
- ♦ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.
- ♦ Avoid circuit overloads. Before connecting equipment to a circuit, know the power supply's limit and never exceed it. Always review the electrical specifications of a circuit to ensure that you are not creating a dangerous condition or that one doesn't already exist. Circuit overloads can cause a fire and destroy equipment.

## **Rack Mount**

- ♦ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ♦ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ♦ Make sure that the rack is level and stable before extending a device from the rack.
- ♦ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ♦ After a device is inserted into the rack, carefully extend the rail into a locking position, and then slide the device into the rack.
- ♦ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ♦ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ♦ Ensure that proper airflow is provided to devices in the rack.
- ♦ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
- ♦ Do not step on or stand on any device when servicing other devices in a rack.
- ♦ **Caution:** Slide/rail (LCD KVM) mounted equipment is not to be used as a shelf or a work space.



## Technical Support

---

### International

- ♦ For online technical support – including troubleshooting, documentation, and software updates: **<http://eservice.aten.com>**
- ♦ For telephone support, see *Telephone Support*, page iv:

### North America

Email Support		support@aten-usa.com
Online Technical Support	Troubleshooting Documentation Software Updates	<a href="https://eservice.aten.com">https://eservice.aten.com</a>
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ♦ Product model number, serial number, and date of purchase.
- ♦ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ♦ Any error messages displayed at the time the error occurred.
- ♦ The sequence of operations that led up to the error.
- ♦ Any other information you feel may be of help.

## Specifications

---

This section provides specifications on the following models:

- ♦ *Control System Project Specifications*
- ♦ *Control Box Gen. 2*
  - ♦ *VK1100A*
  - ♦ *VK1200*
  - ♦ *VK2100A*
  - ♦ *VK2150*
  - ♦ *VK2200*
- ♦ *Control Pad*
  - ♦ *VK0100*
  - ♦ *VK0200*
- ♦ *Keypad*
  - ♦ *VK108US*
  - ♦ *VK112EU*
- ♦ *Expansion Box*
  - ♦ *VK224*
  - ♦ *VK236*
  - ♦ *VK248*
  - ♦ *VK258*
- ♦ *Touch Panel & Accessory*
  - ♦ *VK320*
  - ♦ *VK330*
  - ♦ *VK401*

## **Control System Project Specifications**

<b>Project Elements</b>		<b>Maximum Number</b>
Managed IP devices	VK0100 / VK0200 / VK2150	8
	VK1100A / VK2100A	25
	VK1200 / VK2200	64
Rooms		16
Viewers		32
Macros		1024
Variables		1024
monitoring event	VK0100 / VK0200	10
	VK1100A / VK2100A	20
	VK1200 / VK2200	40
scheduling event	VK1100A / VK2100A	60
	VK1200 / VK2200	
Viewer pages		160 per Viewer
control objects		320 per page
commands		128 per button



## Control Box Gen. 2

VK1100A	
Memory	
SDRAM	512 MB
Flash	8 GB
Interfaces	
Serial	<p>1 x Programmable bidirectional RS-232/422/485 port (1 x 5-pole terminal block connector, configurable via pin assignments)</p> <ul style="list-style-type: none"> <li>♦ Baud Rate: 300 to 115200 (default: 9600)</li> <li>♦ Data Bit: 8 (default) or 7</li> <li>♦ Stop Bit: 1 (default) or 2</li> <li>♦ Parity: None (default), Even, or Odd</li> <li>♦ Flow Control: None (default) or RTS/CTS</li> </ul> <p>1 x bidirectional RS-232 port (1 x 3-pole terminal block connector)</p> <ul style="list-style-type: none"> <li>♦ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>♦ Data Bit: 8 (default) or 7</li> <li>♦ Stop Bit: 1 (default) or 2</li> <li>♦ Parity: None (default), Even, or Odd</li> </ul>
IR/Serial	<p>2 x Programmable IR / Unidirectional RS-232 Ports (2 x 2-Pole Terminal Block Connectors)</p> <hr/> <p>IR:</p> <ul style="list-style-type: none"> <li>♦ Carrier Frequency: 10 ~ 455 kHz</li> <li>♦ Signal Level: TTL (0 ~ 5 V DC)</li> </ul> <hr/> <p>Serial:</p> <ul style="list-style-type: none"> <li>♦ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>♦ Data Bit: 8 (default) or 7</li> <li>♦ Stop Bit: 1 (default) or 2</li> <li>♦ Parity: None (default), Even, or Odd</li> <li>♦ Signal Level: TTL (0 ~ 5 V DC)</li> </ul>

## VK1100A

I/O	2 x Programmable Digital Input / Output Channels (1 x 3-Pole Terminal Block Connector)
	Digital Output: 300 mA sink from 24 V DC
	Digital Input:  VDC Mode <ul style="list-style-type: none"> <li>◆ Input Voltage Range: 0 ~ 24 V DC</li> <li>◆ Programmable Range: 1 ~ 24 V DC</li> </ul> Dry Contact Mode <ul style="list-style-type: none"> <li>◆ Pull-up 2 kΩ to +12 V DC</li> </ul>
Relay	<ul style="list-style-type: none"> <li>◆ 4 x Relay Channels (2 x 4-Pole Terminal Block Connector)</li> <li>◆ Normally Open, Isolated Relays</li> <li>◆ Contact Rating: Max 24 V DC, 2 A</li> </ul>
V DC	<ul style="list-style-type: none"> <li>◆ 1 x 12 V DC Output Port (1 x 2-Pole Terminal Block Connector)</li> <li>◆ Power Supply: 12 V DC, 1 A Max</li> </ul>
Ethernet	<ul style="list-style-type: none"> <li>◆ 2 x RJ-45 Female, 10/100/1000 Base-T</li> <li>◆ Supported protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>◆ DHCP-enabled: If no IP address is assigned to the unit within 30 seconds of connecting to the network, the following default IP settings will be applied.                             <ul style="list-style-type: none"> <li>◆ Control LAN / LAN IP address: <b>192.168.0.60</b> / <b>192.168.1.60</b></li> <li>◆ Subnet Mask: <b>255.255.255.0</b></li> </ul> </li> </ul>
USB	1 x USB Type-A
Switches	
Power	1 x on/off Switch
IR Learning	
1 x IR Receiver LED	
Reset Button	

**VK1100A**

1 x Semi-recessed pushbutton

**Power**

Power Consumption	AC 110 V : 4.3 W : 82 BTU/h AC 220 V : 4.5 W : 83 BTU/h
-------------------	--

**Note:**

- ♦ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ♦ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

Maximum Input Power Rating	internal power: 100 - 240 V AC, 50 - 60 Hz
----------------------------	--

**Environmental**

Operating Temperature	0 – 50 °C
Storage Temperature	-20 – 60 °C
Humidity	0 – 80% RH, Non-condensing

**Physical Properties**

Housing	Metal
Weight	1.19 kg
Dimensions (L x W x H)	21.50 x 16.23 x 4.18 cm

**Mobile Control License**

No. of free licenses	2
Max. no. of licenses	16

**Note:** The ATEN Control Box Gen. 2 comes with two free licenses which are stored in the device itself. Each time a mobile device connects to an ATEN Control Box Gen. 2 for remote control, one license on the Control Box Gen. 2 will be occupied. To purchase and add additional licenses to your Control Box, contact your local sales representative for more information.

## VK1200

### System

SD RAM	1 GB
Flash Memory	8 GB

### Interface

Serial	<p>1 x Programmable bidirectional RS-232/422/485 port (1 x 5-pole terminal block connector)</p> <p>1 x Programmable bidirectional RS-232 port (1 x 3-pole terminal block connector)</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even, or Odd</li> <li>◆ Flow Control: None (default) RTS/CTS (for 5-pole terminal block)</li> </ul>
IR/Serial	<p>2 x Programmable IR / Unidirectional RS-232 Ports (2 x 2-Pole Terminal Block Connectors)</p> <p>IR:</p> <ul style="list-style-type: none"> <li>◆ Carrier Frequency: 10 ~ 455 kHz</li> <li>◆ Signal Level: TTL (0 ~ 5 V DC)</li> </ul> <p>Serial:</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even, or Odd</li> <li>◆ Signal Level: TTL (0 ~ 5 V DC)</li> </ul>

<b>VK1200</b>	
I/O	<p>2 x Programmable Digital Input / Output Channels (1 x 3-Pole Terminal Block Connector)</p> <p>Digital Output: 300 mA sink from 24 V DC</p> <p>Digital Input:</p> <p>VDC Mode</p> <ul style="list-style-type: none"> <li>◆ Input Voltage Range: 0 ~ 24 V DC</li> <li>◆ Programmable Range: 1 ~ 24 V DC</li> </ul> <p>Dry Contact Mode</p> <ul style="list-style-type: none"> <li>◆ Pull-up 2 kΩ to +12 V DC</li> </ul>
Relay	<ul style="list-style-type: none"> <li>◆ 4 x Relay Channels (2 x 4-Pole Terminal Block Connector)</li> <li>◆ Normally Open, Isolated Relays</li> <li>◆ Contact Rating: Max 24 V DC, 2 A</li> </ul>
V DC	<ul style="list-style-type: none"> <li>◆ 1 x 12 V DC Output Port (1 x 2-Pole Terminal Block Connectors)</li> <li>◆ Power Supply: 12 V DC, 1 A Max</li> </ul>
Ethernet	<ul style="list-style-type: none"> <li>◆ 2 x RJ-45 Female, 10/100/1000 Base-T</li> <li>◆ Supported protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>◆ DHCP-enabled: If no IP address is assigned to the unit within 30 seconds of connecting to the network, the following default IP settings will be applied. <ul style="list-style-type: none"> <li>◆ Control LAN / LAN IP address: <b>192.168.0.60 / 192.168.1.60</b></li> <li>◆ Subnet Mask: <b>255.255.255.0</b></li> </ul> </li> </ul>
USB	1 x USB Type-A
<b>LCD Panel</b>	
Size	1.6"
LCM Display	64 x 128 resolution
LCM Setting	3 x Pushbuttons (Up, Down, Enter)
<b>Switches</b>	
Power	1 x on/off Switch

## VK1200

### IR Learning

1 x IR Receiver LED

### Reset Button

1 x Semi-recessed pushbutton

### Power

Power Consumption	AC 110 V : 4.7 W : 81 BTU/h AC 220 V : 4.5 W : 81 BTU/h
-------------------	--

### Note:

- ◆ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

Maximum Input Power Rating	internal power: 100 - 240 V AC, 50 - 60 Hz
----------------------------	--

### Environmental

Operating Temperature	0 – 50 °C
Storage Temperature	-20 – 60 °C
Humidity	0 – 80% RH, Non-condensing

### Physical Properties

Housing	Metal
Weight	1.23 kg
Dimensions (L x W x H)	20.00 x 16.41 x 4.40 cm

### Mobile Control License

No. of free licenses	2
Max. no. of licenses	32

**Note:** The ATEN Control Box comes with two free licenses which are stored in the device itself. Each time a mobile device connects to an ATEN Control Box for remote control, one license on the Control Box will be occupied. To purchase and add additional licenses to your Control Box, contact your local sales representative for more information.

<b>VK2100A</b>	
<b>System</b>	
SDRAM	1 GB
Flash Memory	8 GB
<b>Interface</b>	
Serial	2 x Programmable Bidirectional RS-232/422/485 Ports (2 x 5-Pole Terminal Block Connectors, configurable via pin assignments) <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even, or Odd</li> <li>◆ Flow Control: None (default) or RTS/CTS</li> </ul>
	4 x Bidirectional RS-232 Ports (4 x 3-Pole Terminal Block Connector) <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even, or Odd</li> </ul>
IR/Serial	4 x Programmable IR / Unidirectional RS-232 Ports (2 x 4-Pole Terminal Block Connectors)
	IR: <ul style="list-style-type: none"> <li>◆ Carrier Frequency: 10 ~ 455 kHz</li> <li>◆ Signal Level: TTL (0 ~ 5 V DC)</li> </ul>
	Serial: <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even, or Odd</li> </ul>

## VK2100A

I/O	4 x Programmable Digital Input / Output Channels (1 x 5-Pole Terminal Block Connectors)
	Digital Output: 300 mA sink from 24 V DC
	Digital Input: VDC Mode <ul style="list-style-type: none"> <li>◆ Input Voltage Range: 0 ~ 24 V DC</li> <li>◆ Programmable Range: 1 ~ 24 V DC</li> </ul> Dry Contact Mode <ul style="list-style-type: none"> <li>◆ Pull-up 2 kΩ to +12 V DC</li> </ul>
Relay	<ul style="list-style-type: none"> <li>◆ 4 x Relay Channels (2 x 4-Pole Terminal Block Connector)</li> <li>◆ Normally Open, Isolated Relays</li> <li>◆ Contact Rating: Max 24 V DC, 2 A</li> </ul>
V DC	<ul style="list-style-type: none"> <li>◆ 4 x 12 V DC Output Ports (2 x 4-Pole Terminal Block Connectors)</li> <li>◆ Power Supply: 12 V DC, 2 A Max (Shared By 4 Ports)</li> </ul>
Ethernet	<ul style="list-style-type: none"> <li>◆ 1 x RJ-45 Female, 10/100/1000 Base-T</li> <li>◆ Supported protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>◆ DHCP-enabled: If no IP address is assigned to the unit within 30 seconds of connecting to the network, the following default IP settings will be applied.                             <ul style="list-style-type: none"> <li>◆ Control LAN / LAN IP address: <b>192.168.0.60 / 192.168.1.60</b></li> <li>◆ Subnet Mask: <b>255.255.255.0</b></li> </ul> </li> </ul>
USB	1 x USB Type-A

## Switches

Power	1 x on/off switch
-------	-------------------

## IR Learning

1 x IR Receiver LED

## Reset Button

1 x Semi-recessed pushbutton



**VK2100A****Power**

Power Consumption	AC 110 V : 5.2 W : 137 BTU/h AC 220 V : 6.5 W : 143 BTU/h
-------------------	--

**Note:**

- ♦ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ♦ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

Max. Input Power Rating	Internal power: 100 - 240 V AC, 50 - 60 Hz
-------------------------	--

**Environmental**

Operating Temperature	0 – 50 °C
Storage Temperature	-20 – 60 °C
Humidity	0 – 80% RH, Non-condensing

**Physical Properties**

Housing	Metal
Weight	2.59 kg (5.7 lb)
Dimensions (L x W x H)	43.24 x 16.32 x 4.40 cm (17.02 x 6.43 x 1.73 in.)

**Mobile Control License**

No. of free licenses	2
Max. no. of licenses	16

**Note:** The ATEN Control Box comes with two free licenses which are stored in the device itself. Each time a mobile device connects to an ATEN Control Box for remote control, one license on the Control Box will be occupied. To purchase and add additional licenses to your ATEN Control Box, contact your local sales representative for more information.

<b>VK2150</b>	
<b>System</b>	
SDRAM	2 GB
Flash Memory	8 GB
<b>Interface</b>	
Serial	<p>2 x Bidirectional RS-232/422/485 Ports (2 x 5-Pole Terminal Block Connectors)</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even or Odd</li> <li>◆ Flow Control: None (default) or RTS/CTS</li> </ul> <p>6 x Programmable Bidirectional RS-232 Ports (6 x 3-Pole Terminal Block Connector)</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even or Odd</li> </ul>
IR/Serial	<p>8 x Programmable IR / Unidirectional RS-232 Ports (4 x 4-Pole Terminal Block Connectors)</p> <hr/> <p>IR:</p> <ul style="list-style-type: none"> <li>◆ Carrier Frequency: 10 ~ 455 kHz</li> <li>◆ Signal Level: TTL (0 ~ 5 V DC)</li> </ul> <hr/> <p>Serial:</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even, or Odd</li> <li>◆ Signal Level: TTL (0 ~ 5 V DC)</li> </ul>

**VK2150**

I/O	8 x Programmable Digital Input / Output Channels (2 x 5-Pole Terminal Block Connectors)
	Digital Output: 300 mA sink from 24 V DC
	Digital Input: VDC Mode <ul style="list-style-type: none"> <li>◆ Input Voltage Range: 0 ~ 24 V DC</li> <li>◆ Programmable Range: 1 ~ 24 V DC</li> </ul> Dry Contact Mode <ul style="list-style-type: none"> <li>◆ Pull-up 2 kΩ to +12 V DC</li> </ul>
Relay	<ul style="list-style-type: none"> <li>◆ 8 x Relay Channels (4 x 4-Pole Terminal Block Connector)</li> <li>◆ Normally Open, Isolated Relays</li> <li>◆ Contact Rating: Max 24 V DC, 2 A</li> </ul>
V DC	<ul style="list-style-type: none"> <li>◆ 4 x 12 V DC Output Ports (2 x 4-Pole Terminal Block Connectors)</li> <li>◆ Power Supply: 12 V DC, 2 A Max (Shared By 4 Ports)</li> </ul>
Ethernet	<ul style="list-style-type: none"> <li>◆ 1 x RJ-45 Female, 10/100/1000 Base-T</li> <li>◆ Supported protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>◆ DHCP-enabled: If no IP address is assigned to the unit within 30 seconds of connecting to the network, the following default IP settings will be applied.               <ul style="list-style-type: none"> <li>◆ Control LAN / LAN IP address: <b>192.168.0.60 / 192.168.1.60</b></li> <li>◆ Subnet Mask: <b>255.255.255.0</b></li> </ul> </li> </ul>
USB	1 x USB Type-A
<b>LCD Panel</b>	
Size	1.6"
LCM Display	64 x 128 resolution
LCM Setting	3 x Pushbuttons (Up, Down, Enter)
<b>Switches</b>	
Power	1 x on/off switch

## VK2150

### IR Learning

1 x IR Receiver LED

### Reset Button

1 x Semi-recessed pushbutton

### Power

Max. Input Power Rating	Internal power: 100 - 240 V AC, 50 - 60 Hz
-------------------------	--

Power Consumption	AC110V:5.6W:139 AC220V:6.7W:144
-------------------	------------------------------------

### Note:

- ◆ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

### Environmental

Operating Temperature	0 – 50 °C
-----------------------	-----------

Storage Temperature	-20 – 60 °C
---------------------	-------------

Humidity	0 – 80% RH, Non-condensing
----------	----------------------------

### Physical Properties

Housing	Metal
---------	-------

Weight	2.612 kg (5.758 lb)
--------	---------------------

Dimensions (L x W x H)	43.2 x 16.3 x 4.4 cm (17 x 6.4 x 1.7 in.)
------------------------	---

### Mobile Control License

No. of free licenses	2
----------------------	---

Max. no. of licenses	16
----------------------	----

**Note:** The ATEN Control Box comes with two free licenses which are stored in the device itself. Each time a mobile device connects to an ATEN Control Box for remote control, one license on the Control Box will be occupied. To purchase and add additional licenses to your ATEN Control Box, contact your local sales representative for more information.

<b>VK2200</b>	
<b>System</b>	
SDRAM	2 GB
Flash Memory	8 GB
<b>Interface</b>	
Serial	<p>2 x Bidirectional RS-232/422/485 Ports (2 x 5-Pole Terminal Block Connectors)</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even or Odd</li> <li>◆ Flow Control: None (default) or RTS/CTS</li> </ul> <p>6 x Programmable Bidirectional RS-232 Ports (6 x 3-Pole Terminal Block Connector)</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even or Odd</li> </ul>
IR/Serial	<p>8 x Programmable IR / Unidirectional RS-232 Ports (4 x 4-Pole Terminal Block Connectors)</p> <hr/> <p>IR:</p> <ul style="list-style-type: none"> <li>◆ Carrier Frequency: 10 ~ 455 kHz</li> <li>◆ Signal Level: TTL (0 ~ 5 V DC)</li> </ul> <hr/> <p>Serial:</p> <ul style="list-style-type: none"> <li>◆ Baud Rate: 300 ~ 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even, or Odd</li> <li>◆ Signal Level: TTL (0 ~ 5 V DC)</li> </ul>

## VK2200

I/O	<p>8 x Programmable Digital Input / Output Channels (2 x 5-Pole Terminal Block Connectors)</p> <p>Digital Output: 300 mA sink from 24 V DC</p> <p>Digital Input:</p> <p>VDC Mode</p> <ul style="list-style-type: none"> <li>◆ Input Voltage Range: 0 ~ 24 V DC</li> <li>◆ Programmable Range: 1 ~ 24 V DC</li> </ul> <p>Dry Contact Mode</p> <ul style="list-style-type: none"> <li>◆ Pull-up 2 kΩ to +12 V DC</li> </ul>
Relay	<ul style="list-style-type: none"> <li>◆ 8 x Relay Channels (4 x 4-Pole Terminal Block Connector)</li> <li>◆ Normally Open, Isolated Relays</li> <li>◆ Contact Rating: Max 24 V DC, 2 A</li> </ul>
V DC	<ul style="list-style-type: none"> <li>◆ 4 x 12 V DC Output Ports (2 x 4-Pole Terminal Block Connectors)</li> <li>◆ Power Supply: 12 V DC, 2 A Max (Shared By 4 Ports)</li> </ul>
Ethernet	<ul style="list-style-type: none"> <li>◆ 2 x RJ-45 Female, 10/100/1000 Base-T</li> <li>◆ Supported protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>◆ DHCP-enabled. Default IP settings (IP address <b>192.168.0.60</b> / <b>192.168.1.60</b> for <b>Control LAN</b> / <b>LAN</b>, subnet mask <b>255.255.255.0</b>) will be automatically applied if no IP address is assigned within 30 seconds of connecting to the network.</li> </ul>
USB	1 x USB Type-A
<b>LCD Panel</b>	
Size	1.6"
LCM Display	64 x 128 resolution
LCM Setting	3 x Pushbuttons (Up, Down, Enter)
<b>Switches</b>	
Power	1 x on/off switch

**VK2200****IR Learning**

1 x IR Receiver LED

**Reset Button**

1 x Semi-recessed pushbutton

**Power**

Power Consumption	AC 110 V : 5.7 W : 139 BTU/h AC 220 V : 6.8 W : 144 BTU/h
-------------------	--

**Note:**

- ♦ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ♦ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

Max. Input Power Rating	Internal power: 100 - 240 V AC, 50 - 60 Hz
-------------------------	--

**Environmental**

Operating Temperature	0 – 50 °C
Storage Temperature	-20 – 60 °C
Humidity	0 – 80% RH, Non-condensing

**Physical Properties**

Housing	Metal
Weight	2.62 kg
Dimensions (L x W x H)	43.24 x 16.32 x 4.40 cm

**Mobile Control License**

No. of free licenses	2
Max. no. of licenses	32

**Note:** The ATEN Control Box comes with two free licenses which are stored in the device itself. Each time a mobile device connects to an ATEN Control Box for remote control, one license on the Control Box will be occupied. To purchase and add additional licenses to your ATEN Control Box, contact your local sales representative for more information.

## Control Pad

	VK0100	VK0200
Interface		
Keypad Layout	Up to 14 layout variations using 4 ~ 8 buttons	Up to 125 layout variations using 6 ~ 12 buttons
Serial	<ul style="list-style-type: none"><li>• 2 x Bidirectional RS-232 Port (2 x 3-Pole Terminal Block Connector)</li><li>• Baud Rate: 300 to 115200 (default: 9600)</li><li>• Data Bit: 8 (default) or 7</li><li>• Stop Bit: 1 (default) or 2</li><li>• Parity: None (default), even or odd</li></ul>	
Relay	<ul style="list-style-type: none"><li>• 2 x Relay Channel (2 x 2-Pole Terminal Block Connector)</li><li>• Normally open, isolated Relays</li><li>• Contact Rating: Max 24 VDC, 1A</li></ul>	
Digital Input	<ul style="list-style-type: none"><li>• 1 x Digital Input Channel (1 x 2-Pole Terminal Block Connector);</li><li>• VDC Mode<ul style="list-style-type: none"><li>- Input Voltage Range: 0 to 5 V DC</li><li>- Programmable Range: 1 to 5 V DC</li></ul></li><li>• Dry Contact Mode<ul style="list-style-type: none"><li>- Pull-up 2k ohms to + 5 V DC</li></ul></li></ul>	
Ethernet	<ul style="list-style-type: none"><li>• 1 x RJ-45 Female, 10/100Base-T</li><li>• Supported Protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li><li>• DHCP-enabled. Default IP settings (IP address <b>192.168.0.60</b>, subnet mask <b>255.255.255.0</b>) will be automatically applied if no IP address is assigned within 30 seconds of connecting to the network.</li></ul>	
Switches & Buttons		
Controller ID Switch	1 x 16-segment Switch	
Reset Button	1 x Semi-recessed Pushbutton	
Power		
Power Consumption	DC 5V : 1.1W : 5 BTU/h PoE : 1.375 W : 6 BTU/h	DC 5V : 1.15W : 5 BTU/h PoE : 1.44 W / 7 BTU/h



	VK0100	VK0200
--	--------	--------

**Note:**

- ♦ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ♦ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

**Environmental**

Operating Temperature	0 – 50 °C
-----------------------	-----------

Storage Temperature	–20 – 60 °C
---------------------	-------------

Humidity	0 - 80% RH, Non-Condensing
----------	----------------------------

**Physical Properties**

Housing	Plastic
---------	---------

Weight	0.16 kg (0.35 lb)	0.19 kg (0.42 lb)
--------	-------------------	-------------------

Dimensions	11.63 x 7.06 x 4.84 cm (4.58 x 2.78 x 1.91 in)	8.32 x 14.76 x 4.84 cm (3.28 x 5.81 x 1.91 in)
------------	---	---

**Mobile Control License**

No. of free licenses	0
----------------------	---

Max. no. of paid licenses	10
---------------------------	----

**Note:** Each time a mobile device connects to an ATEN Control Pad for remote control, one license on the Control Pad will be occupied. To purchase and add additional licenses to your Control Pad, contact your local sales representative for more information.

## Keypad

	VK108US	VK112EU
Interface		
Keypad Layout	Up to 14 layout variations using 4 ~ 8 buttons	Up to 125 layout variations using 6 ~ 12 buttons
Ethernet	<ul style="list-style-type: none"><li>• 1 x RJ-45 Female, 10/100Base-T</li><li>• Supported Protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS</li><li>• DHCP-enabled. Default IP settings (IP address <b>192.168.0.60</b>, subnet mask <b>255.255.255.0</b>) will be automatically applied if no IP address is assigned within 30 seconds of connecting to the network.</li></ul>	
Switches & Buttons		
Controller ID Switch	1 x 16-segment switch	
Keypad ID Switch	1 x 8-segment switch	
Reset Button		
1 x semi-recessed pushbutton		
Power		
Power Consumption	DC 5V : 1.25W : 6 BTU/h DC 48V : 1.58W : 7BTU/h	DC 5V : 1.25W : 6 BTU/h PoE: 1.56W : 7BTU/h

### Note:

- ◆ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

### Environmental

Operating Temperature	0 – 50 °C
Storage Temperature	–20 – 60 °C
Humidity	0 - 80% RH, Non-Condensing

### Physical Properties

Housing	Plastic	
Weight	0.13 kg (0.29 lb)	0.17 kg (0.37 lb)
Device Dimensions	11.63 x 7.06 x 4.84 cm (4.58 x 2.78 x 1.91 in)	8.32 x 14.76 x 4.80 cm (3.28 x 5.81 x 1.89 in)

	<b>VK108US</b>	<b>VK112EU</b>
Faceplate Dimensions	11.92 x 7.42 x 0.92 cm (4.69 x 2.92 x 0.36 in)	8.62 x 15.12 x 0.92 cm (3.39 x 5.95 x 0.36 in)

# Expansion Box

VK224	
Interfaces	
Serial	<p>4 x programmable, bi-directional RS-232/422/485 ports (4 x DB9 Male Connector, configurable via pin assignments)</p> <ul style="list-style-type: none"><li>◆ Baud Rate: 300 to 115200 (default: 9600)</li><li>◆ Data Bit: 8 (default) or 7</li><li>◆ Stop Bit: 1 (default) or 2</li><li>◆ Parity: None (default), Even or Odd</li><li>◆ Flow Control: None (default) RTS/CTS</li></ul> <p>RS-232</p> <ul style="list-style-type: none"><li>◆ Pin 2: RX</li><li>◆ Pin 3: TX</li><li>◆ Pin 5: GND</li><li>◆ Pin 7: RTS</li><li>◆ Pin 8: CTS</li></ul> <p>RS-422</p> <ul style="list-style-type: none"><li>◆ Pin 1: RX-</li><li>◆ Pin 2: RX+</li><li>◆ Pin 3: TX+</li><li>◆ Pin 4: TX-</li><li>◆ Pin 5: GND</li></ul> <p>RS-485</p> <ul style="list-style-type: none"><li>◆ Pin 3: D+</li><li>◆ Pin 4: D-</li><li>◆ Pin 5: GND*</li></ul> <p><b>Note:</b> A ground terminal connection is recommended but not required.</p>

**VK224**

Ethernet	<ul style="list-style-type: none"> <li>• 1 x RJ-45 Female, 10/100Base-T</li> <li>• Supported Protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>• DHCP-enabled. Default IP settings (IP address <b>192.168.0.60</b>, subnet mask <b>255.255.255.0</b>) will be automatically applied if no IP address is assigned within 30 seconds of connecting to the network.</li> </ul>
----------	--

**Switches**

Controller ID	1 x 16-segment Switch
Expansion Box ID	1 x 8-segment Switch

**Reset Button**

1 x Semi-recessed Pushbutton

**USB**

1 x USB Type A

**Power Consumption**

DC5V:3.8W:28BTU/h; DC48V:4.75W:33BTU/h

**Note:**

- The measurement in Watts indicates the typical power consumption of the device with no external loading.
- The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

**Environmental**

Operating Temperature	0–50 °C
Storage Temperature	-20–60 °C
Humidity	0–80% RH, Non-condensing

**Physical Properties**

Housing	Metal
Metal	0.45 kg (0.99 lb)
Dimensions (L x W x H)	13.00 x 7.58 x 4.20 cm (5.12 x 2.98 x 1.65 in.)

## VK236

### Interfaces

IR/Serial	<p>6 x Programmable IR / Uni-directional RS-232 Port 6 x 2-Pole Terminal Block Connector</p> <p>IR: TTL level (0 to 5 V)</p> <ul style="list-style-type: none"> <li>◆ Carrier Frequency: 10KHz~455KHz;</li> <li>◆ Serial: Uni-directional RS-232 (+ - 5 V)</li> <li>◆ Baud Rate: 300 to 115200 (default: 9600)</li> <li>◆ Data Bit: 8 (default) or 7</li> <li>◆ Stop Bit: 1 (default) or 2</li> <li>◆ Parity: None (default), Even or Odd</li> </ul>
Ethernet	<ul style="list-style-type: none"> <li>◆ 1 x RJ-45 Female, 10/100Base-T</li> <li>◆ Supported Protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>◆ DHCP-enabled. Default IP settings (IP address <b>192.168.0.60</b>, subnet mask <b>255.255.255.0</b>) will be automatically applied if no IP address is assigned within 30 seconds of connecting to the network.</li> </ul>

### Switches

Controller ID	1 x 16-segment Switch
Expansion Box ID	1 x 8-segment Switch

### Reset Button

1 x Semi-recessed Pushbutton

### USB

1 x USB Type A (firmware upgrades only)

### Power Consumption

DC5V:1.31W:17BTU/h;  
DC48V:1.64W:18BTU/h

### Note:

- ◆ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

### Environmental

**VK236**

Operating Temperature	0–50 °C
Storage Temperature	-20–60 °C
Humidity	0–80% RH, Non-condensing

**Physical Properties**

Housing	Metal
Metal	0.45 kg (0.99 lb)
Dimensions (L x W x H)	13.00 x 7.58 x 4.20 cm (5.12 x 2.98 x 1.65 in.)

**VK248****Interfaces**

Relay	<ul style="list-style-type: none"> <li>8 normally open relays (8 x 2-pole terminal block)</li> <li>Contact Rating: Max 24 VDC, 2A</li> </ul>
Ethernet	<ul style="list-style-type: none"> <li>1 x RJ-45 Female, 10/100Base-T</li> <li>Supported Protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>DHCP-enabled. Default IP settings (IP address <b>192.168.0.60</b>, subnet mask <b>255.255.255.0</b>) will be automatically applied if no IP address is assigned within 30 seconds of connecting to the network.</li> </ul>

**Switches**

Controller ID	1 x 16-segment Switch
Expansion Box ID	1 x 8-segment Switch

**Reset Button**

1 x Semi-recessed Pushbutton

**USB**

1 x USB Type A (firmware upgrades only)

**Power Consumption**

## VK248

DC5V:2.82W:24BTU/h;  
DC48V:3.53W:27BTU/h

### Note:

- ◆ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

### Environmental

Operating Temperature	0–50 °C
Storage Temperature	-20–60 °C
Humidity	0–80% RH, Non-condensing

### Power Output

12 VDC, 300mA

### Physical Properties

Housing	Metal
Metal	0.65 kg (1.43 lb)
Dimensions (L x W x H)	20.00 x 7.58 x 4.20 cm (7.87 x 2.98 x 1.65 in.)

## VK258

### Interfaces

Relay	<ul style="list-style-type: none"> <li>◆ 8 x Programmable Digital Input / Output Channel</li> <li>◆ Digital Input                             <ul style="list-style-type: none"> <li>◆ VDC Mode                                     <ul style="list-style-type: none"> <li>Input Voltage Range: 0 to 24 VDC</li> <li>Programmable Range: 1 to 24 VDC</li> </ul> </li> <li>◆ Dry Contact Mode                                     <ul style="list-style-type: none"> <li>Pull-up 2k ohms to +12 VDC</li> </ul> </li> </ul> </li> <li>◆ Digital Output: 300 mA sink from 24 VDC</li> </ul>
-------	--



**VK258**

Ethernet	<ul style="list-style-type: none"> <li>♦ 1 x RJ-45 Female, 10/100Base-T</li> <li>♦ Supported Protocol: ARP, ICMP, TCP/IP, DHCP, HTTPS, SSH</li> <li>♦ DHCP-enabled. Default IP settings (IP address <b>192.168.0.60</b>, subnet mask <b>255.255.255.0</b>) will be automatically applied if no IP address is assigned within 30 seconds of connecting to the network.</li> </ul>
----------	--

**Switches**

Controller ID	1 x 16-segment Switch
Expansion Box ID	1 x 8-segment Switch

**Reset Button**

1 x Semi-recessed Pushbutton

**USB**

1 x USB Type A (firmware upgrades only)

**Power**

Power Consumption	DC5V:2.2W:36BTU/h; PoE:2.75W:39BTU/h
-------------------	--------------------------------------

**Note:**

- ♦ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ♦ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

Power Output	12 VDC, 300 mA
--------------	----------------

**Environmental**

Operating Temperature	0–50 °C
Storage Temperature	-20–60 °C
Humidity	0–80% RH, Non-condensing

**Physical Properties**

Housing	Metal
Metal	0.46 kg (1.01 lb)
Dimensions (L x W x H)	13.00 x 7.58 x 4.20 cm (5.12 x 2.98 x 1.65 in.)

## Touch Panel and Accessory

### VK320

#### Processor

Quad-core

#### Memory

SDRAM	2GB
Flash	32GB

#### Panel

Display Type	IPS-LCD
Size	8"
Touch Screen	Capacitive
Resolution	1280 x 800
Aspect Ratio	16:10
Color Depth	8 bit
Contrast Ratio	800:1
Backlight	LCD
Viewing Angle	±85° (H), ±85° (V)
Luminance	300 cd/m <sup>2</sup>

#### Interfaces

Ethernet	1 x RJ-45 Female, 10/100 BaseT
USB	1 x USB Type-C

#### Power

Power over Ethernet (PoE)	802.3 at PoE+
Power Consumption	DC12V : 12W : 40.95 BTU/h PoE: 14.1W : 4801 BTU/h

#### Note:

- ◆ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ◆ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

#### Environmental

**VK320**

Operating Temperature	0–40 °C
Storage Temperature	-10–55 °C
Humidity	10–75% RH, Non-condensing

**Physical Properties**

Housing	Plastic
Weight	0.33 kg (0.73 lb)
Dimensions (L x W x H)	20.01 x 12.46 x 3.77 cm (7.88 x 4.91 x 1.48 in.)

**VK330****Processor**

Quad-core

**Memory**

SDRAM	2 GB
Flash	16 GB

**Panel Specifications**

Display Type	TFT-LCD
Size	10.1"
Touch Screen	Capacitive
Resolution	1280 x 800
Aspect Ratio	16:10
Color Depth	8 bit
Contrast Ratio	800:1
Backlight	LED
Viewing Angle	±85° (H), ±85° (V)
Luminance	500 cd/m <sup>2</sup>

**Interfaces**

Ethernet	1 x RJ-45 Female, 10/100/1000 BaseT
USB	1 x USB Type-A

**Power**

Power over Ethernet (PoE)	802.3 at PoE+
---------------------------	---------------

## VK330

Power Consumption	DC 12V : 12.8W :43.65 BTU/h PoE:14W:47.77BTU
-------------------	---

### Note:

- ♦ The measurement in Watts indicates the typical power consumption of the device with no external loading.
- ♦ The measurement in BTU/h indicates the power consumption of the device when it is fully loaded.

## Environmental

Operating Temperature	0–40 °C
Storage Temperature	-10–55 °C
Humidity	10–80% RH, Non-condensing

## Physical Properties

Housing	ABS + PC
Weight	0.62 kg (1.37 lb)
Dimensions (L x W x H)	25.22 x 17.78 x 2.45 cm (9.93 x 7 x 0.96 in.)

## VK401

### Mode of Operation (Frequency)

13.56 MHz

### Interface

Connector Type	Pogo pin
----------------	----------

### Industrial Protocols

ISO 14443A/B, ISO 15693, Mifare, Felica (Card UID)

### Sensing Distance

Up to 30 mm (depends on the tag type)


## Environmental

Operational Temperature	0 – 40 °C
-------------------------	-----------


## Physical Properties

Housing	Plastic
Weight	0.03 kg (0.08 lb)
Dimensions (L x W x H)	5.60 x 7.00 x 2.33 cm


## CAD Drawings

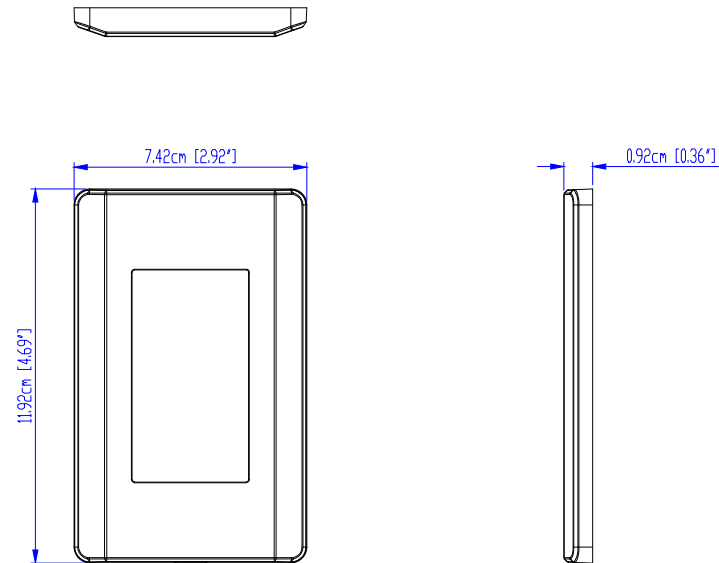

**ATEN**  
VK0100

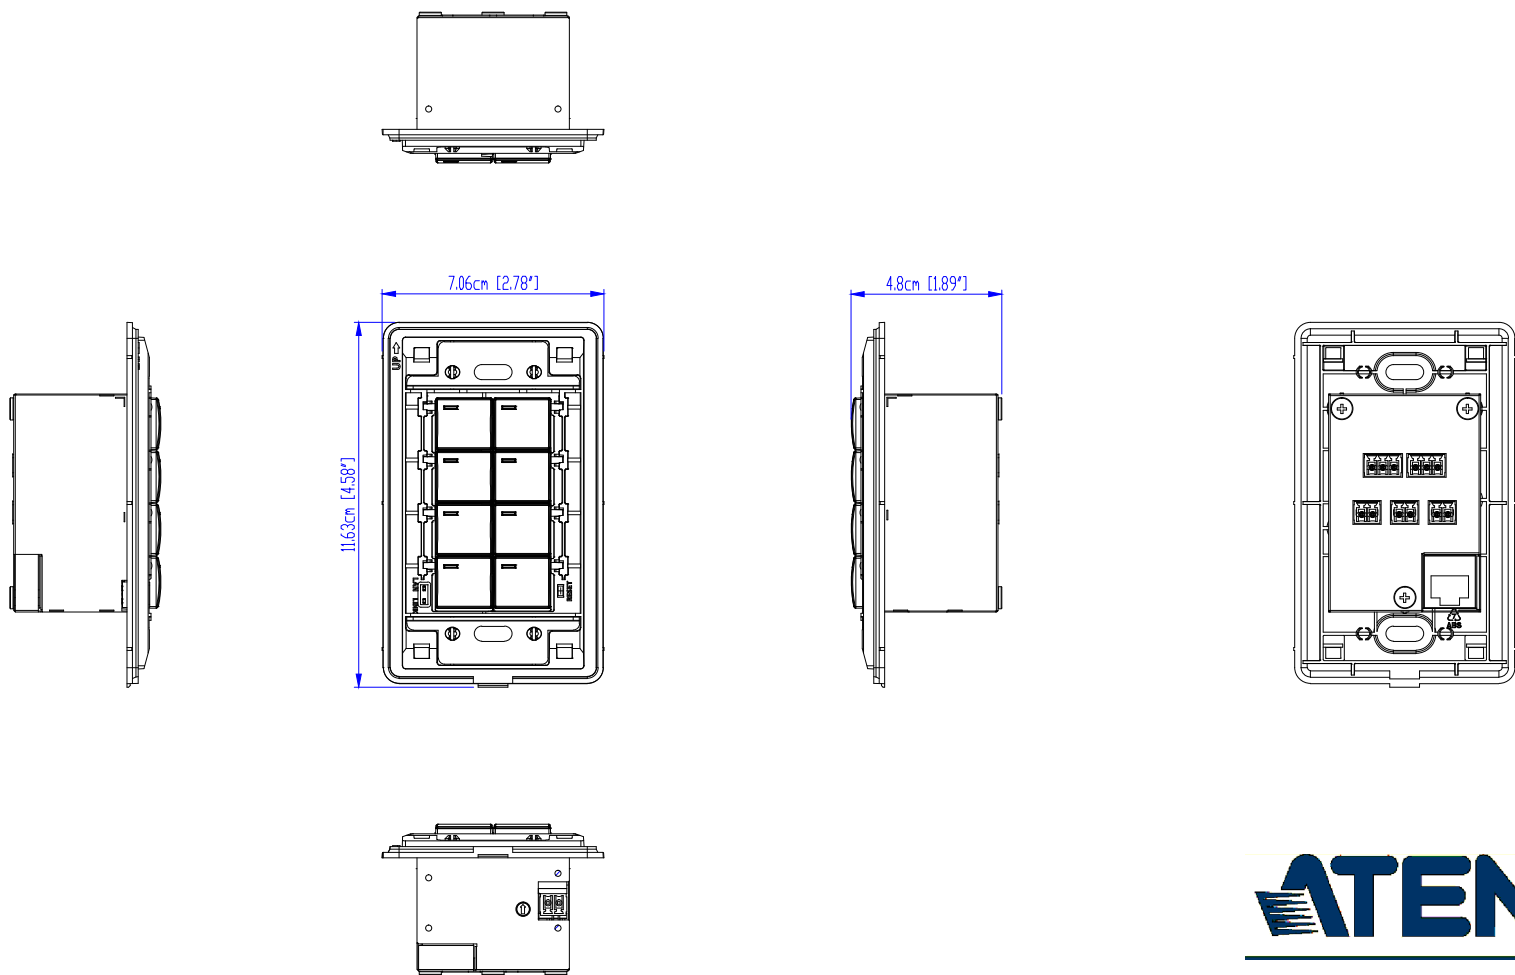


**ATEN**  
**VK0100**

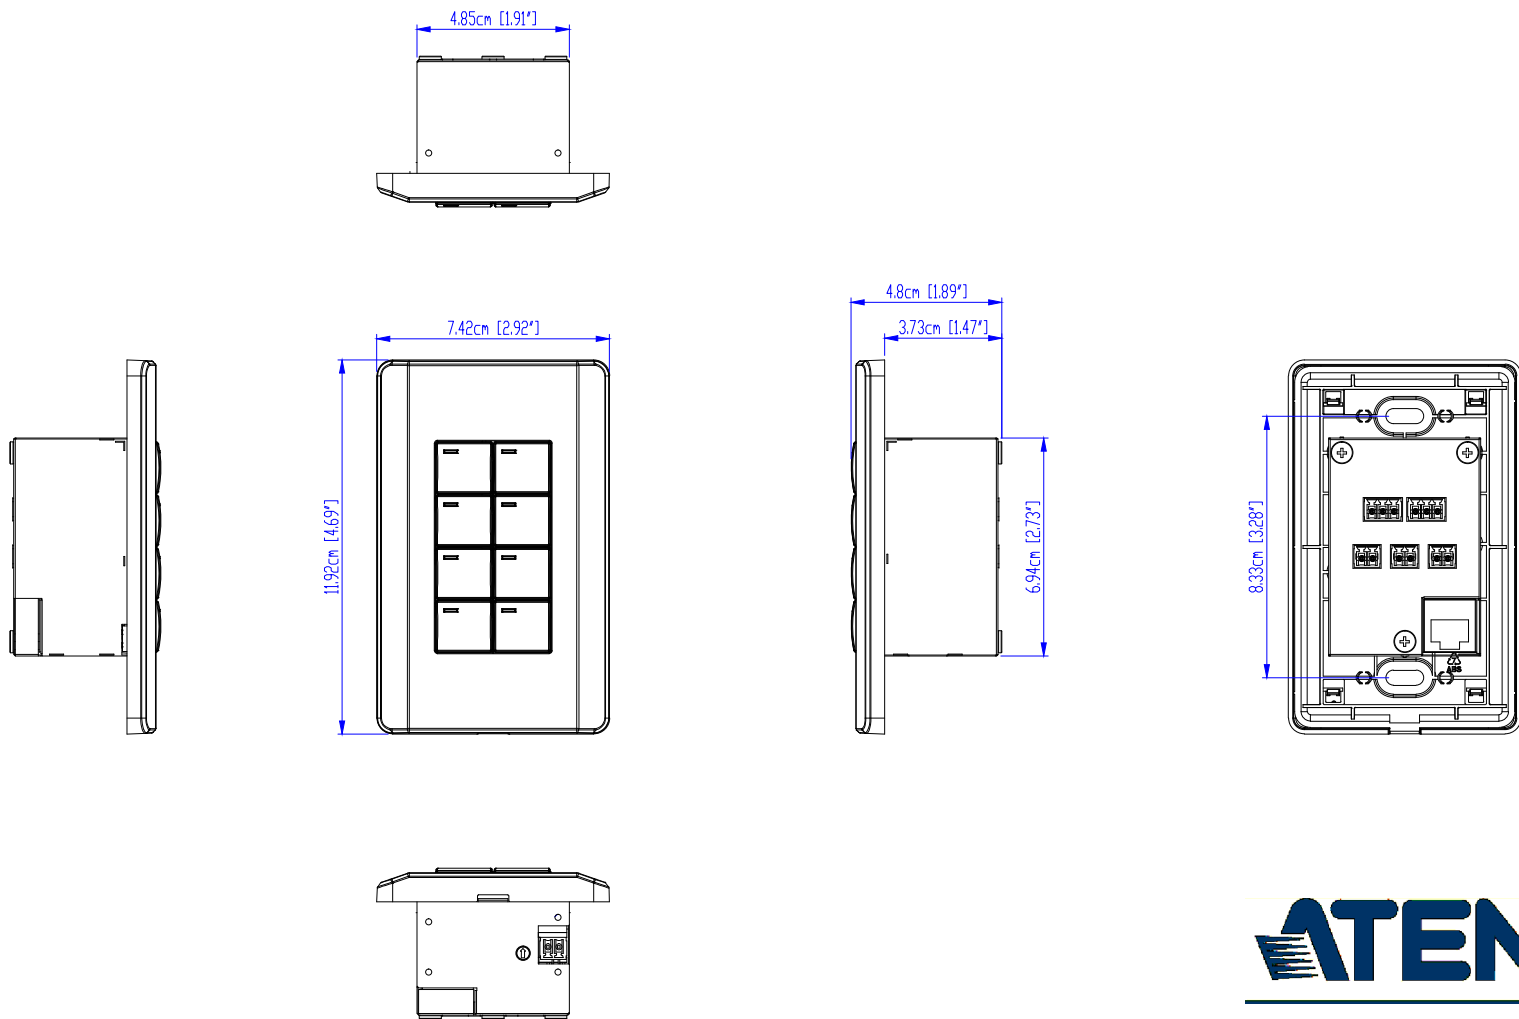

**ATEN**  
**VK0100**

# Panel Mount Cutout

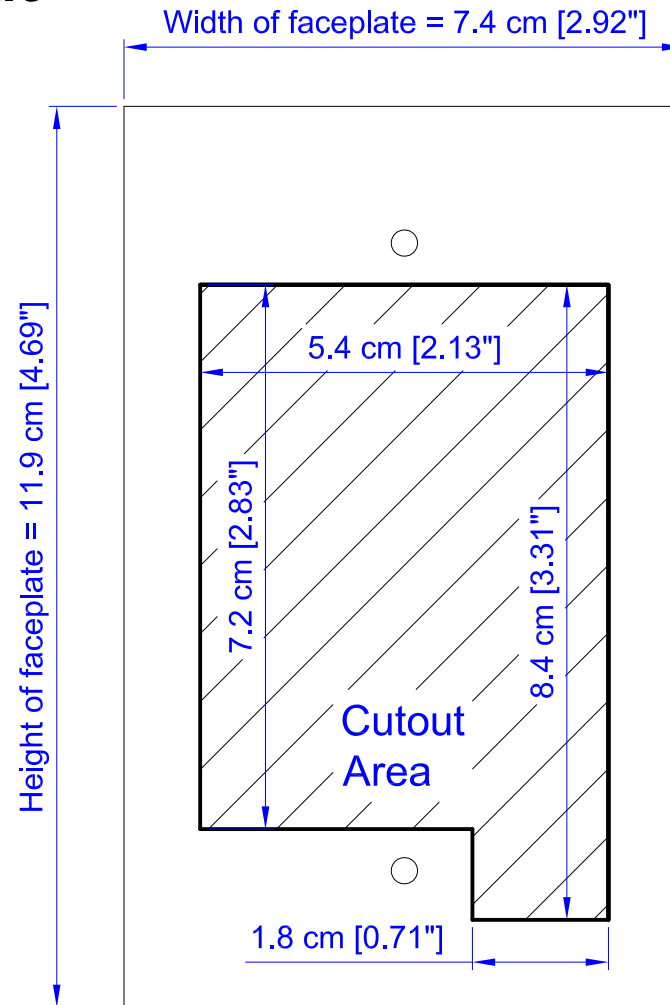


**Note:** ATEN recommends a 1-gang wall box with a depth of at least 5 cm (1.97 inches) to accommodate the connectors and cables.


**ATEN**  
**VK0100**




## CAD Drawings

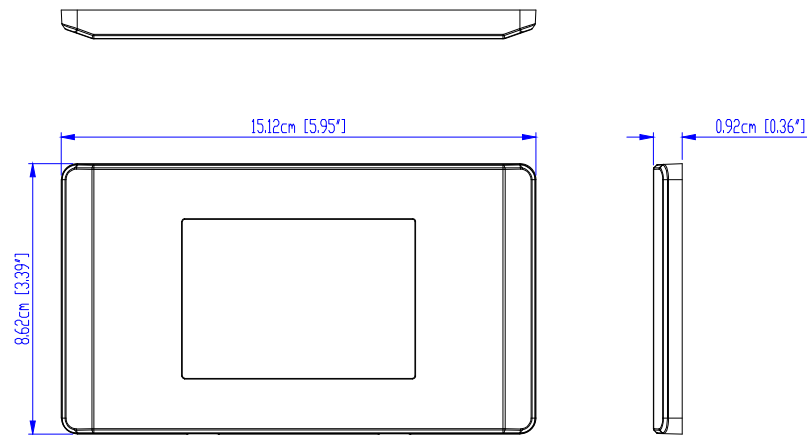

**ATEN**  
**VK0200**

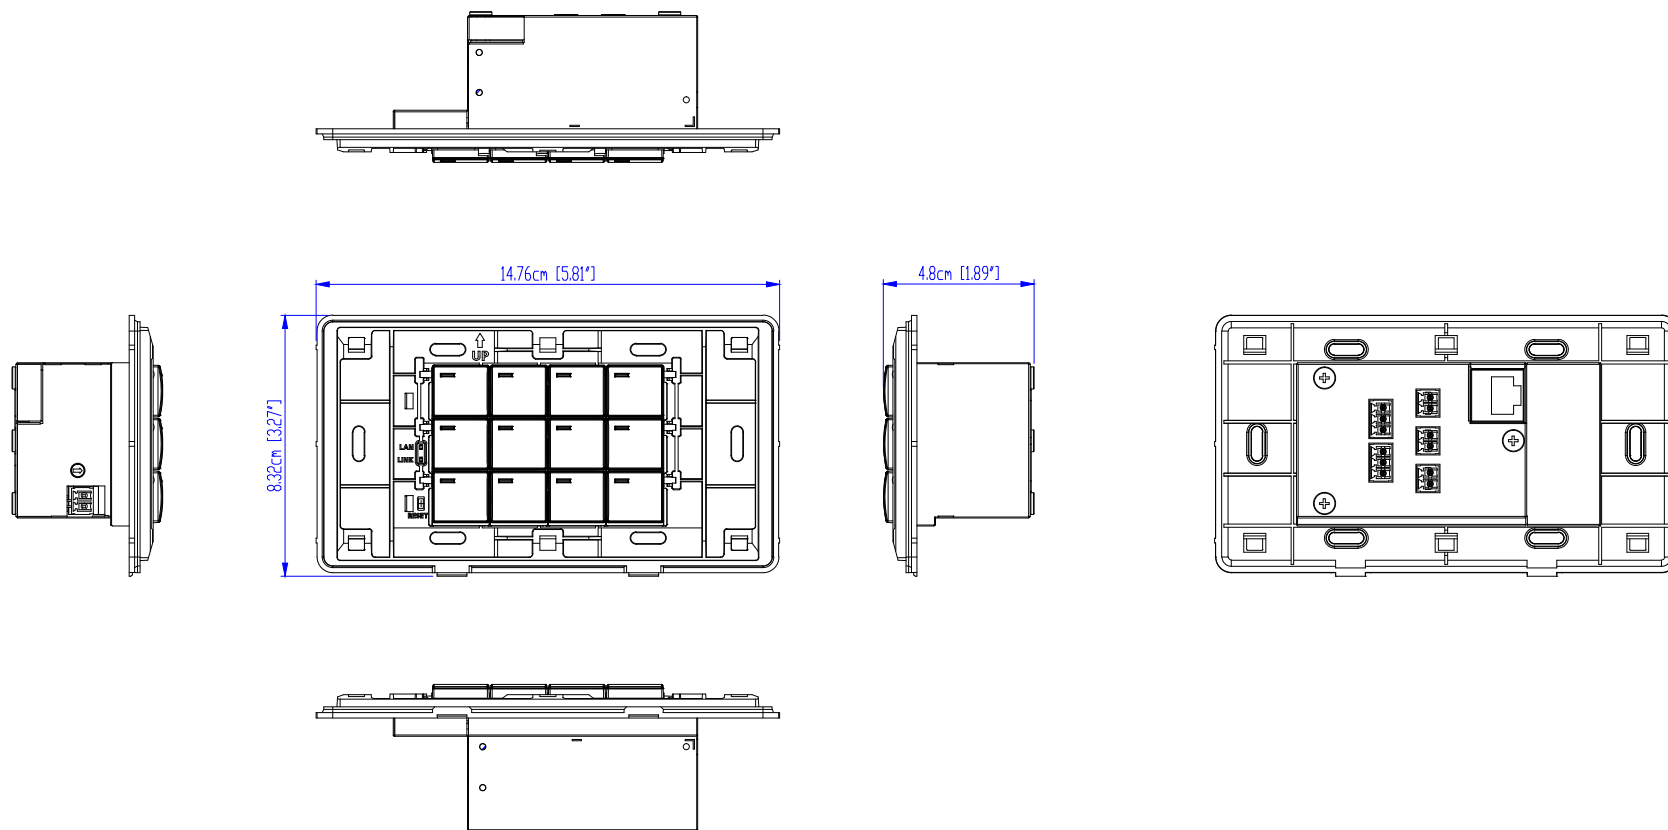


**ATEN**  
**VK0200**

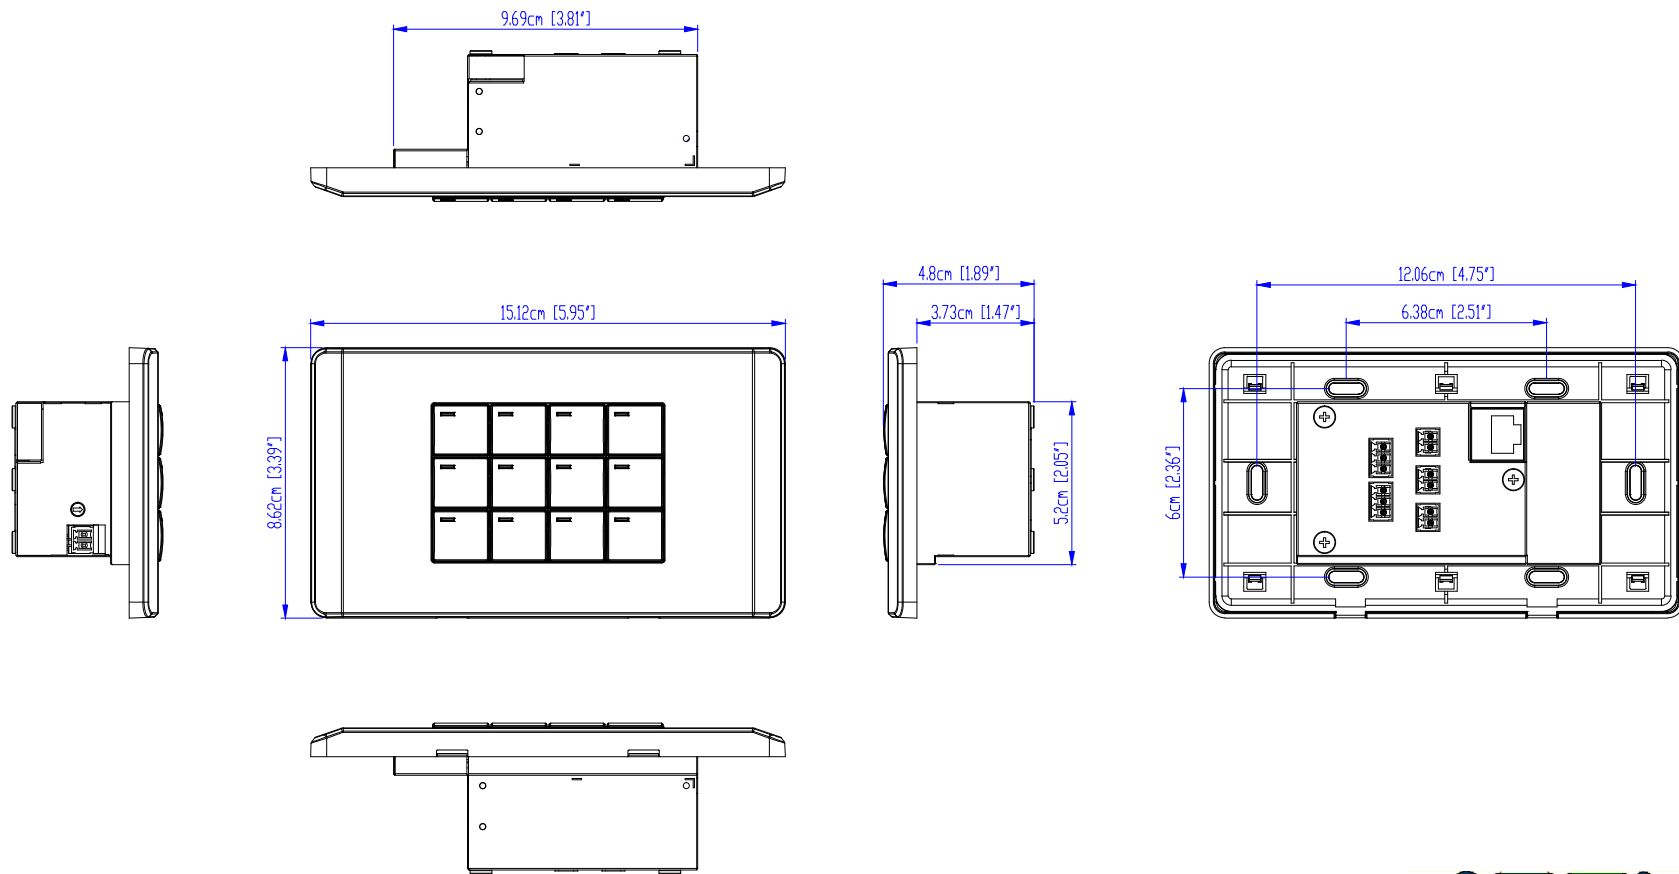


**ATEN**  
**VK0200**

# Panel Mount Cutout

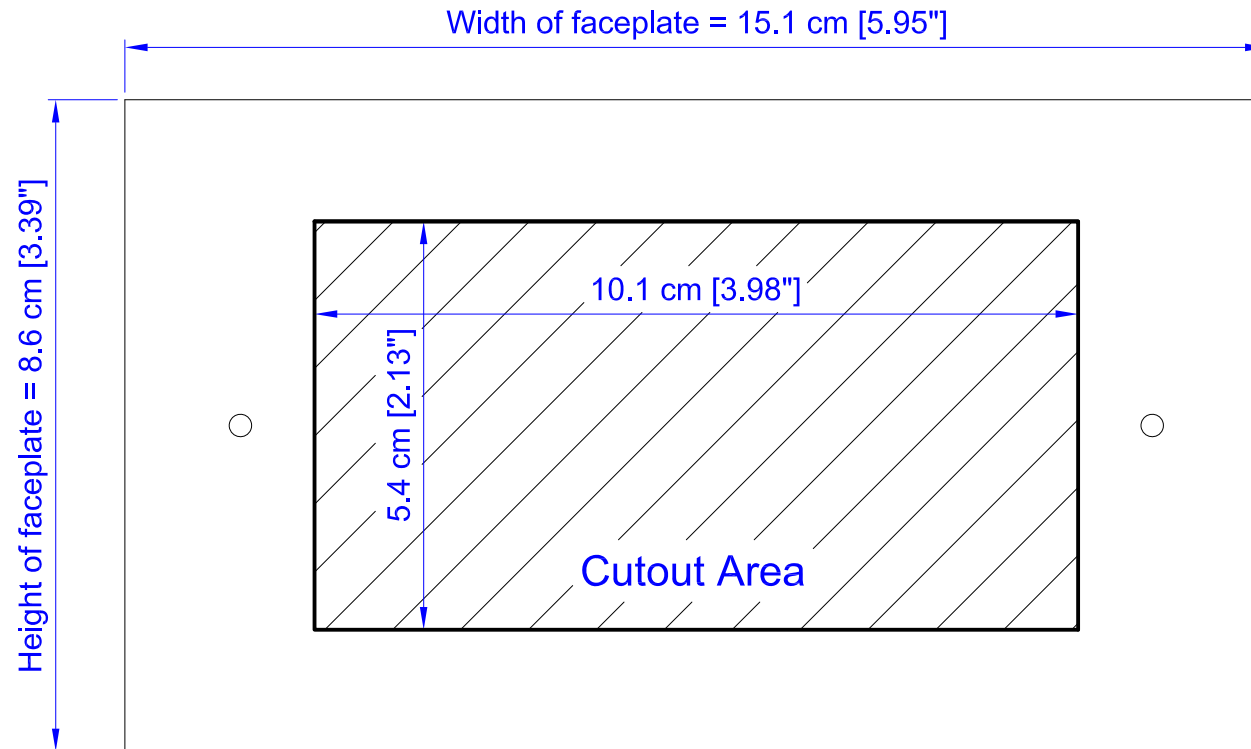


**Note:** ATEN recommends a 2-gang wall box with a depth of at least 5 cm (1.97 inches) to accommodate the connectors and cables.


## CAD Drawings

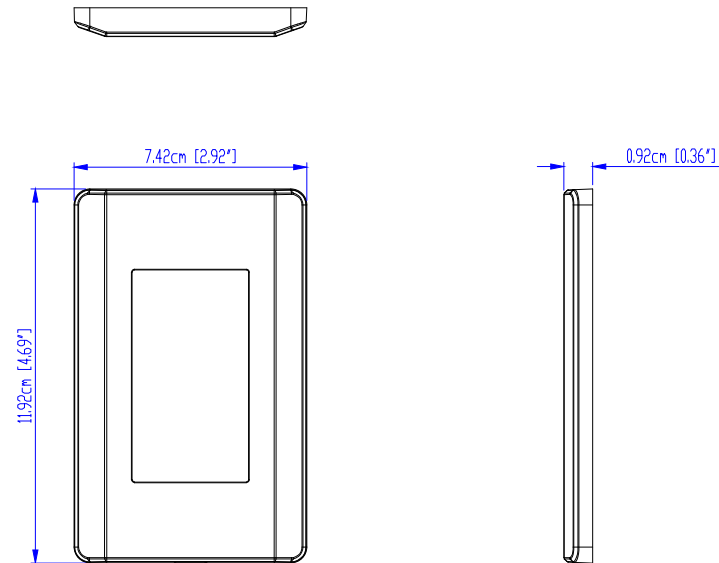

**ATEN**  
**VK108US**

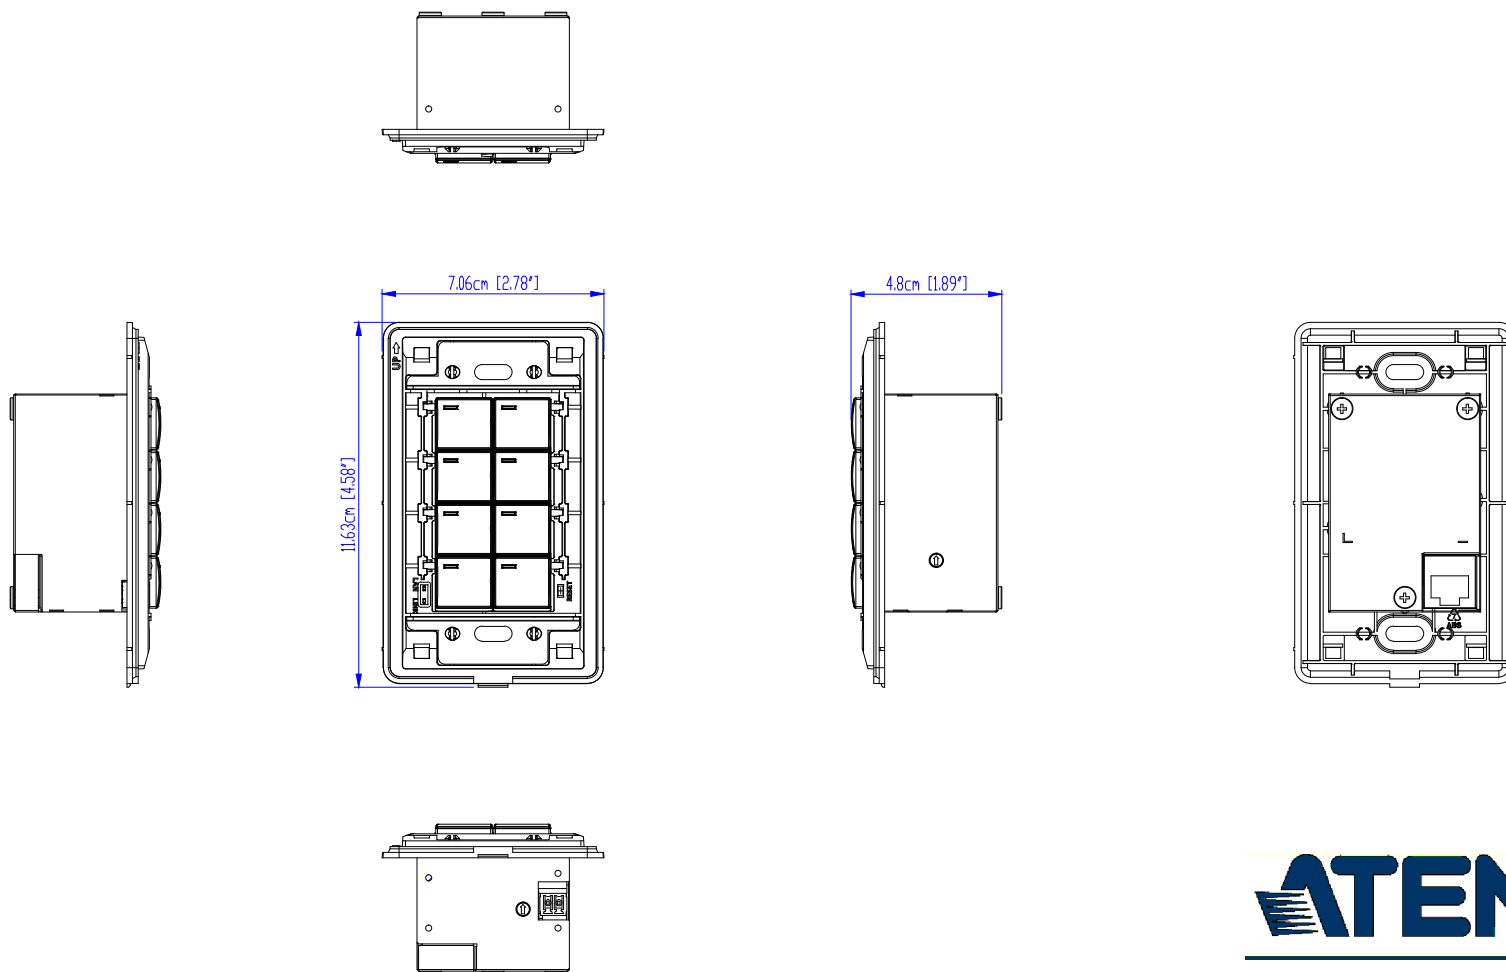


**ATEN**  
**VK108US**

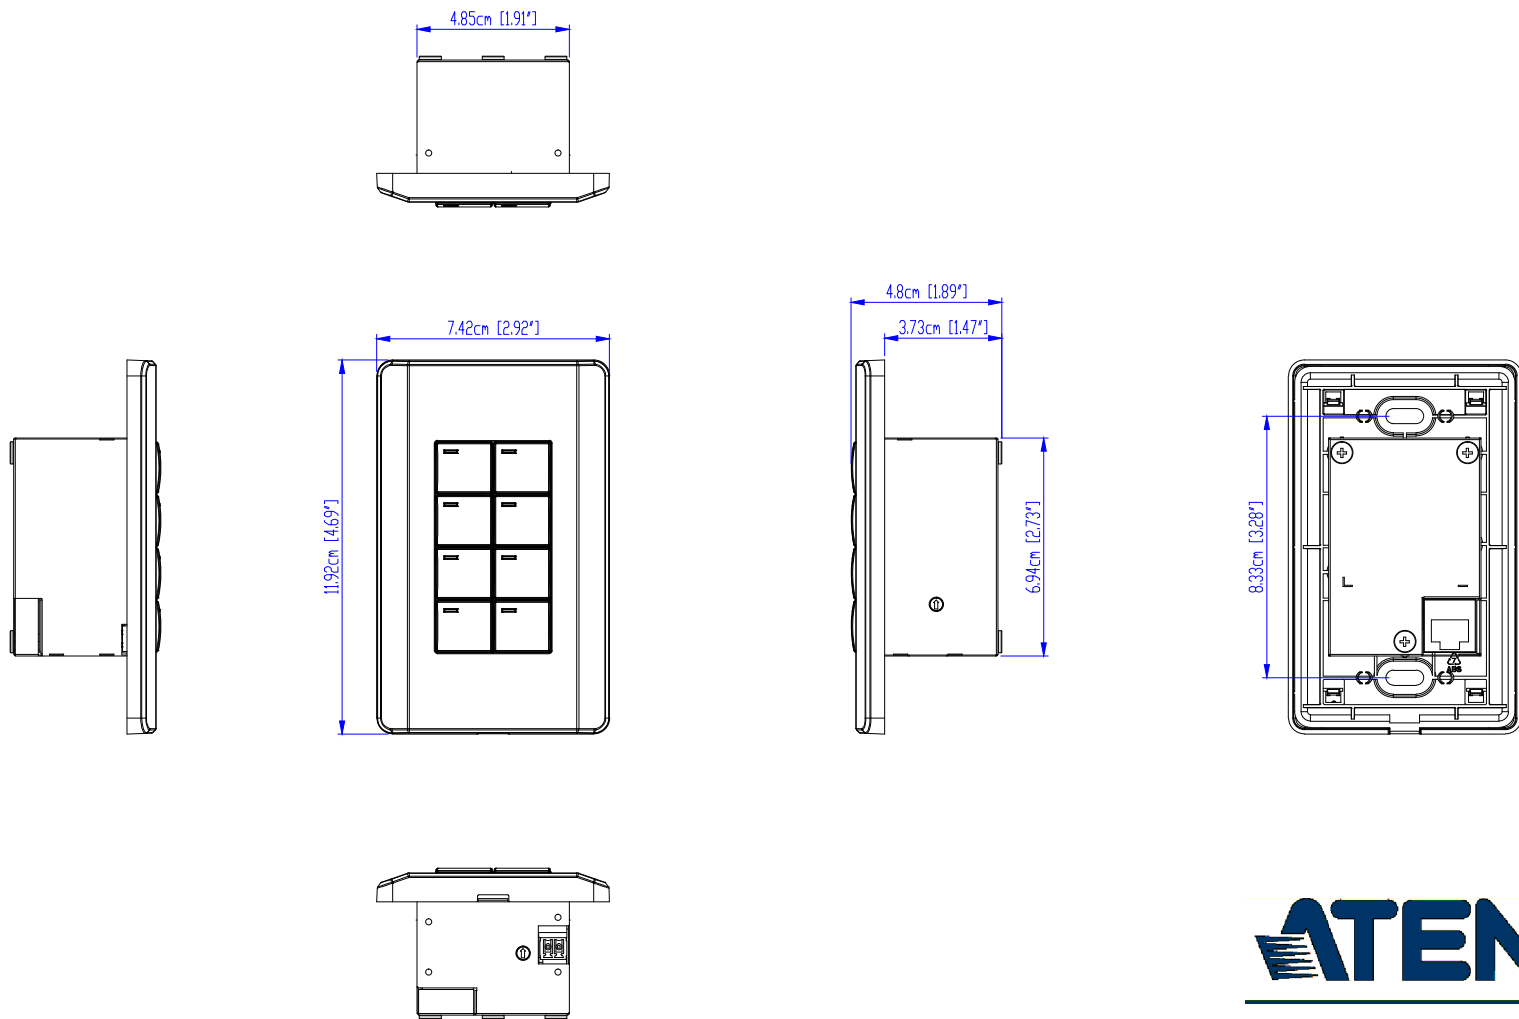

**ATEN**  
**VK108US**

# Panel Mount Cutout

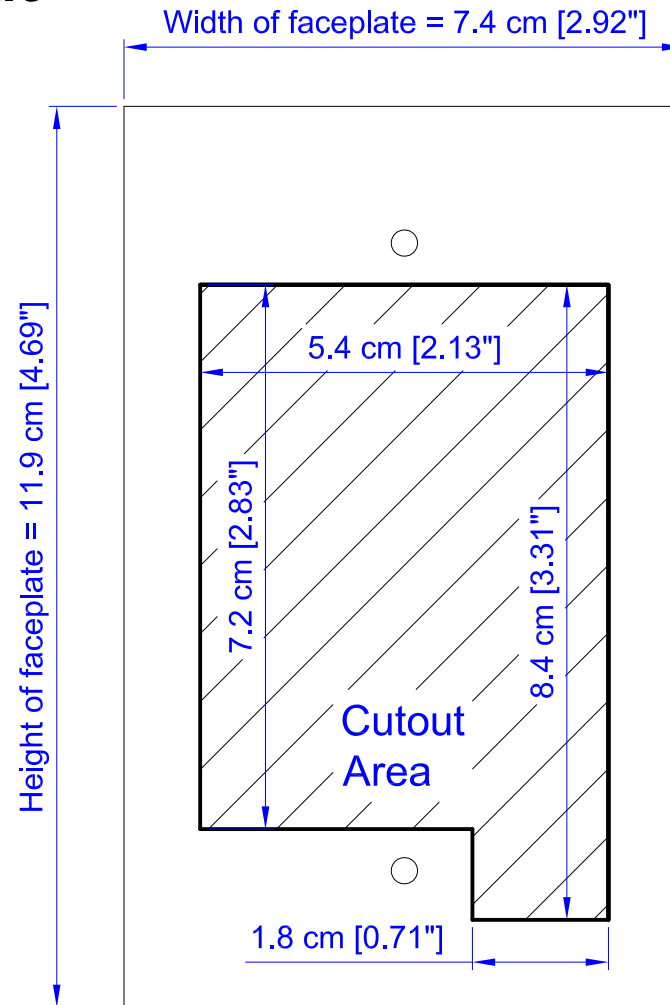


**Note:** ATEN recommends a 1-gang wall box with a depth of at least 5 cm (1.97 inches) to accommodate the connectors and cables.


**ATEN**  
**VK108US**




## CAD Drawings

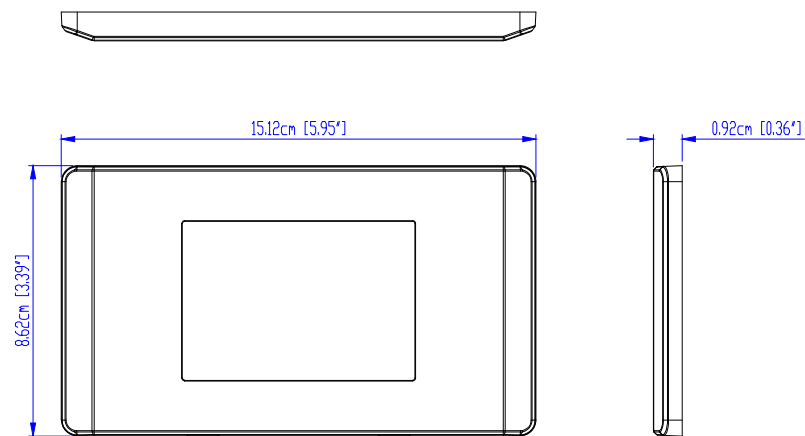

**ATEN**  
VK112EU

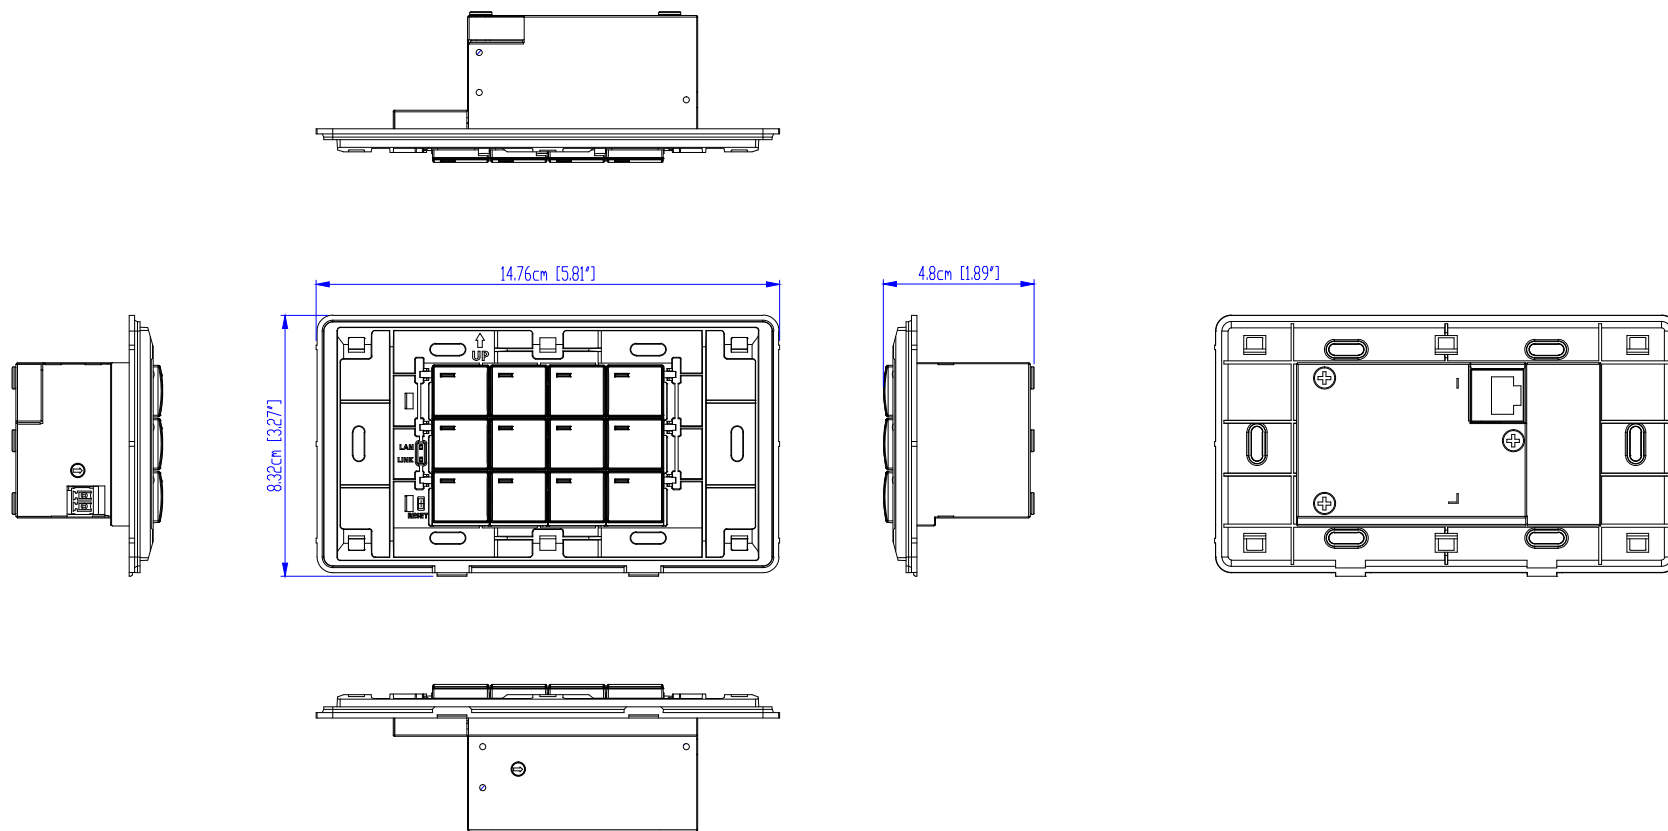


**ATEN**  
**VK112EU**

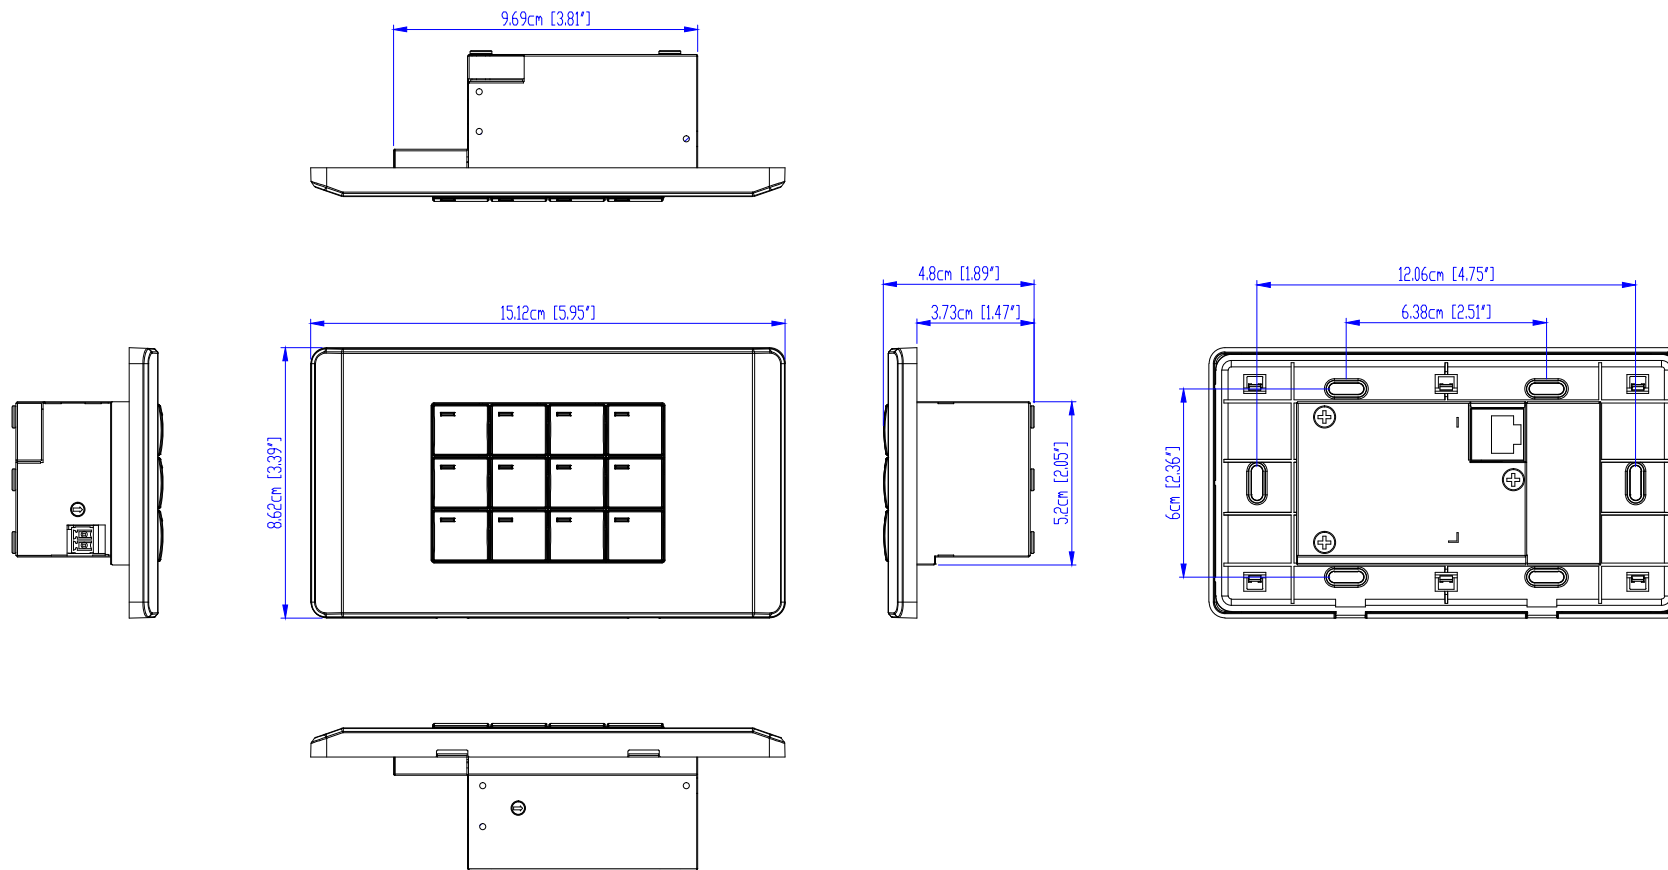

**ATEN**  
**VK112EU**

# Panel Mount Cutout

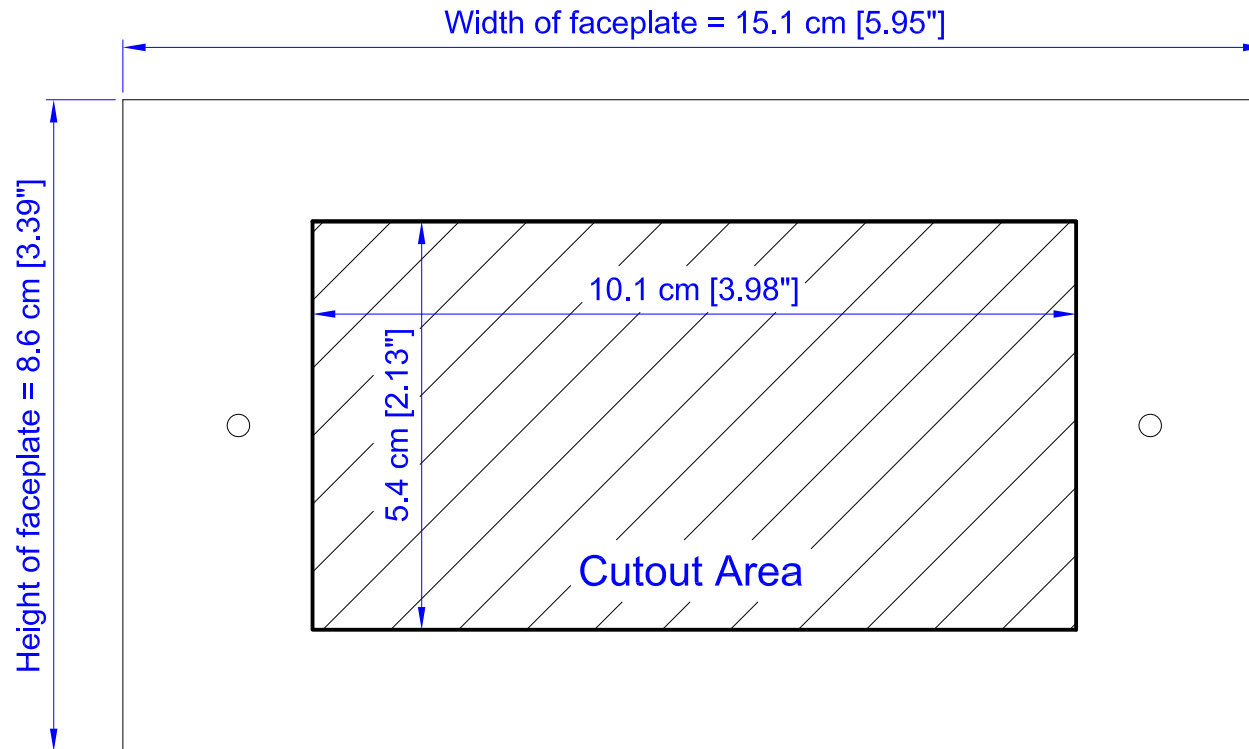

**Note:** ATEN recommends a 2-gang wall box with a depth of at least 5 cm (1.97 inches) to accommodate the connectors and cables.

## Datapoint Types

ATEN Control System supports the following KNX Datapoint Types (DPT):

DPT ID	DPT Format	DPT Name
1.001	B <sub>1</sub>	DPT_Switch
1.002	B <sub>1</sub>	DPT_Bool
1.003	B <sub>1</sub>	DPT_Enable
1.004	B <sub>1</sub>	DPT_Ramp
1.005	B <sub>1</sub>	DPT_Alarm
1.006	B <sub>1</sub>	DPT_BinaryValue
1.007	B <sub>1</sub>	DPT_Step
1.008	B <sub>1</sub>	DPT_UpDown
1.009	B <sub>1</sub>	DPT_OpenClose
1.010	B <sub>1</sub>	DPT_Start
1.011	B <sub>1</sub>	DPT_State
1.012	B <sub>1</sub>	DPT_Invert
1.013	B <sub>1</sub>	DPT_DimSendStyle
1.014	B <sub>1</sub>	DPT_InputSource
1.015	B <sub>1</sub>	DPT_Reset
1.016	B <sub>1</sub>	DPT_Ack
1.017	B <sub>1</sub>	DPT_Trigger
1.018	B <sub>1</sub>	DPT_Occupancy
1.019	B <sub>1</sub>	DPT_Window_Door
1.021	B <sub>1</sub>	DPT_LogicalFunction
1.022	B <sub>1</sub>	DPT_Scene_AB
1.023	B <sub>1</sub>	DPT_ShutterBlinds_Mode
1.100	B <sub>1</sub>	DPT_Heat/Cool
2.001	B <sub>2</sub>	DPT_Switch_Control
2.002	B <sub>2</sub>	DPT_Bool_Control
2.003	B <sub>2</sub>	DPT_Enable_Control
2.004	B <sub>2</sub>	DPT_Ramp_Control

DPT ID	DPT Format	DPT Name
2.005	B <sub>2</sub>	DPT_Alarm_Control
2.006	B <sub>2</sub>	DPT_BinaryValue_Control
2.007	B <sub>2</sub>	DPT_Step_Control
2.008	B <sub>2</sub>	DPT_Direction1_Control
2.009	B <sub>2</sub>	DPT_Direction2_Control
2.010	B <sub>2</sub>	DPT_Start_Control
2.011	B <sub>2</sub>	DPT_State_Control
2.012	B <sub>2</sub>	DPT_Invert_Control
3.007	B <sub>1</sub> U <sub>3</sub>	DPT_Control_Dimming
3.008	B <sub>1</sub> U <sub>3</sub>	DPT_Control_Blinds
4.001	A <sub>8</sub>	DPT_ASCII
4.002	A <sub>8</sub>	DPT_Char_8859_1
5.001	U <sub>8</sub>	DPT_Scaling
5.003	U <sub>8</sub>	DPT_Angle
5.004	U <sub>8</sub>	DPT_Percent_U8
5.005	U <sub>8</sub>	DPT_DecimalFactor
5.006	U <sub>8</sub>	DPT_Tariff
5.010	U <sub>8</sub>	DPT_Value_1_Ucount
6.001	V <sub>8</sub>	DPT_Percent_V8
6.010	V <sub>8</sub>	DPT_Value_1_Count
6.020	B <sub>5</sub> N <sub>3</sub>	DPT_Status_Mode3
7.013	U <sub>16</sub>	DPT_Brightness
8.011	V <sub>16</sub>	DPT_Rotation_Angle
9.001	F <sub>16</sub>	DPT_Value_Temp
18.001	B <sub>1</sub> R <sub>1</sub> U <sub>6</sub>	DPT_SceneControl
20.100	N <sub>8</sub>	DPT_FuelType
20.101	N <sub>8</sub>	DPT_BurnerType
20.102	N <sub>8</sub>	DPT_HVACMode
20.103	N <sub>8</sub>	DPT_DHWMode
20.104	N <sub>8</sub>	DPT_LoadPriority

DPT ID	DPT Format	DPT Name
20.105	N <sub>8</sub>	DPT_HVACContrMode
20.106	N <sub>8</sub>	DPT_HVACEmergMode
20.107	N <sub>8</sub>	DPT_ChangeoverMode
20.108	N <sub>8</sub>	DPT_ValveMode
20.109	N <sub>8</sub>	DPT_DamperMode
20.110	N <sub>8</sub>	DPT_HeaterMode
20.111	N <sub>8</sub>	DPT_FanMode
20.112	N <sub>8</sub>	DPT_MasterSlaveMode
20.113	N <sub>8</sub>	DPT_StatusRoomSetp
23.001	N <sub>2</sub>	DPT_OnOff_Action
23.002	N <sub>2</sub>	DPT_Alarm_Reaction
23.003	N <sub>2</sub>	DPT_UpDown_Action
23.102	N <sub>2</sub>	DPT_HVAC_PB_Action

## ATEN Control Box Reset Button


The reset button on ATEN Control Boxes can be used to reset system settings as described below.

Reset Button Functions		
Control Box ON/OFF	Operation	Description
ON	Short press	Resets the Control Box's network settings.
	Press and hold until the front panel LEDs blink once, with the buzzer beeping once (about 8 seconds)	Resets all settings back to factory default (deleting all Viewers, Projects, and account/password) but retains the network and license settings.
OFF	While pressing and holding, turn on the Control Box, and release when the buzzer beeps once, with the front panel LEDs blinking.	Enters Recovery Mode without resetting the Control Box's settings.
	While pressing and holding, turn on the Control Box, and release when the buzzer beeps twice, with the front panel LEDs blinking.	Resets all settings back to factory default but retains the license settings, and enters Recovery Mode.
	While pressing and holding, turn on the Control Box, and release when the buzzer beeps 3 times, with the front panel LEDs blinking.	Resets all of the Control Box's settings, including Viewers, Projects, account/password, network, and licenses.



## Windows OS Button Limitation

There is a limitation for overlapping buttons when adding buttons for a Viewer to be used on Windows mobile devices. When two or more buttons are layered on one another, such as (A) on top of (B), users are unable to press the top most button (A), and instead triggers the bottom button (B) every time trying to press (A). To resolve this issue, copy the top most button (A), and add the duplicate (C) under both (A) and (B) on the Viewer.

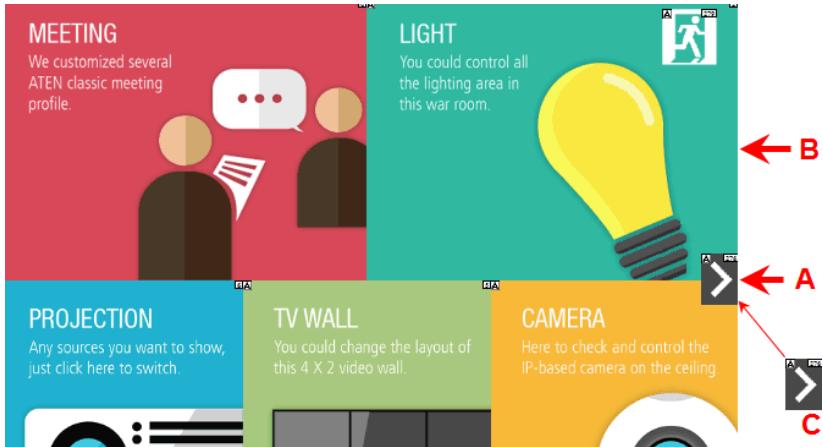

When the top button (A) is pressed, the lowest button (C) is executed.

## **ATEN Standard Warranty Policy**

---

The warranty policy may vary by product category and region of purchase. For details, please visit ATEN's official website, select your purchase counties/regions and then go to the Support Center, or contact your local ATEN sales representative for further assistance.

© Copyright 2025 ATEN® International Co., Ltd.  
Released: 2025-05-08

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved. All other brand names and trademarks are the registered property of their respective owners.