



Simply Better Connections

ATEN VanCryst™

**VP2730**

7 x 3 Seamless Presentation Switch  
with Streaming, HDBaseT  
User Manual

## Compliance Statements

---

### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### Warning

Operation of this equipment in a residential environment could cause radio interference.

### Achtung

Der Gebrauch dieses Geräts in Wohnumgebung kann Funkstörungen verursachen.



### KCC Statement

유선 제품용 / A 급 기기 (업무용 방송 통신 기기)  
이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이  
점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로  
합니다.

### **HDMI Trademark Statement**

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



### **RoHS**

This product is RoHS compliant.

## About this Manual

---

This user manual is provided to help you get the most from the VP2730 unit. It covers all aspects of installation, configuration, and operation. An overview of the information found in the manual is provided below.

**Chapter 1, *Introduction*** introduces you to the 7 x 3 Seamless Presentation Matrix Switch. Its purpose, features, benefits, and installation considerations are described.

**Chapter 2, *Hardware Setup*** introduces the panel components of the 7 x 3 Seamless Presentation Matrix Switch and the IR Remote Control, and details the steps to quickly and safely set up the VP2730.

**Chapter 3, *Local Operation*** provides information on locally operating and configuring the VP2730 via the panel pushbuttons and IR remote control.

**Chapter 4, *Remote Operation*** provides details on remote tasks such as joining online meetings and configuring system settings via the VP2730's web interface.

**Chapter 5, *RS-232 Serial Commands*** provides details on the functions and RS-232 commands that you can use to control the VP2730 using a serial controller.

**Chapter 6, *Video Presentation Control App*** provides details on remotely configuring system settings via the ATEN Video Presentation Control App.

**An Appendix** provides a list of safety instructions and precautions, contact information for ATEN technical support, product specifications, and other technical information.

---


### Note:

- ◆ Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit or any connected devices.
  - ◆ ATEN regularly updates its product documentation for new features and fixes. For an up-to-date VP2730 documentation, visit <http://www.aten.com/global/en/>
-



## **Conventions**

This manual uses the following conventions:

- `Monospaced` Indicates text that you should key in.
- [ ] Indicates keys you should press. For example, [Enter] means to press the **Enter** key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
  - 1. Numbered lists represent procedures with sequential steps.
  - ◆ Bullet lists provide information, but do not involve sequential steps.
  - > Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start > Run means to open the *Start* menu, and then select *Run*.
  -  Indicates critical information.

## Package Contents

---

- ◆ 1 VP2730 7 x 3 Seamless Presentation Matrix Switch
- ◆ 1 IR receiver
- ◆ 1 IR remote control
- ◆ 1 power cord
- ◆ 2 terminal blocks
- ◆ 1 foot Pad set (4 pcs)
- ◆ 1 user instructions

---

**Note:** Make sure that all of the items are present and in good order. If anything is missing or was damaged in shipping, please contact your dealer for further assistance.

---

## Product Information

---

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	<a href="http://www.aten.com">http://www.aten.com</a>
North America	<a href="http://www.aten-usa.com">http://www.aten-usa.com</a>

## User Information

---

### Online Registration

Be sure to register your product at our online support center:

International	<a href="http://eservice.aten.com">http://eservice.aten.com</a>
---------------	---

### Telephone Support

For telephone support, call this number:

International	886-2-8692-6959
China	86-400-810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988 1-949-428-1111

## **User Notice**

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

# Contents

---

Compliance Statements . . . . .	ii
About this Manual . . . . .	iv
Conventions . . . . .	v
Package Contents . . . . .	vi
Product Information . . . . .	vii
User Information . . . . .	vii
Online Registration . . . . .	vii
Telephone Support . . . . .	vii
User Notice . . . . .	viii
Contents . . . . .	ix

## 1. Introduction

Overview . . . . .	1
Features . . . . .	2
Planning the Installation . . . . .	4
Required Equipment . . . . .	4
Optional Equipment . . . . .	4
Accessories . . . . .	4

## 2. Hardware Setup

Components . . . . .	5
VP2730 Front View . . . . .	5
VP2730 Rear View . . . . .	6
IR Remote Control . . . . .	8
LED Display . . . . .	10
Mounting . . . . .	11
Rack Mount . . . . .	11
Under Desk Mount . . . . .	12
Installation . . . . .	13

## 3. Local Operation

Overview . . . . .	15
Operation Considerations . . . . .	15
Switching the Display Source . . . . .	16
Using the IR Remote Control / Front-panel Pushbutton . . . . .	16
Using the OSD . . . . .	18
The OSD . . . . .	19
Launching the OSD to a Specific Display . . . . .	19
Overview . . . . .	19
Enabling a Multiview . . . . .	22
Changing the Display Mode . . . . .	24
Moderator Mode (Remote Display Control) . . . . .	26
Locking the Front Panel . . . . .	28

System Settings . . . . .	29
<b>4. Remote Operation</b>	
Overview . . . . .	33
Supported Web Browsers . . . . .	33
The VP2730's IP Address . . . . .	34
The Participant Account . . . . .	35
Logging in as Participant . . . . .	35
The Participant Screen . . . . .	36
Sharing a Screen or an Application Window . . . . .	37
The Administrator Account . . . . .	40
Logging in as Administrator . . . . .	40
The Administrator Screen . . . . .	42
Configuration View . . . . .	42
Presentation View . . . . .	43
System Configuration . . . . .	44
General Settings . . . . .	44
Audio Settings . . . . .	46
Source Settings . . . . .	48
Display Settings . . . . .	50
Multiview Settings . . . . .	52
Network Settings . . . . .	53
Upgrading the System Firmware . . . . .	54
Backing Up System Settings . . . . .	54
Restoring System Settings . . . . .	54
Resetting the VP2730 to Default . . . . .	54
Applying SSL Encryption . . . . .	55
Remote Pad Settings . . . . .	56
Setting Up Remote Pads . . . . .	56
Importing or Exporting Remote Pad Layouts . . . . .	58
Identifying Remote Pads . . . . .	59
Unpairing Remote Pads . . . . .	60
<b>5. RS-232 Serial Commands</b>	
Overview . . . . .	61
Setup . . . . .	61
Command Notations . . . . .	62
RS-232 Commands . . . . .	63
<b>6. Video Presentation Control App</b>	
Overview . . . . .	73
Installing and Configuring the App . . . . .	73
iOS Version . . . . .	74
Main Page . . . . .	74
Info . . . . .	75
Joining a Meeting . . . . .	76

Joining a Meeting Automatically . . . . .	76
Joining a Meeting via Manually Connect . . . . .	78
Meeting Screen . . . . .	80
Streaming Out Your Content . . . . .	81
Chat Room . . . . .	83
Control Panel . . . . .	84
Video Panel . . . . .	85
Switching a Source for a Display . . . . .	85
Display Features and Settings . . . . .	86
Multi-view Layout . . . . .	87
Display Settings . . . . .	88
Source Settings . . . . .	89
Screen Capturing . . . . .	89
Moderator Mode . . . . .	89
Audio Panel . . . . .	90
More VP Settings . . . . .	91
General . . . . .	92
Source . . . . .	93
OSD Notification . . . . .	94
Information . . . . .	95
Android Version . . . . .	96
Main Page . . . . .	96
Info . . . . .	97
Joining a Meeting . . . . .	98
Joining a Meeting Automatically . . . . .	98
Joining a Meeting via Manually Connect . . . . .	100
Meeting Screen . . . . .	102
Streaming Out Your Content . . . . .	103
Chat Room . . . . .	105
Control Panel . . . . .	106
Video Panel . . . . .	107
Switching a Source for a Display . . . . .	107
Display Features and Settings . . . . .	108
Multi-view Layout . . . . .	109
Display Settings . . . . .	110
Source Settings . . . . .	111
Screen Capturing . . . . .	111
Moderator Mode . . . . .	111
Audio Page . . . . .	112
More VP Settings . . . . .	113
General . . . . .	114
Source . . . . .	115
OSD Notification . . . . .	116
Information . . . . .	117

## 7. Appendix

Safety Instructions	119
General	119
Rack Mounting	121
Technical Support	122
International	122
North America	122
Specifications	123
Limited Warranty	126



# Chapter 1

## Introduction

### Overview

---

The VP2730 7 x 3 Seamless Presentation Matrix Switch is a multi-in-one presentation switch that integrates video matrix switch with scaler, streaming, audio mixer, HDBaseT extender, and analog-to-digital converter functions into one compact device. With seven multi-format inputs to two HDMI and one HDBaseT high-definition outputs, VP2730 empowers larger meetings and facilitates collaboration between local and remote participants in boardrooms, video conferencing rooms, lecture halls or distance learning classrooms.

With the user in mind, VP2730 comes with a straightforward and accessible OSD and web GUI to streamline operation for both local and remote participants. To facilitate sharing and collaboration with no distance limitations, VP2730 not only allows the meeting moderator to share video content to up to five remote sites, but also enables remote sites or local participants to wirelessly stream in their content for discussion. The moderator can monitor and switch among sources in any variation of full-screen, dual-view, tri-view, quad-view or PIP modes, with up to six sources displayed simultaneously on one screen.

VP2730 also features more advanced meeting management functions: Moderator Mode enables the meeting moderator to control other displays via the host display; Chat Room facilitates meeting communications; while Screen Capture and Freeze record and control the meeting flow. This Collaborative presentation solution facilitates distance-free content sharing along with advanced audio, simplifying AV integration via eliminating the need for numerous individual components and the compatibility challenges that accompany them.

## Features

---

### Seamless Multi-format AV Switching

- ◆ Supports 7 multi-format inputs:
  - ◆ 2 combo inputs (HDMI/VGA, HDMI/DisplayPort)
  - ◆ 3 HDMI inputs
- ◆ 2 HDMI and 1 HDBaseT outputs
- ◆ Superior video quality up to 1080p @ 60Hz (HDMI/DisplayPort)
- ◆ Ultra Seamless Switch™ – zero second switching that provides continuous video streams, real-time video switching, and stable signal transmissions
- ◆ Scaler – features a scaling function to convert input resolutions to the optimum display resolutions
- ◆ Flexible aspect ratio conversion

### 1080p Streaming for Distance-free Sharing and Collaboration

- ◆ Go Live – meeting moderator can broadcast HD video streams to up to 5 remote locations

---

**Note:** Streaming out requires a bandwidth of 2 MB or more.

---

- ◆ Streaming In – remote locations can stream and share video content to the meeting moderator without distance limitations via intuitive web interface
- ◆ Streaming queuing – share the streamed-in content approved by the meeting moderator one at a time to help manage the meeting flow

### Audio Mixer Integration for Advanced Audio Support

- ◆ Audio Mixer – allows mixing of the microphone inputs to any external analog or digital audio output device
- ◆ Embed/De-embed Audio – HDMI/DisplayPort audio signals can be extracted to separate digital/analog audio signals; Mic/Line audio can be embedded to HDMI audio
- ◆ Supports multi-format digital/analog audio outputs, including coaxial, TOSLINK, and RCA up to 2 channels

**Advanced Conferencing Management Features for Collaboration**

- ◆ Multi-view – display and switch simultaneously in any variation of full-screen, dual-view, tri-view, quad-view or PIP modes, with up to six sources displayed simultaneously on one screen
- ◆ Moderator Mode – enables the meeting moderator to control other displays via host display
- ◆ Chat Room – facilitates real-time and precise communication among remote participants
- ◆ Screen Capture – captures anything on your screen with a click
- ◆ Freeze – freezes the screen for discussion or to control the meeting flow

**Streamlined Operation**

- ◆ Multiple Control Options – flexible control via Built-in Web UI, Front Panel, OSD, IR Remote Control, and RS-232 serial commands
- ◆ Auto switching – automatically detects and switches to a new source as soon as it is connected for time-saving and convenience

## Planning the Installation

---

### **Required Equipment**

Prepare the following equipment before installing the VP2730 unit.

- ◆ Source devices
  - ◆ 1 to 5 source devices equipped with HDMI, DisplayPort, or VGA ports (e.g. a laptop, PC, or a Blu-ray disc)

---

**Note:** The VP2730 supports Mac or PCs that are Windows, Linux, or Unix-based.

---

- ◆ 1 to 5 cables for connecting the source devices to the VP2730
- ◆ Display devices
  - ◆ 1 to 3 display devices equipped with an HDMI connector or an HDBaseT port (e.g. a monitor or a projector)
  - ◆ 1 to 3 cables for connecting the display devices to the VP2730

For information on the number of equipped ports for each connection interface, see *Specifications*, page 123.

### **Optional Equipment**

Prepare the following equipment as required.

- ◆ 1 Microphone
- ◆ 1 Speaker
- ◆ 1 RJ-45 cable to connect the VP2730 to a network switch to allow for streaming over IP and access to the VP2730's web interface
- ◆ 1 to 3 USB devices to serve as external storage
- ◆ 1 RS-232 controller for serial control

### **Accessories**

Optionally purchase the following for your VP2730:

- ◆ Rack Mount Kit
- ◆ Under Desk Mount Kit

For more information about mounting, see *Mounting*, page 11.

# Chapter 2


## Hardware Setup




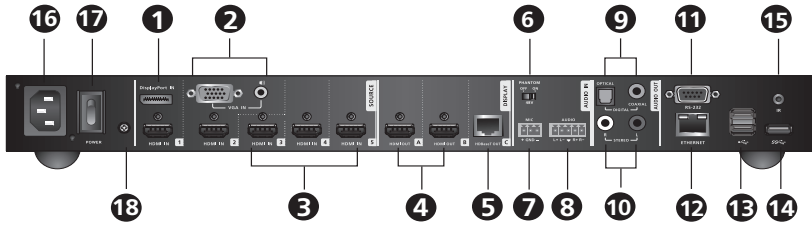
1. Please review the safety information regarding the placement of this device in *Safety Instructions*, page 119.
2. Do not power on the VP2730 until all the necessary hardware is connected.

### Components

#### VP2730 Front View

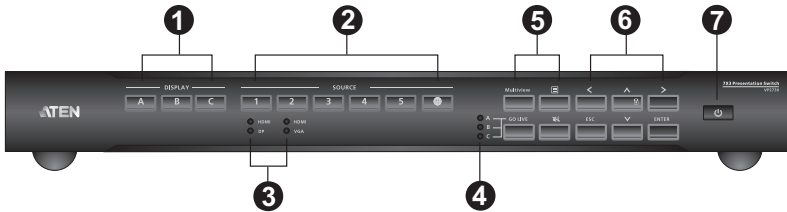

No.	Component	Description
1	display selection pushbuttons	Press to focus a display. The pushbutton for the focused display lights amber.
2	source selection pushbuttons	Press to select a source for the focused display. The pushbutton for the selected source lights green. Press  to stream in a video source over the Internet.
3	source LEDs	Indicate the selected sources for source (1) and (2).
4	go live LEDs	Indicate the display that is streamed out.
5	function pushbuttons	Press to access multiview, menu, go-live settings, and mute settings.
6	navigation pushbuttons	Press to navigate and configure settings via the OSD.
7	on / off pushbuttons	Press to turn on / off the unit.

**VP2730 Rear View**


No.	Component	Description
1	source (1)	Connects up to two source devices, one equipped with a DisplayPort, another equipped with an HDMI port. Users can select which source to display by pressing the Source Selection pushbutton on the front panel.
2	source (2)	Connects up to two source devices, one equipped with a VGA port, another equipped with an HDMI port. Users can select which source to display by pressing the Source Selection pushbutton on the front panel.
3	source (3), (4), and (5)	Connect to HDMI source devices via HDMI cables.
4	HDMI out	Connect to display devices equipped with an HDMI port.
5	HDBaseT out	Connects to a display device equipped with an HDBaseT port.
6	Phantom power switch	Enables or disables Phantom power supply for a condenser microphone.
7	mic in	Connects to a microphone.
8	balanced audio in	Connects to a balanced analog audio source.
9	digital audio out	Connects to a speaker via optical audio out or coaxial audio out port.
10	stereo audio out	Connects to a speaker.
11	RS-232 serial port	Connects to a hardware or software controller to transmit serial data.

---

<b>No.</b>	<b>Component</b>	<b>Description</b>
12	Ethernet port	Connects to a network switch via an RJ-45 cable to allow streaming of audio and video data over IP.
13	USB Type-A ports (2.0)	Receive up to two USB 2.0 devices as external storages.
14	USB Type-A port (3.0)	Receives a USB 3.0 device as an external storage.
15	IR receiver port	Connects to an IR receiver to receive IR signals from the IR remote control.
16	power socket	Receives a power cord to supply power to the VP2730.
17	power switch	Enables (ON) or disables (OFF) the power supply to the VP2730.
18	grounding terminal	Grounds the VP2730 to prevent damages from power surge or static electricity.



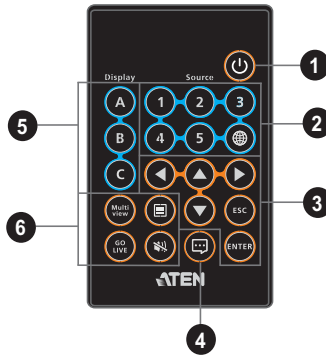

---

## IR Remote Control



No.	Buttons	Description
1	on / off	Turns the VP2730 on or off.
2	source	Selects sources for connected displays.
3	navigation	Navigates in the OSD, selects or unselects options, or leaves a current screen in the OSD.
4	notifications	<p>Opens the Notifications panel to show logs of system status, device connection, and user configurations.</p> <p><b>Note:</b> When a system setting is configured via the device panel, OSD, or the web interface, you will be notified via a text message that pops up at the top-right corner of the OSD. This message is also logged and saved in the Notifications panel. To stop receiving the pop-up notification messages and only keep the messages in the Notifications panel, go to <b>System Settings &gt; Notifications</b> in the OSD and configure the <b>Web General</b> and <b>System General</b> settings.</p>
5	display	Focuses the chosen display.




No.	Buttons	Description
6	function	<ul style="list-style-type: none"><li>◆ : Displays the OSD. Press again to display the OSD for the next connected display.</li><li>◆ : Switches the current display to multiview.</li><li>◆ : Streams out the current display out via the Ethernet.</li><li>◆ : Mutes all displays and speakers.</li></ul>


## LED Display

You can find the unit's LEDs as illustrated below. See the table below for details on LED indication.

### VP2730 Front

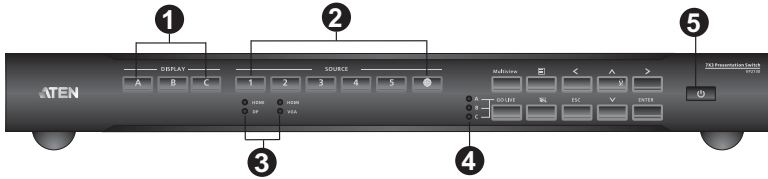

### VP2730 Rear

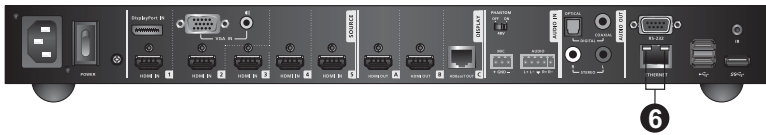

No.	LED	Indication	Description
1	display pushbuttons	Light amber	The indicated display device (Display A, B, or C) is focused.
2	source pushbuttons	Light green	The indicated source is selected for display.
3	source LEDs	Light green	The indicated source (interface) is selected for the combo port.
4	go live LEDs	Light amber	The indicated display is streamed out.
5	power	Lights green	The unit is powered and turned to <b>ON</b> .
		Lights orange	The unit is connected to power, but is currently <b>OFF</b> .
6	ACT (Left LED)	Lights orange	Data is being transmitted at 100 Mbps.
		Lights green	Data is being transmitted at 1 Gbps.
	link (Right LED)	Lights green	LAN is connected and no data is being transmitted.
		Blinks green	LAN is connected and data is being transmitted.

---

# Mounting

---

## Rack Mount


The VP2730 can be mounted on a 19" (1U) system rack. To conveniently access the front-panel pushbuttons for local configuration and operation, mount the unit at the front of the rack so that the front panel faces outward.

---

**Note:** The Rack Mount Kit required for this installation is not included in the package. For more information on purchasing this accessory, please visit the product web page.

---

1. Use the 6 M3 Phillips hex head screws supplied with the mounting kit to secure the rack mounting brackets onto the unit.

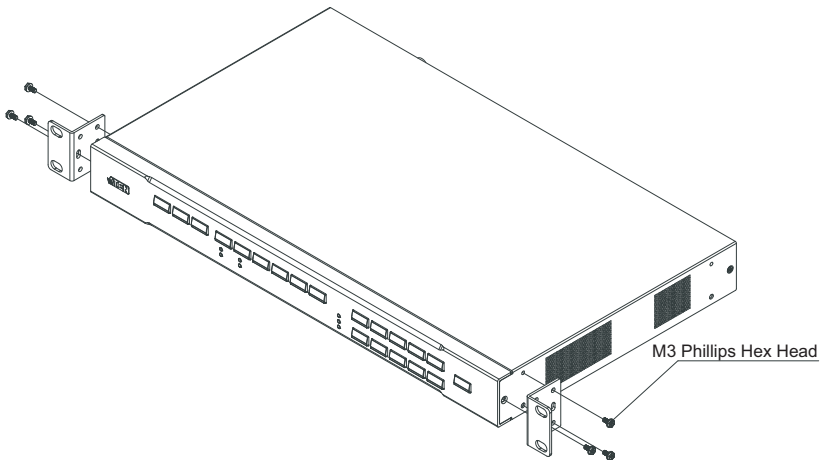

2. Position the unit in the front of the rack and align the holes in the mounting brackets with the holes in the rack.
3. Screw the mounting brackets to the rack.

## **Under Desk Mount**


You can also mount the VP2730 under a desk using the under-desk mounting kit.

---

**Note:** The mounting kit required for this installation is not included in the package. For more information on purchasing this accessory, please visit the product web page.

---


1. Use 6 M3 Phillips hex head screws supplied with the mounting kit to secure the mounting brackets onto the unit.

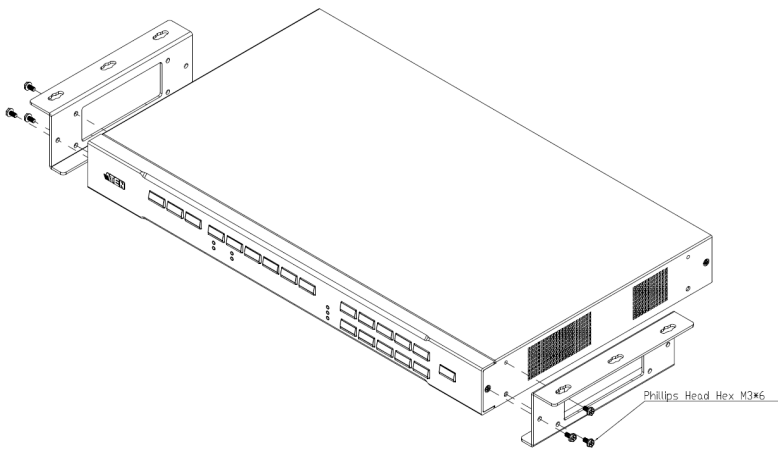

2. Position the unit to a spot under the desk where you can easily access the front-panel pushbuttons, and then secure the racks to the desk with self-prepared screws.

# Installation

Follow the steps below to safely install sources, displays, and other equipment to the VP2730.

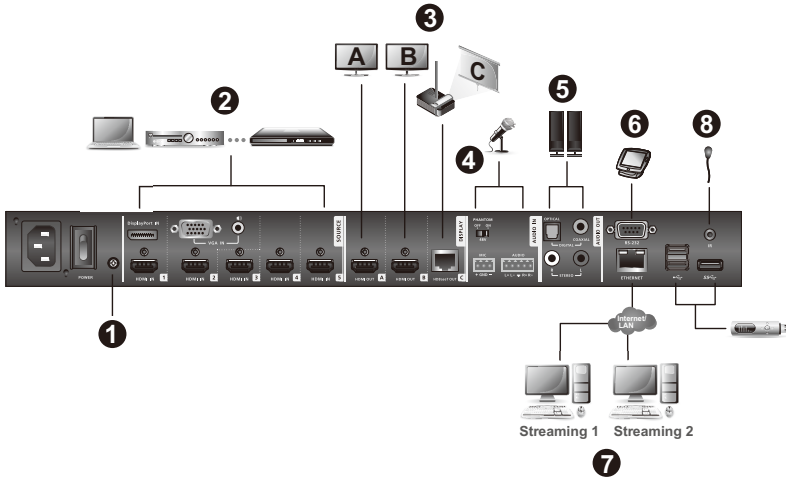

1. Use a grounding wire to ground the unit by connecting one end to the grounding terminal, and the other end to a suitable grounded object.

---

**Note:** Do not omit this step. Proper grounding helps prevent damage to the unit from surges or static electricity.

---

2. Connect the unit to sources.

---

**Note:** Source (1) and (2) can each receive two sources, but can only output one at a time.

---

3. Connect the unit to displays.
  - a) Use HDMI cables to connect HDMI displays to the HDMI out ports.
  - b) Use a Cat 5e/6/6a cable to connect an HDBaseT display to the HDBaseT out port.

---

**Note:** Use a Cat 5e/6 cable to transmit signals of 1080p up to 60 m, or a Cat 6a/ATEN 2L-2910 Cat 6a cable to extend the transmission up to 70 m.

---

4. Connect a microphone to the mic in port.

---

**Note:**

- ◆ If you use a condenser (capacitor) microphone, put the Phantom power switch to **ON**.
  - ◆ For detailed audio input specifications, see *Specifications*, page 123.
- 

5. Connect a speaker to the digital audio out port (via an amplifier and a converter) or the stereo audio out port.

---

**Note:** For detailed, audio output specifications, see *Specifications*, page 123.

---

6. To configure the unit's settings via an RS-232 interface, connect a hardware or software controller to the RS-232 serial port.
7. To allow streaming over IP, use an RJ-45 cable to connect the Ethernet port of the unit to a network switch.
8. Connect the IR receiver to the IR receiver port for IR remote control.
9. Plug the power cord to the power socket, and then put the power switch to **ON**.
10. Power on all the connected devices.

# Chapter 3

## Local Operation

### Overview

---

This chapter provides detailed information on the features of the VP2730's on-screen display (OSD), and how to locally operate the unit using the front-panel pushbuttons and the IR remote control. You can perform the following tasks with the OSD:

- ◆ Switch the displayed sources
- ◆ Change the display mode, resolution, or aspect ratio settings
- ◆ Stream out (go live) the current display via network connection
- ◆ Configure the VP2730's main system settings
- ◆ Remotely control another display in the VP2730's environment (moderator mode)
- ◆ Make screen captures
- ◆ Freeze the screen

### Operation Considerations

- ◆ Make sure to use the IR remote control within the effective range (6 m), and that there is a clear line-of-sight between the remote control unit and the IR receiver connected to the VP2730.
- ◆ The IR remote control and the VP2730's front panel offer the same operation capability. Use either method as required.

## Switching the Display Source

You can switch the display source using the IR remote control, front-panel pushbuttons, or OSD. For each connected display, you can choose from 7 sources (channels) using the Source List in the OSD. The content of each source is summarized below.

OSD Source List	Description
Source 1 ~ 5	Source 1 to 5 correspond to the sources connected to the VP2730.
Source 6	Source 6 is a reserved channel for sources that are streamed in over the Internet. Streamed-in sources are listed as options among which you can select for display. For details about sharing source content, see <i>Sharing a Screen or an Application Window</i> , page 37.
Multiview	This is a multiview channel where you can select multiple sources and create a composite view. For details, see <i>Enabling a Multiview</i> , page 22.


### Using the IR Remote Control / Front-panel Pushbutton

1. Press a Display button/pushbutton to focus a display. The pushbutton for the selected display lights amber.






- Press a Source button/pushbutton or the Multiview button/pushbutton to assign a source to the focused display. The pushbutton for the selected source lights green.

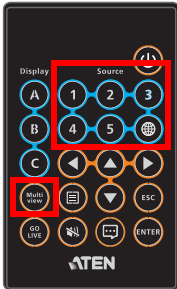
**Note:**

- For combo ports (Source 1 and 2), HDMI sources are prioritized as the output for the ports. To change the priority, configure the Source settings in the OSD. For details, see *System Settings*, page 29. To manually change the output source of a combo port, press the Display button/pushbutton and then press the Source button/pushbutton twice. The pushbutton for the selected source lights green.
- For details on multiview, see *Enabling a Multiview*, page 22.

## Using the OSD

1. From the IR remote control, press  to launch the OSD on the display for which you wish to change the source.

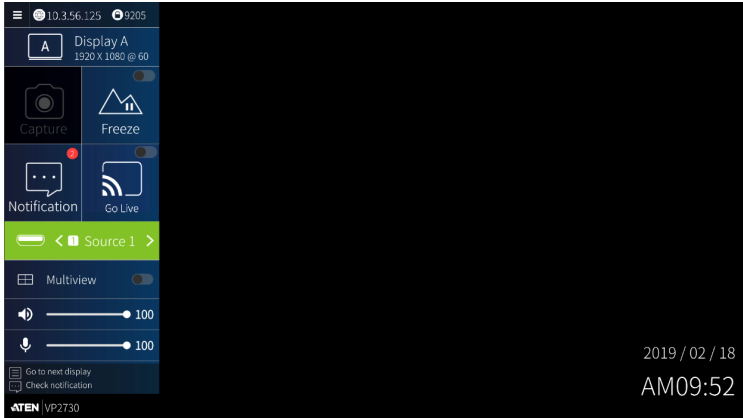

2. To switch to a full-screen source, use the left and right navigation buttons. The source displays on the monitor as you navigate.
3. To switch to a multiview, navigate to **Multiview** in the OSD menu, and then press the **Enter**  button/pushbutton to display the multiview. For more details on multiview, see *Enabling a Multiview*, page 22.

---



### Note:

- ◆ The source options are displayed in default names. To change these names, log in the VP2730's web interface as administrator, and then go to **Video & Audio > Source**.
  - ◆ For details on other OSD features, see *Overview*, page 19.
-

# The OSD

## Launching the OSD to a Specific Display

Each connected display can only be configured via the OSD when the OSD menu appears on that particular display. To launch the OSD, follow the steps below.





1. Press the **Menu**  button/pushbutton. The OSD menu appears on the display where you last left the menu.
2. To launch the OSD to another display, press the **Menu**  button/pushbutton again. The OSD menu cycles through all connected displays.





## Overview

The following controls are available in the OSD:



No.	Name/Information	Description
1	Connection Information	Displays the IP address of the VP2730's web interface and the room code. Access the web interface to join a remote meeting or remotely configure the VP2730's settings. For details, see Chapter 4, <b>Remote Operation</b> .

No.	Name/Information	Description
2	 Options	<p>Navigate to this icon and press the <b>Enter</b>  button/pushbutton to access the following functions:</p> <ul style="list-style-type: none"> <li>◆ Remotely control a selected display. For details on remote display control, see <i>Moderator Mode (Remote Display Control)</i>, page 26.</li> <li>◆ View or configure VP2730's settings. For details on system settings, see <i>System Settings</i>, page 29.</li> <li>◆ Power off the VP2730.</li> </ul>
3	Display settings	<p>Identify the display port (A, B, or C) that the display device is connected and shows the following information.</p> <ul style="list-style-type: none"> <li>◆ Device name: To change the device name, log in the web interface as administrator, and then go to <b>General &gt; Device Information</b>.</li> <li>◆ Auto switching: Automatically switches to a newly detected source. This option is only available for Display A.</li> <li>◆ Resolution: To edit the resolution and ratio, navigate to this field in the OSD, and then press the <b>Enter</b>  button/pushbutton.</li> <li>◆ Display ratio             <ul style="list-style-type: none"> <li>◆ <b>Scale to whole:</b> Fully extends the video to the four sides of the display.</li> <li>◆ <b>Auto fit:</b> Proportionally scales the video to fit the display without cutting any content off. This may leave some blank on either the top and bottom or the left and right of the screen.</li> <li>◆ <b>Auto cut:</b> Proportionally scales the video to fully fill the display. The content that goes out of the display range will be cut off.</li> </ul> </li> </ul>
4	Screen capture	<p>Navigate to this field and then press the <b>Enter</b>  button/pushbutton to capture the screen. The captured image is saved to the storage device connected to the V2730's USB ports. Make sure you have a storage device inserted to the V2730 for this function to be available.</p>

No.	Name/Information	Description
5	Notifications	<p>Navigate to this field and press the <b>Enter</b>  button/pushbutton to open the Notifications panel to view logs of system status, device connection, and user configurations made via the OSD menu and the web interface.</p> <p><b>Note:</b> When a system setting is configured via the device panel, OSD, or the web interface, you will be notified via a text message that pops up at the top-right corner of the OSD. This message is also logged and saved in the Notifications panel. To stop receiving the pop-up notification messages and only keep the messages in the Notifications panel, go to <b>System Settings &gt; Notifications</b> in the OSD and configure the <b>Web General</b> and <b>System General</b> settings.</p>
6	Source List	<p>Press the Navigation buttons/pushbuttons to select the source for the display or press the <b>Enter</b>  button/pushbutton to select from a preview panel. For details on how to select sources, see <i>Switching the Display Source</i>, page 16.</p>
7	Multiview	<p>Enables/disables a multiview display for the selected display (A, B, or C). For details, see <i>Enabling a Multiview</i>, page 22.</p>
8	Overall Volume	<p>Sets the volume of the speaker connected to the VP2730.</p>
9	Mic Volume	<p>Sets the volume of the microphone connected to the VP2730 by adjusting the output level.</p>
10	Freeze	<p>Navigate to this field and then press the <b>Enter</b>  button/pushbutton to freeze the video.</p>
11	Go Live	<p>Press the <b>Go Live</b>  button/pushbutton to stream out the display. This button grays out if the VP2730 is not connected to network.</p> <p><b>IMPORTANT:</b></p> <ul style="list-style-type: none"> <li>◆ Make sure that the VP2730 is connected to the network and that the network bandwidth is of 2 MB or more.</li> <li>◆ The VP2730 can broadcast the video stream to 6 remote locations at maximum.</li> </ul>
12	Date and time	<p>Indicates the system date and time.</p>

## Enabling a Multiview




---


You can enable a multiview to assemble frequently used sources into one composite view.


**Note:** A multiview can only be enabled on one display (A, B, or C) at the same time.


---


To enable the multiview channel:


1. Press the **Menu**  button/pushbutton to launch the OSD on the display where you want to show the multiview.
2. Use one of the following methods to enable multiview.
  - ◆ Press the **Multiview** pushbutton on the front panel.
  - ◆ Press the Multiview  button on the IR remote control.
  - ◆ In the OSD, navigate to **Multiview** and press the **Enter**  button/pushbutton to enable the setting.

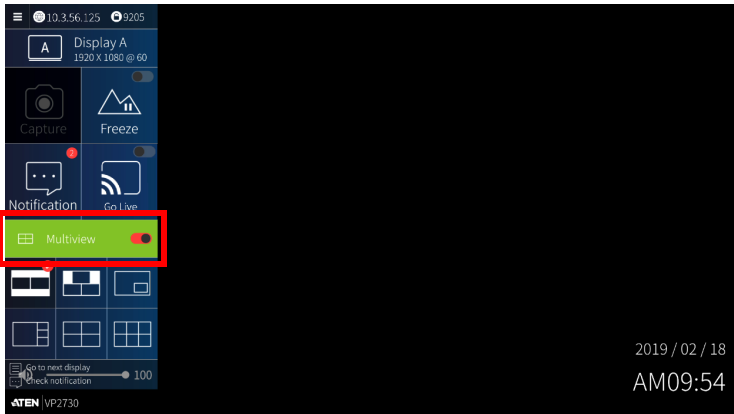


3. To change the multiview layout navigate to a layout you wish to use and press the **Enter**  button/pushbutton. The layout is immediately switched.

4. To change the sources used in the multiview, follow the steps below.
- a) Navigate to the multiview layout that you selected and press the **Enter**  button/pushbutton. The focused channel is indicated with a green border.

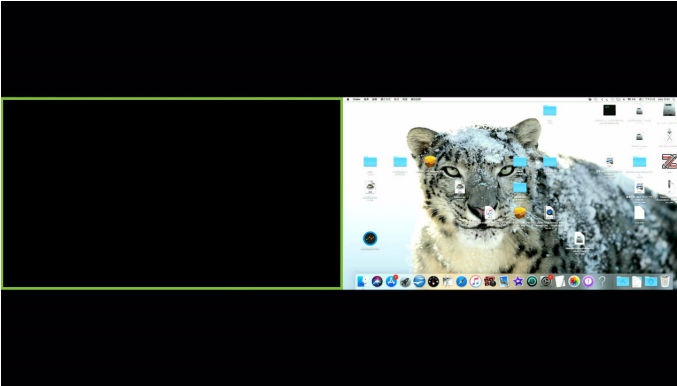

- b) Navigate to the channel to which you wish to change the source, and press the **Enter**  button/pushbutton to open a source menu.

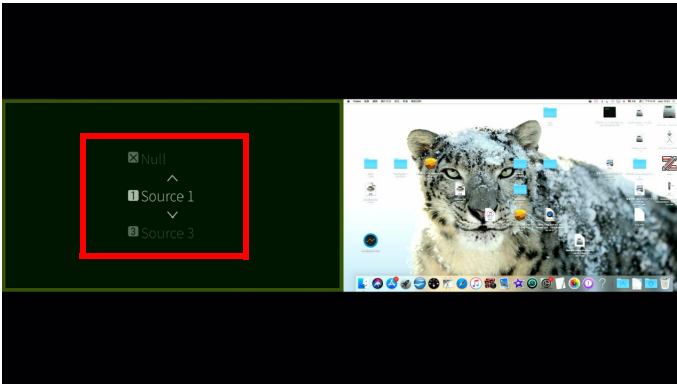

- c) Use the **Up** and **Down** buttons/pushbuttons to select a source. The selected source is immediately applied.

## Changing the Display Mode


---

You can have the connected displays showing different or identical content using different display modes.

### Matrix Mode



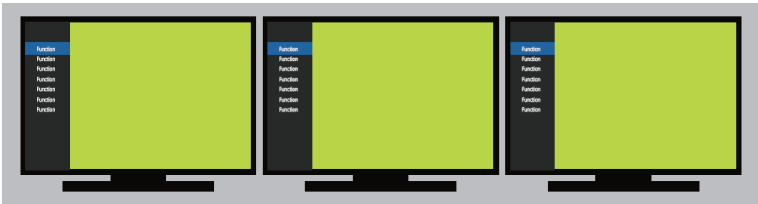


### Mirror Mode





- ◆ **Matrix mode:** Each connected display can be set differently and show different content. This is the default mode. In this mode, each display is configured on its own OSD panel.
- ◆ **Mirror mode:** Each connected display mirrors each other and does not take different settings. In this mode, configuration on one display is automatically applied to other displays connected to the VP2730.




To change the display mode:

1. Press the **Menu**  button/pushbutton to launch the OSD.
2. In the OSD, navigate to  and then press the **Enter**  button/pushbutton. This screen appears.

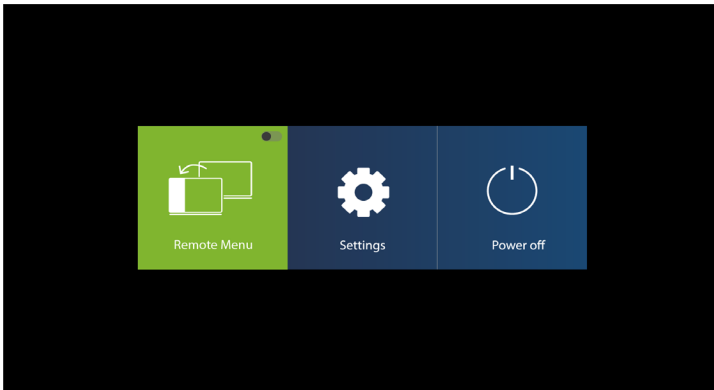

3. Navigate to **Settings** and press the **Enter**  button/pushbutton. This screen appears.

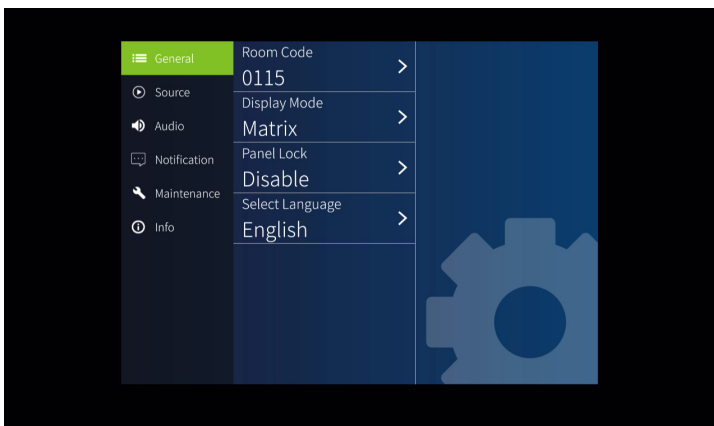




4. Navigate to **General > Display Mode** and then select a view mode. The view mode is immediately applied to the connected displays.


## Moderator Mode (Remote Display Control)


---


When the OSD of a display is too far to be seen clearly, or when host control of a remote display is required, you can enable remote control of the target display using a display that is located near you.


To enable remote control:


1. Press the **Menu**  button/pushbutton to launch the OSD on a display that is located near the operator.
2. In the OSD, navigate to  and then press the **Enter**  button/pushbutton. This screen appears.

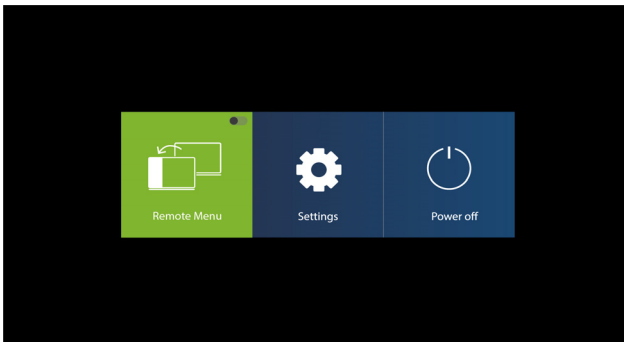

3. Press the **Enter**  button/pushbutton to enable remote control. This screen appears.

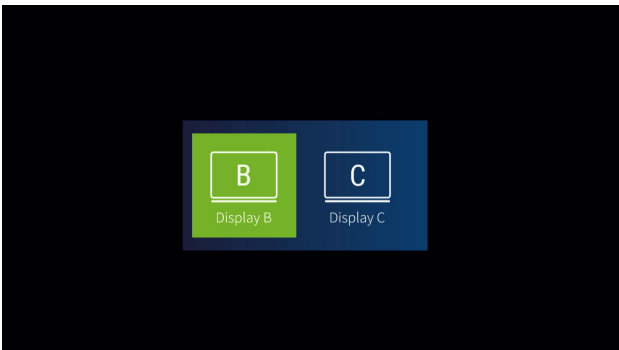


4. Navigate to the display you wish to control and then press the **Enter**  button/pushbutton. You can now use the OSD to remotely control the display. The OSD changes to red and the controlled display is indicated.

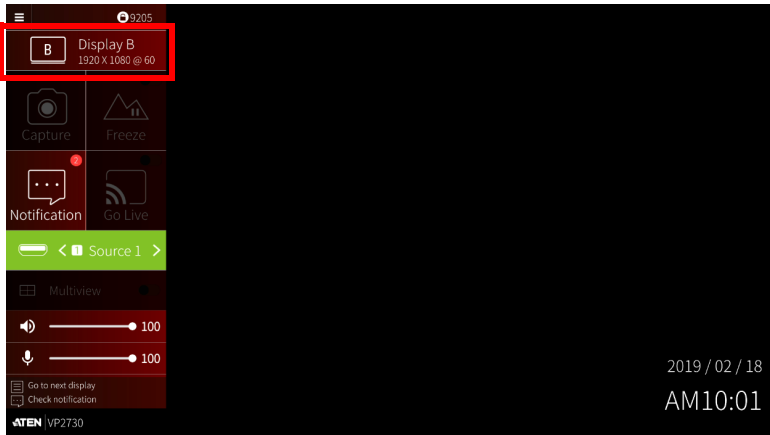

5. To end the control session, follow steps 1 and 2 to disable the **Remote Menu** function.




## Locking the Front Panel


---

To lock or unlock the front-panel pushbuttons, press and hold the Up navigation pushbutton for 5 seconds. When the front-panel pushbuttons are locked, the lock icon  lights red.


## System Settings

To configure system settings:

1. Press the **Menu**  button/pushbutton to launch the OSD on the display you wish to configure.
2. In the OSD, navigate to  and then press . This screen appears.

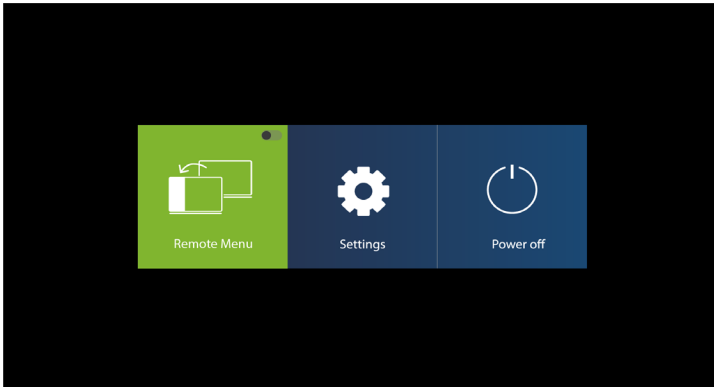

3. Navigate to **Setting** and press . This screen appears.

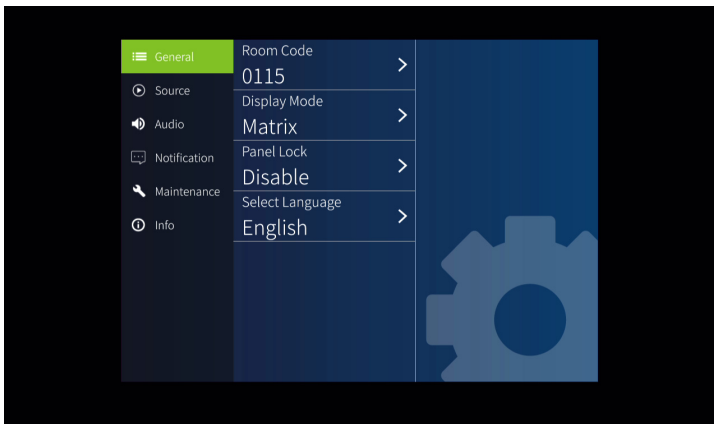

## 4. Configure the settings as required.

System Setting		Description	
General	Room Code	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ Refresh code</li> </ul>	Enables and generates a random room code to be required for joining a meeting via the VP2730's web interface.
	Display Mode	<ul style="list-style-type: none"> <li>◆ Matrix</li> <li>◆ Mirror</li> </ul>	For details, see <i>Changing the Display Mode</i> , page 24.
	Panel Lock	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ 5s later</li> <li>◆ 30s later</li> <li>◆ 5 mins later</li> </ul>	Automatically locks the front-panel pushbuttons if the OSD idles for the selected duration.
	Select Language		Sets the display language of the OSD.
Source	Source 1 Selection	<ul style="list-style-type: none"> <li>◆ HDMI</li> <li>◆ DP</li> <li>◆ Auto</li> </ul>	Sets the prioritized port for Source 1/Source 2. Select <b>Auto</b> to prioritize the first detected input as the source.
	Source 2 Selection	<ul style="list-style-type: none"> <li>◆ HDMI</li> <li>◆ VGA</li> <li>◆ Auto</li> </ul>	
	EDID Mode	<ul style="list-style-type: none"> <li>◆ ATEN Default</li> <li>◆ Display A</li> </ul>	<ul style="list-style-type: none"> <li>◆ <b>ATEN default:</b> This mode sends ATEN-predefined EDID to the connected sources.</li> <li>◆ <b>Display A:</b> This mode sends the EDID of Display A to the connected sources.</li> </ul>

System Setting		Description	
Audio	Overall Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the speaker connected to the VP2730.
	Mic Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the microphone connected to the VP2730 by adjusting the output level.
	Mic Gain	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> </ul>	Sets the volume of the microphone connected to the VP2730 by adjusting the input level.
	Streaming Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the streamed-in source.
	Line-in Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the source that is plugged to the Source 2 audio jack on the VP2730.
	Media Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of connected sources.
Notifications	Display Time	<ul style="list-style-type: none"> <li>◆ 3s</li> <li>◆ 5s</li> <li>◆ 10s</li> </ul>	Sets the duration for which a notification message pops up in the OSD.
	Web General	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ Enable</li> </ul>	Turns on/off pop-up messages for configurations made via the web interface.
	System General	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ Enable</li> </ul>	Turns on/off pop-up messages for configurations of system status, device connection status, and configurations made via the OSD.

System Setting		Description
Maintenance	FW Upgrades	Upgrades the VP2730's system firmware. <b>Note:</b> Save the firmware file to a USB drive and plug it into the VP2730 before the upgrade.
	Reset to Default	Sets the VP2730 to its default settings.
Info	Vender, firmware version, serial number, hardware version, build version	Displays the system information.

---



# Chapter 4

## Remote Operation

### Overview

---

You can remotely join meetings hosted via VP2730 and/or configure the VP2730's settings by logging in its web interface. Depending on your needs, log in the web interface as administrator or participant. The privileges and number of maximum login of the administrator and participant account are compared in the table below.

Privileges	Administrator	Participant
Join online meetings and share content	✓	✓
Configure the VP2730's settings	✓	
Back up and restore VP2730's settings	✓	
Number of maximum login	No limit	6

### Supported Web Browsers

The VP2730 supports access to its web UI through the following web browsers and operating systems:


Web Browser	Supported Version	Operating System
Chrome	64.0.3282.168	Windows 10
	60.0.3112.113	Windows 10
	64.0.3282.167	Ubuntu 16.04
	60.0.3112.78	Ubuntu 16.04
Firefox	58.0.2	Windows 10
	54.0.1	Windows 10
	58.0.2	CentOS 7.0
	52.4.0	CentOS 7.0
Opera	50.0.6762.67	Windows 10


## The VP2730's IP Address

When the VP2730 connects to the network for the first time, it is assigned a dynamic IP address or uses a default IP address if the network switch does not support DHCP.

- ◆ The default IP address and other network settings are as follows:

Network Parameter	Settings
IP Address	192.168.0.60
Subnet Mask	255.255.255.0
Gateway	192.168.0.1
HTTP Port	80

- ◆ To look up the VP2730's IP address, press  on the remote control to launch the OSD. The IP address is indicated in the OSD.

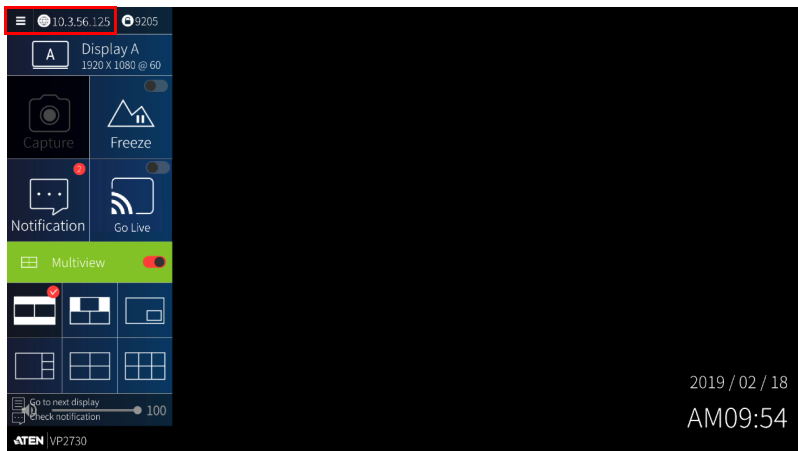


## The Participant Account

When you log in the VP2730's web interface as participant, you are remotely connected to an online meeting where you can:

- ◆ View the video streamed out from the VP2730
- ◆ Interact with other meeting participants by instant messaging
- ◆ Share your screen to meeting participants

### Logging in as Participant


1. In a web browser, type the web link (IP address) of the VP2730. This screen appears.

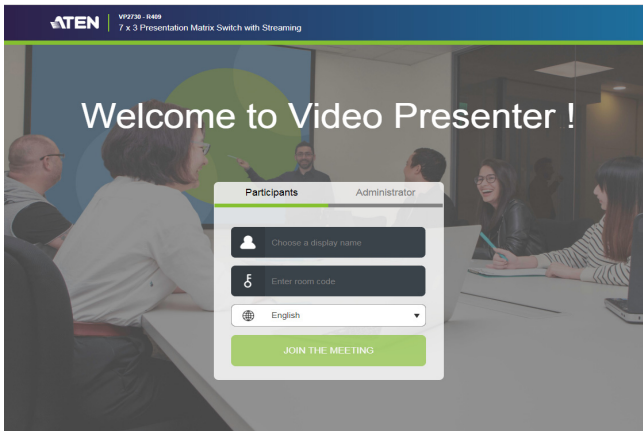

2. Type a display name of your choice.
3. If the room code is enabled on the VP2730, type the room code.
4. (Optional) Click the drop-down list to change the display language.
5. Click **Join the Meeting**. You are immediately logged into the web view of the meeting.

## The Participant Screen

You can access the following controls when logged in as participant in the VP2730's web interface.

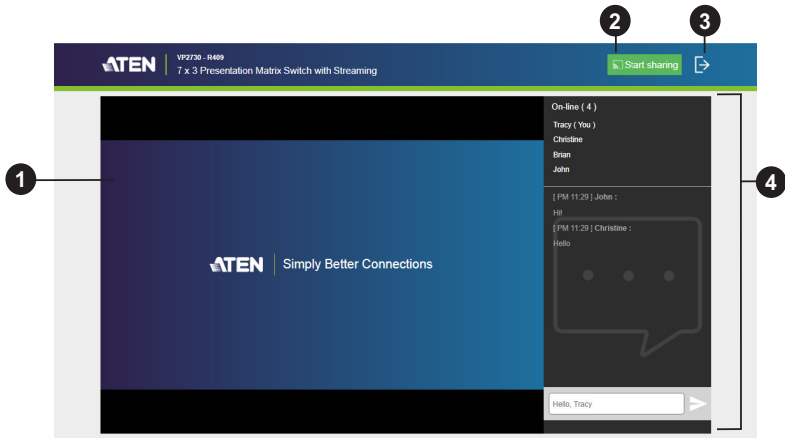

No.	Element	Description
1	Live Screen	Displays the content that goes live from the VP2730.
2	Start Sharing	Selects a screen or an application window from the participant's PC and makes it available for sharing to meeting participants. For a full procedure, see <i>Sharing a Screen or an Application Window</i> , page 37.
3	Log Out	Click to log out the VP2730.
4	Chat panel	Use this panel to instantly message and interact with other meeting participants.

**Tip:** Click the ATEN logo at the top-left corner to visit ATEN's official website.


## Sharing a Screen or an Application Window

You can share the entire screen of your PC/laptop or an application window to meeting participants to facilitate communication.


### Note:

- ◆ This feature is only available using Chrome.
- ◆ The VP2730 can receive up to 5 concurrent streamed-in channels.

1. Make sure you have the screen or the application window you wish to share opened on your PC/laptop.
2. Log in to the VP2730's web interface. This screen appears.

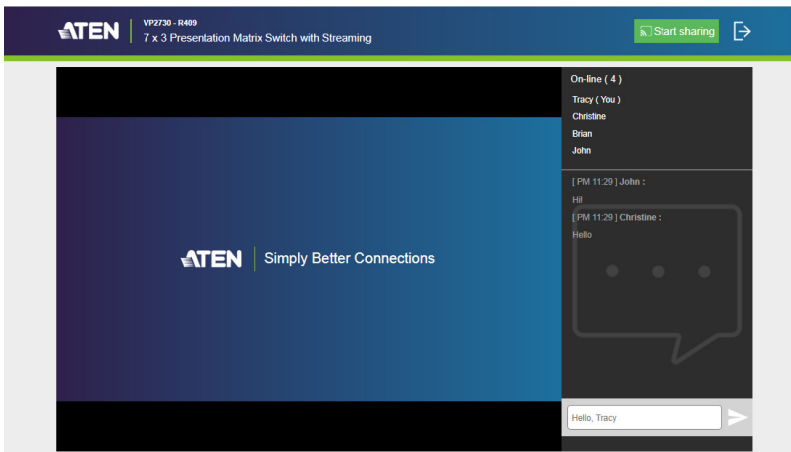

3. Click **Start Sharing**. This screen appears.

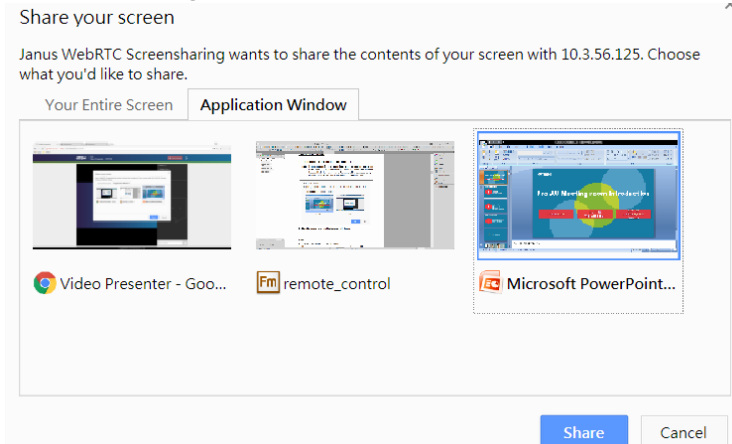


**Note:**

If your Chrome does not have an appropriate extension installed for this feature, a prompt appears for installing an extension when you try to enable the function. In this case, follow the steps below to download and install the extension.


- a. Click **download** in the pop-up prompt.
  - b. Open a new tab in your Chrome and type **chrome://extensions** in the address bar to open the extensions page.
  - c. Enable **Developer mode** at the top-right corner and reload the page.
  - d. Drag-and-drop the downloaded extension file to this page to install the file.
  - e. Close and reopen the tab to refresh your browser.
- 

4. Select a screen or an application window and click **Share**. This source is shared to the VP2730, and is available as an option, along with other shared sources (if any), under Source 6 in the OSD menu.

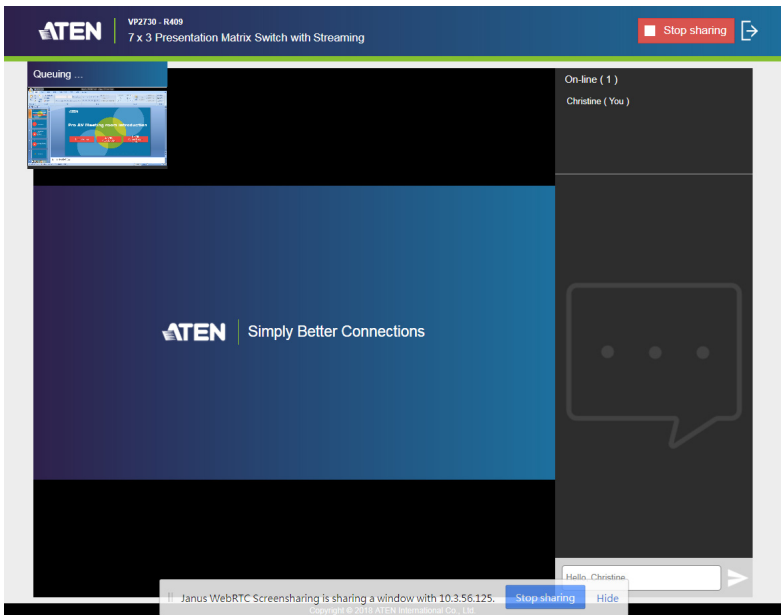

**Note:**

- ◆ When sharing an application window, keep it open to allow sharing. Minimizing the window terminates the sharing.
- ◆ To share videos along with their audio content from your PC/laptop, unplug the audio output wire from your speaker and replug it into the microphone input port on your PC/laptop.
- ◆ To remind the host that you have shared your content, you can send another notification to the VP2730 by clicking the Queuing window or send a text message using the chat panel.

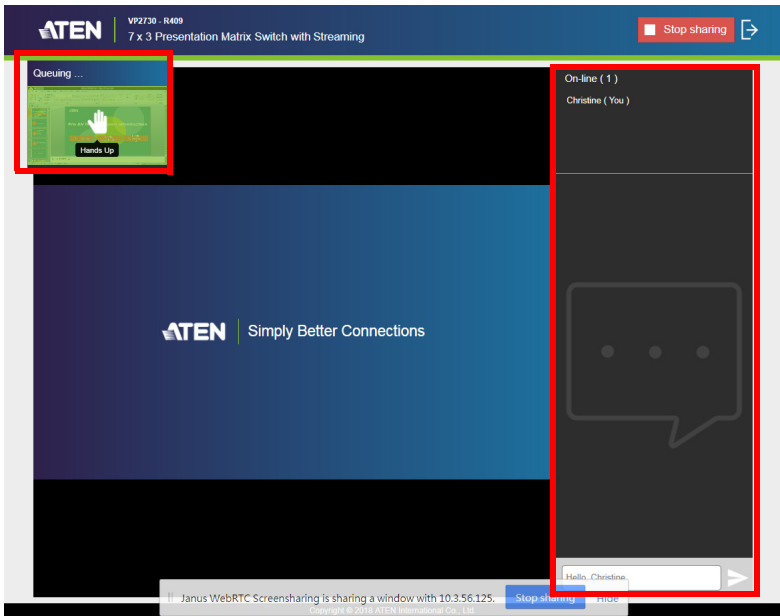

5. To display a shared source, use the front-panel pushbuttons or the remote control to switch a source to Source 6.

## The Administrator Account

---

When you log in the VP2730's web interface as administrator, you are remotely connected to an online meeting and have access to the VP2730's settings.


### Logging in as Administrator

1. In a web browser, type the web link (IP address) of the VP2730. This screen appears.

---

**Note:** Find the VP2730's web link from the OSD. For more information, see *Switching the Display Source*, page 16.

---

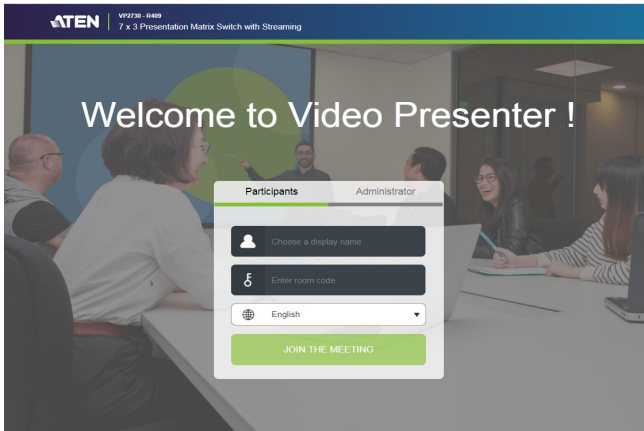



Click the **Administrator** tab. This screen appears.




2. Type the administrator's username and password. The default username is **administrator** and the password is **password**.

---

**Note:** ATEN suggests changing your password upon first login. To change the password, go to **General > Change Password** in the web interface.

---

3. Click **Go to Settings**. The main screen appears.

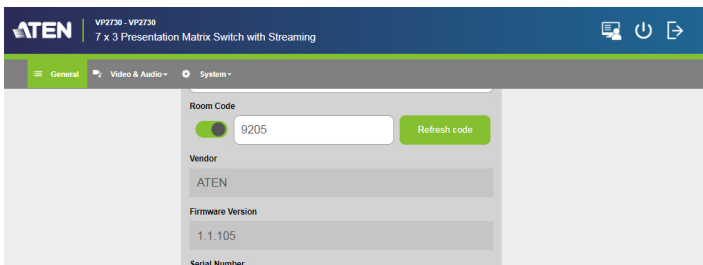





## The Administrator Screen

When logged in as administrator, the configuration view appears.

### Configuration View

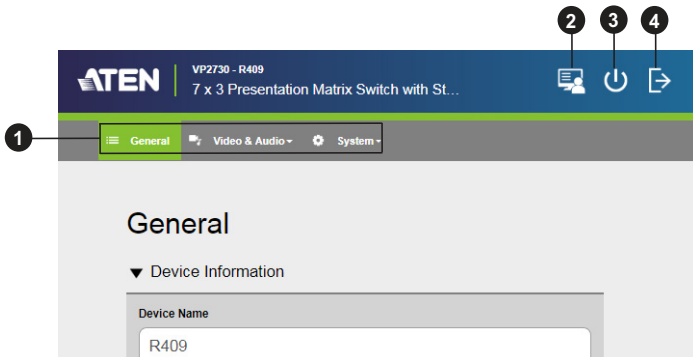
Use the Configuration View to access system settings. To go to the Configuration View, log in the web interface as administrator.







No.	Control	Description
1	Settings Tabs	Use these tabs to access system settings. For details, see <i>System Configuration</i> , page 44.
2	Go to Presentations 	Click this button go to the presentation view to join online meetings.
3	Power Off 	Click this button to power off the VP2730.
4	Log Out 	Click this button to log out the VP2730's web interface.

**Tip:** Click the ATEN logo at the top-left corner to visit ATEN's official website.

## Presentation View

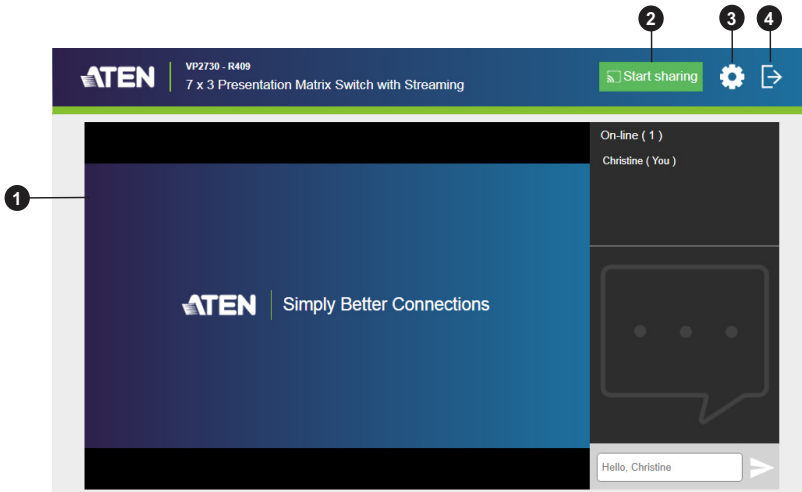Use the Presentation View to participate online meetings. To access the Presentation View, log in the web interface as administrator and click the **Go to Presentation**  icon in the toolbar.

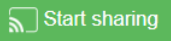

No.	Control	Description
1	Live Screen	Displays the content that goes live from the VP2730.
2		Click to share a screen or an application window from you PC or laptop to the VP2730 and makes it available for broadcast to all meeting participants. For details, see <i>Sharing a Screen or an Application Window</i> , page 37.
3	Go to Configuration 	Click this button to go to the Configuration View. For details about the Configuration View, see <i>Configuration View</i> , page 42.
4	Log Out 	Click this button to log out the VP2730's web interface.

**Tip:** Click the ATEN logo at the top-left corner to visit ATEN's official website.

## System Configuration

### General Settings


General settings include settings for device name, system date and time, and login credentials. To access the general settings page, log in the web interface as administrator, and then click the **General** tab.

The screenshot displays the 'System Configuration' web interface, organized into three main sections:

- Device Information:** This section contains several fields for identifying the device: 'Device Name' (VP2730), 'Room Code' (0089) with a 'Refresh code' button, 'Vendor' (ATEN), 'Firmware Version' (1.3.124.006), 'Serial Number' (A1J50810024), 'Hardware Version' (A-06), and 'Build Version' (20070718).
- Date / Time:** This section manages the system's clock: 'Device Time' (2020-08-17 07:11:33), 'Time Zone' (dropdown menu set to '(GMT) Monrovia, Reykjavik'), 'NTP Server' (selected) or 'Manual Setting' (radio buttons), a manual time input field (2020-08-17 07:12:56), and a 'Sync With PC' button.
- Change Password:** This section includes two password input fields: 'Password' and 'Confirm Password', both currently masked with asterisks.

## ◆ Device Information


- ◆ Device Name: Type a name for the VP2730. This name appears on the top of the VP2730's web interface.

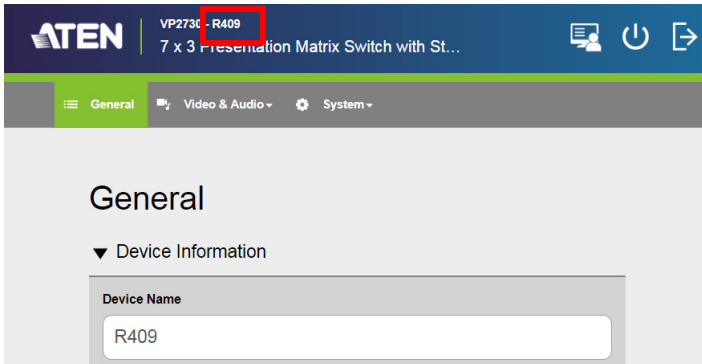


- ◆ Room Code: A room code is a 4-digit combination that is required for logging in the VP2730's web interface and joining an online meeting. You can type your own combination or click **Refresh Code** to generate a random number.
- ◆ Vendor, Firmware Version, Serial Number, Hardware Version, Build Version: Indicate device information of the VP2730.

## ◆ Date / Time

**Note:** When any date/time setting is changed, the VP2730 will refresh itself and the connection to the streamed-in channel (Source 6) will be automatically closed.


- ◆ Device Time: Displays the current device date and time.
- ◆ Time Zone: Use the drop-down list to select a time zone.
- ◆ NTP Server: Select this option to synchronize the VP2730's date and time with the NTP server.
- ◆ Manual Setting: Select this option to manually set the VP2730's date and time. Click the indicated field to open the calendar and select a date; click  to set the time.

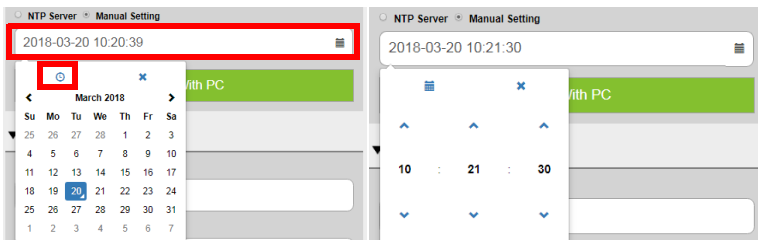

- ◆ Sync with PC: Click this button to synchronize the VP2730's date and time with the PC with which the web interface is opened.
- ◆ **Change Password**  
Use these fields to change the login password.

## Audio Settings

To access the audio settings, log in the web interface as administrator, and then go to **Video & Audio > Audio**.

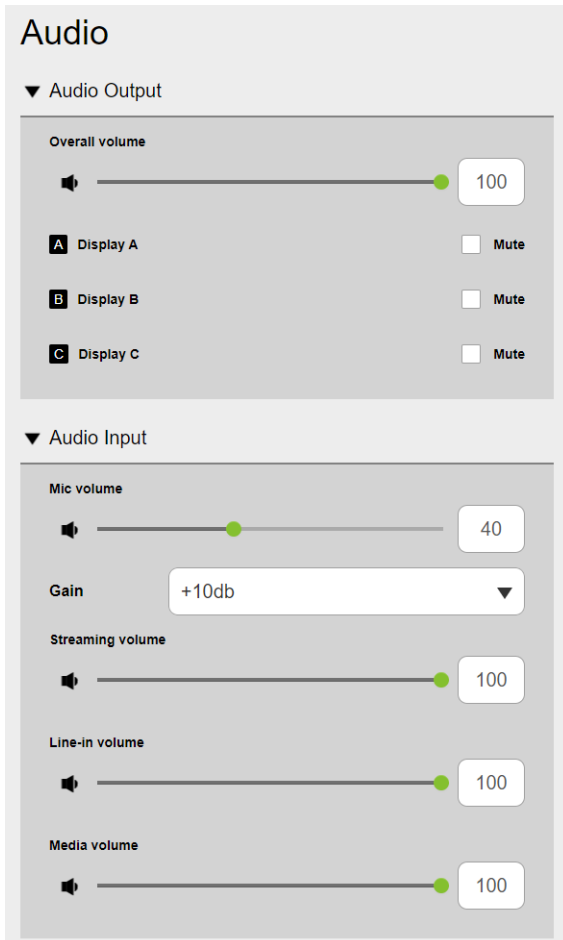

**◆ Audio Output**

- ◆ Overall Volume: Sets the volume for Display A, B, and C altogether.
- ◆ Display A, Display B, Display C: Click **Mute** to mute the audio output for the display. When a Display is set to mute, it takes priority over the Overall Volume setting.

**◆ Audio Input**

- ◆ Mic volume: Sets the volume of the microphone connected to the VP2730 by adjusting the output level.
- ◆ Gain: Sets the volume of the microphone connected to the VP2730 by adjusting the input level.
- ◆ Streaming volume: Sets the volume of the streamed-in source.
- ◆ Line-in volume: Sets the volume of the source that is plugged to the Source 2 audio jack on the VP2730.
- ◆ Media volume: Sets the volume of connected sources.

## Source Settings

To access the source settings, log in the web interface as administrator, and then go to **Video & Audio > Source**.

The screenshot shows the 'Source' configuration page in a web interface. It features several sections with expandable/collapsible options:

- Source1** (expanded):
  - Name**: A text input field containing 'Source 1'.
  - HDCP**: A dropdown menu currently set to 'HDCP'.
- Source2** (collapsed): Indicated by a right-pointing triangle.
- Source3** (collapsed): Indicated by a right-pointing triangle.
- Source4** (collapsed): Indicated by a right-pointing triangle.
- Source5** (collapsed): Indicated by a right-pointing triangle.
- Source6** (collapsed): Indicated by a right-pointing triangle.
- I/O Selection** (expanded):
  - Source 1**: A dropdown menu set to 'Auto'.
  - Source 2**: A dropdown menu set to 'Auto'.
- EDID Mode** (expanded):
  - Mode**: A dropdown menu set to 'ATEN default'.
- Streaming-In Quality** (expanded):
  - Source Type**: A dropdown menu set to 'Dynamic'.



- ◆ **Name:** Use these fields to name the sources connected to the VP2730.
- ◆ **HDCP:** Enable this function for the source to provide encrypt the audio and video content to prevent copying as it travels across the connection to the VP2730.
- ◆ **I/O Selection:** Click the drop-down lists to select prioritized interfaces for Source 1 and 2. Select **Auto** to use the first detected input as the source.
- ◆ **EDID Mode:** Click the drop-down list to select an EDID mode.
  - ◆ **ATEN default:** This mode sends ATEN-predefined EDID to the connected sources.
  - ◆ **Display A:** This mode sends the EDID of Display A to the connected sources.
- ◆ **Streaming-in Quality:**
  - ◆ **Dynamic:** Select this option for sources to stream in at 720p, 30Hz. This is the default setting.
  - ◆ **Static:** Select this option for sources to stream in at 1080p.

## Display Settings

To access the display settings, log in the web interface as administrator, and then go to **Video & Audio > Display**.

The screenshot shows a web interface for display settings. It is organized into sections for 'Basic', 'Display A', 'Display B', and 'Display C'. Each section contains several configuration options:

- Basic:** A dropdown menu for 'Mode' set to 'Matrix mode'.
- Display A:** Text input for 'Name' (Display A), dropdown for 'Ratio' (Scale to whole), dropdown for 'HDCP' (HDCP), dropdown for 'Resolution' (1920 x 1080 @ 60), and dropdown for 'Auto Switching' (Disable). A note below states: '\* Display A will auto switching to the new connected source.'
- Display B:** Text input for 'Name' (Display B), dropdown for 'Ratio' (Scale to whole), and dropdown for 'HDCP' (HDCP).
- Display C:** Text input for 'Name' (Display C), dropdown for 'Ratio' (Scale to whole), and dropdown for 'HDCP' (HDCP).

- ◆ **Basic (Mode):**

- ◆ **Matrix mode:** Each connected display can be set differently and show different content. This is the default mode. In this mode, each display is configured on its own OSD panel.

- ◆ **Mirror mode:** Each connected display mirrors each other and does not take different settings. In this mode, configuration on one display is automatically applied to other displays connected to the VP2730.
- ◆ **Display A/B/C:** Sets the display name, ratio, and resolution for the connected display devices.
  - ◆ **Name:** Click to type a name for the connected display.
  - ◆ **Ratio:**
    - ◆ **Scale to whole:** Fully extends the video to the four sides of the display.
    - ◆ **Auto fit:** Proportionally scales the video to fit the display without cutting any content off. This may leave some blank on either the top and bottom or the left and right of the screen.
    - ◆ **Auto cut:** Proportionally scales the video to fully fill the display. The content that goes out of the display range will be cut off.
- ◆ **HDCP:** Enable this function for the VP2730 to encrypt the audio and video content with HDCP to prevent copying as it travels across the connection to the display.
- ◆ **Resolution:** Click the drop-down list to select a resolution and refresh rate setting for the display device. This field is only available when the display is connected to the VP2730.
- ◆ **Auto switching:** Automatically switches to a newly detected source. This option is only available for Display A.

## Multiview Settings


To resize and/or relocate the inset window in a PiP view, go to **Video & Audio** > **Multiview**.

- ◆ To relocate the inset window, click on the window and then drag and drop it to another location.
- ◆ To resize, move your mouse to a corner of the window until an arrow appears, and then drag and drop to enlarge or reduce the window.



## Network Settings

To configure the VP2730's network connection settings, log in the web interface as administrator, and then go to **System > Network**.

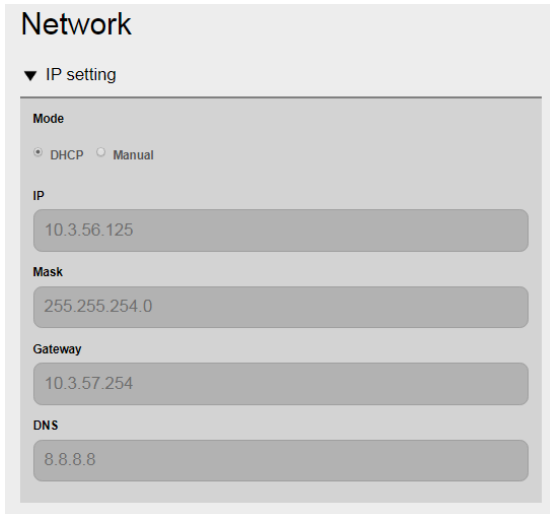

**Network**

▼ IP setting

**Mode**

DHCP  Manual

**IP**

10.3.56.125

**Mask**

255.255.254.0

**Gateway**

10.3.57.254

**DNS**

8.8.8.8

- ◆ **DHCP:** Select this option for the connected network switch to dynamically assign an IP address, subnet mask, gateway, and DNS to the VP2730.
- ◆ **Manual:** Select this option to manually type in an IP address, subnet mask, gateway, and DNS. The VP2730 does not require a reboot after the network setting is changed.

## Upgrading the System Firmware

1. Prepare the firmware file you wish to apply.
  - a) Visit the product web page from <http://www.aten.com/global/en/>
  - b) In the **Support and Download** tab, download a firmware file.
2. Log in the web interface of the VP2730 as administrator, and then go to **System > Maintenance > Firmware Updates**.
3. In the Firmware Updates section, browse the firmware file that you downloaded, and then click **Update**.
4. When the upgrade is complete, a confirmation message appears.

## Backing Up System Settings

You can back up and export the VP2730's configuration. This backup will not include the username and password settings.

1. Log in the web interface of the VP2730 as administrator, and then go to **System > Maintenance > Backup / Restore**.
2. Click **Backup**.

## Restoring System Settings

1. Log in the web interface of the VP2730 as administrator, and then go to **System > Maintenance > Backup / Restore**.
2. To restore the VP2730's settings, click **Browse File** to locate a previously backed up file (.aes), and then click **Restore**.

## Resetting the VP2730 to Default

1. Log in the web interface of the VP2730 as administrator, and then go to **System > Maintenance > Backup / Restore**.
2. Click **Reset to Default**. This will reset all the settings, including network settings, to default.

## Applying SSL Encryption

To secure sessions between the VP2730 and web browsers accessing the VP2730's web interface, follow the steps below to apply SSL encryption.


1. Purchase an SSL certificate from a trusted certificate authority and save the files to a computer with access to the VP2730's web interface.
2. Log in the VP2730's web interface as administrator, and then go to **System > Maintenance > Web Server SSL**.
3. Click **Browse File** to upload the SSL certificate and its private key.
4. Click **Update** to apply the SSL encryption.

## Remote Pad Settings

The VP2730 supports ATEN Network Remote Pad to provide function control. You can install one or more Remote Pads in your application to provide convenient access to frequently used functions, such as switching displays/sources, adjusting speaker/microphone volume, and/or streaming out a display. Once the Remote Pad is installed, pair the Remote Pad with the VP2730 via the VP2730's web console to complete the setup.

### Setting Up Remote Pads


1. Install one or more Remote Pad(s) to the same LAN with the host VP2730. For details, refer to the user manual for the Remote Pad.
2. Pair the Remote Pad(s) with the VP2730.
  - a) Log in the web interface of the host VP2730 as administrator, and then go to **System > Remote Pad**. This Remote Pad list appears.

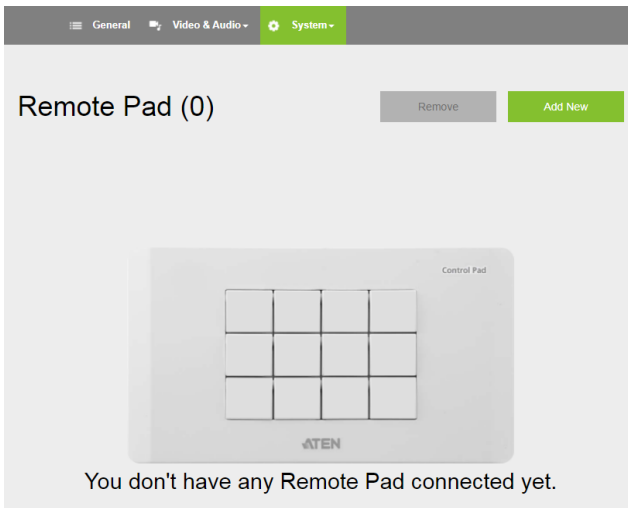



- b) Click **Add New**. This screen appears.



Paired (0)				Unpaired (2)
<input type="checkbox"/>	Device Name	IP Address	Model	Identify Device
<input type="checkbox"/>	VPK312	10.3.52.20	VPK312	
<input type="checkbox"/>	VPK312	10.3.52.65	VPK312	

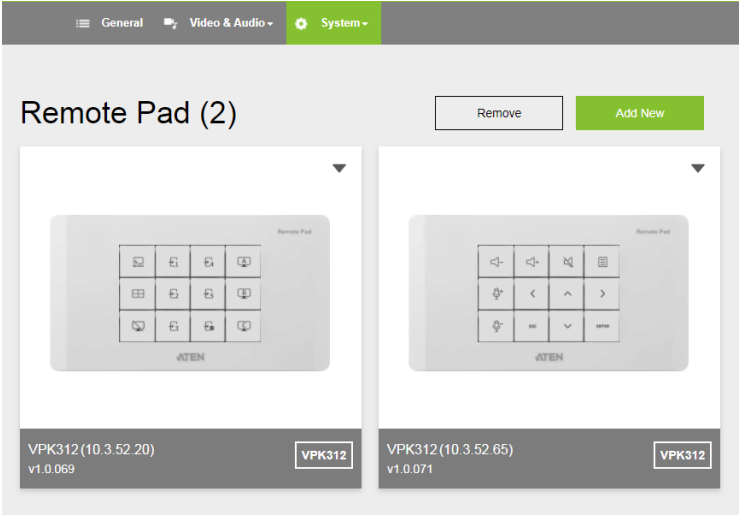

- ◆ **Paired:** This tab lists the Remote Pads in the LAN that are paired with other Presentation Switches.
  - ◆ **Unpaired:** This tab lists the Remote Pads in the LAN that are available for pairing.
  - ◆  : Click this icon to identify the Remote Pad by making its panel LEDs flash.
- c) From the Unpaired tab, select Remote Pad(s) to pair with the VP2730 and click **Add**. The selected Remote Pad(s) are added.



- d) (Optional) To unpair a Remote Pad, click the Paired tab and click  . The Remote Pad now moves to the Unpaired list and is available for selection.

Paired (1)		Unpaired (21)			
<input type="checkbox"/>	Device Name	IP address	Model	Host	Identify Device
<input type="checkbox"/>	Front Desk-1	10.3.65.01	VPK312	Name(10.3.1.1) 	

3. Configure the layout for the Remote Pad(s).
  - a) Click the drop-down menu of the Remote Pad you want to configure, and select **Edit**. The web console of the Remote Pad appears.



- b) From the pop-up web page, configure the Remote Pad's layout. For details about the configuration fields, refer to the *ATEN Remote Pad User Manual*.

### Importing or Exporting Remote Pad Layouts


Use the import and export functions to back up your Remote Pad configurations or to quickly set up multiple Remote Pads.

1. Log in the web interface of the host VP2730 as administrator, and then go to **System > Remote Pad**.
2. Click the drop-down menu of the target Remote Pad, and select **Export Layout / Import Layout**.


## Identifying Remote Pads

Use this function to identify a Remote Pad from the web console of the host VP2730.

1. Log in the web interface of the host VP2730 as administrator, and then go to **System > Remote Pad**.

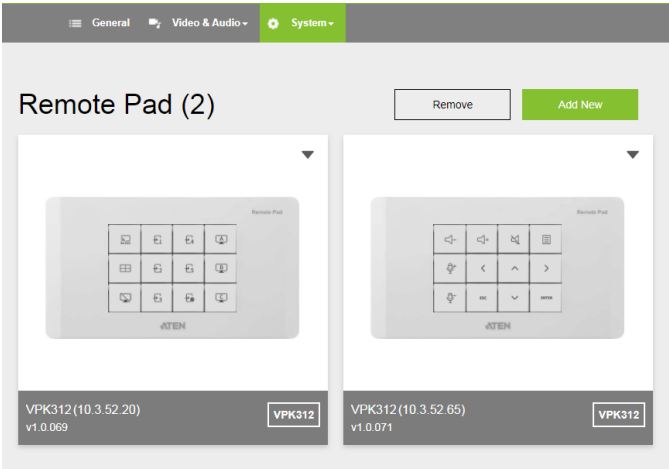

2. Click the drop-down menu of the target Remote Pad, and select **Identify Device**. The LEDs on the Remote Pad flash and the Remote Pad item on the web console flashes yellow.

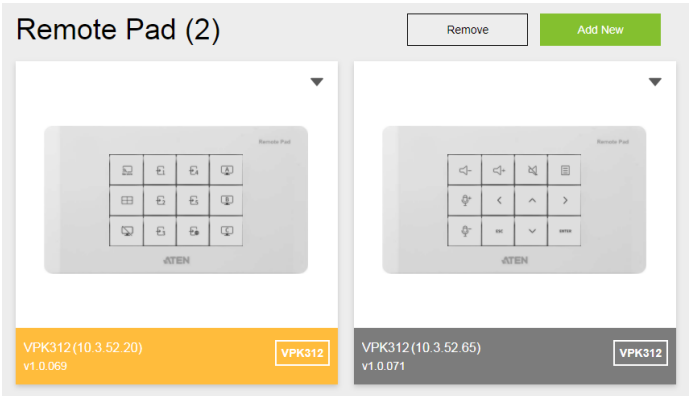

3. To stop the flash, click the drop-down list and select **Stop Blinking**.

## Unpairing Remote Pads

To unpair one or more Remote Pads, follow the steps below.

1. Log in the web interface of the VP2730 as administrator, and then go to **System > Remote Pad**.
2. Click **Remove** and select one or more Remote Pad(s).



3. Click **Remove**. The selected items disappear from the Remote Pad list.

# Chapter 5

## RS-232 Serial Commands

### Overview

---

The 7 x 3 Seamless Presentation Matrix Switch supports system configuration via RS-232 commands sent from a hardware or software controller.

### Setup

---

1. Connect a PC to the RS-232 Serial port on the VP2730 unit.
2. Download and install controller software that supports RS-232 serial control and the operation system of your controller PC.
3. Execute the software and configure the connection settings to the following:
  - ◆ Serial line to connect to: **COM1**
  - ◆ Speed (baud): **9600**
  - ◆ Data bits: **8**
  - ◆ Stop bits: **1**
  - ◆ Parity: **None**
  - ◆ Flow control: **None**
4. When a session is established with the VP2730, you can configure your VP2730 by sending RS-232 commands. For a list of commands, see *RS-232 Commands*, page 63.

## Command Notations

- The general form of a command is:

**command** parameter<argument> {one|two|three}

Notation	Description
<b>command</b>	The name of the command is shown in bold.
parameter	Indicates the name of the parameter.
<argument>	Indicates the name of the value or the information that the user must provide. Only type the information in the angle brackets, not the brackets themselves.
[ ]	Indicates optional items. Only type the information in the brackets, not the brackets themselves.
{ }	Indicates a set of choices from which the user must choose one.
	Indicates two or more mutually exclusive choices in a command line. Only type one of the choices in the command line, not the symbol.
↵	Indicates a termination character that signals the end of the command.  <b>IMPORTANT:</b> Use the termination character that your device expects. Common termination characters include <b>\x0D\x0A</b> (Hex) or simply pressing the <b>Enter</b> key.

- If you have two or more parameters, the order of these parameters among themselves does not affect the result of the operation. For example, both of the following commands execute the same task:

**command name + parameter 1 + parameter 2**

**command name + parameter 2 + parameter 1**

## RS-232 Commands

The following table lists the RS-232 commands.

Command Syntax	Description
<code>capturescreen</code> ↵	Get USB storage device info in the format: device index X, label is XXX, remaining XX. Device index is used for the capture screen storage destination.
<code>capturescreen</code> <code>o&lt;output_port&gt;</code> <code>i&lt;device_index&gt;</code> ↵	Capture the screen of a port and save it to the USB storage device.  Output port parameters: <ul style="list-style-type: none"> <li>♦ <code>o&lt;output_port&gt;</code>: Specifies the output port in two digits.</li> </ul> Device index parameters: <ul style="list-style-type: none"> <li>♦ <code>i&lt;device_index&gt;</code>: Specifies the capture screen USB storage destination.</li> </ul> For example, type: <code>capturescreen o02 i01</code>
<code>devicename</code> ↵	Display the device name for the VP2730.
<code>devicename n&lt;name&gt;</code> ↵	Sets the name for the VP2730.  Enter a name 1-30 characters long without <>[]()*&*+=?@/ \',;:"
<code>displaymode</code> ↵	Display the current display mode.
<code>displaymode</code> { <code>matrix</code>   <code>mirror</code> } ↵	Configure the VP2730 to matrix or mirror mode where each connected display can show different content.  For example, type: <code>displaymode matrix</code>
<code>edid</code> ↵	Display the current EDID mode.

Command Syntax	Description
<pre>edid {default o01} ↵</pre>	<p>Configure the VP2730's EDID mode.</p> <ul style="list-style-type: none"> <li>◆ <code>default</code>: Set the VP2730's EDID mode to ATEN Default which sends ATEN-predefined EDID to the connected sources.</li> <li>◆ <code>o01</code>: Set the VP2730's EDID mode to follow the display connected to the output port A.</li> </ul> <p>For example, type:</p> <pre>edid default</pre>
<pre>engrxmode ↵</pre>	<p>Display the current interface settings for input port 1 and 2 (combo ports).</p>
<pre>engrxmode i01 {auto hdm dp} engrxmode i02 {auto hdm vga} ↵</pre>	<p>Configure the interface for the specified combo port (port 1 or port 2).</p> <ul style="list-style-type: none"> <li>◆ <code>auto</code>: Sets the specified combo port to auto switching with which the port automatically switches to a newly source as soon as the source is detected.</li> <li>◆ <code>hdm dp</code>: Sets the specified combo port to select an HDMI or DisplayPort source.</li> <li>◆ <code>hdm vga</code>: Sets the specified combo port to select an HDMI or VGA source.</li> </ul>
<pre>freeze o&lt;output_port&gt; {on off} ↵</pre>	<p>Enable/disable the freeze of the specified output on the display. <b>Note:</b> This function is not supported when moderator mode is enabled.</p> <p>For example, type:</p> <pre>freeze o03 on</pre>
<pre>golive o&lt;output_port&gt; {on off} ↵</pre>	<p>Enable/disable streaming out of the source connected to the specified output port. For example, type <code>golive o02 on</code> to stream out the source connected to port 2.</p> <p>For example, type:</p> <pre>golive o&lt;output_port&gt; on</pre>



Command Syntax	Description
<code>multiview ↵</code>	Display the current multiview mode.
<pre> <b>multiview</b> o&lt;output_port&gt; l&lt;layout_source&gt; mode&lt;mode_number&gt; ↵ </pre>	<p>Set the multiview mode for an output port and determine the output port's layout source.</p> <p>Output port parameters:</p> <ul style="list-style-type: none"> <li>o&lt;output_port&gt;: Specifies the output port in two digits.</li> </ul> <p>Layout source parameters:</p> <ul style="list-style-type: none"> <li>l&lt;layout_source&gt;: Specifies the layout source number (1-6, 7 is null).</li> </ul> <p>Mode parameters:</p> <ul style="list-style-type: none"> <li>mode&lt;mode_number&gt;: Specifies the mode (1-6).</li> </ul> <p>For example, type:</p> <pre> <b>multiview</b> o02 mode2 -&gt; sets the output port 2 to multiview mode 2 <b>multiview</b> l45 mode3 -&gt; sets multiview mode 3 with layout source [4, 5] <b>multiview</b> o01 l356 mode4 -&gt; sets the output port 1 to multiview mode 4 with layout source [3, 5, 6] </pre>
<code>mute ↵</code>	Indicate the mute status of each audio inputs (Mic, streaming, line-in) and audio outputs (Display A, B, C and Overall).

Command Syntax	Description
<pre>mute &lt;port_option_index&gt; {on off} ↵</pre>	<p>Mute / unmute a specified audio input or output.</p> <p>&lt;port_option_index&gt;:</p> <ul style="list-style-type: none"> <li>◆ i08: Mic input</li> <li>◆ i09: Streaming input</li> <li>◆ i10: Line input</li> <li>◆ i11: Media input</li> <li>◆ o01: Display A</li> <li>◆ o02: Display B</li> <li>◆ o03: Display C</li> <li>◆ o10: Display A, B, and C (overall)</li> </ul> <p>Mute / unmute:</p> <ul style="list-style-type: none"> <li>◆ On: Mute the selected volume option.</li> <li>◆ Off: Unmute the selected volume option.</li> </ul> <p>For example, to mute audio on display A, type:</p> <pre>mute o01 on</pre>

Command Syntax	Description
<pre>notification {s&lt;display_time&gt; web &lt;on off&gt; sys&lt;on off&gt;  clean} ↵</pre>	<p>Configure the settings for notification messages that pop up at the top-right corner of the OSD.</p> <ul style="list-style-type: none"> <li>◆ <code>s&lt;display_time&gt;</code>: Set the duration that each notification message shows in the OSD entering 3, 5 or 10 (seconds).</li> <li>◆ <code>web&lt;on off&gt;</code>: Turn on/off pop-up notification messages for configurations made via the web interface.</li> <li>◆ <code>sys&lt;on off&gt;</code>: Turn on/off pop-up notification messages for configurations made via the OSD or the device panel.</li> <li>◆ <code>clean</code>: Clean all notification messages in the Notifications panel.</li> </ul> <p>For example, type:</p> <pre>notification s5 notification web on notification sys off notification clean</pre>
<pre>power on off↵</pre>	<p>Power on or off the VP2730.</p> <p><b>Note:</b> The command will be ignored if it is not inputted within 0.3 second. Please copy and paste the command so that the command can be inputted quickly.</p>
<pre>read ↵</pre>	<p>Display the following settings:</p> <ul style="list-style-type: none"> <li>◆ Power status (on or off)</li> <li>◆ Video source assignment, audio source assignment, volume, and video resolution on each connected display (o01 = Display A; o02 = Display B; o03 = Display C)</li> <li>◆ EDID mode</li> <li>◆ Device information, including device name, vendor, firmware version, serial number, hardware version, and build version</li> <li>◆ Network settings, including MAC address, IP address, subnet mask, gateway, and IP assignment</li> </ul>

Command Syntax	Description
<code>reboot ↵</code>	Reboot the VP2730.
<code>reset ↵</code>	Reset the VP2730 to its default settings.
<code>roomcode {on off refresh} ↵</code>	Enable/disable/refresh room code.  For example, type: <code>roomcode on</code>
<code>scalemode ↵</code>	Show the display ratio for each connected display.
<code>scalemode o&lt;output_port&gt; {full fit cut} ↵</code>	Configure the display ratio of the source connected to the specified port. <ul style="list-style-type: none"> <li>◆ full: Set the display to full screen.</li> <li>◆ fit: Proportionally scale the content to fit the screen without cutting any content off.</li> <li>◆ cut: Scale the content to fully fill the display with some content cut off.</li> </ul> For example, type: <code>scalemode o&lt;output_port&gt; full fit cut</code>
<code>scaling ↵</code>	Display the current scale setting.
<code>scaling o&lt;output_port&gt; hor &lt;horizontal_resolution&gt; ver &lt;vertical_resolution&gt; freq &lt;display_frequency&gt; ↵</code>	Configure the output resolution and refresh rate of the source connected to the specified port.  For example, type: <code>scaling o01 hor 1024 ver 768 freq 60</code>

Command Syntax	Description
<pre>streamingin ↵</pre>	<p>List the user name and opaque ID of the users who have requested to share their screens/ applications, and indicate which content has been shared.</p> <p>For example, type <b>streamingin ↵</b>, this message appears:</p> <pre>user name: aaaa, opaqueId: WEB- MzqGYIdyCt, status: paused user name: test, opaqueId: WEB- JKkz6o867p, status: playing user name: glorialai, opaqueId: WEB-eYn4JQ4nJ4, status: paused Command OK</pre> <p>This message indicates that 3 users have requested to share their chosen screen/ application, and the content from the second user, <i>test</i>, is being shared.</p>
<pre>streamingin o&lt;opaqueID&gt; ↵</pre>	<p>Start/stop sharing a screen from a meeting participant. Use the <b>streamingin</b> command to first list the available streamings and their opaque ID.</p> <p>To start sharing the content from the user with opaque ID, <i>WEB-eYn4JQ4nJ4</i>, type:</p> <pre>streamingin oWEB-eYn4JQ4nJ4</pre> <p>To stop sharing the content from this user, enter the same command again.</p>

Command Syntax	Description
<pre>sw o&lt;output_port&gt; i&lt;input_port&gt; ↵</pre>	<p>Switch the specified display to the specified source.</p> <p>Input port related parameters:</p> <ul style="list-style-type: none"> <li>◆ i&lt;input_port&gt;: i&lt;input_port&gt;: Specifies the input port in two digits.</li> <li>◆ +: Indicates the next input port.</li> <li>◆ -: Indicates the previous input port.</li> </ul> <p>Output port related parameters:</p> <ul style="list-style-type: none"> <li>◆ o&lt;output_port&gt;: Specifies the output port in two digits.</li> <li>◆ o*: Indicates all output ports.</li> </ul> <p>For example, type:</p> <pre>sw o01 i02 sw o01 + sw o* i02</pre>
<pre>swmode ↵</pre>	<p>Indicate the AV source switching behavior (mode) when AV sources are connected or removed.</p>

Command Syntax	Description
<pre>swmode plugin plugout {disable next last} ↵</pre>	<p>Configure the AV source switching behavior.</p> <ul style="list-style-type: none"> <li>◆ plugin:Signifies source connection.</li> <li>◆ plugout: Signifies source disconnection.</li> <li>◆ disable:Disable auto switch.</li> <li>◆ next:Set the VP2730 to Next mode, which allows the system to automatically switch to the next available source when the current source becomes unavailable.last:Set the VP2730 to Last mode, which allows the system to automatically switch to the last available source when the current source becomes unavailable.</li> </ul> <p><b>Note:</b> The last option is only available under plugout command syntax.</p> <p>Examples:</p> <ul style="list-style-type: none"> <li>◆ To disable auto switching when sources are connected to the system, type: swmode plugin disable</li> <li>◆ To automatically switch to a newly connected source, type: swmode plugin disable</li> <li>◆ To automatically switch to the next available source when a source is removed, type: swmode plugout next</li> <li>◆ To automatically switch to the previous available source when a source is removed, type: swmode plugout last</li> </ul>
<pre>time ↵</pre>	<p>Display the VP2730's current time settings, including device time, time zone, and synchronization setting (with NTP server or customized).</p>
<pre>volume ↵</pre>	<p>Indicate the VP2730's overall volume, Mic volume, Mic gain, streaming volume, line-in volume, and media volume.</p>

Command Syntax	Description
<pre><b>volume</b> &lt;volume_option_index&gt; v&lt;volume&gt; ↵</pre>	<p>Configure the volume option to a specified value.</p> <p>Volume option index</p> <ul style="list-style-type: none"><li>◆ o10: Overall output volume</li><li>◆ i08: Mic</li><li>◆ i09: Streaming input</li><li>◆ i10: Line input</li><li>◆ i11: Media input</li></ul> <p>Volume</p> <p>Type a volume number (1 - 100).</p> <p>For example:</p> <p>To set the Mic's volume to 50, type:</p> <pre><b>volume</b> i08 v50</pre> <p>To set the overall output volume to 30, type:</p> <pre><b>volume</b> o10 v30</pre>



# Chapter 6

## Video Presentation Control App

### Overview

---

The ATEN Video Presentation Control App is designed to help you conveniently joining a meeting, share contents, switch sources and displays, and configure system settings to your VP2730 device using smartphone/tablet.


### Supported Systems

The ATEN Video Presentation Control App supports the following mobile operating systems:

Mobile Operating System	Supported Versions
Android	version 8.0 or later
iOS	version 12 or later

### Installing and Configuring the App

1. Install the ATEN Video Presentation Control App on a smartphone/tablet.

a) From the smartphone/tablet, tap the **App Store**  or **Google Play**

 icon.

b) In the search box, type “ATEN Video Presentation Control App”.

c) Tap **ATEN Video Presentation Control App** and install the app.

Or,

d) Scan the QR Code below to install the app.



2. From the smartphone/tablet, tap the **ATEN Video Presentation Control**

**App** icon .

---


**Note:** Make sure to connect the smartphone/tablet to the network where the VP2730 is installed.


---

## iOS Version

### Main Page

When logged in, the ATEN Video Presentation Control App defaults to the scanning page. Refer to the table below for an overview of the functions on each tab.

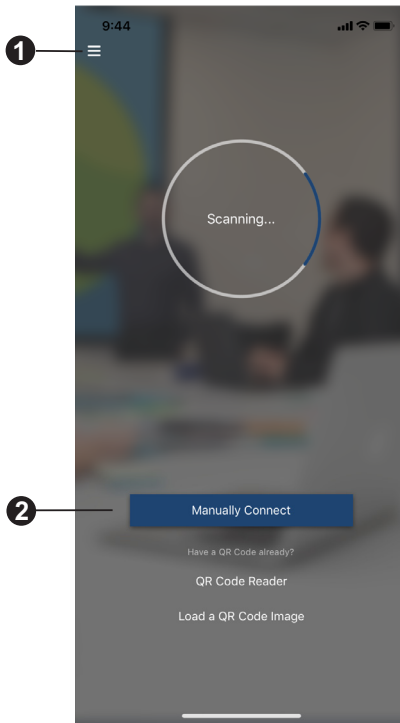

No.	Component	Description
1	Info 	Tap the info icon to show information such as version, privacy policy, and contact us.
2	Manually Connect	Tap this icon to manually connect to join a meeting by entering its IP address or a 4-digit room code.

**Note:** The QR Code Reader and Load a QR Code Image functions are not applicable to VP2730.

**Info**

Below screen is what the info page looks like. It shows the version, privacy policy and contact us. Tap on the **Contact Us** and it takes you straight to our ATEN's official website.



---

**Note:** Unless otherwise specified, all the screens shown in this manual are for smartphone only. The layout of the actual screens for tablet may vary slightly from these examples.

---


## **Joining a Meeting**

There are three ways to join a meeting through our ATEN Video Presentation Control App on VP2730. When the App is opened, it automatically scans for the device and available rooms to access. Or you can manually type in the IP address and room code, or use a QR code to join a meeting. Each methods are described below.


### **Joining a Meeting Automatically**

To automatically scan and join a meeting, follow the steps below.

1. Open the ATEN Video Presentation Control App and wait for the scanning process to finish.

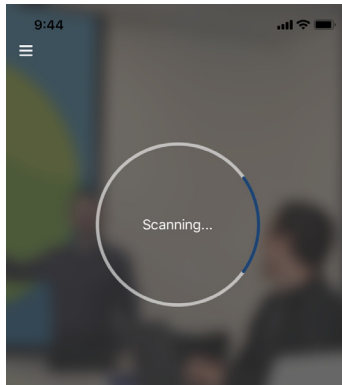

2. When the scanning finishes, the Room List page appears. Tap on a room to join the meeting.

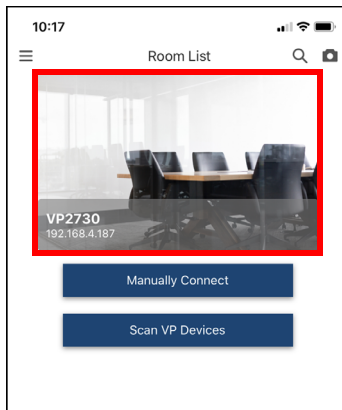


3. Enter the room code (see *System Settings*, page 29 for details), and then tap **Connect**.

---

**Note:** It is not required to enter the room code if the *Room Code* is set to disable.

---

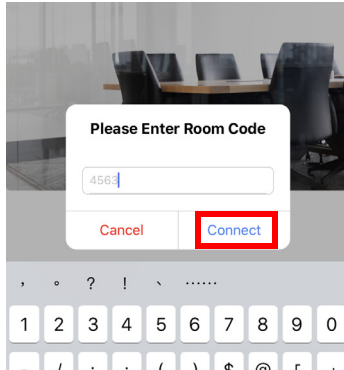


4. Now you have successfully joined the meeting.



## Joining a Meeting via Manually Connect

To manually connect and join a meeting, follow the steps below.

1. Open the ATEN Video Presentation Control App and tap **Manually Connect**.

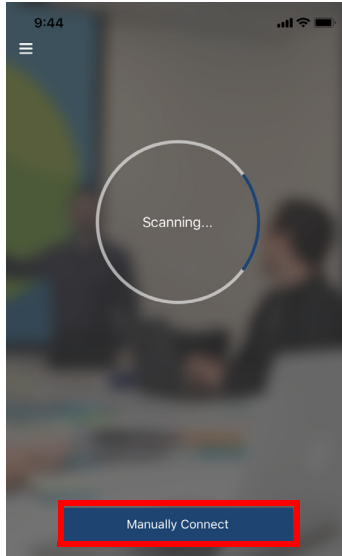


2. Enter the IP address of the VP2730 and room code (see *System Settings*, page 29 for details), and then tap **Connect**.

---

**Note:** It is not required to enter the room code if the *Room Code* is set to disable.


---

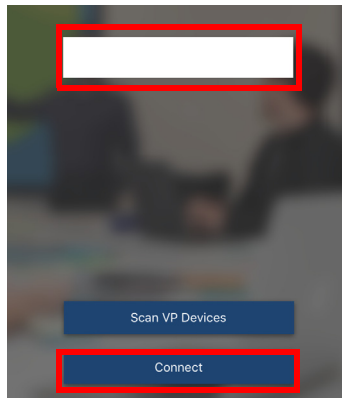

3. Now you have successfully joined the meeting.

Or,

4. From the Room List page, tap **Manually Connect**.

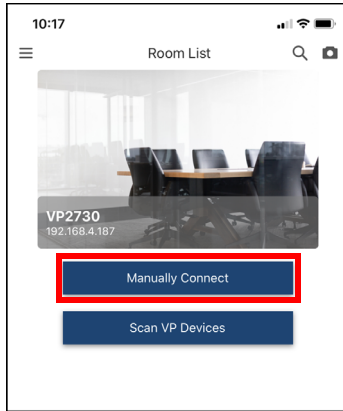


5. Enter the IP address of the VP2730 and room code (see *System Settings*, page 29 for details), and then tap **Connect**.

---


**Note:** It is not required to enter the room code if the *Room Code* is set to disable.

---

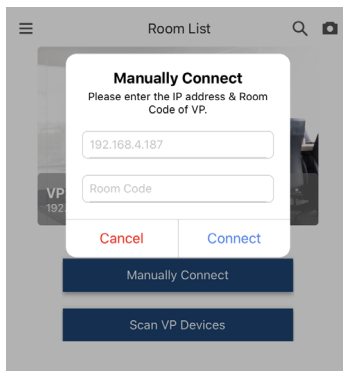




## Meeting Screen

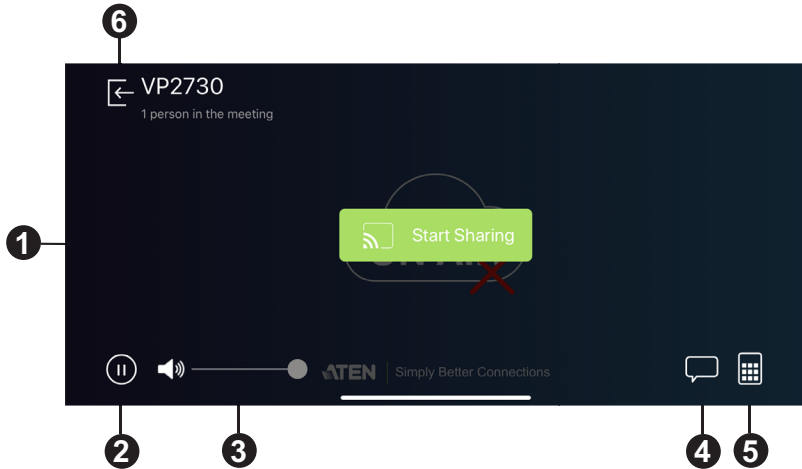
Once you have successfully joined a meeting, tap on the screen and the below screen appears.



Each functions are described in the table below.

No.	Component	Description
1	Live Screen	Displays the contents that goes live from the VP2730 on your smartphone/tablet.
2	Play / Pause	Tap this icon to play or pause the live streaming contents.
3	Volume	Shows the volume of your smartphone/tablet.
4	Chat Room 	Tap this icon to display a chat panel to use text interaction and file sharing with other connected meeting participants. For more information, see <i>Chat Room</i> , page 83.
5	Control Panel 	Tap this icon to access to the basic VP2730 settings. For more information, see <i>Control Panel</i> , page 84.
6	Log Out 	Tap this icon to log out leave the meeting.

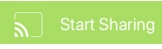


No.	Component	Description
7		Tap this icon to share the screen on your smartphone/tablet and makes it available for broadcast to all meeting participants. For more information, see <i>Streaming Out Your Content</i> , page 81.


### Streaming Out Your Content

Participants that are connected with the VP2730 can all share their display contents via the App. To share the content on your smartphone/tablet, follow the steps below.


1. Once you have successfully joined a meeting on the VP2730, tap on your smartphone/tablet's display screen and the below picture appears.

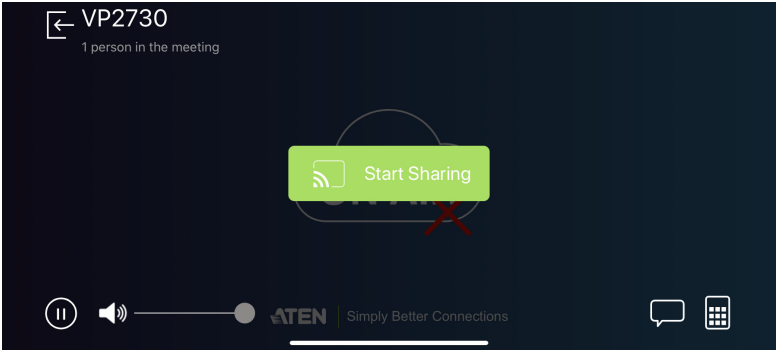


2. Click on the **Start Sharing**.

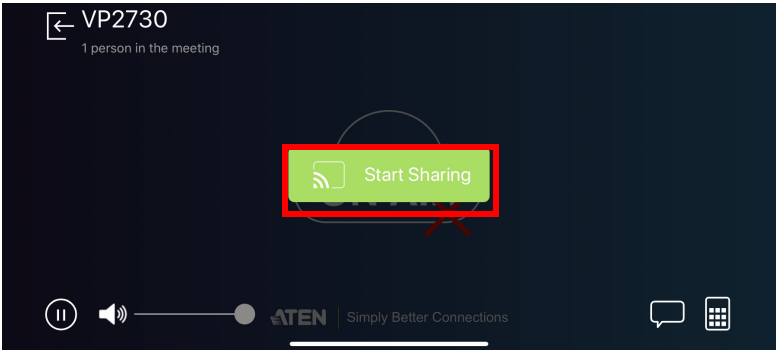


3. A warning message similar to the one below appears, then click **Start Broadcast**.

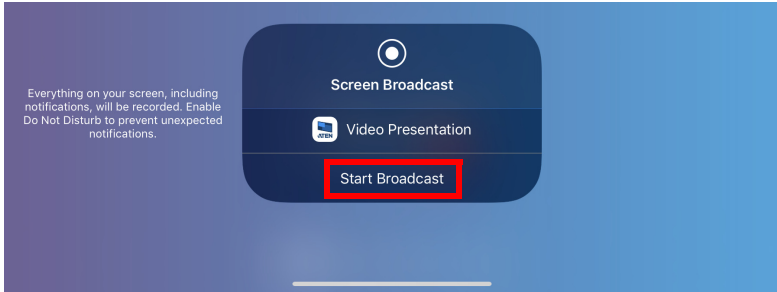


4. Now your entire screen is waiting to be shared to all the meeting participants. The host will need to approve your sharing, see *Source Settings*, page 89.

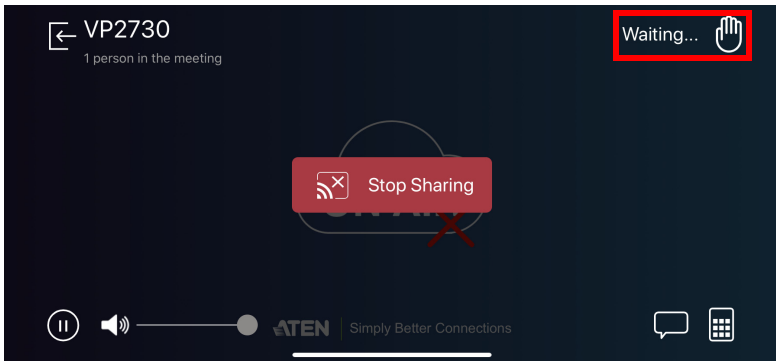


5. To end the sharing, tap on your smartphone/tablet's display screen and tap **Stop Sharing**.

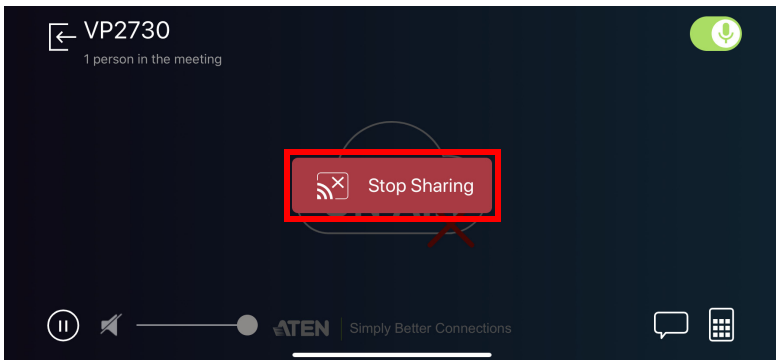


### Chat Room

The chat room allows you to use text interaction with the connected participants. From your smartphone's screen, tap the **Chat Room**  button and the below screen appears.

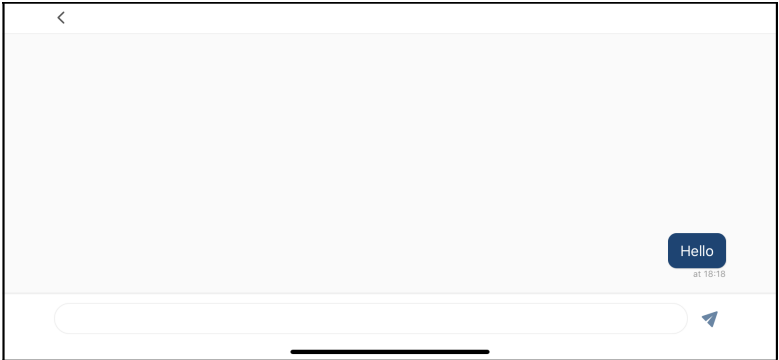


From your tablet's screen, tap the **Chat Room**  button and the below screen appears.

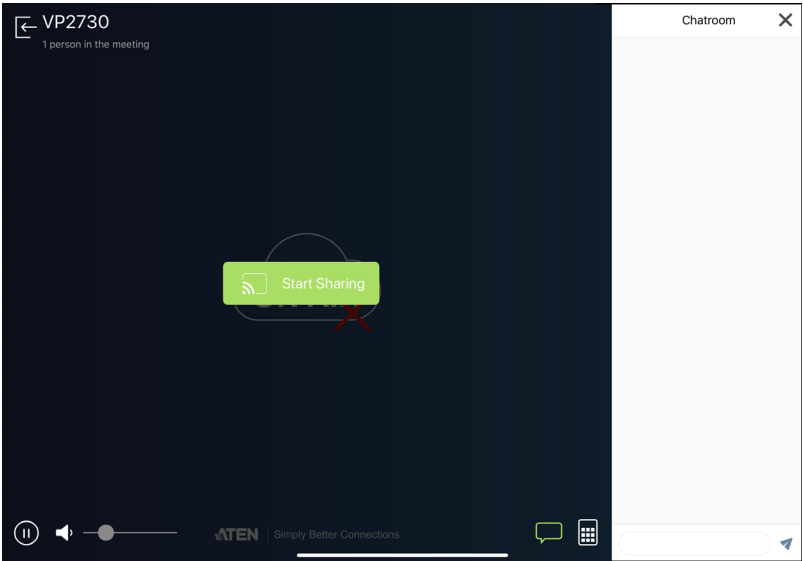


## Control Panel


You can perform the following tasks with the control panel.

- ◆ Switch display sources
- ◆ Change the display mode, resolution, or aspect ratio settings
- ◆ Stream out (go live) the current display via network connection
- ◆ Configure the VP2730's main system settings
- ◆ Remotely control another display in the VP2730's environment (moderator mode)
- ◆ Make screen captures
- ◆ Freeze the screen

From your smartphone/tablet's screen, tap the **Control Panel**  button and the below screen appears.

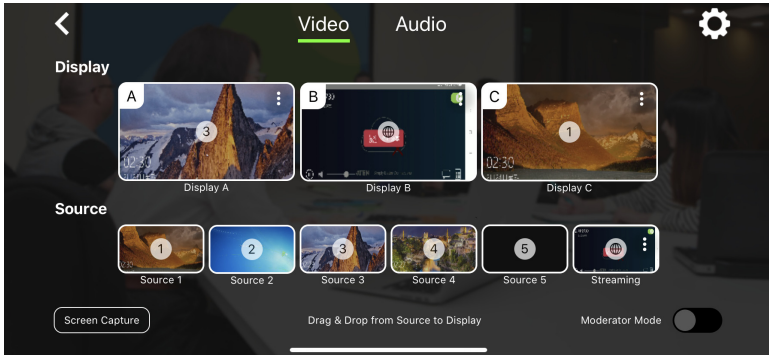


## Video Panel

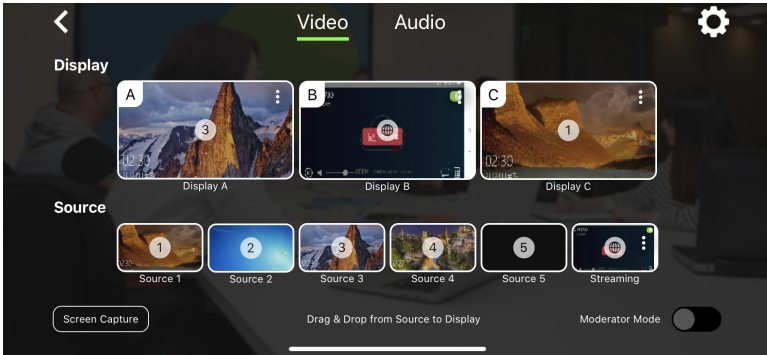


### Switching a Source for a Display

To switch a source for a display, follow the steps below.

1. To switch Source 3 to Display A. From the display page, drag the Source to Display A.

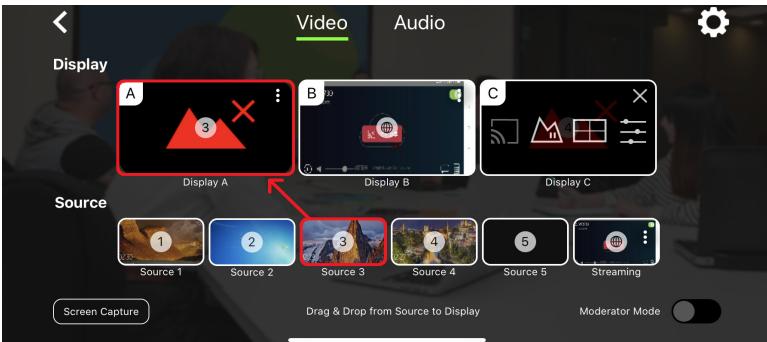


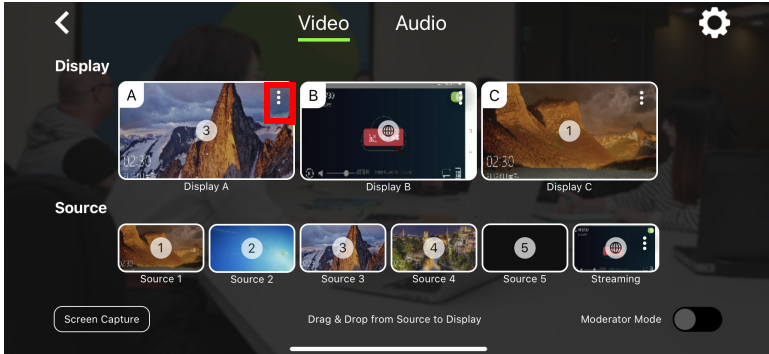
2. The Display A is now displaying content from Source 3.

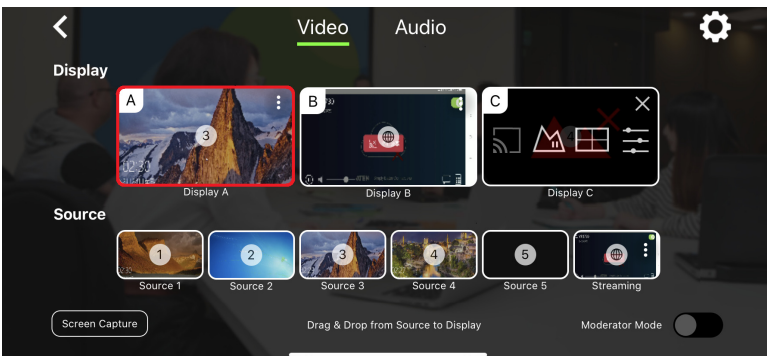


## Display Features and Settings



To go live, freeze, enable multi-view layout, or configure display settings for the selected display, follow the steps below.



1. Tap  from the top right corner of the selected display.

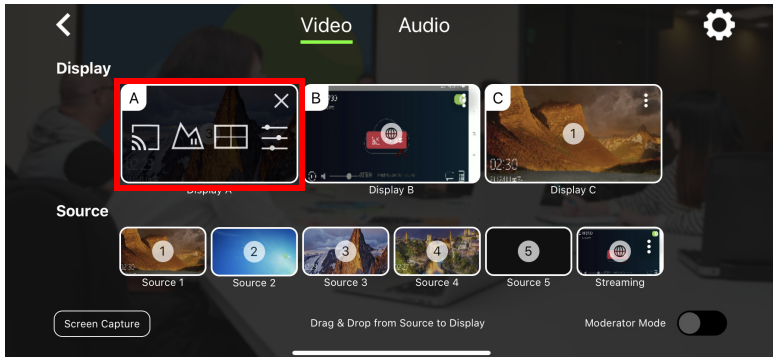

2. The below screen appears.






Tool	Description
Go Live 	Tap this icon to stream out the display. <b>IMPORTANT:</b> <ul style="list-style-type: none"> <li>◆ Make sure that the VP2730 is connected to the network and that the network bandwidth is of 2 MB or more.</li> <li>◆ Each participant takes at least 2 MB bandwidth.</li> </ul>
Freeze 	Tap this icon to enable/disable the freeze of the selected display. <b>IMPORTANT:</b> <ul style="list-style-type: none"> <li>◆ This function is not supported when moderator mode is enabled.</li> </ul>

Tool	Description
Multi-view Layout 	Tap this icon to select a layout format between single view or multiview for the display content on your screen. For more information, see <i>Multi-view Layout</i> , page 87.  <b>IMPORTANT:</b> <ul style="list-style-type: none"> <li>◆ This function is not supported when freeze is enabled.</li> </ul>
Display Settings 	Tap this icon to make display settings such as aspect ration, resolution, and auto switching. For more information, see <i>Display Settings</i> , page 88.


## Multi-view Layout

To select a multi-view layout for your connected sources, follow the steps below.


1. Tap  from the selected display, and the below screen appears. Tap  to enable multi-view.

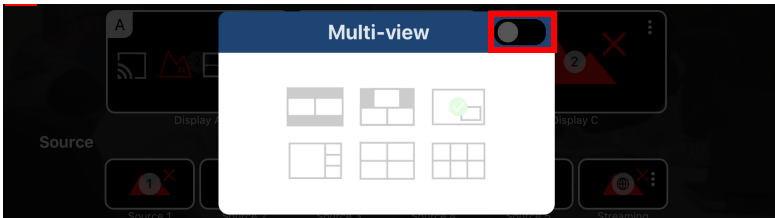


2. A warning message appears, tab **Yes**.

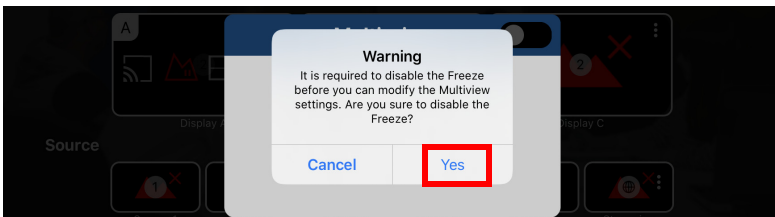


3. The multi-view feature is enabled, you may now select a desire layout.

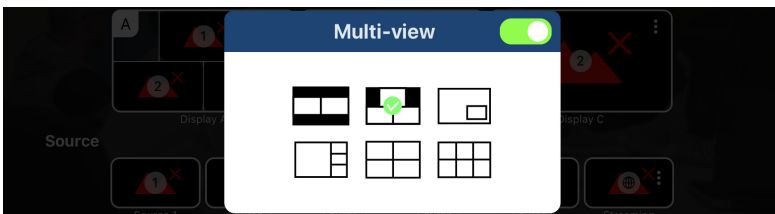

## Display Settings

To configure system settings for the selected display, tap , and the below screen appears.

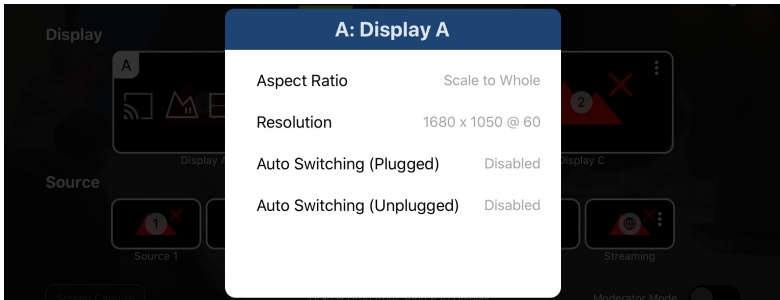


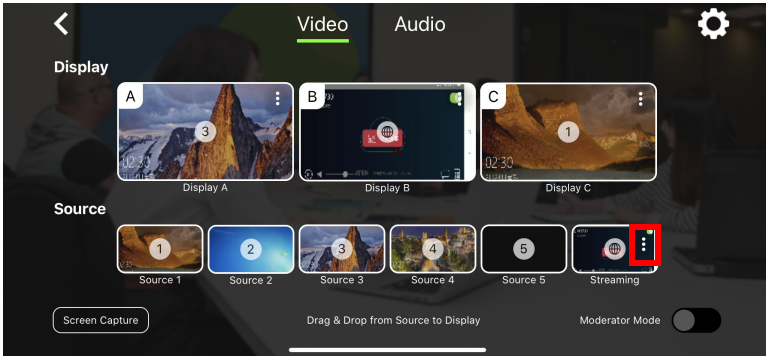
System Settings		Description
<b>Note:</b> Default settings are indicated in bold.		
General	Aspect Ratio	<ul style="list-style-type: none"> <li>◆ <b>Scale to whole:</b> Fully extends the video to the four sides of the display.</li> <li>◆ Auto fit: Proportionally scales the video to fit the display without cutting any content off. This may leave some blank on either the top and bottom or the left and right of the screen.</li> <li>◆ Auto cut: Proportionally scales the video to fully fill the display. The content that goes out of the display range will be cut off.</li> </ul>
	Resolution	Selects a resolution and refresh rate setting for the display device. This field is only available when the display is connected to the VP2730.
	Auto Switching (Plugged) <b>Note:</b> This option is only available for Display A.	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ Next: Automatically switches to a newly detected source.</li> </ul>
	Auto Switching (Unplugged) <b>Note:</b> This option is only available for Display A.	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ Next: Automatically switches to a newly detected source.</li> <li>◆ Last: Automatically switches to the previous detected source.</li> </ul>




## Source Settings

To approve or terminate a streaming-in source, follow the steps below.


1. Tap  from the Streaming source.





2. The below screen appears, you may now approve or disable a streaming-in source.

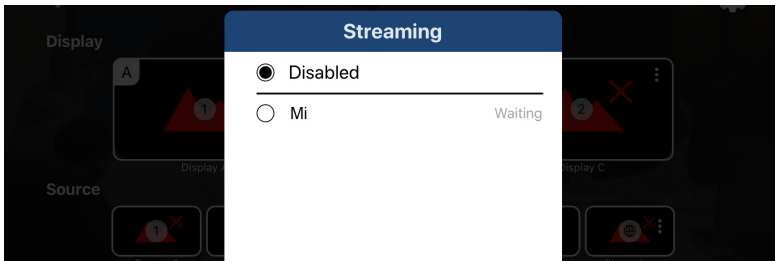


## Screen Capturing



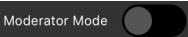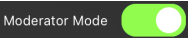


Tap  to capture the screen. The captured image is saved to the storage device connected to the VP2730's USB ports. Make sure you have a storage device inserted to the VP2730 for this function to be available.

## Moderator Mode

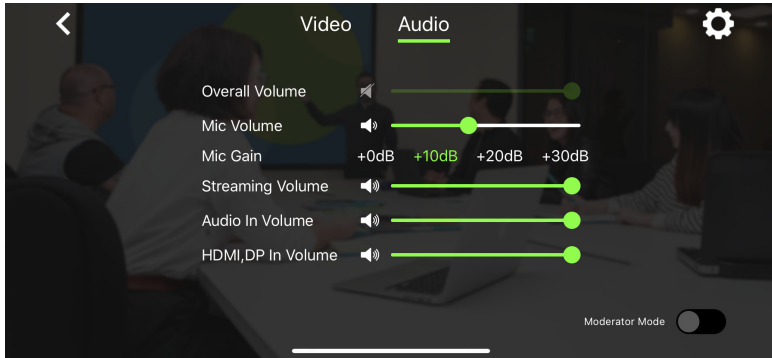
Tap  to enable the moderator mode. The moderator mode button becomes green  when enabled. For more information, see *Moderator Mode (Remote Display Control)*, page 26.


## Audio Panel




System Settings			Description
<b>Note:</b> Default settings are indicated in bold.			
Audio	Overall Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the speaker connected to the VP2730 and tap  to mute.
	Mic Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the microphone connected to the VP2730 and tap  to mute.
	Mic Gain	<ul style="list-style-type: none"> <li>◆ +0dB</li> <li>◆ <b>+10dB</b></li> <li>◆ +20dB</li> <li>◆ +30dB</li> </ul>	Sets the mic gain of the microphone connected to the VP2730.
	Streaming Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the streamed-in source and tap  to mute.
	Audio In Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the source that is plugged to the Source 2 audio jack on the VP2730. Tap  to mute.
	HDMI, DP In Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of connected sources and tap  to mute.


## More VP Settings

To configure more settings to the VP2730, tap the **More VP Settings**  button from your smartphone's screen and the below screen appears.

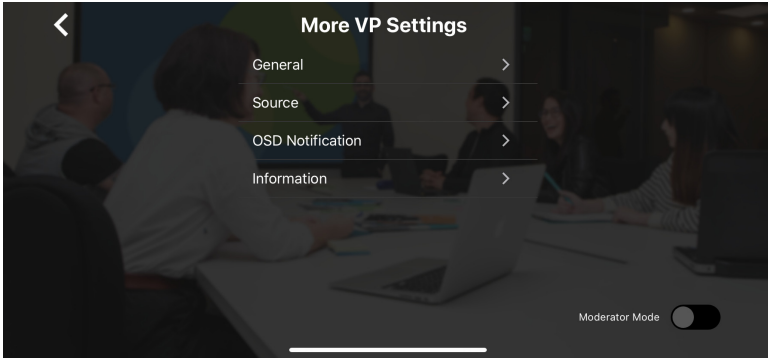


Or

Tap the **More VP Settings**  button from your tablet's screen and the below screen appears.

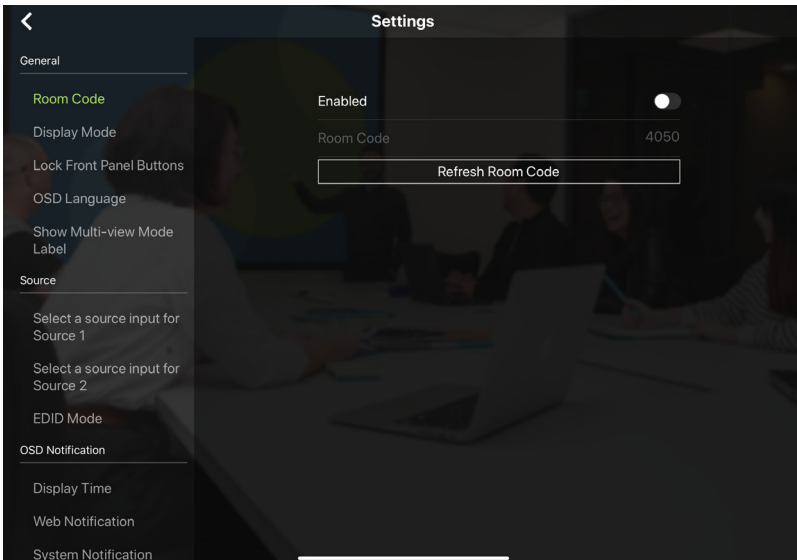


## General

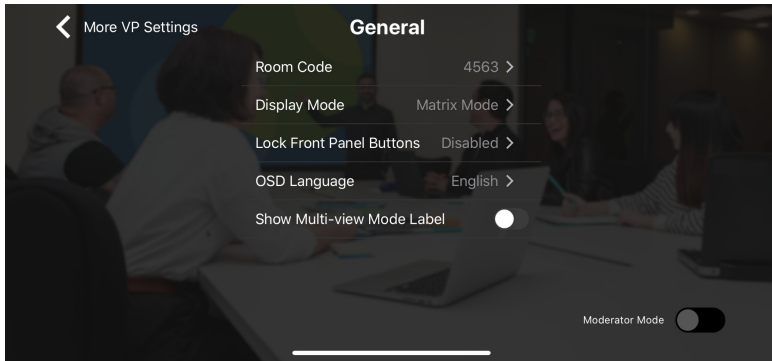


System Settings		Description	
<b>Note:</b> Default settings are indicated in bold.			
General	Room Code	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ Refresh code</li> </ul>	Enables and generates a random room code to be required for joining a meeting.
	Display Mode	<ul style="list-style-type: none"> <li>◆ <b>Matrix</b></li> <li>◆ Mirror</li> </ul>	Each connected display mirrors each other and does not take different settings. Click the check-box to enable, configuration on display A is automatically applied to the display B. For more information, see <i>Changing the Display Mode</i> , page 24.
	Lock Front Panel Buttons	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ 5 sec later</li> <li>◆ 30 sec later</li> <li>◆ 5 min later</li> </ul>	Automatically locks the front-panel pushbuttons if the OSD idles for the selected duration.
	OSD Language		Sets the display language of the OSD.
	Show Multi-view Mode Label		Sets to show source label for multi-view mode.

**Source**

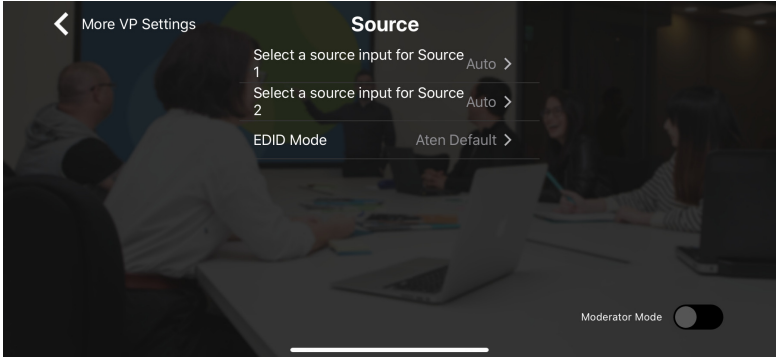


System Settings			Description
<b>Note:</b> Default settings are indicated in bold.			
Source	Select a source input for Source 1	<ul style="list-style-type: none"> <li>◆ <b>Auto</b></li> <li>◆ HDMI</li> <li>◆ DP</li> </ul>	Sets the prioritized port for Source 1/Source 2. Select <b>Auto</b> to prioritize the first detected input as the source.
	Select a source input for Source 2	<ul style="list-style-type: none"> <li>◆ <b>Auto</b></li> <li>◆ HDMI</li> <li>◆ DP</li> </ul>	
	EDID Mode	<ul style="list-style-type: none"> <li>◆ <b>ATEN Default</b></li> <li>◆ Display A</li> </ul>	<ul style="list-style-type: none"> <li>◆ <b>ATEN default:</b> This mode sends ATEN-predefined EDID to the connected sources.</li> <li>◆ <b>Display A:</b> This mode sends the EDID of Display A to the connected sources.</li> </ul>

## OSD Notification

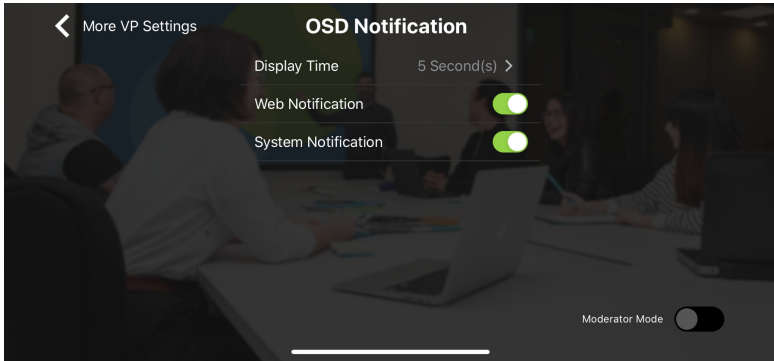

System Settings			Description
<b>Note:</b> Default settings are indicated in bold.			
OSD Notification	Display Time	<ul style="list-style-type: none"> <li>◆ 3 sec</li> <li>◆ <b>5 sec</b></li> <li>◆ 10 sec</li> <li>◆ Disable</li> </ul>	Disable or sets the duration for which a notification message pops up in the OSD.
	Web Notification	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ <b>Enable</b></li> </ul>	Displays notifications on user actions performed via the web interface.
	System Notification	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ <b>Enable</b></li> </ul>	Displays notifications on system status, device connection status, and user actions performed via the OSD.

# Information

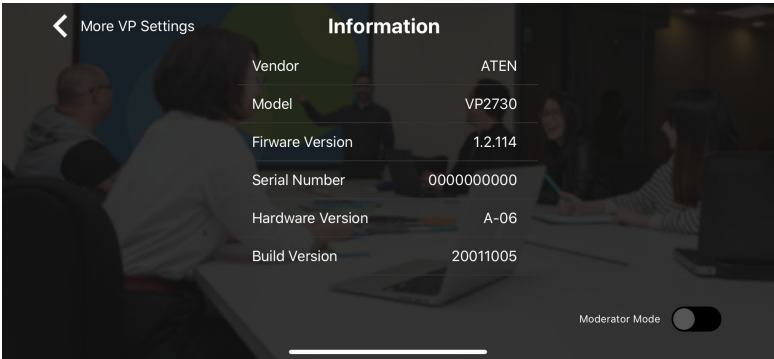



System Settings		Description
<b>Note:</b> Default settings are indicated in bold.		
Information	Vender, model, firmware version, serial number, hardware version, build version	Displays the system information.

## Android Version

### Main Page

When logged in, the ATEN Video Presentation Control App defaults to the scanning page. Refer to the table below for an overview of the functions on each tab.

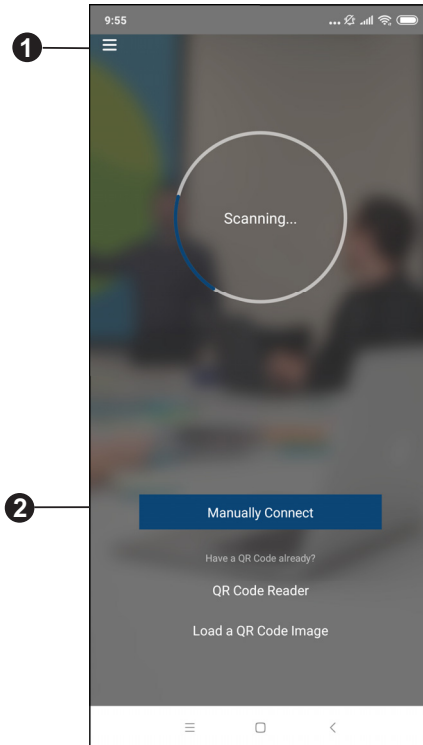

No.	Component	Description
1	Info 	Tap the info icon to show information such as version, privacy policy, and contact us.
2	Manually Connect	Tap this icon to manually connect to join a meeting by entering its IP address or a 4-digit room code.

**Note:** The QR Code Reader and Load a QR Code Image functions are not applicable to VP2730.



## Info

Below screen is what the info page looks like, it shows the version, privacy policy and contact us. Tap on the **Contact Us** and it takes you straight to our ATEN's official website.



**Note:** Unless otherwise specified, all the screens shown in this manual are for smartphone only. The layout of the actual screens for tablet may vary slightly from these examples.


## **Joining a Meeting**

There are three ways to join a meeting through our ATEN Video Presentation Control App on VP2730. When the App is opened, it automatically scans for the device and available rooms to access. Or you can manually type in the IP address and room code, or use a QR code to join a meeting. Each methods are described below.


### **Joining a Meeting Automatically**

To automatically scan and join a meeting, follow the steps below.

1. Open the ATEN Video Presentation Control App and wait for the scanning process to finish.

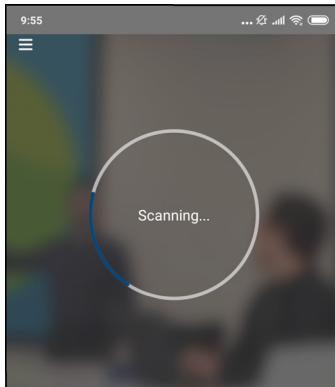


2. When the scanning finishes, the Room List page appears. Tap on a room to join the meeting.

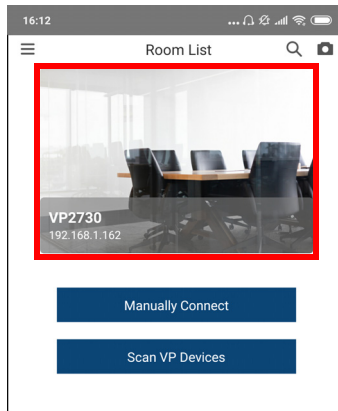


3. Enter the room code (see *System Settings*, page 29 for details), and then tap **Connect**.

**Note:** It is not required to enter the room code if the *Room Code* is set to disable.

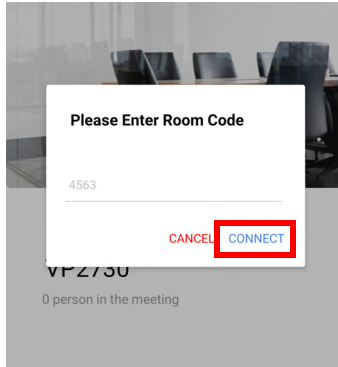


4. Now you have successfully joined the meeting.

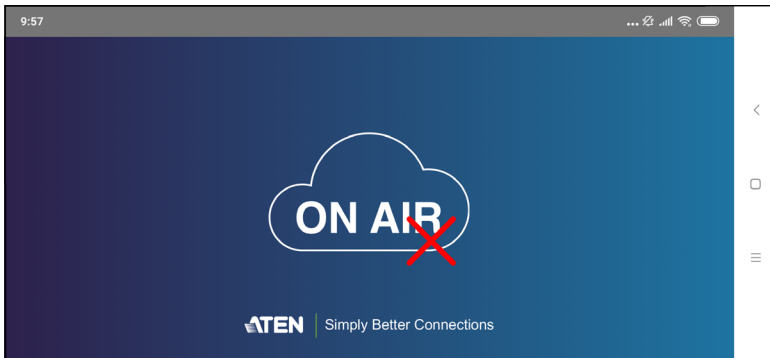

## Joining a Meeting via Manually Connect

To manually connect and join a meeting, follow the steps below.

1. Open the ATEN Video Presentation Control App and tap **Manually Connect**.

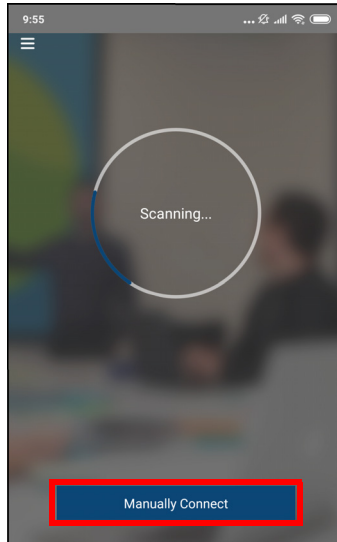


2. Type in the IP address of the VP2730 and the required room code, and then tap **Connect**.

---

**Note:** It is not required to enter the room code if the *Room Code* is set to disable.


---

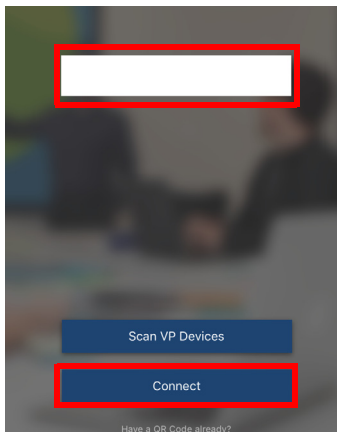

3. Now you have successfully joined the meeting.


Or,

4. From the Room List page, tap **Manually Connect**.

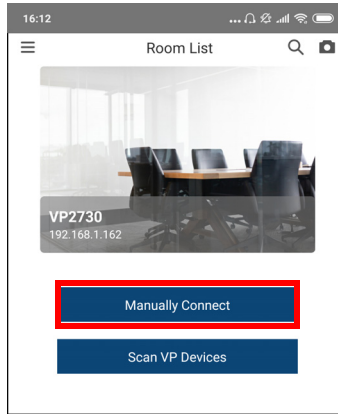


5. Enter the IP address of the VP2730 and room code (see *System Settings*, page 29 for details), and then tap **Connect**.

**Note:** It is not required to enter the room code if the *Room Code* is set to disable.

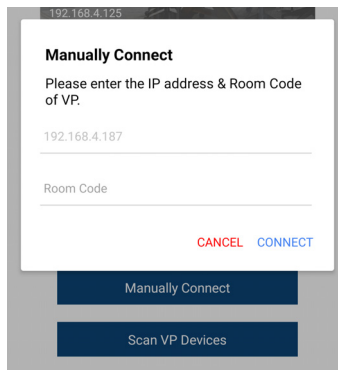




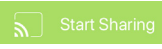
## Meeting Screen

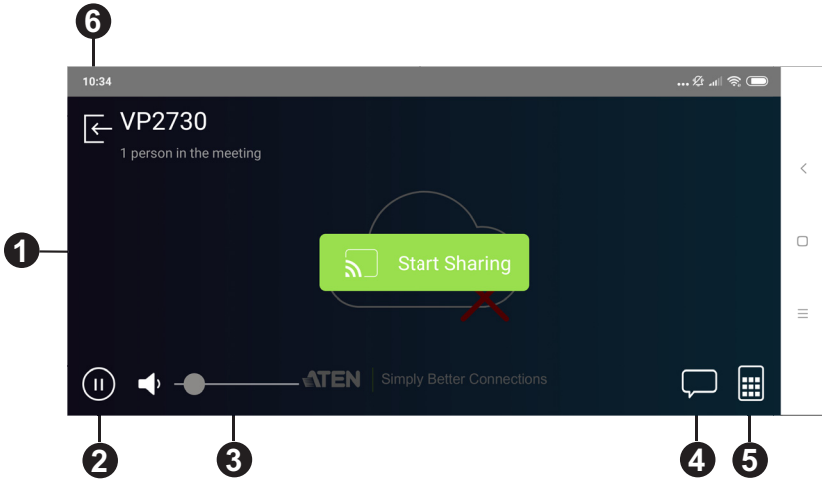Once you have successfully joined a meeting, tap on the screen and the below screen appears.



Each functions are described in the table below.


No.	Component	Description
1	Live Screen	Displays the contents that goes live from the VP2730 on your smartphone/tablet.
2	Play / Pause	Tap this icon to play or pause the live streaming contents.
3	Volume	Shows the volume of your smartphone/tablet.
4	Chat Room 	Tap this icon to display a chat panel to use text interaction and file sharing with other connected meeting participants. For more information, see <i>Chat Room</i> , page 83.
5	Control Panel 	Tap this icon to access to the basic VP2730 settings. For more information, see <i>Control Panel</i> , page 84.
6	Log Out 	Tap this icon to log out leave the meeting.

No.	Component	Description
7		Tap this icon to share the screen on your mobile device and makes it available for broadcast to all meeting participants. For more information, see <i>Streaming Out Your Content</i> , page 81.


## Streaming Out Your Content

Participants that are connected with the VP2730 can all share their display contents via the App. To share the content on your smartphone/tablet, follow the steps below.


1. Once you have successfully joined a meeting on the VP2730, tap on your smartphone/tablet's display screen and the below picture appears.

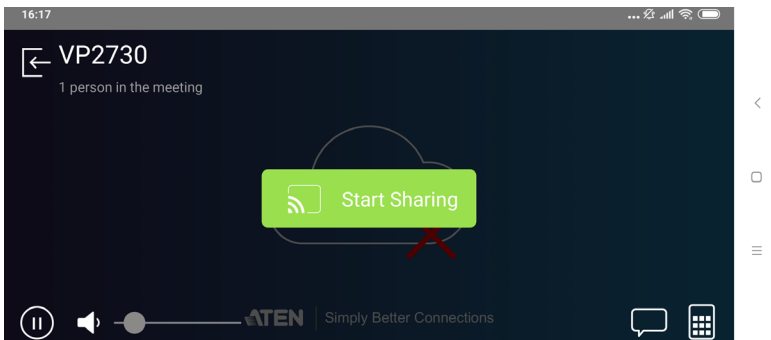


2. Click on the **Start Sharing**.

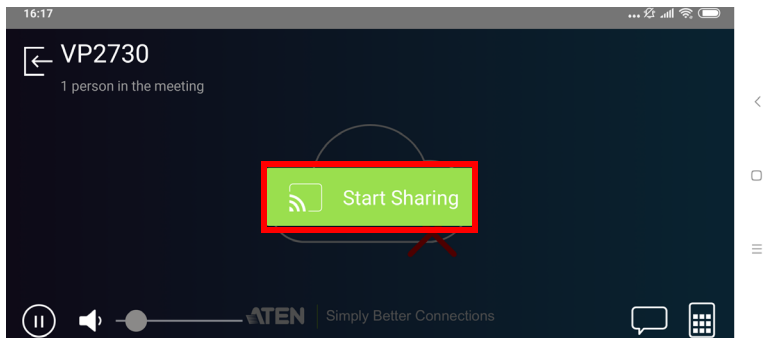


3. A warning message similar to the one below appears, then click **Start Broadcast**.

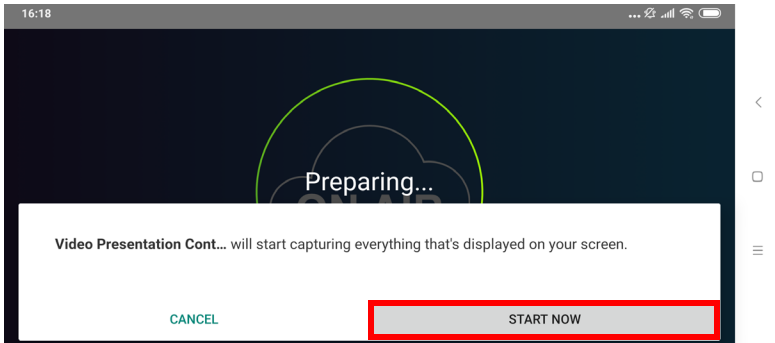

4. Now your entire screen is waiting to be shared to all the meeting participants. The host will need to approve your sharing via the OSD.

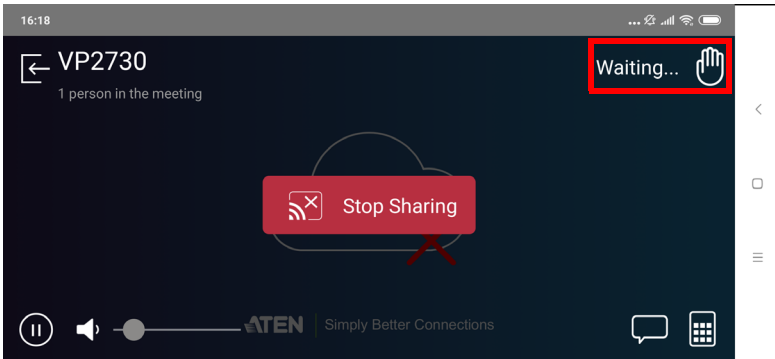


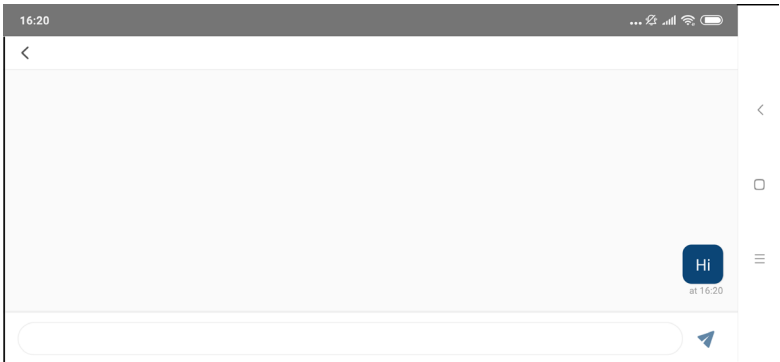
5. To end the sharing, tap on your smartphone/tablet's display screen and tap **Stop Sharing**.

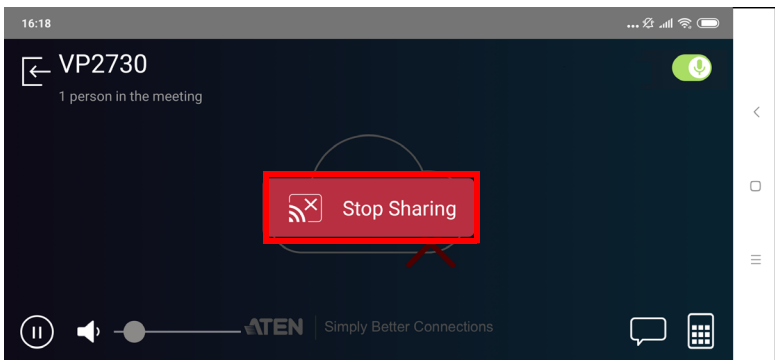




## Chat Room

The chat room allows you to use text interaction with the connected participants. From your smartphone's screen, tap the **Chat Room**  button and the below screen appears.




From your tablet's screen, tap the **Chat Room**  button and the below screen appears.

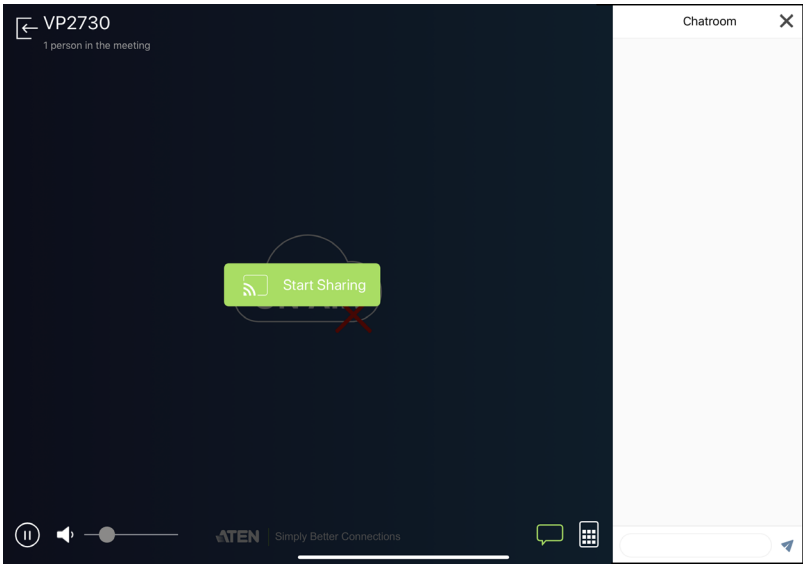


## Control Panel


You can perform the following tasks with the control panel.

- ◆ Switch display sources
- ◆ Change the display mode, resolution, or aspect ratio settings
- ◆ Stream out (go live) the current display via network connection
- ◆ Configure the VP2730's main system settings
- ◆ Remotely control another display in the VP2730's environment (moderator mode)
- ◆ Make screen captures
- ◆ Freeze the screen

From your smartphone/tablet's screen, tap the **Control Panel**  button and the below screen appears.

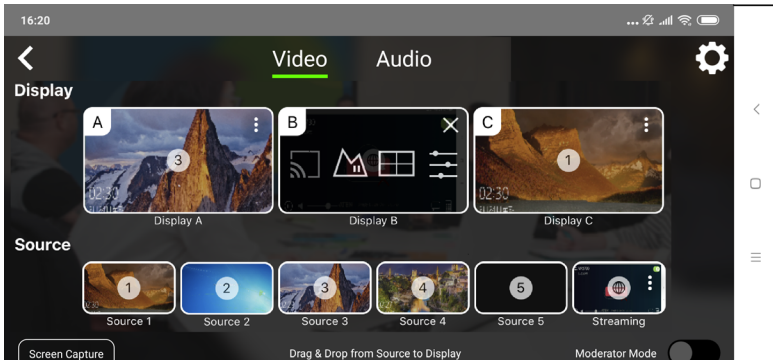


## Video Panel

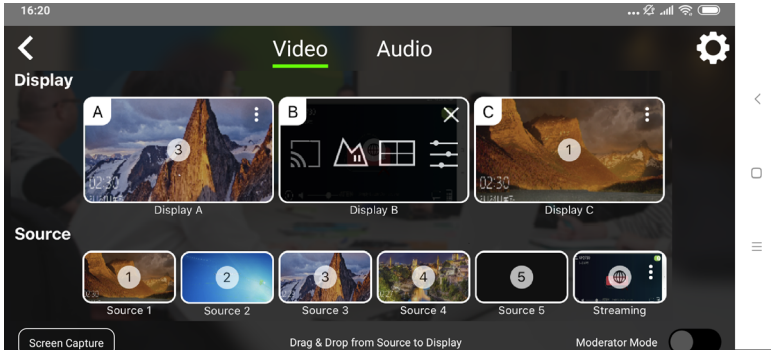


### Switching a Source for a Display

To switch a source for a display, follow the steps below.

1. To switch Source 3 to Display A. From the display page, drag the Source to Display A.

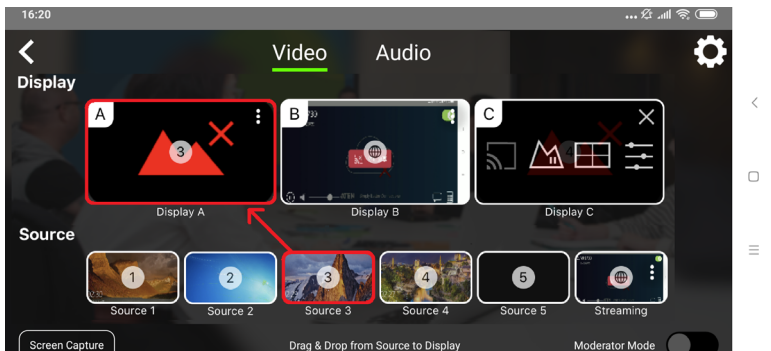


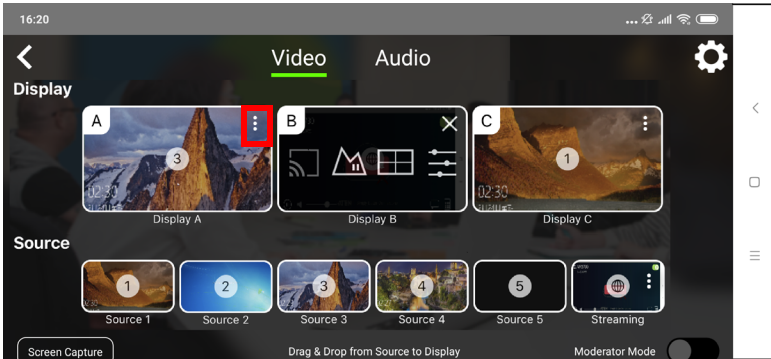
2. The Display A is now displaying content from Source 3.

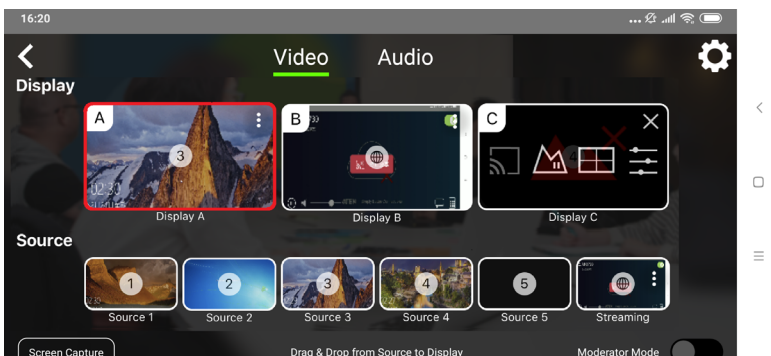


## Display Features and Settings



To go live, freeze, enable multi-view layout, or configure display settings for the selected display, follow the steps below.



1. Tap  from the top right corner of the selected display.

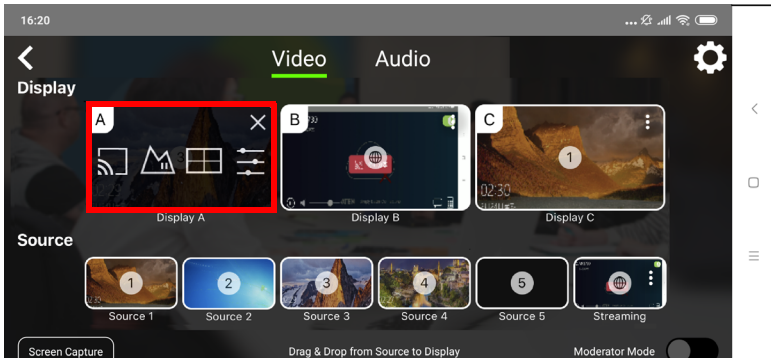

2. The below screen appears.






Tool	Description
<p>Go Live</p> 	<p>Tap this icon to stream out the display.</p> <p><b>IMPORTANT:</b></p> <ul style="list-style-type: none"> <li>◆ Make sure that the VP2730 is connected to the network and that the network bandwidth is of 2 MB or more.</li> <li>◆ Each participant takes at least 2 MB bandwidth.</li> </ul>
<p>Freeze</p> 	<p>Tap this icon to enable/disable the freeze of the selected display.</p> <p><b>IMPORTANT:</b></p> <ul style="list-style-type: none"> <li>◆ This function is not supported when moderator mode is enabled.</li> </ul>

Tool	Description
Multi-view Layout 	Tap this icon to select a layout format between single view or multiview for the display content on your screen. For more information, see <i>Multi-view Layout</i> , page 87.  <b>IMPORTANT:</b> <ul style="list-style-type: none"> <li>◆ This function is not supported when freeze is enabled.</li> </ul>
Display Settings 	Tap this icon to make display settings such as aspect ration, resolution, and auto switching. For more information, see <i>Display Settings</i> , page 88.


## Multi-view Layout

To select a multi-view layout for your connected sources, follow the steps below.


1. Tap  from the selected display, and the below screen appears. Tap  to enable multi-view.

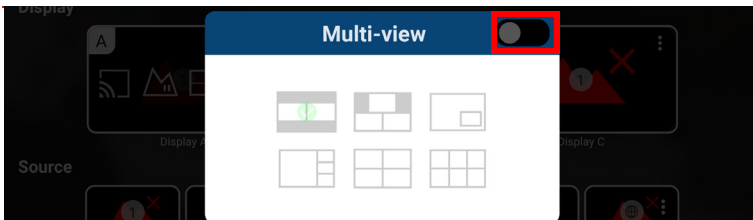


2. A warning message appears, tap **Yes**.

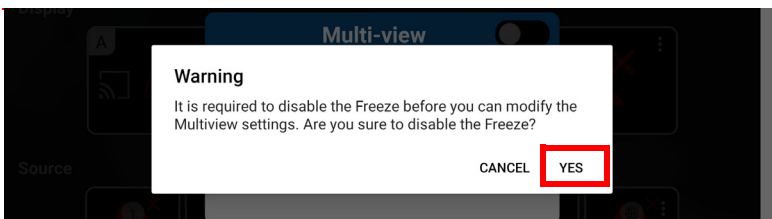


3. The multi-view feature is enabled, you may now select a desire layout.

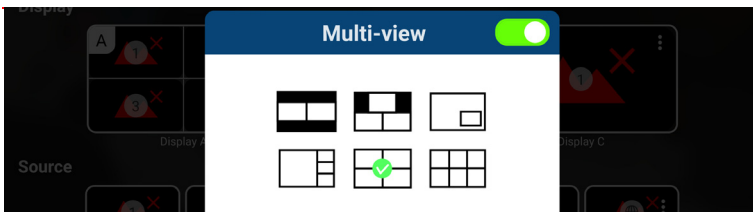

## Display Settings


To configure system settings for the selected display, tap , and the below screen appears.

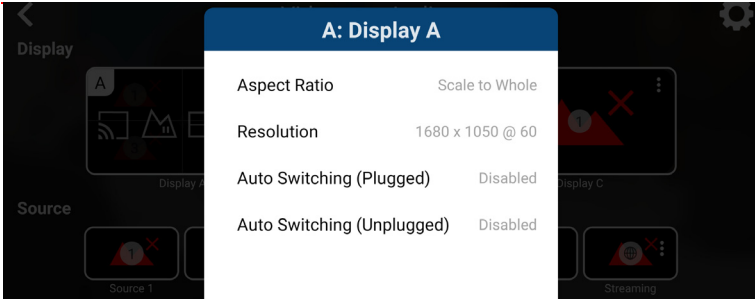


System Settings		Description
<b>Note:</b> Default settings are indicated in bold.		
General	Aspect Ratio	<ul style="list-style-type: none"> <li>◆ <b>Scale to whole:</b> Fully extends the video to the four sides of the display.</li> <li>◆ Auto fit: Proportionally scales the video to fit the display without cutting any content off. This may leave some blank on either the top and bottom or the left and right of the screen.</li> <li>◆ Auto cut: Proportionally scales the video to fully fill the display. The content that goes out of the display range will be cut off.</li> </ul>
	Resolution	Selects a resolution and refresh rate setting for the display device. This field is only available when the display is connected to the VP2730.
	Auto Switching (Plugged) <b>Note:</b> This option is only available for Display A.	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ Next: Automatically switches to a newly detected source.</li> </ul>
	Auto Switching (Unplugged) <b>Note:</b> This option is only available for Display A.	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ Next: Automatically switches to a newly detected source.</li> <li>◆ Last: Automatically switches to the previous detected source.</li> </ul>


## Source Settings

To approve or terminate a streaming-in source, follow the steps below.


1. Tap  from the Streaming source.

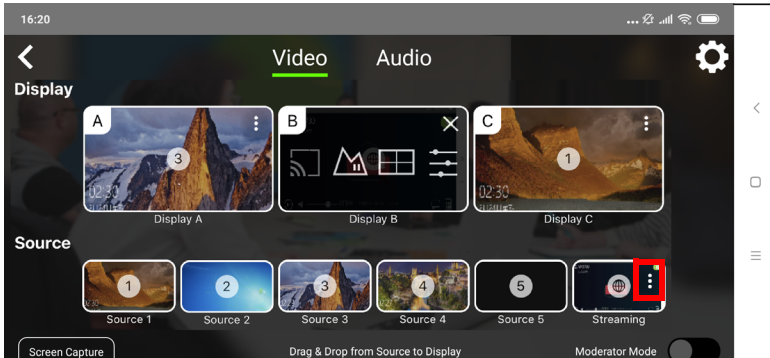

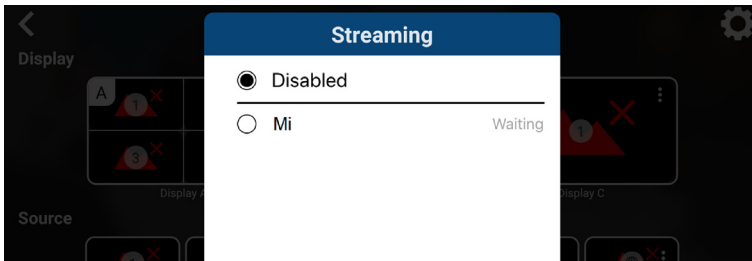

2. The below screen appears, you may now approve or disable a streaming-in source.




## Screen Capturing






Tap  to capture the screen. The captured image is saved to the storage device connected to the VP2730's USB ports. Make sure you have a storage device inserted to the VP2730 for this function to be available.

## Moderator Mode

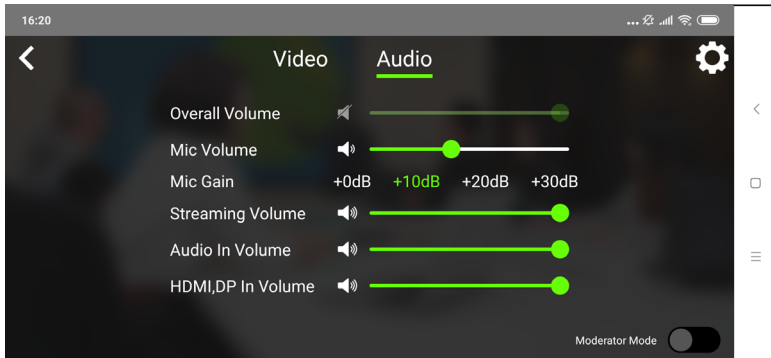Tap  to enable the moderator mode. The moderator mode button becomes green  when enabled. For more information, see *Moderator Mode (Remote Display Control)*, page 26.


## Audio Page




System Settings			Description
<b>Note:</b> Default settings are indicated in bold.			
Audio	Overall Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the speaker connected to the VP2730 and tap  to mute.
	Mic Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the microphone connected to the VP2730 and tap  to mute.
	Mic Gain	<ul style="list-style-type: none"> <li>◆ +0dB</li> <li>◆ <b>+10dB</b></li> <li>◆ +20dB</li> <li>◆ +30dB</li> </ul>	Sets the mic gain of the microphone connected to the VP2730.
	Streaming Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the streamed-in source and tap  to mute.
	Audio In Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of the source that is plugged to the Source 2 audio jack on the VP2730. Tap  to mute.
	HDMI, DP In Volume	<ul style="list-style-type: none"> <li>◆ Increase (+)</li> <li>◆ Decrease (-)</li> <li>◆ Mute</li> </ul>	Sets the volume of connected sources and tap  to mute.




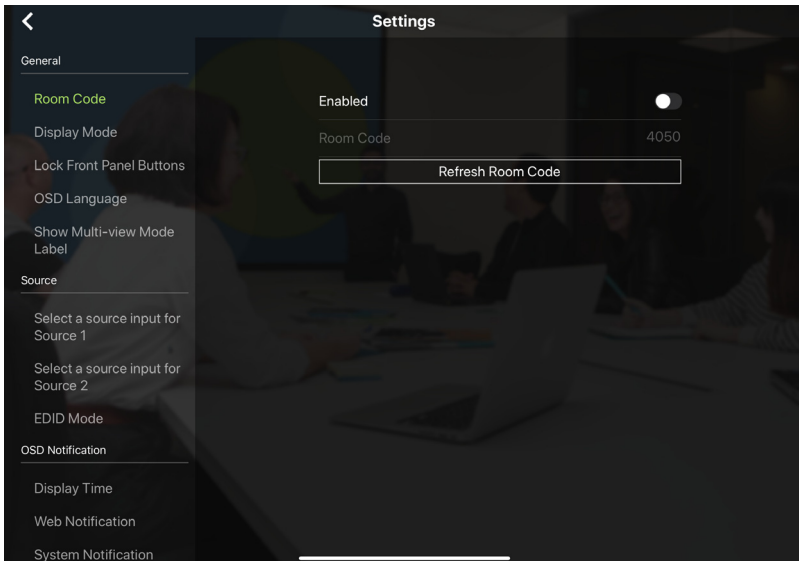
## More VP Settings

To configure more settings to the VP2730, tap the **More VP Settings**  button from your smartphone's screen and the below screen appears.

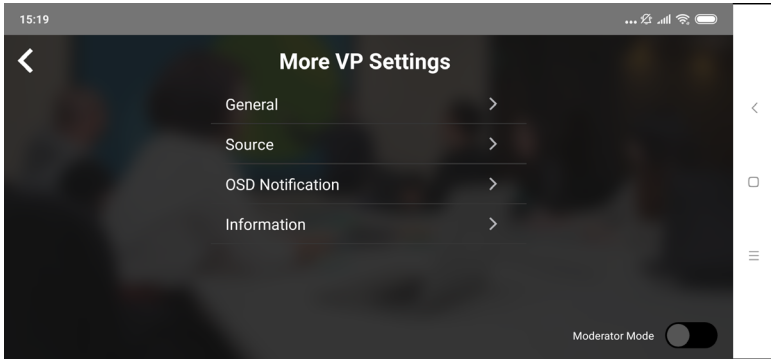


Or

Tap the **More VP Settings**  button from your tablet's screen and the below screen appears.




## General

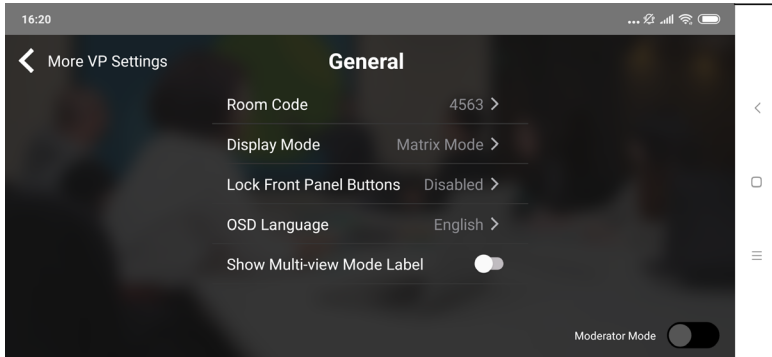


System Settings		Description	
<b>Note:</b> Default settings are indicated in bold.			
General	Room Code	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ Refresh code</li> </ul>	Enables and generates a random room code to be required for joining a meeting.
	Display Mode	<ul style="list-style-type: none"> <li>◆ <b>Matrix</b></li> <li>◆ Mirror</li> </ul>	Each connected display mirrors each other and does not take different settings. Click the check-box to enable, configuration on display A is automatically applied to the display B. For more information, see <i>Changing the Display Mode</i> , page 24.
	Lock Front Panel Buttons	<ul style="list-style-type: none"> <li>◆ <b>Disable</b></li> <li>◆ 5 sec later</li> <li>◆ 30 sec later</li> <li>◆ 5 min later</li> </ul>	Automatically locks the front-panel pushbuttons if the OSD idles for the selected duration.
	OSD Language		Sets the display language of the OSD.
	Show Multi-view Mode Label		Sets to show source label for multi-view mode.

**Source**

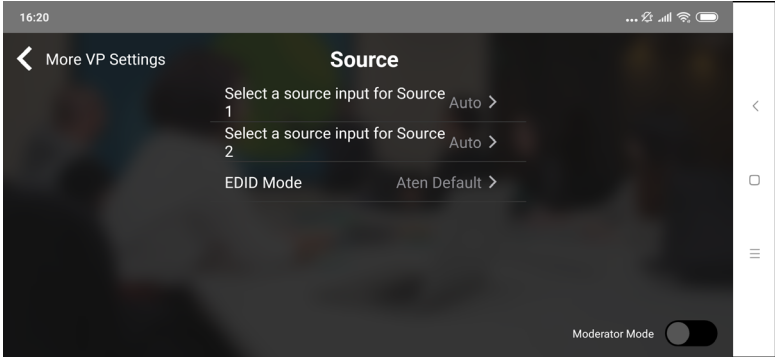


System Settings			Description
<b>Note:</b> Default settings are indicated in bold.			
Source	Select a source input for Source 1	<ul style="list-style-type: none"> <li>◆ <b>Auto</b></li> <li>◆ HDMI</li> <li>◆ DP</li> </ul>	Sets the prioritized port for Source 1/Source 2. Select <b>Auto</b> to prioritize the first detected input as the source.
	Select a source input for Source 2	<ul style="list-style-type: none"> <li>◆ <b>Auto</b></li> <li>◆ HDMI</li> <li>◆ DP</li> </ul>	
	EDID Mode	<ul style="list-style-type: none"> <li>◆ <b>ATEN Default</b></li> <li>◆ Display A</li> </ul>	<ul style="list-style-type: none"> <li>◆ <b>ATEN default:</b> This mode sends ATEN-predefined EDID to the connected sources.</li> <li>◆ <b>Display A:</b> This mode sends the EDID of Display A to the connected sources.</li> </ul>

## OSD Notification

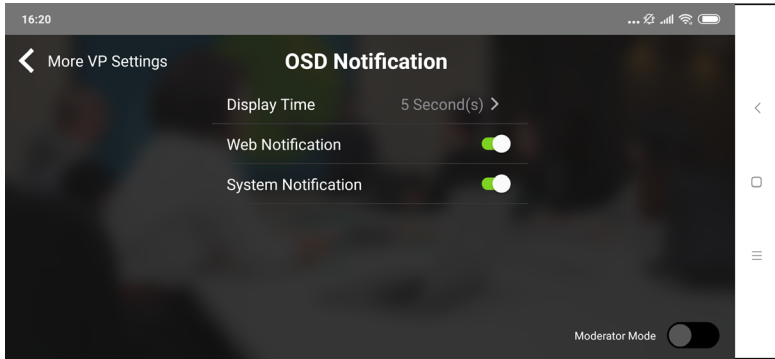

System Settings			Description
<b>Note:</b> Default settings are indicated in bold.			
OSD Notification	Display Time	<ul style="list-style-type: none"> <li>◆ 3 sec</li> <li>◆ <b>5 sec</b></li> <li>◆ 10 sec</li> <li>◆ Disable</li> </ul>	Disable or sets the duration for which a notification message pops up in the OSD.
	Web Notification	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ <b>Enable</b></li> </ul>	Displays notifications on user actions performed via the web interface.
	System Notification	<ul style="list-style-type: none"> <li>◆ Disable</li> <li>◆ <b>Enable</b></li> </ul>	Displays notifications on system status, device connection status, and user actions performed via the OSD.

# Information

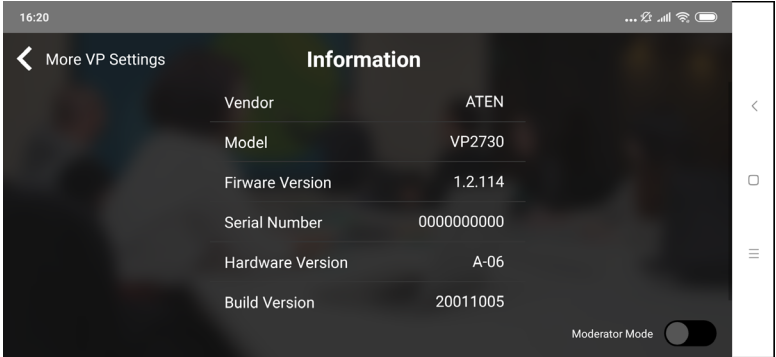

System Settings		Description
<b>Note:</b> Default settings are indicated in bold.		
Information	Vender, model, firmware version, serial number, hardware version, build version	Displays the system information.

This Page Intentionally Left Blank

## Safety Instructions

---

### General

- ◆ This product is for indoor use only.
- ◆ Read all of these instructions. Save them for future reference.
- ◆ Follow all warnings and instructions marked on the device.
- ◆ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ◆ Do not use the device near water.
- ◆ Do not place the device near, or over, radiators or heat registers.
- ◆ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ◆ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ◆ Never spill liquid of any kind on the device.
- ◆ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ◆ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ◆ The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- ◆ To prevent damage to your installation it is important that all devices are properly grounded.
- ◆ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.

- ◆ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- ◆ If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- ◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- ◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
  - ◆ The power cord or plug has become damaged or frayed.
  - ◆ Liquid has been spilled into the device.
  - ◆ The device has been exposed to rain or water.
  - ◆ The device has been dropped, or the cabinet has been damaged.
  - ◆ The device exhibits a distinct change in performance, indicating a need for service.
  - ◆ The device does not operate normally when the operating instructions are followed.
- ◆ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.



## **Rack Mounting**

- ◆ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ◆ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ◆ Make sure that the rack is level and stable before extending a device from the rack.
- ◆ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ◆ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ◆ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ◆ Ensure that proper airflow is provided to devices in the rack.
- ◆ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
- ◆ Do not step on or stand on any device when servicing other devices in a rack.

## Technical Support

---

### International

- ◆ For online technical support – including troubleshooting, documentation, and software updates: <http://support.aten.com>
- ◆ For telephone support, call this number:

International	886-2-8692-6959
China	86-400-810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988 1-949-428-1111

### North America

Email Support		<a href="mailto:support@aten-usa.com">support@aten-usa.com</a>
Online Technical Support	Troubleshooting Documentation Software Updates	<a href="http://www.aten-usa.com/support">http://www.aten-usa.com/support</a>
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ◆ Product model number, serial number, and date of purchase
- ◆ Your computer configuration, including operating system, revision level, expansion cards, and software
- ◆ Any error messages displayed at the time the error occurred
- ◆ The sequence of operations that led up to the error
- ◆ Any other information you feel may be of help

## Specifications

Video Input	
Interfaces	5 x HDMI Type-A Female (Black) 1 x DP Female (Black) 1 x HDB-15 Female (Blue)
Video Output	
Interfaces	2 x HDMI Type-A Female (Black) HDBaseT: 1 x RJ-45 Female (Silver)
Max. Distance	HDMI: Up to 15 m HDBaseT: Up to 1080p @ 60 m (Cat 5e/6) / 70 m (Cat 6a/ ATEN 2L-2910 Cat 6)
Video	
Max. Resolution	HDMI/DP: Up to 1080p @ 60 Hz VGA/Analog: Up to 1920 x 1200 @ 60 Hz
Compliance	HDMI/DP: HDCP 1.4 Compatible Consumer Electronics Control (CEC)
Audio General	
Frequency Response: 20Hz~20KHz, $\pm 0.5$ dB (1Vrms @ 0dBV)	
THD + Noise: < -65dB (0.056%) (1KHz, 1Vrms @ -3dBV)	
S/N: > 85dB (1KHz, 1Vrms @ 0dBV)	
Cross Talk: < -60dB (15KHz, 1Vrms @ 0dBV)	
Audio Input	
Port	Stereo Audio: 1 x Mini Stereo Jack Female (Green) Balance Audio: 1 x Captive Screw Connector, 5-pole Microphone: 1 x Captive Screw Connector, 3-pole
Signal Type	Line in: Analog stereo, balanced Mic in: analog mono, balanced
Connectors	Line in: 3.5 mm captive screw connector, 5 pole Mic in: 3.5 mm captive screw connector, 3 pole
Impedance	Line in: Analog inputs: 25k ohms unbalanced, 50k ohms balanced Mic in: Analog inputs: 6.8k ohms unbalanced, 13.6k ohms balanced
Maximum Level	Line in: 0dBV (1Vrms) Mic in: 60dBV (1Vrms)
Mic Preamp Level	Mic in: 0dB to +30 dB balanced , adjustable , in 10 dB steps

Input Gain Adjustment	Line in: 0 dB to -16.5 dB, adjustable per input, analog inputs only Mic in: 30 dB to -16.5 dB, adjustable per input, analog inputs only
Phantom Power	+48V, 10mA
<b>Audio Output</b>	
Port	Optical Audio: 1 x Toslink (Black) Coaxial Audio: 1 x RCA Female (Orange) Stereo Audio: 2 x RCA Female (White / Red)
Signal Type	RCA out: Analog stereo, unbalanced Digital Toslink: Digital S/PDIF output Digital coaxial: Digital S/PDIF output
Connectors	RCA out: RCA female Digital Toslink: Toslink Jack Digital coaxial: RCA female
Maximum Level	RCA out: 1V <sub>rms</sub> ±5%
Output Impedance	Digital coaxial: 75 ohms
Load Impedance	RCA out: 2K ohms, minimum
Output Gain Adjustment	Overall output: 0 dB to -71.625 dB, adjustable per input
<b>Connectors</b>	
Console Ports	USB 2.0: 2 x USB Type-A Female (White) USB 3.0: 1 x USB Type-A Female (Blue)
Power	1 x 3-prong AC Socket
<b>Control</b>	
RS-232	1 x DB 9 Female (Black)
IR	1 x Mini Stereo Jack Female (Black)
Ethernet	1 x RJ-45 Female (Silver)
<b>Switches</b>	
Power	1 x Pushbutton 1 x Rocker
Video Input Port Selection	Video In: 5 x Pushbutton Streaming In: 1 x Pushbutton
Video Output Port Selection	3 x Pushbutton

Selection	Multiview: 1 x Pushbutton Menu: 1 x Pushbutton Left: 1 x Pushbutton Up (Unlock): 1 x Pushbutton Right: 1 x Pushbutton Go Live: 1 x Pushbutton Mute: 1 x Pushbutton Esc: 1 x Pushbutton Down: 1 x Pushbutton Enter: 1 x Pushbutton
Phantom Power	1 x Slide Switch
<b>LEDs</b>	
Video	Source 1 HDMI / DP: 2 (Green) Source 2 HDMI / VGA: 2 (Green)
Video Output	Go Live: 3 (Amber)
<b>EDID Settings</b>	
EDID Mode: ATEN Default / Display A	
<b>Power</b>	
Max. Input Power Rating	100-240 VAC; 50 - 60Hz; 1.0A
Consumption	AC110V:28.5W:174BTU AC220V:27.3W:168BTU
<b>Environmental</b>	
Operating Temperature	0 - 40°C
Storage Temperature	-20 - 60°C
Humidity	0 x 80% RH, Non-Condensing
<b>Physical Properties</b>	
Housing	Metal
Weight	3.70 kg (8.15 lb)
Dimensions (L x W x H)	43.24 x 26.28 x 4.40 cm (17.02 x 10.35 x 1.73 in)

## Limited Warranty

---

ATEN warrants its hardware in the country of purchase against flaws in materials and workmanship for a Warranty Period of two [2] years (warranty period may vary in certain regions/countries) commencing on the date of original purchase. This warranty period includes the [LCD panel of ATEN LCD KVM switches](#). Select products are warranted for an additional year (see [A+ Warranty](#) for further details). Cables and accessories are not covered by the Standard Warranty.

### What is covered by the Limited Hardware Warranty

ATEN will provide a repair service, without charge, during the Warranty Period. If a product is defective, ATEN will, at its discretion, have the option to (1) repair said product with new or repaired components, or (2) replace the entire product with an identical product or with a similar product which fulfills the same function as the defective product. Replaced products assume the warranty of the original product for the remaining period or a period of 90 days, whichever is longer. When the products or components are replaced, the replacing articles shall become customer property and the replaced articles shall become the property of ATEN.

To learn more about our warranty policies, please visit our website:  
<http://www.aten.com/global/en/legal/policies/warranty-policy/>

© Copyright 2021 ATEN® International Co., Ltd.  
Released: 2021-04-28

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved. All other brand names and trademarks are the registered property of their respective owners.