



Simply Better Connections

# VS1814T / VS1818T

4/8-Port HDMI HDBaseT Splitter

User Manual

## Compliance Statements

---

### FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### Warning

Operation of this equipment in a residential environment could cause radio interference.

### Achtung

Der Gebrauch dieses Geräts in Wohnumgebung kann Funkstörungen verursachen.

### Suggestion

Shielded twisted pair (STP) cables must be used with the unit to ensure compliance with FCC & CE standards.



### KCC Statement

유선 제품용 / A 급 기기 (업무용 방송 통신 기기)  
이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이  
점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로  
합니다.

### **HDMI Trademark Statement**

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



### **RoHS**

This product is RoHS compliant.

## User Information

---

### Online Registration

Be sure to register your product at our online support center:

---

International	<a href="http://eservice.aten.com">http://eservice.aten.com</a>
---------------	---

---

### Telephone Support

For telephone support, call this number:

---

International	886-2-8692-6959
China	86-400-810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988
United Kingdom	44-8-4481-58923

---

### User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

## Product Information

---

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	<a href="http://www.aten.com">http://www.aten.com</a>
North America	<a href="http://www.aten-usa.com">http://www.aten-usa.com</a>

## Package Contents

---

Check to make sure that all the components are in working order. If you encounter any problem, please contact your dealer.

- ◆ 1 VS1814T / VS1818T 4/8-Port HDMI HDBaseT Splitter
- ◆ 1 power cord
- ◆ 1 mounting kit
- ◆ 1 user instructions

## Contents

---

Compliance Statements .....	ii
User Information .....	iv
Online Registration .....	iv
Telephone Support.....	iv
User Notice .....	iv
Product Information .....	v
Package Contents.....	v
About this Manual .....	viii
Conventions .....	ix

### 1. Introduction

Overview.....	1
Features .....	2
Requirements .....	3
Source Device .....	3
Receiving Device.....	3
Cables .....	3
Components .....	4
Front View .....	4
Rear View .....	5

### 2. Hardware Setup

Rack Mounting .....	7
Grounding .....	9
Installation .....	10

### 3. Basic Operation

Overview.....	11
EDID Learn Pushbutton .....	11
EDID Mode Selection .....	12
Installing the RS-232 Controller .....	12

### 4. RS-232 Commands

Overview . . . . .	13
RS-232 Serial Interface . . . . .	13
Configuring the Serial Port . . . . .	13
Switch Port . . . . .	14
CEC Commands . . . . .	15
Read Commands . . . . .	16
Baud Rate Setting Commands . . . . .	17
Reset Commands . . . . .	18
Reboot Command . . . . .	18
Verification . . . . .	19

## **Appendix**

Safety Instructions . . . . .	21
General . . . . .	21
Rack Mounting . . . . .	23
Technical Support . . . . .	24
International . . . . .	24
North America . . . . .	24
Specifications . . . . .	25
ATEN Warranty Policy . . . . .	27

## About this Manual

---

This User Manual is provided to help you get the most from your VS1814T / VS1818T system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

**Chapter 1, *Introduction***, introduces you to the VS1814T / VS1818T system. Its purpose, features and benefits are presented, and its front and back panel components are described.

**Chapter 2, *Hardware Setup***, describes how to set up your VS1814T / VS1818T installation.

**Chapter 3, *Basic Operation***, explains the fundamental features available when operating the VS1814T / VS1818T.

**Chapter 4, *RS-232 Commands***, provides a complete list of the serial control protocol commands used when utilizing the RS-232 Serial Port.

**Appendix**, provides specifications and other technical information regarding the VS1814T / VS1818T.

---

### Note:


- ◆ Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit or any connected devices.
  - ◆ The product may be updated, with features and functions added, improved, or removed since the release of this manual. For an up-to-date user manual, visit <http://www.aten.com/global/en/>
-



## Conventions

---

This manual uses the following conventions:

- |   |  |
|---|--|
| Monospaced  | Indicates text that you should key in.   |
| [ ]   | Indicates keys you should press. For example, [Enter] means to press the <b>Enter</b> key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt]. |
| 1.  | Numbered lists represent procedures with sequential steps.   |
| ◆   | Bullet lists provide information, but do not involve sequential steps.   |
| >   | Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start > Run means to open the <i>Start</i> menu, and then select <i>Run</i> .                         |
|  | Indicates critical information.  |

This Page Intentionally Left Blank

# Chapter 1

## Introduction

### Overview

---

The VS1814T / VS1818T 4/8-Port HDMI HDBaseT Splitter is a fast and efficient way of switching digital high definition video from one input source to 4/8 displays located up to 100 m away. It implements HDBaseT extension technology to connect the VS1814T / VS1818T to receiver units over one single Cat 5e cable in order to transmit rich HDMI multimedia content in real time.

You can connect up to 4 (VS1814T) or 8 (VS1818T) HDMI Receivers (such as VE812R) to a unit. The built-in RS-232 port on the VS1814T / VS1818T rear panel allows connected units to be controlled through a high-end controller or PC.

The VS1814T / VS1818T supports up to 4k2k HDTV resolution, as well as up to 1920 x 1200 PC resolution. It is equipped with an EDID selection method, providing constant and reliable EDID data for the HDMI source device to efficiently optimize video resolution.

The VS1814T / VS1818T HDMI Splitter is HDCP (High Bandwidth Digital Content Protection) compliant and compatible with a wide range of ATEN devices (switches, matrix, converters, and so on). It supports all HDMI-enabled equipment, such as DVD players, satellite set-top boxes and all HDMI displays, making it an effective solution in broadcasting applications, digital signage and educational settings.

## Features

---

- ◆ One HDMI input to 4/8 HDMI outputs via a Cat 5e cable
- ◆ Offers local HDMI output
- ◆ Extends displays up to 100 m
- ◆ Anti-jamming – resists signal interference during high-quality video transmissions using HDBaseT technology
- ◆ Implements HDBaseT extension technology using only one Cat 5e cable to connect the transmitter and receiver
- ◆ HDMI (3D, Deep color, 4kx2k); HDCP Compatible
- ◆ Supports Dolby True HD and DTS HD Master Audio
- ◆ Consumer Electronics Control (CEC) support
- ◆ Built-in bi-directional RS-232 serial remote port for high-end system control\*
- ◆ Supports resolutions of up to Ultra HD 4kx2k and 1080p Full HD
- ◆ Supports up to 340 MHz bandwidth for high performance video
- ◆ Signaling rates up to 3.4 Gbits
- ◆ EDID mode selection
- ◆ Rack Mountable

---

\* The VS1814T / VS1818T AP operation instructions can be downloaded from the ATEN website ([www.aten.com](http://www.aten.com)).

---

## Requirements

---

The following equipment is required for a complete VS1814T / VS1818T installation:

### Source Device

The following equipment must be installed on any source of HDMI content:

- ◆ HDMI output connector

### Receiving Device

- ◆ A local display device with an HDMI input connector
- ◆ An HDMI Receiver (such as VE812R) with an RJ-45 port for each output port you will be installing

### Cables

- ◆ Standard HDMI cables for the source device and local display device
- ◆ To ensure video quality, ATEN recommends using a Cat 5e/6/6a cables for the HDMI Receivers

---

**Note:** 1. No cables are included in this package. ATEN strongly recommends the use of high-quality cables of appropriate lengths to avoid any audio and video display quality issue in different environments (i.e. Shielded Cat 6 cables). Contact your dealer to purchase the correct cable sets.

2. For best results, ATEN recommends using the ATEN 2L-2910 Cat 6 cable.


3. A DVI/HDMI adapter is required when connecting to a DVI source or display device. If a DVI/HDMI adapter is used, audio is not supported.

4. If you wish to utilize the VS1814T / VS1818T's high-end serial controller function, you will also need to purchase an appropriate RS-232 cable. See *Installing the RS-232 Controller*, page 12.

---

## Components


### Front View

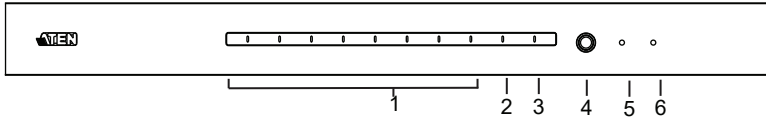

No.	Component	Description
1	HDBaseT out port LEDs (1~4 / 1~8)	Lights to indicate there is a working connection to the HDMI receiving device(s) connected to the port(s).
2	HDMI out LED	Lights to indicate there is a working connection to the local display device.
3	HDMI in LED	Lights to indicate that there is a working connection to the source device (i.e., computer).
4	EDID learn pushbutton	Press and release this button to automatically learn the active display's EDID.
5	EDID learn LED	Flashes green to indicate that EDID Learning Mode is in progress (see <i>EDID Learn Pushbutton</i> , page 11). Lights green to indicate that EDID learning process is successful. Lights red to indicate that EDID learning process failed.
6	power LED	Lights green to indicate that the VS1814T / VS1818T is receiving power and is up and running.

**Note:** The VS1818T's front panel is shown on this page. It is similar to the front panel of VS1814T except for the number of HDBaseT out port LEDs – the VS1814T has 4 HDBaseT out port LEDs.

## Rear View

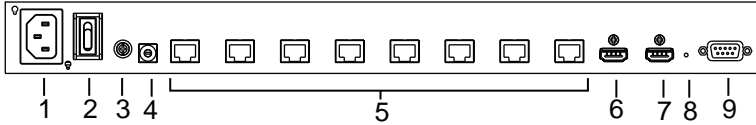

No.	Component	Function
1	power socket	This is a standard 3-pin AC power socket. The power cord from an AC source plugs in here.
2	power switch	This is a standard rocker switch that powers the unit on and off.
3	grounding terminal	The grounding wire attaches here. See <i>Grounding</i> , page 9, for further details.
4	EDID mode switch	Press this button to cycle through the EDID settings stored in the unit (see <i>EDID Mode Selection</i> , page 12).
5	HDBaseT out ports (1~4 / 1~8)	The Cat 5e cables that connects the HDMI receiver units plug in here.
6	HDMI input port	The cable from your HDMI source device plugs in here.
7	HDMI output port	The cable from your HDMI display device plugs in here.
8	firmware upgrade button	This button is for enabling the Firmware Upgrade Mode. <b>Note:</b> Contact your product provider for details on upgrading the firmware of your device.
9	RS-232 serial port	This is the serial remote port for output source selection and high-end system control, including firmware upgrade.

**Note:** The VS1818T's rear panel is shown on this page. It is similar to the rear panel of VS1814T except for the number of HDBaseT out ports – the VS1814T has 4 HDBaseT out ports.

This Page Intentionally Left Blank



## Chapter 2

# Hardware Setup




1. Important safety information regarding the placement of this device is provided on page 23. Please review it before proceeding.
2. Make sure that the power to all devices connected to the installation are turned off.
3. Make sure that all devices you will be installing are properly grounded.

### Rack Mounting


---

For convenience and flexibility, the VS1814T / VS1818T can be mounted on system racks. To rack mount a unit, do the following:

1. Using the screws provided in the Rack Mount Kit, screw the mounting bracket into the side of the unit as shown in the diagram below:

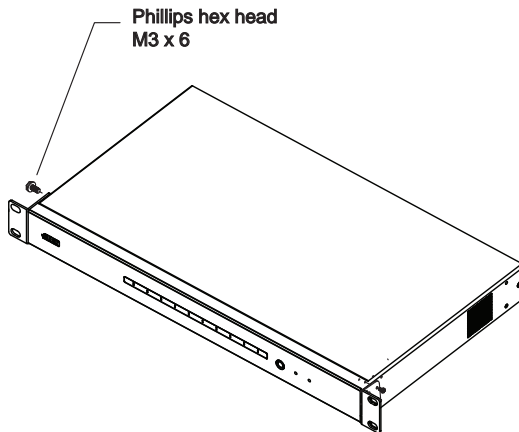

2. Screw the bracket into any convenient location on the rack.

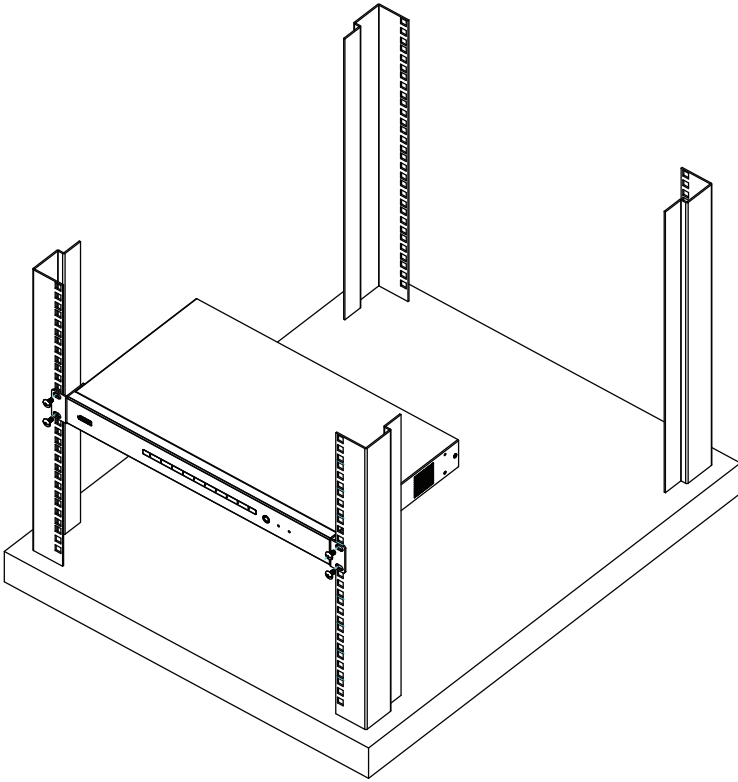


## Grounding

To prevent damage to your installation, it is important that all devices are properly grounded.

1. Use a grounding wire to ground the VS1814T / VS1818T by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.



2. Make sure that all devices in your VS1814T / VS1818T installation are properly grounded.

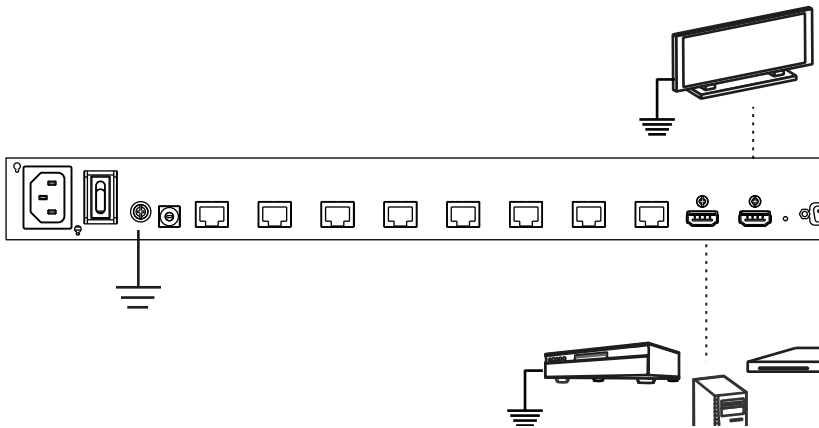


## Installation

Refer to the installation diagram (the numbers in the diagram correspond to the numbers of the steps) and do the following:

1. Use an HDMI Type A Male-to-Male cable to connect your computer or HDMI source device to the VS1814T / VS1818T's **HDMI input** port.
2. Use up to 4 (VS1814T) / 8 (VS1818T) Cat 5e (Cat 6 recommended) cables to connect up to four / eight HDMI Receiver units (i.e. VE812R) to the **HDBaseT out** ports.

**Note:** The HDMI Receiver unit's HDMI out port connects to the HDMI in port on your video display device using an HDMI cable. Refer to your receiving device's User Manual for more details.

3. (Optional) Use an HDMI cable to connect your local HDMI display device to the **HDMI output** port.
4. Plug the power cord that came with the VS1814T / VS1818T into an AC power source, then plug the power cable into the splitter's power socket.
5. (Optional) To edit the VS1814T / VS1818T system settings, connect a hardware / software controller to the RS-232 port.

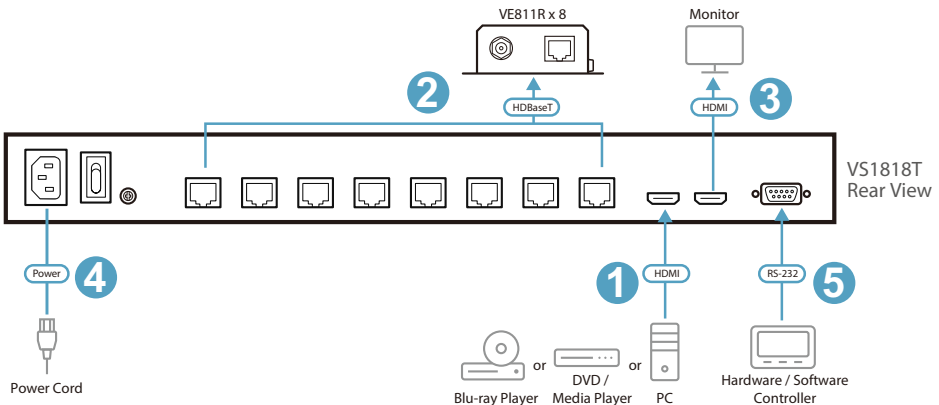

# Chapter 3

## Basic Operation

### Overview

---

The VS1814T / VS1818T offers easy and flexible EDID learning and mode selection through pushbuttons located in the unit's front and rear panels.

### EDID Learn Pushbutton

---

The VS1814T / VS1818T can automatically learn a display's EDID by pressing the EDID learn pushbutton located on the front panel. Follow these steps:

1. Attach the video display/monitor that you want to use to the VS1814T / VS1818T **HDMI output** port (see *Installation*, page 10).
2. To learn the EDID configuration of the video display/monitor, press and release the **EDID learn** pushbutton.
3. The EDID learn LED flashes to indicate that the settings are being captured, then lights steady to indicate that EDID learning process is successful.

---

**Note:** The EDID Learn LED lights red to indicate that EDID learning process failed.

---

## EDID Mode Selection

---

The VS1814T / VS1818T offers an easy and flexible EDID Mode selection method using the rear panel EDID mode switch.

Extended Display Identification Data (EDID) is a data format that contains a display's basic information and is used to communicate with the video source/system.

Simply press the **EDID Mode** pushbutton to toggle between the Default and other EDID Settings (0~7), as follow:

- ◆ **0 (Default)** – EDID is set to the ATEN default configuration
- ◆ **1 (Port 1)** – Implements the EDID of the connected display to Port 1, and passes it to the video source
- ◆ **2 (Auto)** – Implements the EDID of all connected displays. The VS1814T / VS1818T uses the best resolution for all displays
- ◆ **3 (Learn)** – Uses the EDID configuration acquired from the EDID Learning process.
- ◆ **4 ~ 7** – Reserved.

## Installing the RS-232 Controller

---

In order to use the RS-232 serial interface to attach a high-end controller (such as a PC) to the VS1814T / VS1818T, use a serial cable such as a modem cable. The end connecting to the VS1814T / VS1818T should have a 9-pin male connector. Connect this to the serial interface on the rear of the VS1814T / VS1818T.

See *RS-232 Commands*, page 13 for details.

# Chapter 4

## RS-232 Commands

### Overview

---

In order to use the RS-232 serial interface to attach a high-end controller (such as a PC) to the VS1814T / VS1818T, use a serial cable such as a modem cable. The end connecting to the VS1814T / VS1818T should have a 9-pin male connector. Connect this to the serial interface on the rear of the VS1814T / VS1818T. Refer to number 5 on the diagram on page 10.

---

**Note:** To configure the controller serial port, see the section below.

---

### RS-232 Serial Interface

---

The VS1814T / VS1818T's built-in bi-directional RS-232 serial interface allows system control through a high-end controller, PC, and/or home automation / home theater software package.

### Configuring the Serial Port

The controller's serial port should be configured as follows:

Baud Rate	19200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

## Switch Port

The available formulas for Switch Port commands are as follows:

Switch Command + Output Command + Port Number + Control  
[Enter]

1. For example, to turn on output port 02, type the following:

```
sw o02 on [Enter]
```

2. To turn off all output ports, type the following:

```
sw o* off [Enter]
```

The following table shows the possible values for the Switch Port commands:

Command	Description
sw	Switch command
Output Command	Description
o	Output command
Port Number	Description
yy	01-08 port
l1	Local HDMI output port
*	All output ports (default)
Control	Description
on	Turn on the display (default)
off	Turn off the display

The following table shows the available command list:

Command	Output	Port	Control	Enter	Description
sw	o	yy l1 *	on	[Enter]	Turn on display for output port yy, local HDMI output port or all ports (yy: 01~08, l1, *).
sw	o	yy l1 *	off	[Enter]	Turn off display for output port yy, local HDMI output port or all ports (yy: 01~08, l1, *).

**Note:** 1. Each command string can be separated with a space.

2. The **Port Number** command string can be skipped, and the default value will be used.



## CEC Commands

Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to one remote control. The formula for CEC mode selection commands is as follow:

```
CEC Command + Output Command + Port Number + Control
[Enter]
```

For example, to enable CEC function on output port 1, type the following:

```
cec o01 on [Enter]
```

The following table shows the possible values and formats for the **Control** commands:

Command	Description
cec	CEC command
Output Command	Description
o	Output command
Port Number	Description
YY	01-08 port
11	Local HDMI output port
*	All output ports (default)
Control	Description
off	Disable CEC (default)
on	Enable CEC

The following table shows the available command list:

Command	Output Port	Control	Enter	Description
cec	YY 11 *	off	[Enter]	CEC off for output port yy (default), local HDMI output port or all ports (yy: 01~08, 11, *).
cec	YY 11 *	on	[Enter]	CEC on for output port yy, local HDMI output port or all ports (yy: 01~08, 11, *).

**Note:** 1. Each command string can be separated with a space.

2. The **Port Number** command string can be skipped, and the default value will be used.

## **Read Commands**

View information from the device using the following command:

Read Command + Control [Enter]

The following table shows the possible values and formats for the **Control** commands:

<b>Command</b>	<b>Description</b>
read	Reads and displays information from the VS1814T / VS1818T

<b>Control</b>	<b>Description</b>
version	Displays the firmware version of the VS1814T / VS1818T
(blank)	Displays the Port and CEC status (on/off)

The following table shows the available command list:

<b>Command</b>	<b>Control</b>	<b>Enter</b>	<b>Description</b>
read	version	[Enter]	Displays firmware version
read		[Enter]	Displays the Port and CEC status

## Baud Rate Setting Commands

You can set up the VS1814T / VS1818T baud rate via RS-232. The formula for Baud Rate setting commands is as follow:

```
Baud + Baud Rate Setting Value [Enter]
```

For example, to set the baud rate to 9600, type the following:

```
baud 9600 [Enter]
```

The following table shows the possible values for the **Control** string:

Command	Description
baud	Baud Rate command

Control	Description
9600	Uses 9600 baud rate
19200	Uses 19200 baud rate (default)
38400	Uses 38400 baud rate
57600	Uses 57600 baud rate

The following table shows the available command list:

Command	Control	Enter	Description
baud	9600	[Enter]	The VS1814T / VS1818T implements 9600 baud rate setting
baud	19200	[Enter]	The VS1814T / VS1818T implements 19200 baud rate setting (default)
baud	38400	[Enter]	The VS1814T / VS1818T implements 38400 baud rate setting
baud	57600	[Enter]	The VS1814T / VS1818T implements 57600 baud rate setting

## **Reset Commands**

Reset the VS1814T / VS1818T to default factory settings using the following command:

Reset Command [Enter]

The following table shows the possible values for the **Control** command:

Command	Description
reset	Resets to factory default settings

The following table shows the available command list:

Command	Enter	Description
reset	[Enter]	Resets the VS1814T / VS1818T

---

**Note:** The Reset command reverts to the default baud rate, as well as switches on all output devices.

---

## **Reboot Command**

Use the command to manually reboot the VS1814T / VS1818T:

reboot [Enter]

The following table shows the possible values for the **Control** command:

Command	Description
reboot	Reboots the device manually

The following table shows the available command list:

Command	Enter	Description
reboot	[Enter]	Reboots the VS1814T / VS1818T

## **Verification**

After entering a command, a verification message appears at the end of the command line as follow:

- ◆ **Command OK**—indicates that the command is correct and successfully performed by the device
- ◆ **Command incorrect**—indicates that the command has the wrong format and/or values.

This Page Intentionally Left Blank

## Safety Instructions

---

### General

- ◆ Read all of these instructions. Save them for future reference.
- ◆ Follow all warnings and instructions marked on the device.
- ◆ This product is for indoor use only.
- ◆ Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- ◆ Do not use the device near water.
- ◆ Do not place the device near, or over, radiators or heat registers.
- ◆ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ◆ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ◆ Never spill liquid of any kind on the device.
- ◆ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ◆ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ◆ The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- ◆ To prevent damage to your installation it is important that all devices are properly grounded.
- ◆ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- ◆ The device is equipped with a DC adapter. This is a safety feature.

- ◆ If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- ◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or un-interruptible power supply (UPS).
- ◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- ◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- ◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- ◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
  - ◆ Liquid has been spilled into the device.
  - ◆ The device has been exposed to rain or water.
  - ◆ The device has been dropped, or the cabinet has been damaged.
  - ◆ The device exhibits a distinct change in performance, indicating a need for service.
  - ◆ The device does not operate normally when the operating instructions are followed.
- ◆ Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.



---

## **Rack Mounting**

- ◆ Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- ◆ Always load the rack from the bottom up, and load the heaviest item in the rack first.
- ◆ Make sure that the rack is level and stable before extending a device from the rack.
- ◆ Use caution when pressing the device rail release latches and sliding a device into or out of a rack; the slide rails can pinch your fingers.
- ◆ After a device is inserted into the rack, carefully extend the fail into a locking position, and then slide the device into the rack.
- ◆ Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- ◆ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- ◆ Ensure that proper airflow is provided to devices in the rack.
- ◆ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer
- ◆ Do not step on or stand on any device when servicing other devices in a rack.
- ◆ **Caution:** Slide/rail (LCD KVM) mounted equipment is not to be used as a shelf or a work space.



## Technical Support

---

### International

- ◆ For online technical support – including troubleshooting, documentation, and software updates: <http://eservice.aten.com>
- ◆ For telephone support, see *Telephone Support*, page iv:

### North America

Email Support		<a href="mailto:support@aten-usa.com">support@aten-usa.com</a>
Online Technical Support	Troubleshooting Documentation Software Updates	<a href="http://www.aten-usa.com/support">http://www.aten-usa.com/support</a>
Telephone Support		1-888-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- ◆ Product model number, serial number, and date of purchase.
- ◆ Your computer configuration, including operating system, revision level, expansion cards, and software.
- ◆ Any error messages displayed at the time the error occurred.
- ◆ The sequence of operations that led up to the error.
- ◆ Any other information you feel may be of help.

## Specifications

Function		VS1814T	VS1818T	
Connectors	HDMI In	Interfaces	1 x HDMI Type-A Female (Black)	
		Impedance	100 $\Omega$	
		Max. Distance	1.8 m	
	HDMI Out	Interfaces	1 x HDMI Type-A Female (Black) - Local Output	
		Impedance	100 $\Omega$	
	HDBaseT Out	Interfaces	4 x RJ-45 Female	8 x RJ-45 Female
		Impedance	100 $\Omega$	
Power Jack		1 x 3-Prong AC Socket (Black)		
RS-232		1 x DB-9 Female (Black) Serial Control Pin Configuration: Pin 2 = Tx, Pin 3 = Rx, Pin 5 = Gnd Baud Rate and Protocol: Baud Rate: 19200 Data Bits: 8 Stop Bits: 1 Parity: No Flow Control: No		
Switches	EDID Mode	1 x 8-Position Switch		
	EDID Learn Mode	1 x Pushbutton		
	F/W Upgrade	1 x Semi-Recessed Button		
	Power	1 x Rocker		
LEDs	Power	1 (Green)		
	HDMI In	1 (Green)		
	HDMI Out	1 (Green)		
	EDID Learn	1 (Green / Red)		
	HDBaseT Out	4 (Green)	8 (Green)	
Video	Max. Data Rate	10.2 Gbps (3.4 Gbps Per Lane)		
	Max. Pixel Clock	340 MHz		
	Compliance	HDMI (3D, Deep Color, 4K) HDCP Compatible Consumer Electronics Control (CEC) HDBaseT Compatible		
	Max. Resolution	Up to 4096 x 2160 / 3840 x 2160 @ 60Hz (4:2:0); 4096 x 2160 / 3840 x 2160 @ 30Hz (4:4:4) (Depends on connected receiver)		
	Max. Distance	Up to 100 m (Depends on connected receiver)		
Audio	Input	1 x HDMI Type-A Female (Black)		
	Output	1 x HDMI Type-A Female (Black)		

Function		VS1814T	VS1818T
EDID Settings		EDID Mode: Default / Port 1 / Auto / Learn	
Power Consumption		AC110V:18.2W:85BTU AC220V:18.2W:85BTU	AC110V:31.7W:149BTU AC220V:31.7W:149BTU
Environment	Operating Temp.	0–50°C	
	Storage Temp.	-20–60°C	
	Humidity	0–80% RH, Non-condensing	
Physical Properties	Housing	Metal	
	Weight	3.47 kg (7.64 lb)	3.58 kg (7.89 lb)
	Dimensions (L x W x H)	43.24 x 26.11 x 4.40 cm (17.02 x 10.28 x 1.73 in)	

## **ATEN Warranty Policy**

---

The warranty policy may vary by product category and region of purchase. For details, please visit ATEN's official website, select your purchase counties/regions and then go to the Support Center, or contact your local ATEN sales representative for further assistance.

© Copyright 2024 ATEN® International Co., Ltd.  
Released: 2024-12-19

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved. All other brand names and trademarks are the registered property of their respective owners.